




# H330

- **wiring diagram**

H330WD2H/1/1

# Content

|  |    |
|--|----|
| Battery, ignition switch -----                           | 1  |
| Alternator, starter, anti-theft system -----             | 2  |
| Horn, condenser fan, oil pump-----                       | 3  |
| Wiper and washer system -----                            | 4  |
| Power air conditioner, heating and defrost system -----  | 5  |
| Radio, steering wheel switch,cigar lighter -----         | 6  |
| Air bag system-----                                      | 7  |
| Brake system-----  | 8  |
| Reversing radar, outer rearview mirror-----              | 9  |
| Lighters control switch, front fog light -----           | 10 |
| Front outer lights-----                                  | 11 |
| Rear outer lamps, inner lamps, sunroof -----             | 12 |
| Combination instrument, diagnostic connector -----       | 13 |
| Window glass lifting system -----                        | 14 |
| Door lock system -----                                   | 15 |
| Body control unit -----                                  | 16 |
| Manual air conditioner, heating and defrost system ----- | 17 |
| EPS system -----   | 18 |
| PEPS system-----   | 19 |
| BM15-MT engine control system 1 -----                    | 20 |
| BM15-MT engine control system 2 -----                    | 21 |
| BM15-MT engine control system 3 -----                    | 22 |
| BM15-AT engine control system 1 -----                    | 23 |
| BM15-AT engine control system 2 -----                    | 24 |
| BM15-AT engine control system 3 -----                    | 25 |
| BM15-AT engine control system 4 -----                    | 26 |
| BM15-AT engine control system 5 -----                    | 27 |

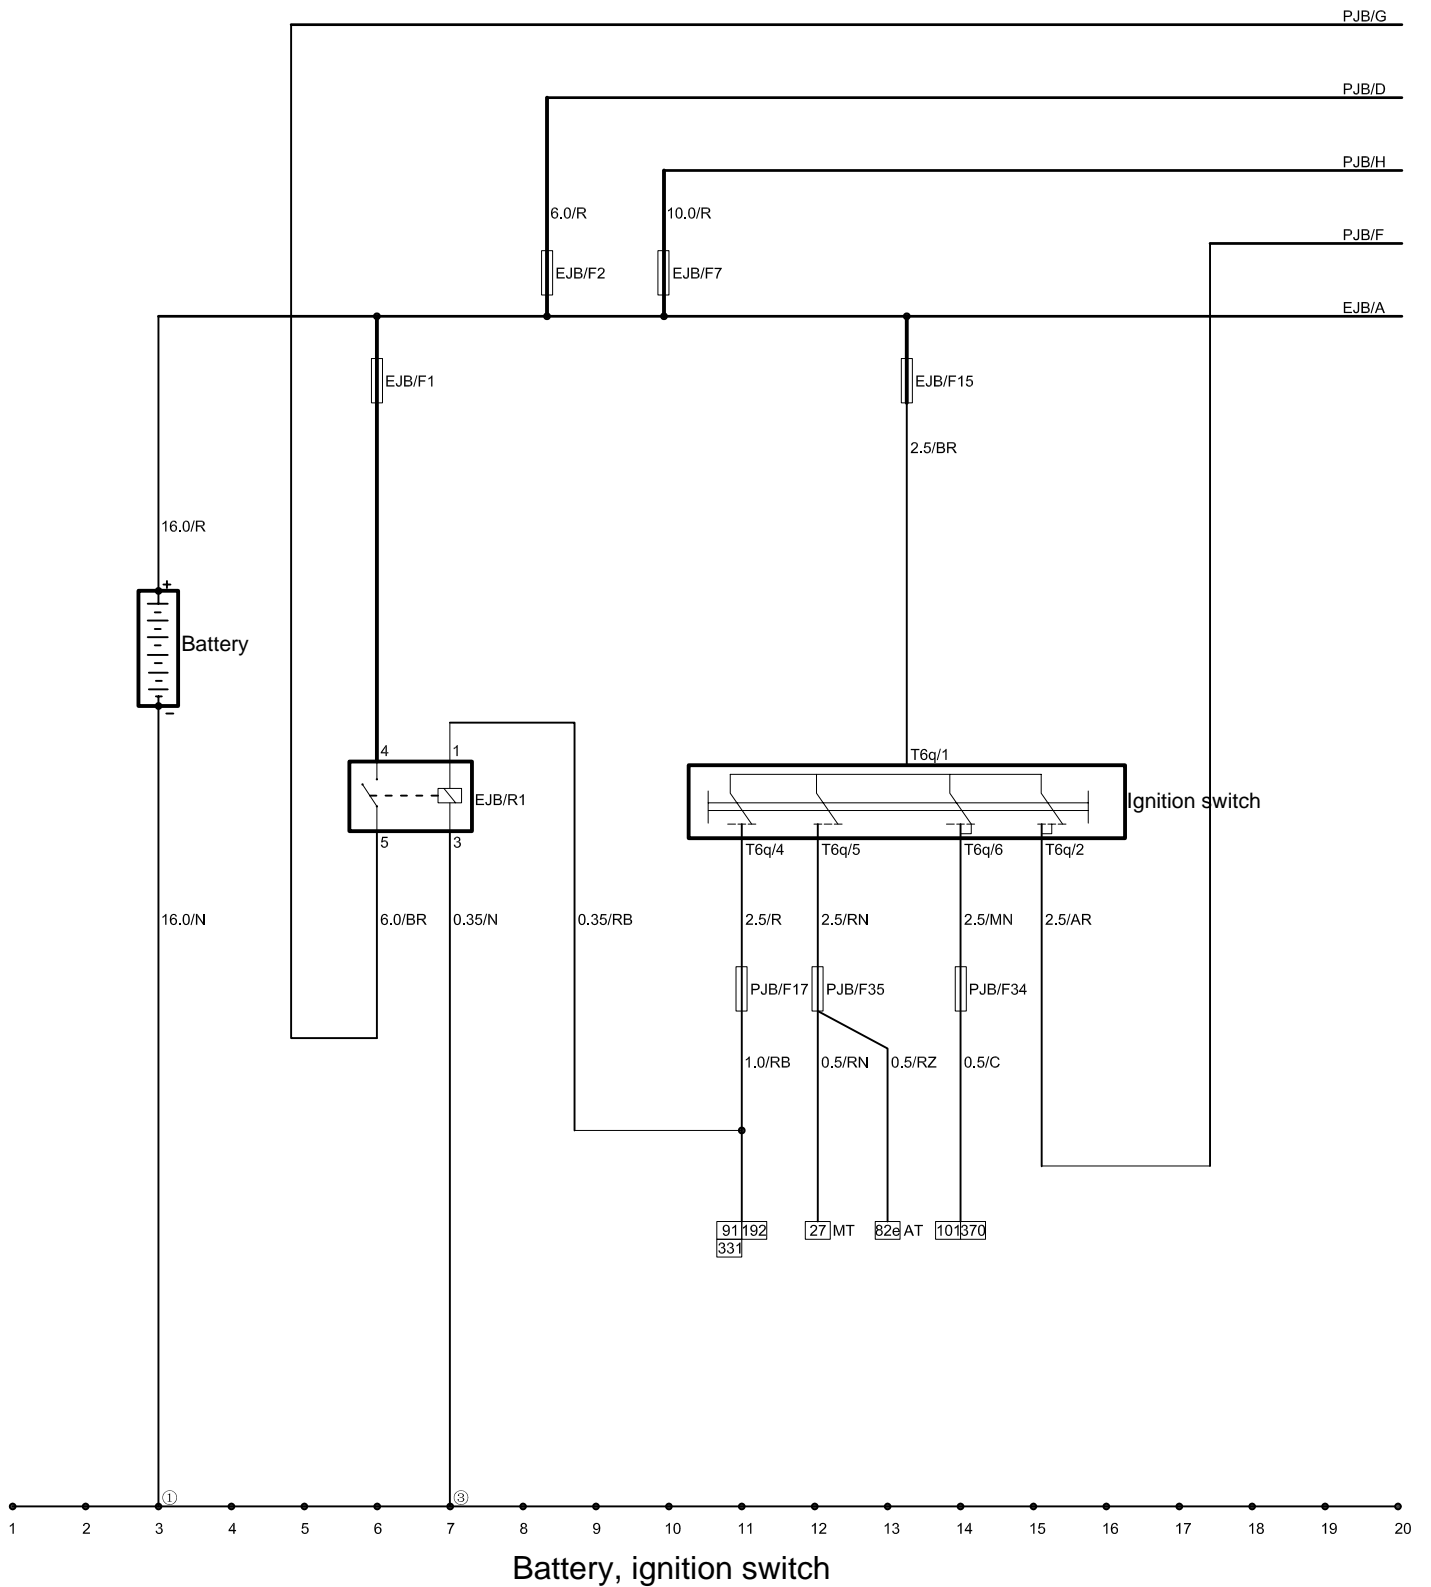

Battery, ignition switch

EJB-engine compartment fuse box

PJB-instrument panel fuse box

T6q-ignition switch connector, 6 holes, white

EJB A-connecting, from engine compartment fuse box to battery positive pole

PJB D-connecting, instrument fuse box binding post


PJB F-connecting, instrument fuse box binding post

PJB G-connecting, instrument fuse box binding post

PJB H-connecting, instrument fuse box binding post

①-Battery negative to body ground

③-FL engine compartment ground

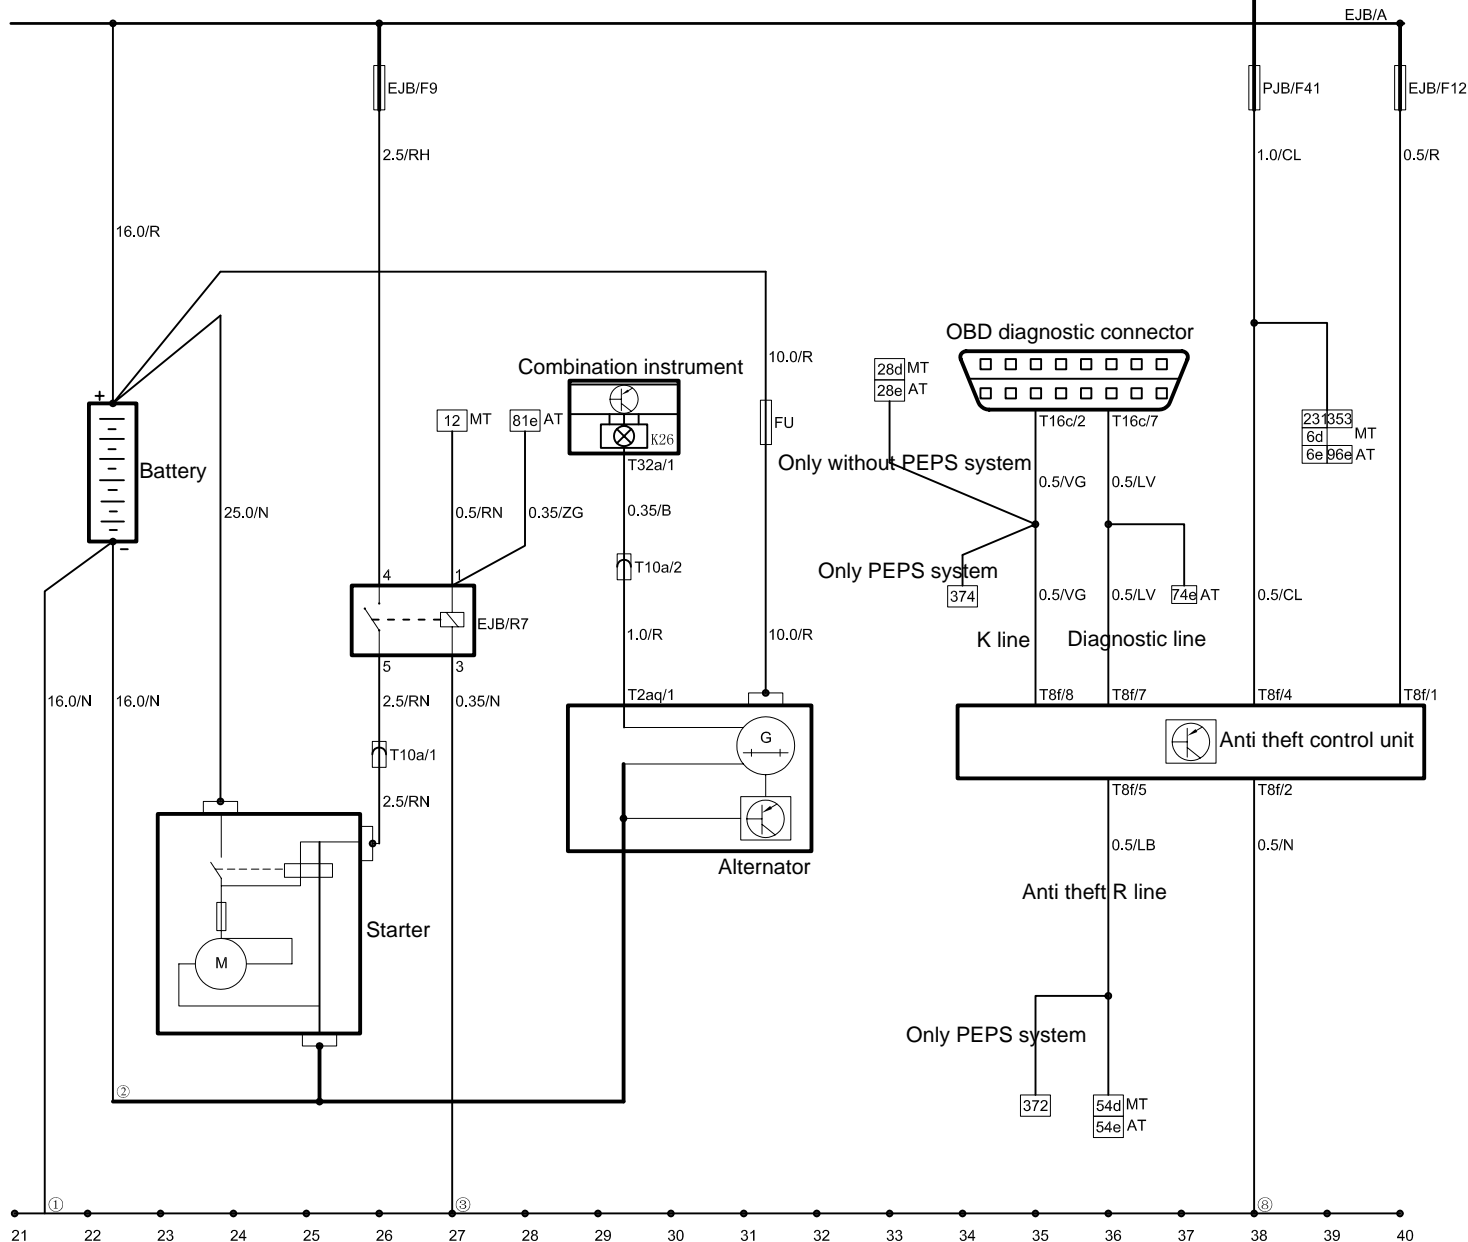

Alternator, starter, anti-theft system

K26-Combination instrument alternator charging indicator

EJB-Engine compartment fuse box

PJB-Instrument panel fuse box

FU-Alternator fuse, on the engine wire harness

T2aq-Alternator connector, 2 holes, black

T8f-Anti theft control unit connector, 8 holes, black

T10a-Engine and main wire harness plug-in A, 10 holes, black

T16c-Diagnostic interface connector, 16 holes, black

T32a-Combination instrument connector A, 32 holes, blue

EJB A-Connecting, from engine compartment fuse box to battery positive pole

PJB D-Connecting, instrument panel fuse box binding post

PJB F-Connecting, instrument panel fuse box binding post

PJB G-Connecting, instrument panel fuse box binding post


PJB H-Connecting, instrument panel fuse box binding post

①-Battery negative pole to body ground

②-Battery negative pole to engine ground

③-FL engine compartment ground

⑧-Passenger compartment LH A pillar ground

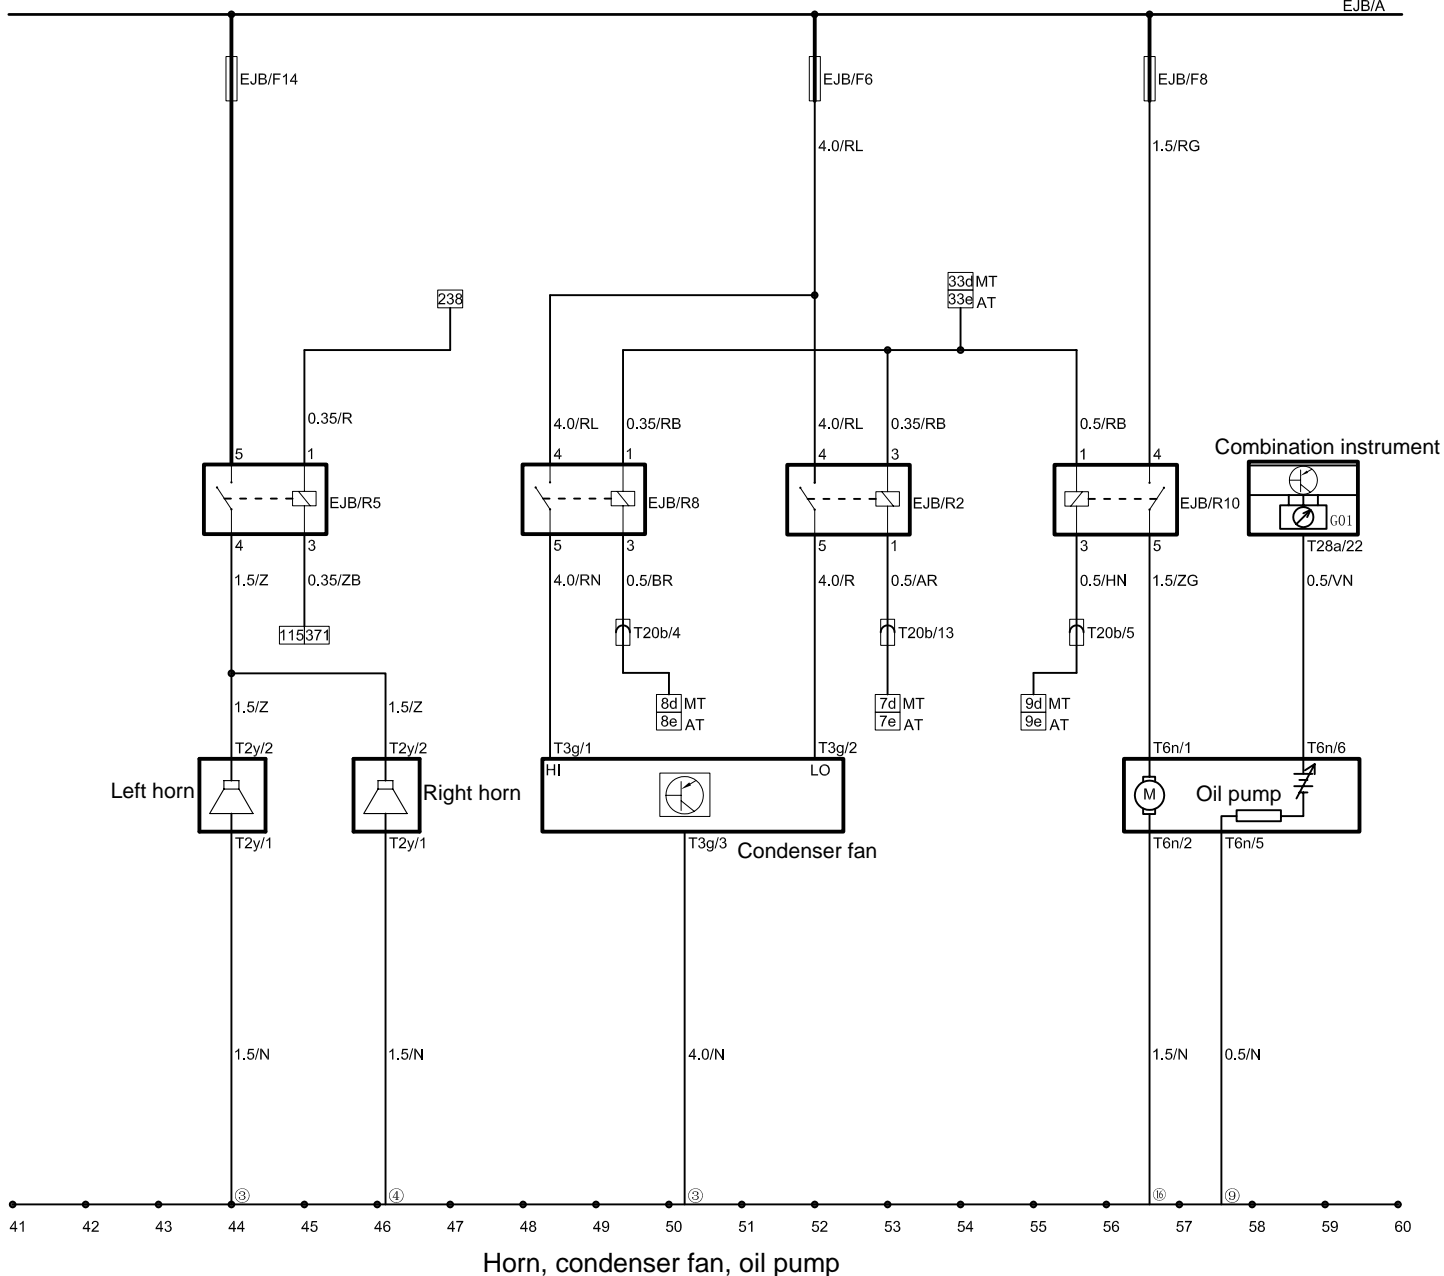

G01-Combination instrument fuel level indicator

EJB-Engine compartment fuse box

PJB-Instrument panel fuse box

T2y-Horn connector, 2 holes, black

T3g-Condenser fan connector, 3 holes, black

T6n-Oil pump connector, 6 holes, brown

T20b-Engine and main wire harness plug-in B, 20 holes, black

T28a-Combination instrument connector B, 28 holes, black

EJB A-Connecting, from engine compartment fuse box to battery positive pole

PJB D-Connecting, instrument panel fuse box binding post

PJB F-Connecting, instrument panel fuse box binding post

PJB G-Connecting, instrument panel fuse box binding post


PJB H-Connecting, instrument panel fuse box binding post

③-LF engine compartment ground

④-RF engine compartment ground

⑨-Passenger compartment RH A pillar ground

⑯-Passenger compartment rear seat RH ground

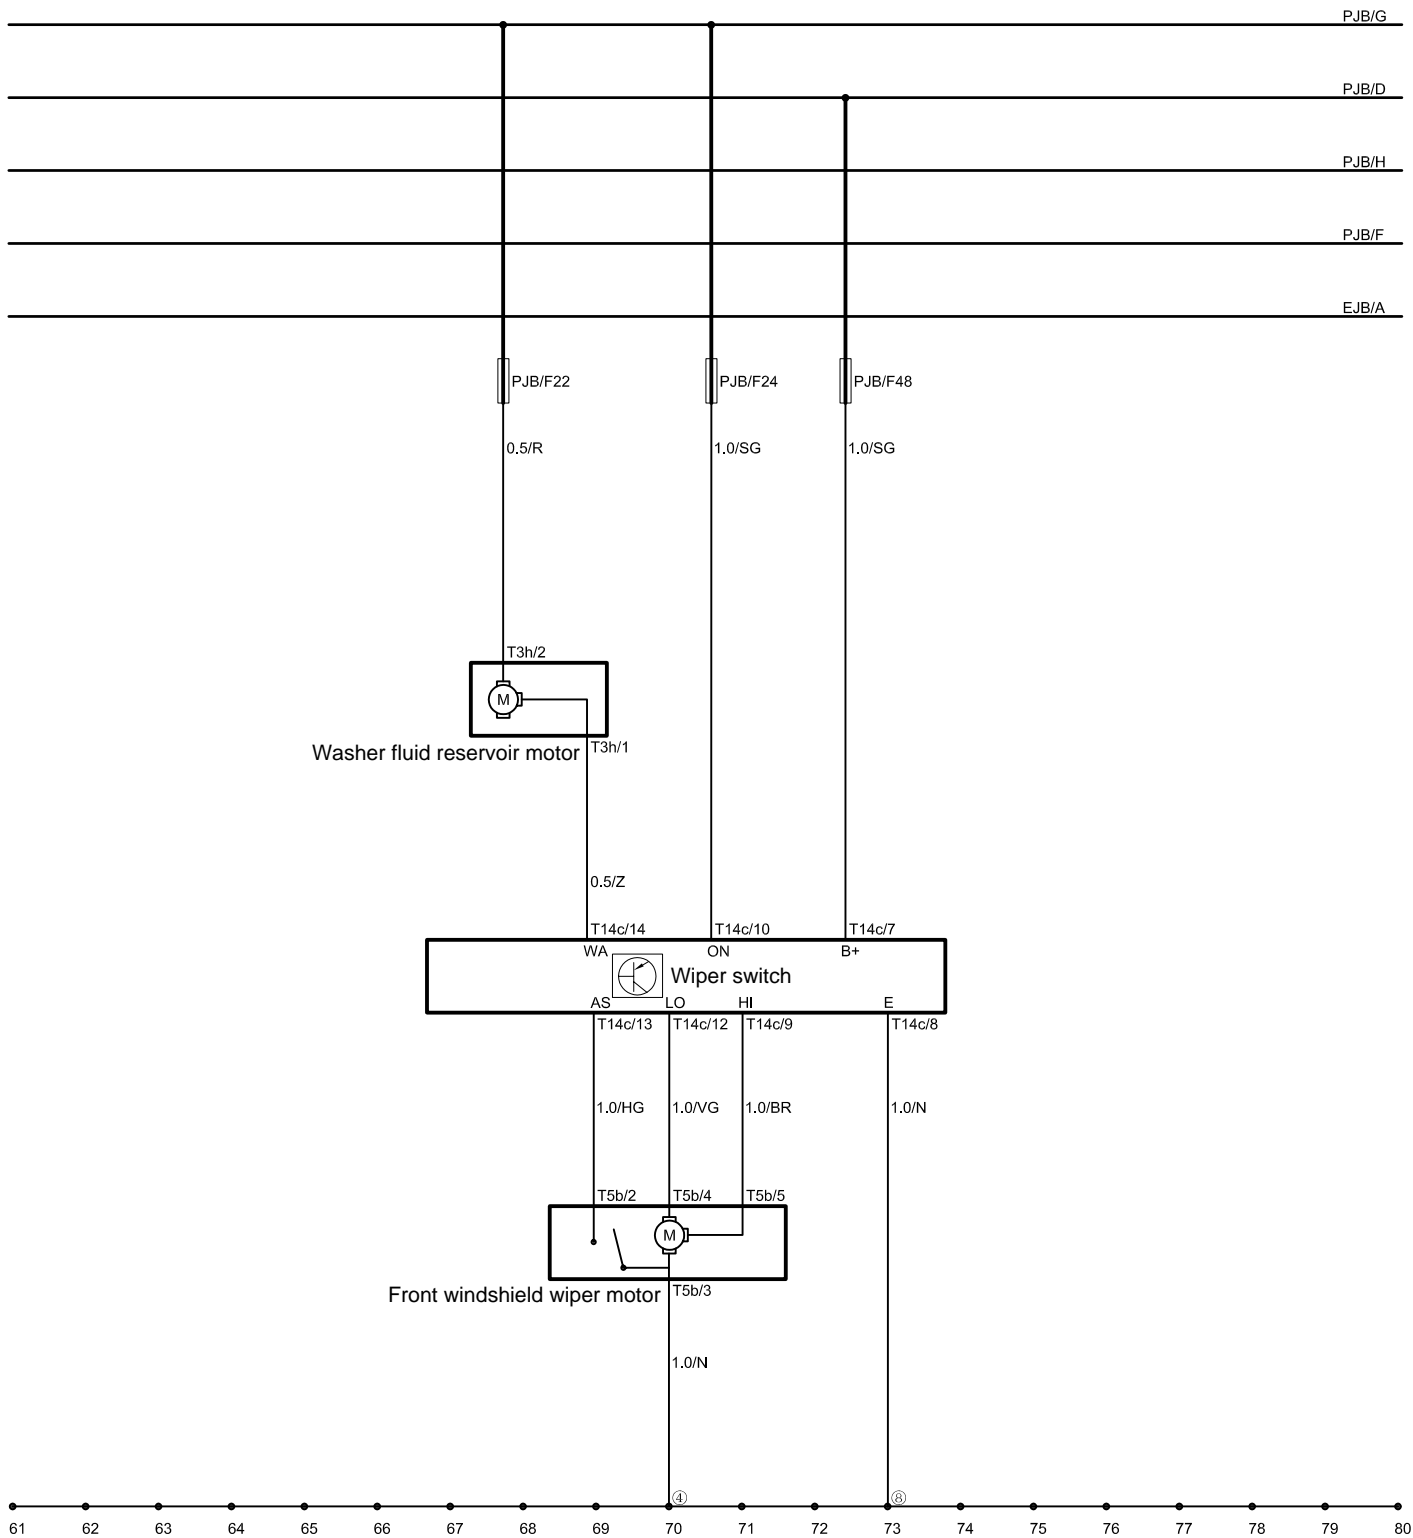

Wiper and washer system

EJB-Engine compartment fuse box

PJB-Instrument panel fuse box

T3h-Washer fluid reservoir motor connector, 3 holes, black

T5b-Front windshield wiper motor connector, 5 holes, black

T14c-Wiper switch connector, 14 holes, white

EJB A-Connecting, from engine compartment fuse box to battery positive pole

PJB D-Connecting, instrument panel fuse box binding post


PJB F-Connecting, instrument panel fuse box binding post

PJB G-Connecting, instrument panel fuse box binding post

PJB H-Connecting, instrument panel fuse box binding post

④-RF engine compartment ground


⑧-Passenger compartment LH A pillar ground

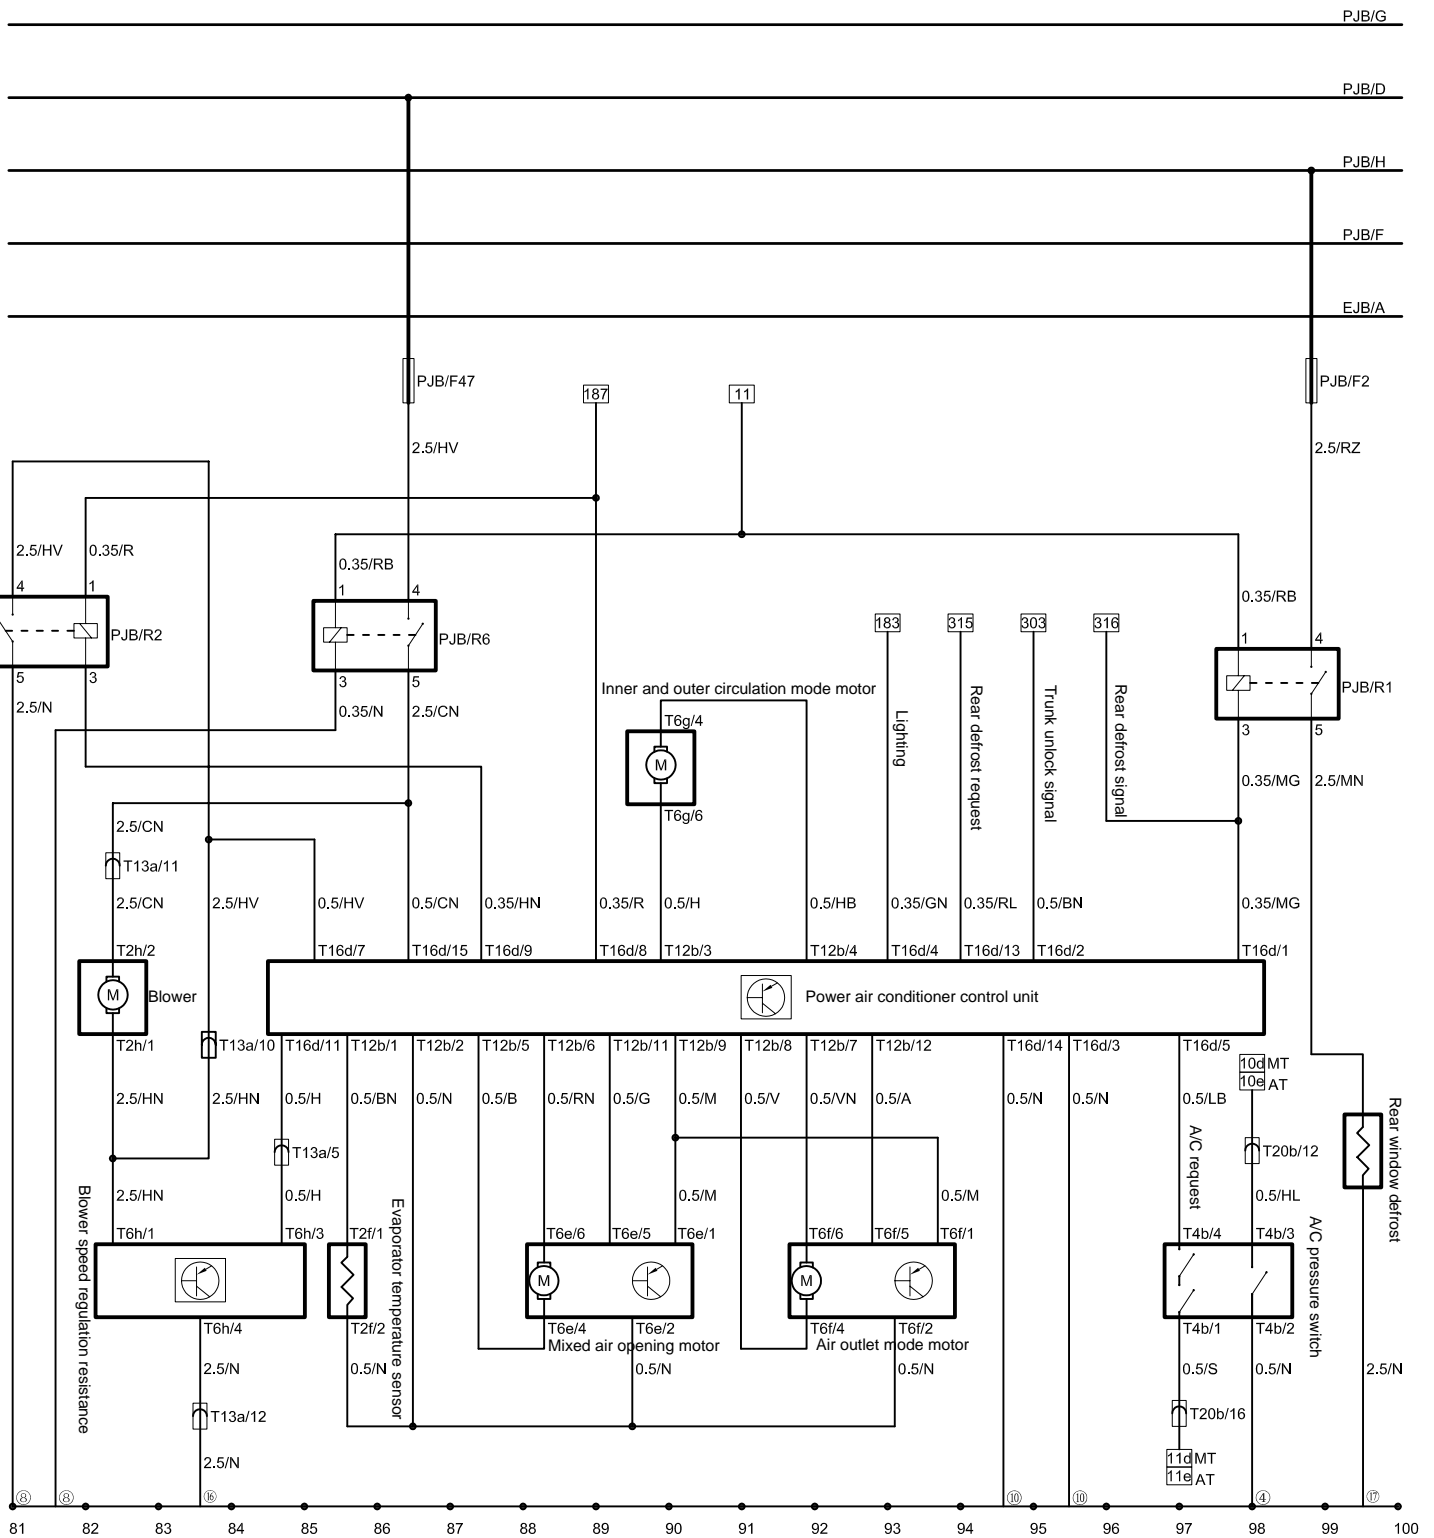

Power air conditioner, heating and defrost system

- EJB-Engine compartment fuse box
- PJB-Instrument panel fuse box
- T2f-Evaporator temperature sensor connector, 2 holes, white
- T2h-Blower connector, 2 holes, white
- T4b-A/C pressure switch connector, 4 holes, gray
- T6e-Mixed air opening motor connector, 6 holes, green
- T6f-Air outlet mode motor connector, 6 holes, green
- T6g-Inner and outer circulation mode motor connector, 6 holes, green
- T6h-Blower speed regulation resistance connector, 6 holes, white
- T12b-A/C control unit connector B, 12 holes, black
- T13a-A/C and main wire harness plug-in, 13 holes, white
- T16d-A/C control unit connector A, 16 holes, black
- T20b-Engine and main wire harness plug-in B, 20 holes, black
- EJB A-Connecting, from engine compartment fuse box to battery positive pole
- PJB D-Connecting, instrument panel fuse box binding post
- PJB F-Connecting, instrument panel fuse box binding post
- PJB G-Connecting, instrument panel fuse box binding post
- PJB H-Connecting, instrument panel fuse box binding post

- ④-RF engine compartment ground
- ⑧-Passenger compartment LH A pillar ground
- ⑩-Instrument panel beam ground
- ⑯-Passenger compartment rear seat RH ground
- ⑰-Passenger compartment RH C pillar ground

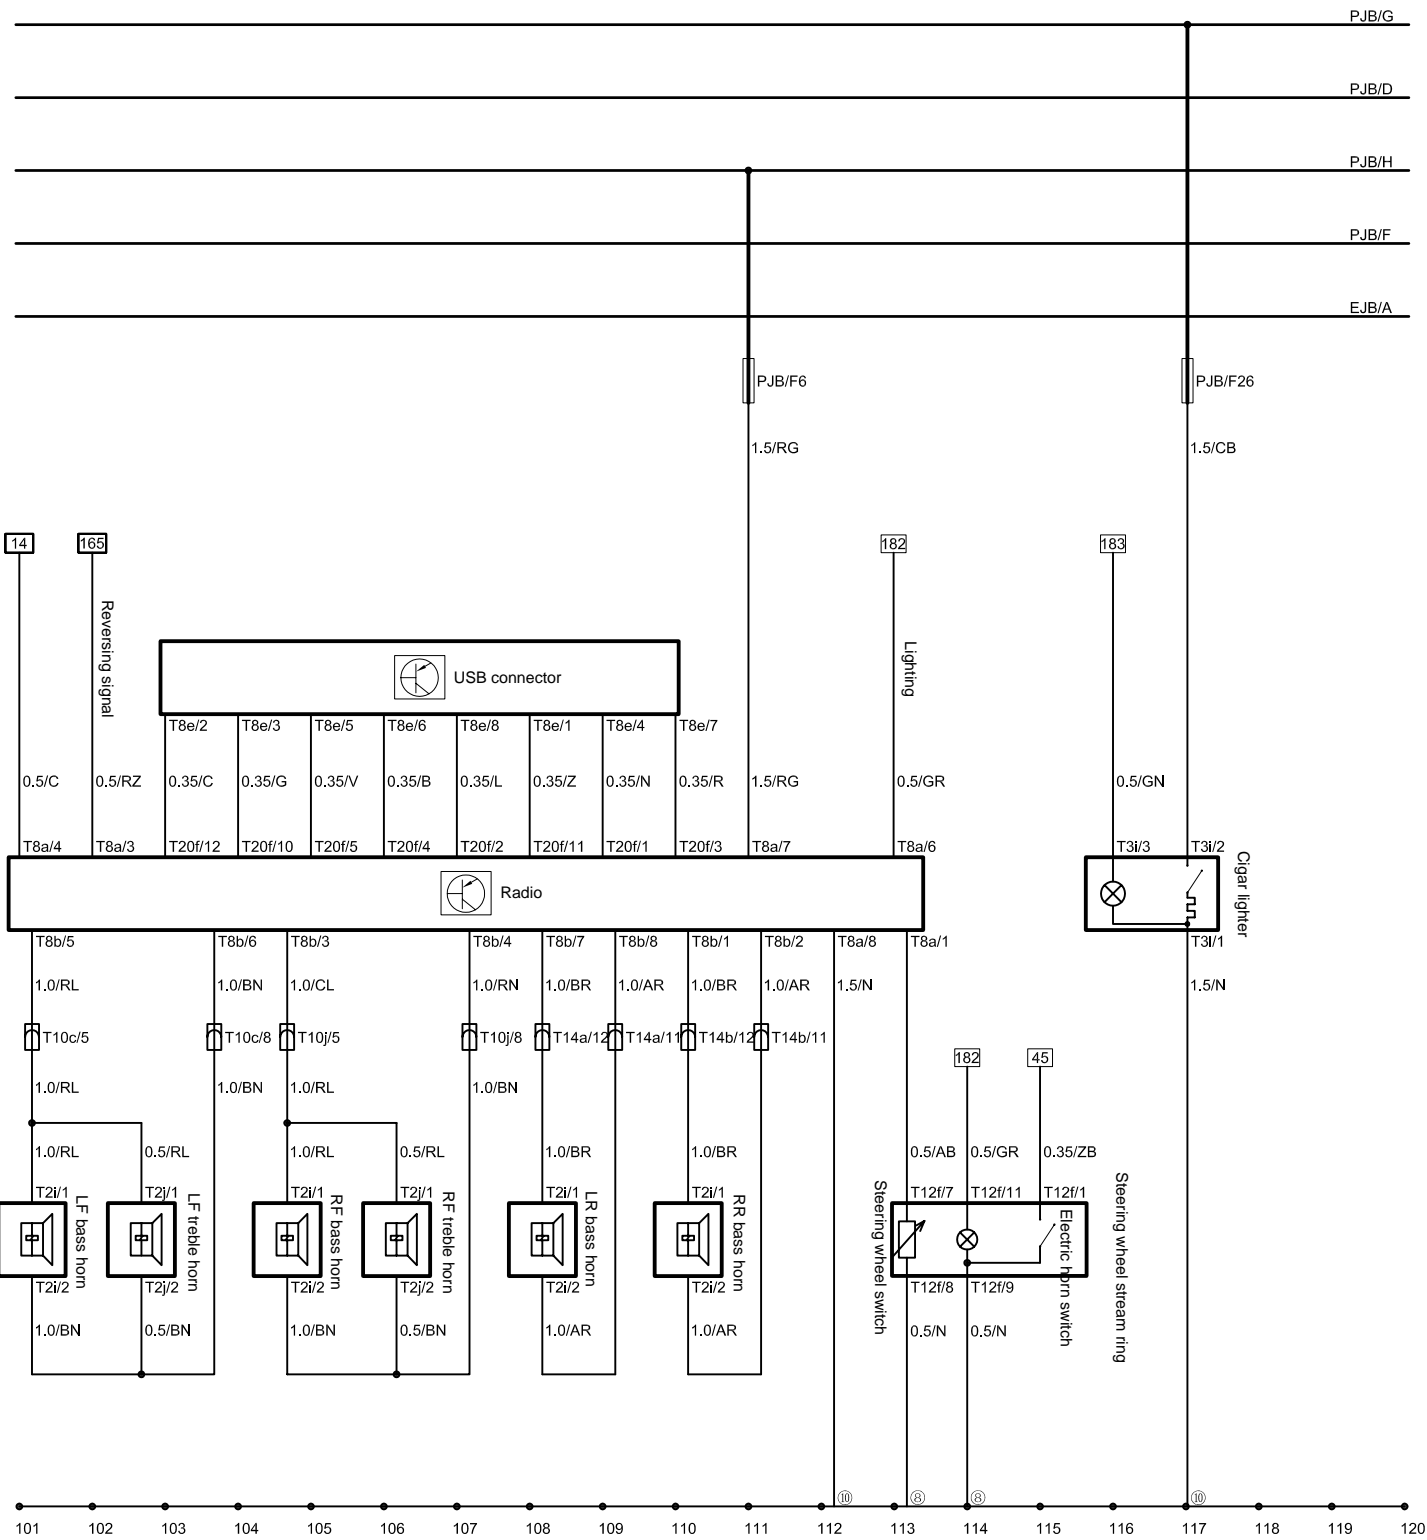

Radio, steering wheel switch, cigar lighter

EJB-Engine compartment fuse box

PJB-Instrument panel fuse box

T2i-Bass horn connector, 2 holes, black

T2j-Treble horn connector, 2 holes, black

T3i-Cigar lighter connector, 3 holes, white

T8a-Radio connector A, 8 holes, white

T8b-Radio connector B, 8 holes, black

T8e-USB interface connector, 8 holes, black

T10c-LF door and main wire harness plug-in B, 10 holes, white

T10j-RF door and main wire harness plug-in B, 10 holes, white

T12f-Steering wheel stream ring connector, 12 holes, white

T14a-LR door and main wire harness plug-in B, 14 holes, white

T14b-RR door and main wire harness plug-in B, 14 holes, white

T20f-Radio connector C, 20 holes, multicolour

EJB A-Connecting, from engine compartment fuse box to battery positive pole

PJB D-Connecting, instrument panel fuse box binding post

PJB F-Connecting, instrument panel fuse box binding post


PJB G-Connecting, instrument panel fuse box binding post

PJB H-Connecting, instrument panel fuse box binding post

⑧-Passenger compartment LH A pillar ground


⑩-Instrument panel beam ground



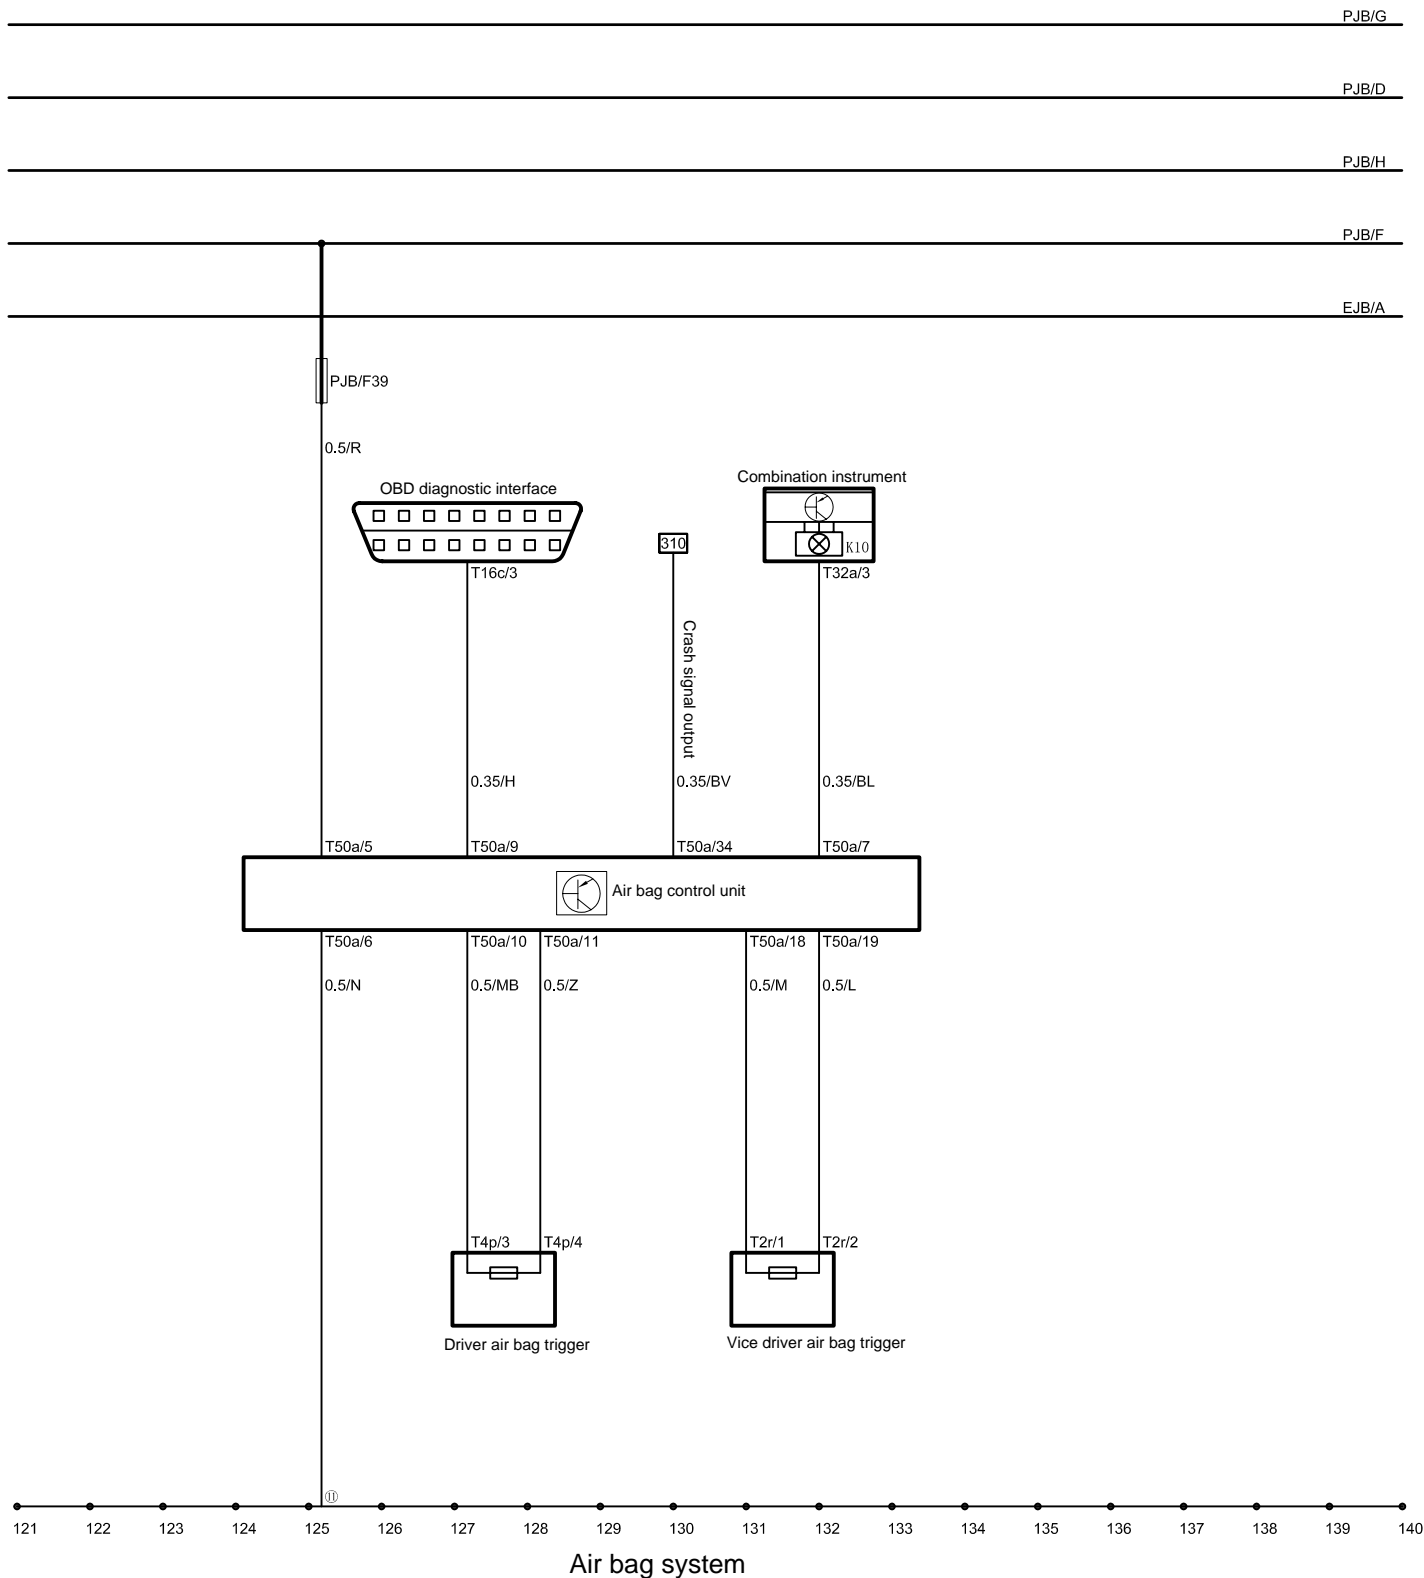


Air bag system

- K10-Combination instrument air bag failure indicator
- EJB-Engine compartment fuse box
- PJB-Instrument panel fuse box
- T2r-Vice driver air bag trigger connector, 2 holes, yellow
- T4p-Driver air bag trigger connector, 4 holes, yellow
- T16c-Diagnostic interface connector, 16 holes, black
- T32a-Combination instrument connector A, 32 holes, blue
- T50a-Double way air bag control unit connector, 50 holes, yellow
- EJB A-Connecting, from engine compartment fuse box to battery positive pole
- PJB D-Connecting, instrument panel fuse box binding post
- PJB F-Connecting, instrument panel fuse box binding post
- PJB G-Connecting, instrument panel fuse box binding post
- PJB H-Connecting, instrument panel fuse box binding post
- ⑪-Air bag control unit ground

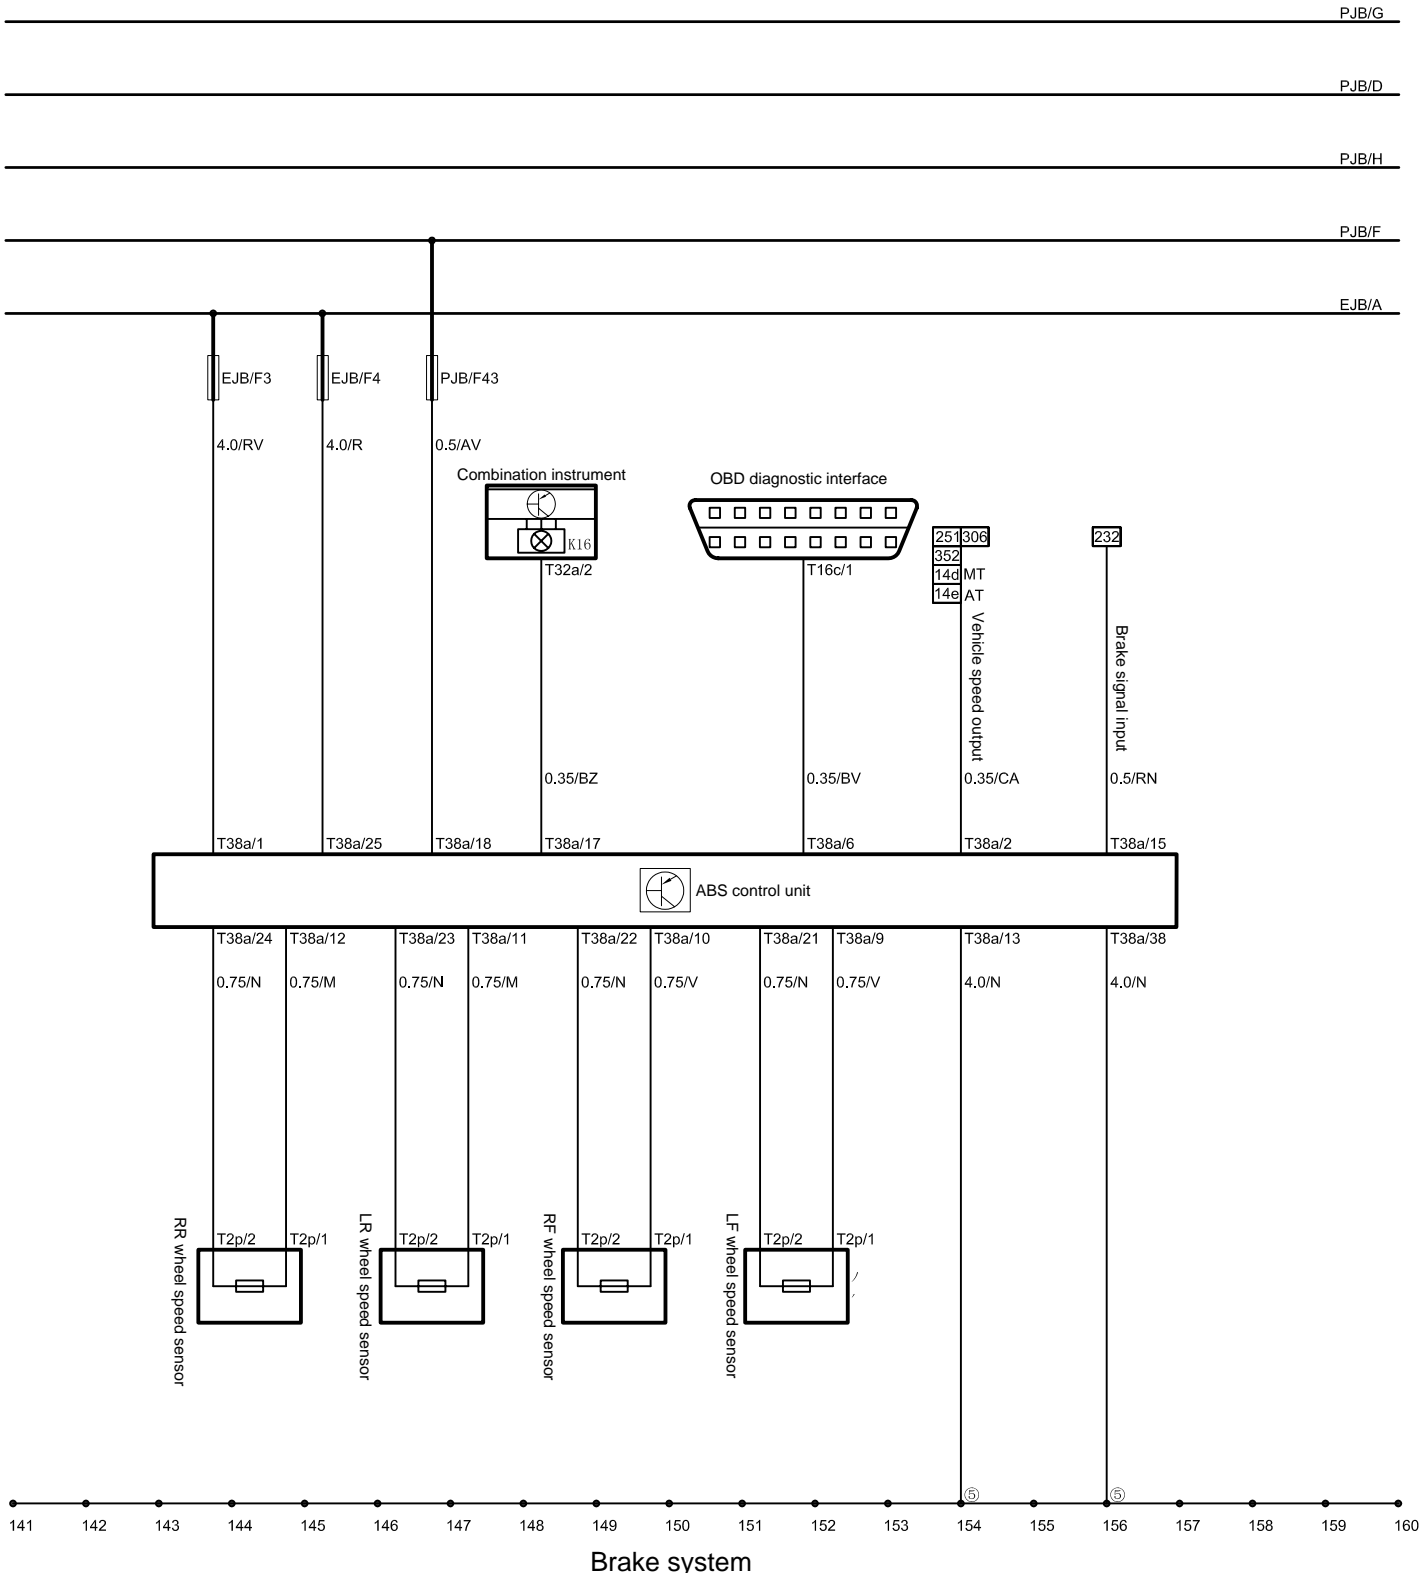

Brake system

- K16-Combination instrument brake system failure indicate
- EJB-Engine compartment fuse box
- PJB-Instrument panel fuse box
- T2p-Wheel speed sensor connector, 2 holes, black
- T16c-Diagnostic interface connector, 16 holes, black
- T32a-Combination instrument connector A, 32 holes, blue
- T38a-Brake system control unit connector, 38 holes, black
- EJB A-Connecting, from engine compartment fuse box to battery positive pole
- PJB D-Connecting, instrument panel fuse box binding post
- PJB F-Connecting, instrument panel fuse box binding post
- PJB G-Connecting, instrument panel fuse box binding post
- PJB H-Connecting, instrument panel fuse box binding post
- ⑤-Brake system ground inside the flow channel

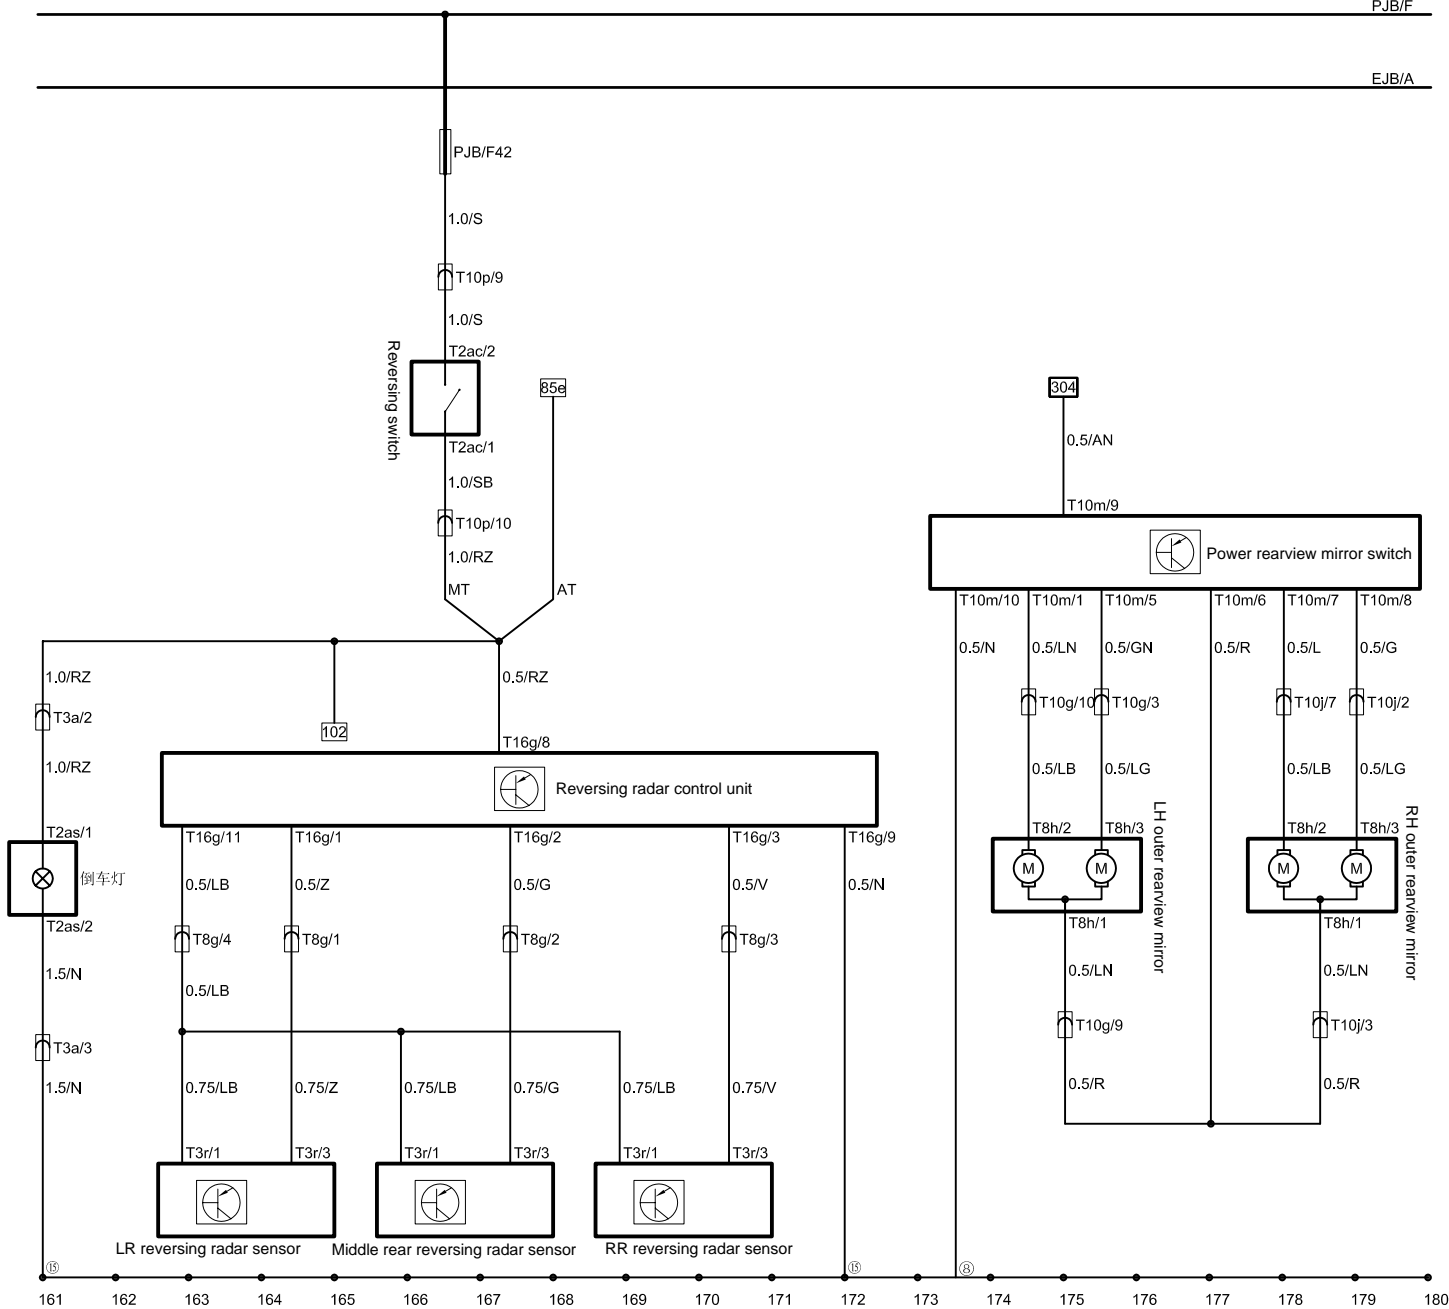

### Reversing radar, outer rearview mirror

EJB-Engine compartment fuse box

PJB-Instrument panel fuse box

T2ac-Reversing switch, 2 holes, black(only for MT model)

T2as-Reversing lamp connector, 2 holes, black

T3a-Rear bump and main wire harness plug-in A, 3 holes, white

T3r-Reversing radar sensor connector, 3 holes, white

T8g-Rear bump and main wire harness plug-in B, 8 holes, white

T8h-Outer power rearview mirror connector C, 10 holes, orange

T10g-LF door and main wire harness plug-in C, 10 holes, orange

T10j-RF door and main wire harness plug-in B, 10 holes, white

T10m-Power rearview mirror switch connector, 10 holes, white

T10p-Engine and main wire harness plug-in C, 10 holes, black

T16g-Reversing radar control unit connector, 16 holes, black

EJB A-Connecting, from engine compartment fuse box to battery positive pole

PJB D-Connecting, instrument panel fuse box binding post


PJB F-Connecting, instrument panel fuse box binding post

PJB G-Connecting, instrument panel fuse box binding post

PJB H-Connecting, instrument panel fuse box binding post


⑧-Passenger compartment LH A pillar ground

⑮-Passenger compartment rear seat LH ground

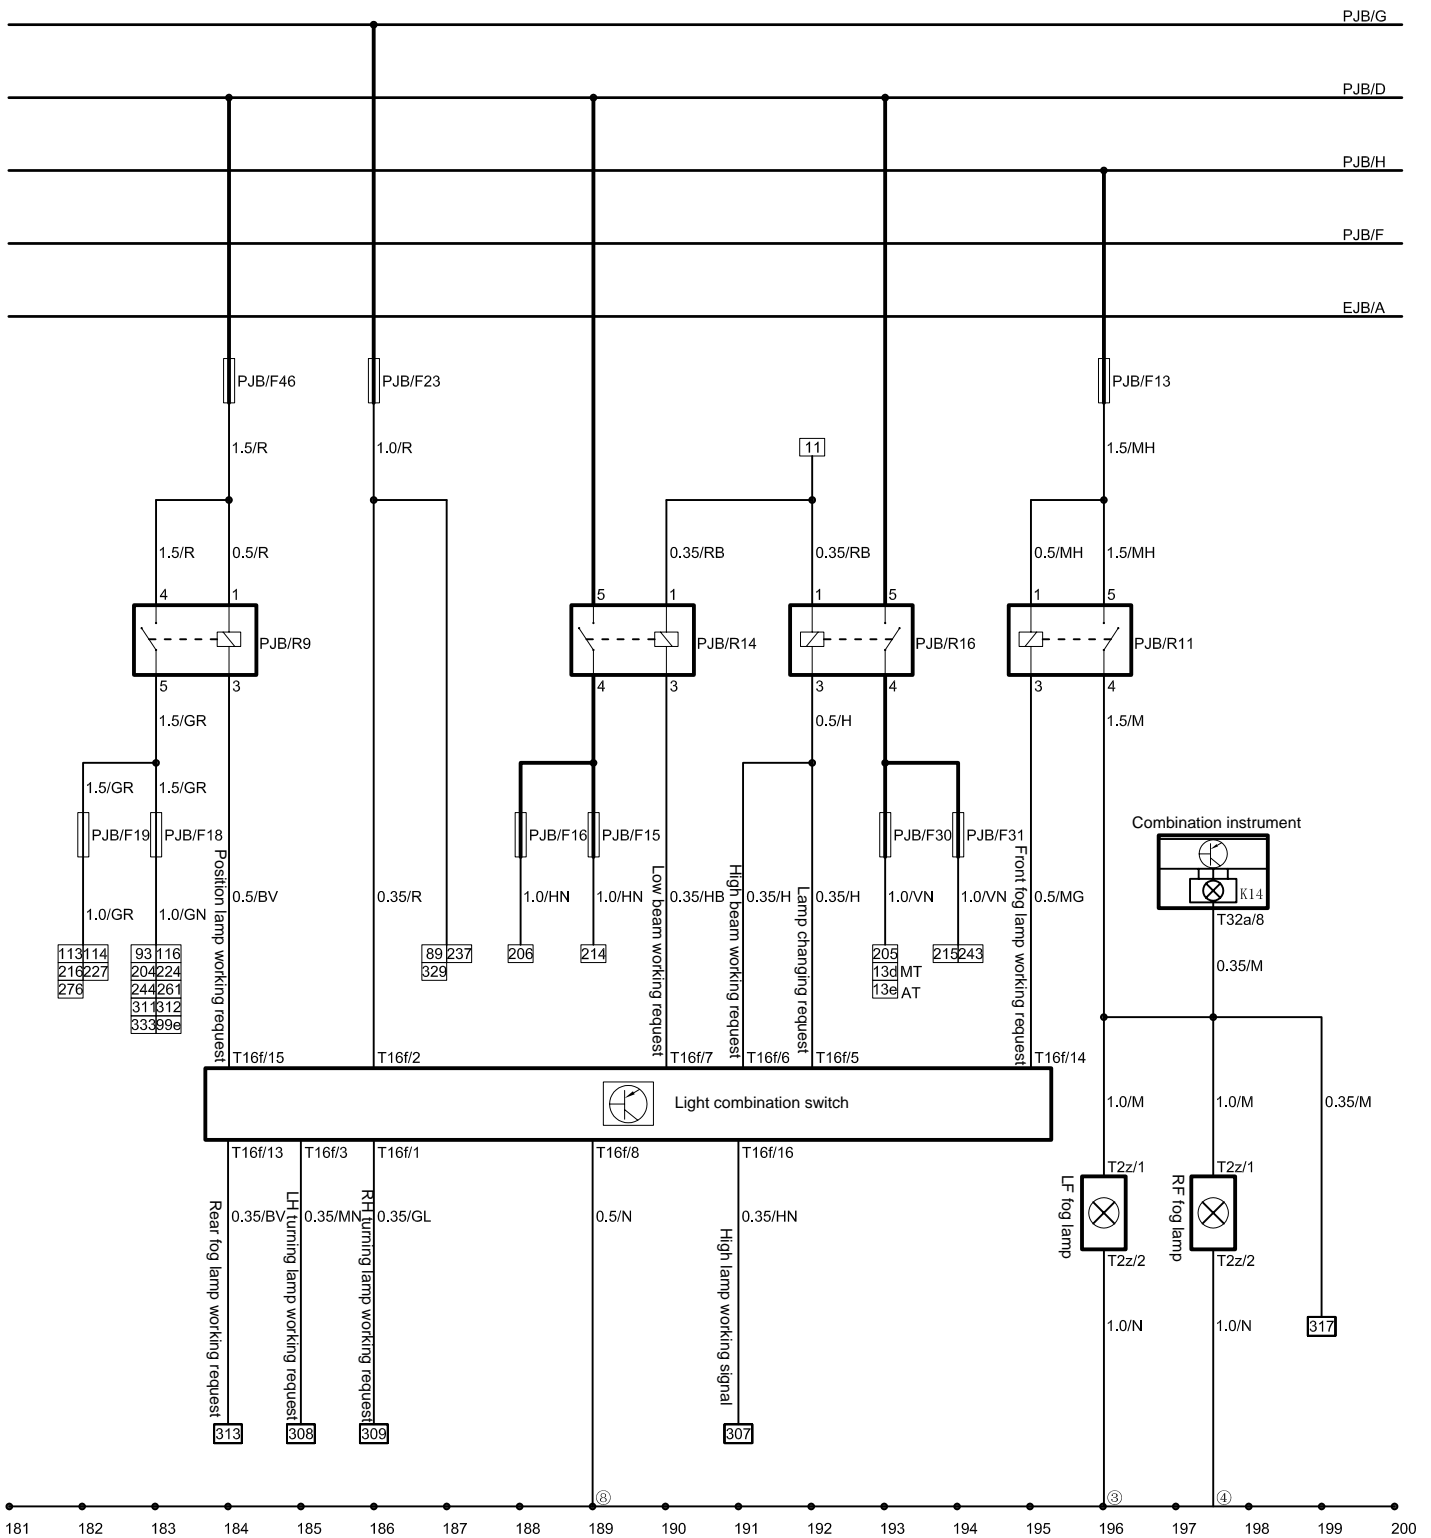

Lighters control switch, front fog light

- K14-Combination instrument front fog lamp indicator
- EJB-Engine compartment fuse box
- PJB-Instrument panel fuse box
- T2z-Front fog lamp connector, 2 holes, black
- T16f-Lights combination switch connector, 16 holes, black
- T32a-Combination instrument connector A, 32 holes, blue
- EJB A-Connecting, from engine compartment fuse box to battery positive pole
- PJB D-Connecting, instrument panel fuse box binding post
- PJB F-Connecting, instrument panel fuse box binding post
- PJB G-Connecting, instrument panel fuse box binding post
- PJB H-Connecting, instrument panel fuse box binding post
- ③-LF engine compartment ground
- ④-RF engine compartment ground
- ⑧-Passenger compartment LH A pillar ground

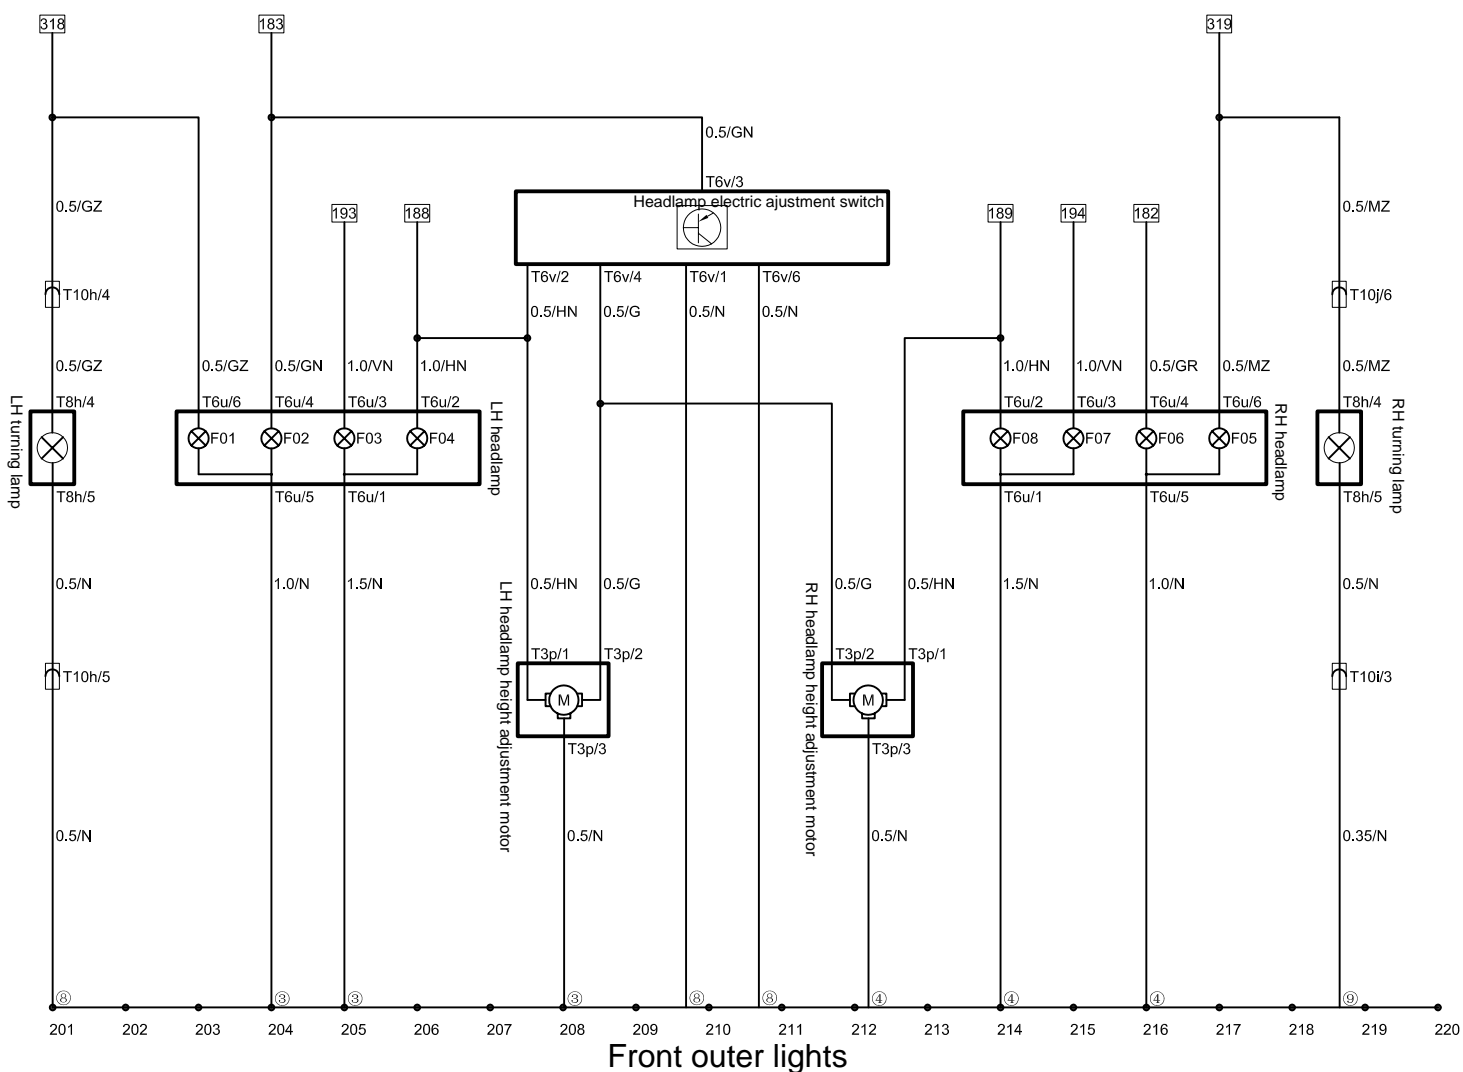


### Front outer lights

F01-LF turning light  
 F02-LF position light  
 F03-LF high beam light  
 F04-LF low beam light  
 F05-RF turning light  
 F06-RF position light  
 F07-RF high beam light  
 F08-RF low beam light  
 EJB-Engine compartment fuse box  
 PJB-Instrument panel fuse box

EJB A-Connecting, from engine compartment fuse box to battery positive pole  
 PJB D-Connecting, instrument panel fuse box binding post  
 PJB F-Connecting, instrument panel fuse box binding post  
 PJB G-Connecting, instrument panel fuse box binding post  
 PJB H-Connecting, instrument panel fuse box binding post

T3p-Headlamp height adjustment motor connector, 3 holes, black  
 T6u-Front headlamp connector, 6 holes, black  
 T6v-Headlamp electric adjustment switch connector, 6 holes, white  
 T8h-Outer power rearview mirror connector, 8 holes, yellow  
 T10h-LF door and main wire harness plug-in A, 10 holes, black  
 T10i-RF door and main wire harness plug-in A, 10 holes, black  
 T10j-RF door and main wire harness plug-in B, 10 holes, white

③-LF engine compartment ground  
 ④-RF engine compartment ground  
 ⑧-Passenger compartment LH A pillar ground  
 ⑨-Passenger compartment RH A pillar ground

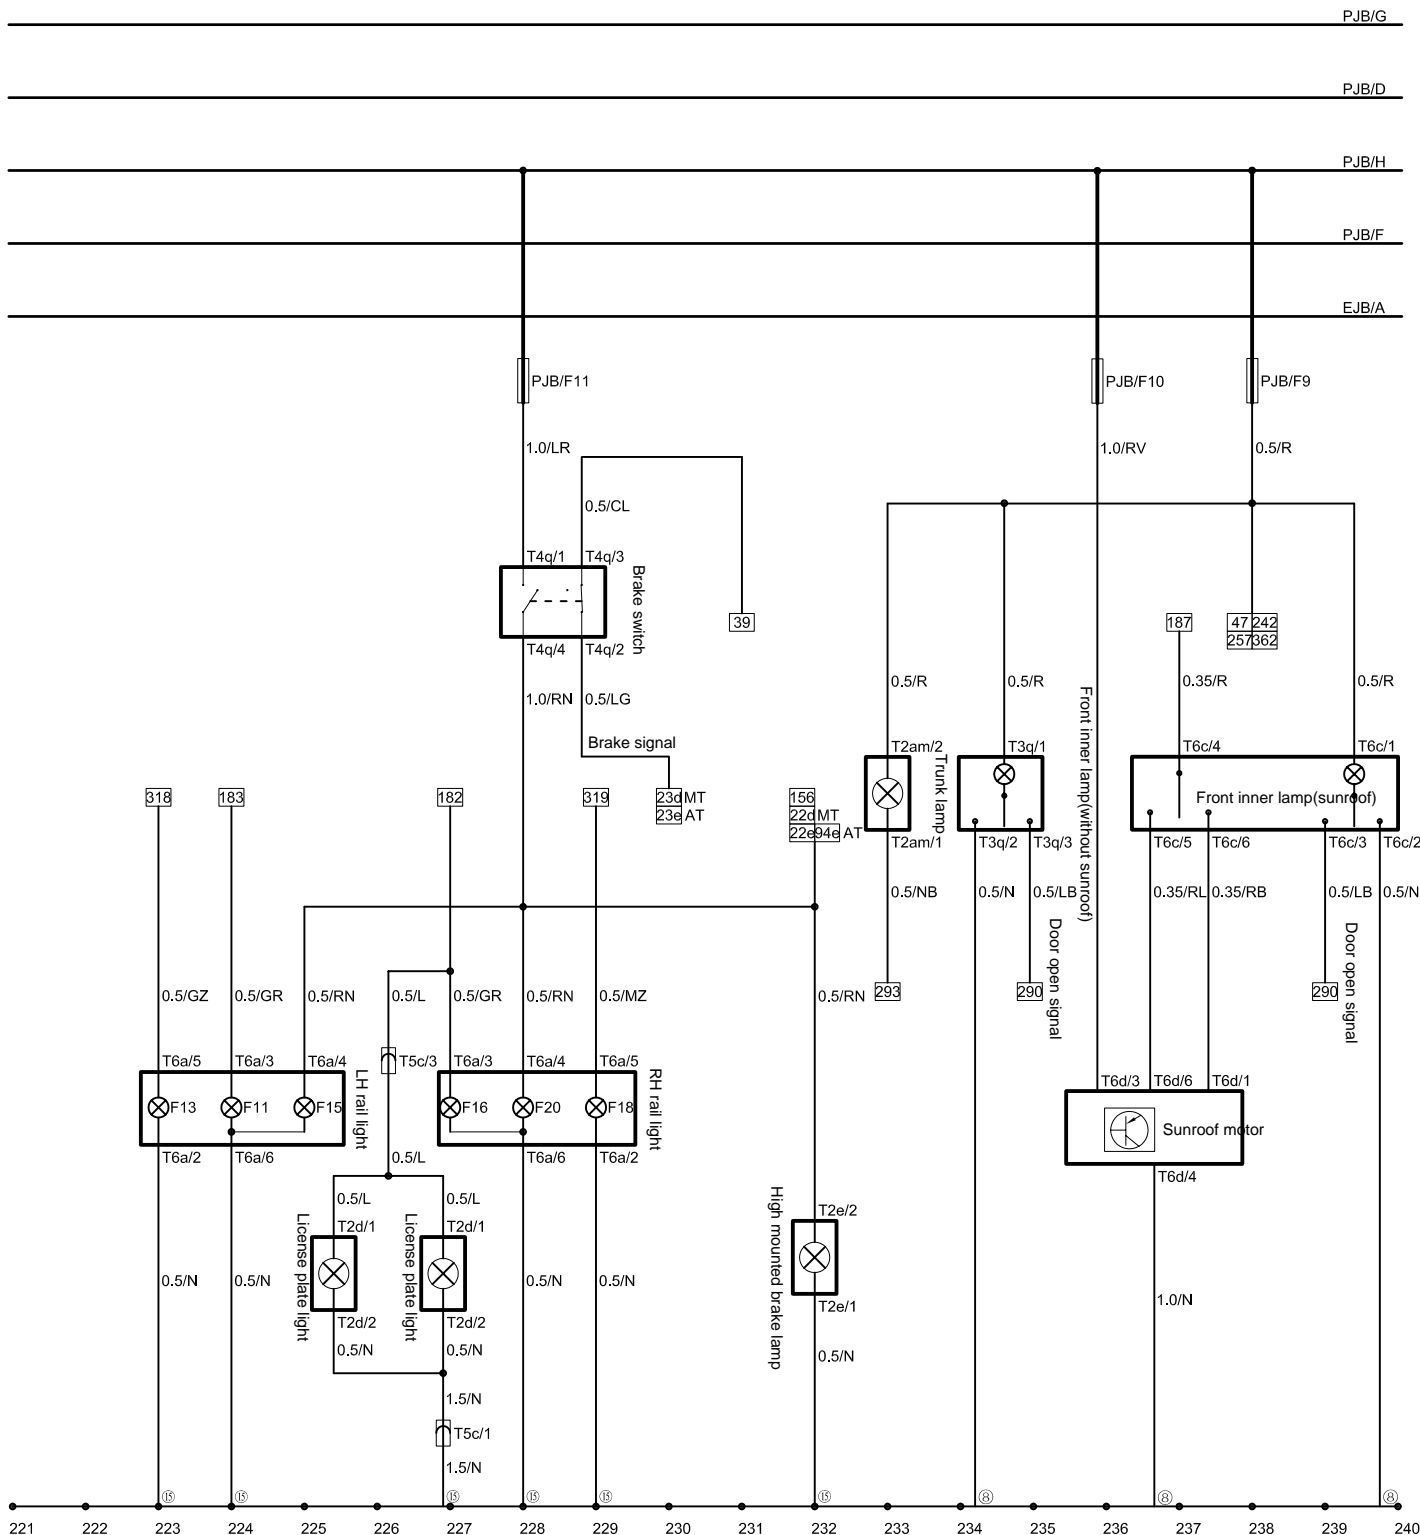


Rear outer lamps, inner lamps, sunroof

- F11-RL position lamp
- F13-RL turning lamp
- F15-RL brake lamp
- F16-RR position lamp
- F18-RR turning lamp
- F20-RR brake lamp

EJB-Engine compartment fuse box  
 PJB-Instrument panel fuse box

- T2d-License plate lamp connector, 2 holes, black
- T2e-High mounted brake lamp connector, 2 holes, white
- T2am-Trunk lamp connector, 2 holes, white
- T3q-Front inner lamp(without sunroof) connector, 3 holes, white
- T4q-Brake switch connector, 4 holes, black
- T5c-Trunk and main wire harness plug-in A, 5 holes, black
- T6a-Rail lamp connector, 6 holes, white
- T6c-Front inner lamp(with sunroof) connector, 6 holes, white
- T6d-Sunroof motor connector, 6 holes, grey

- EJB A-Connecting, from engine compartment fuse box to battery positive pole
- PJB D-Connecting, instrument panel fuse box binding post
- PJB F-Connecting, instrument panel fuse box binding post
- PJB G-Connecting, instrument panel fuse box binding post
- PJB H-Connecting, instrument panel fuse box binding post
- Ⓢ-Passenger compartment LH A pillar ground
- Ⓣ-Passenger compartment rear seat LH ground

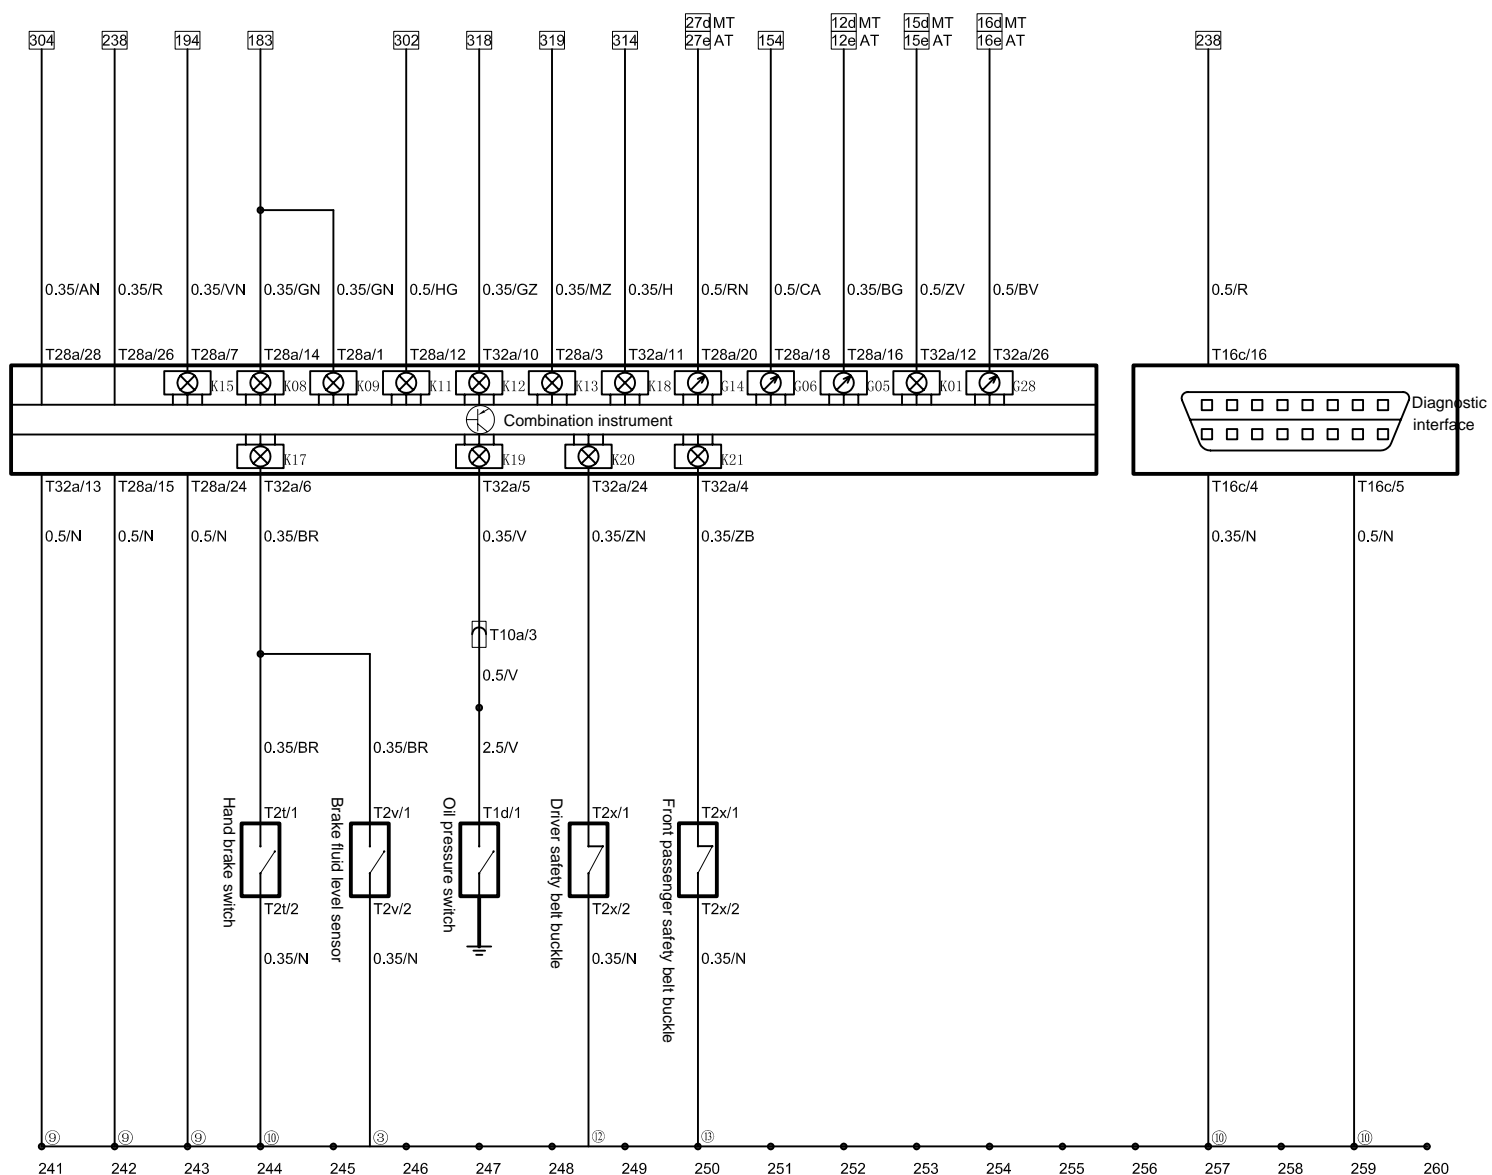


Combination instrument, diagnostic interface

K01-Engine failure indicator  
 K08-Background light  
 K09-Position lamp indication  
 K11-Rear fog lamp indication  
 K12-Turn left indicator  
 K13-Turn right indicator  
 K15-High beam indicator  
 K17-Brake system indicator  
 K18-Door opening indicator  
 K19-Oil pressure alarm indicator  
 K20-Driver safety belt indicator  
 K21-Front passenger safety belt indicator

G05-Revolution speed indication  
 G06-Vehicle speed indication  
 G14-Coolant temperature indication  
 G28-Instantaneous fuel consumption indication  
 EJB-Engine compartment fuse box  
 PJB-Instrument panel fuse box  
 T1d-Oil pressure sensor connector, 1 hole

T2t-Hand brake switch connector, 2 holes, black  
 T2v-Brake fluid level sensor connector, 2 holes, grey  
 T2x-Safety belt buckle connector, 2 holes, white  
 T10a-Engine and main wire harness plug-in A, 10 holes, black

T16c-Diagnostic interface connector, 16 holes, black  
 T28a-Combination instrument connector B, 28 holes, black  
 T32a-Combination instrument connector A, 32 holes, blue  
 EJB A-Connecting, from engine compartment fuse box to battery positive pole  
 PJB D-Connecting, instrument panel fuse box binding post  
 PJB F-Connecting, instrument panel fuse box binding post  
 PJB G-Connecting, instrument panel fuse box binding post  
 PJB H-Connecting, instrument panel fuse box binding post  
 ③-FL engine compartment ground  
 ⑨-Passenger compartment RH A pillar ground  
 ⑩-Instrument beam ground  
 ⑫-Passenger compartment LH B pillar ground  
 ⑬-Passenger compartment RH B pillar ground

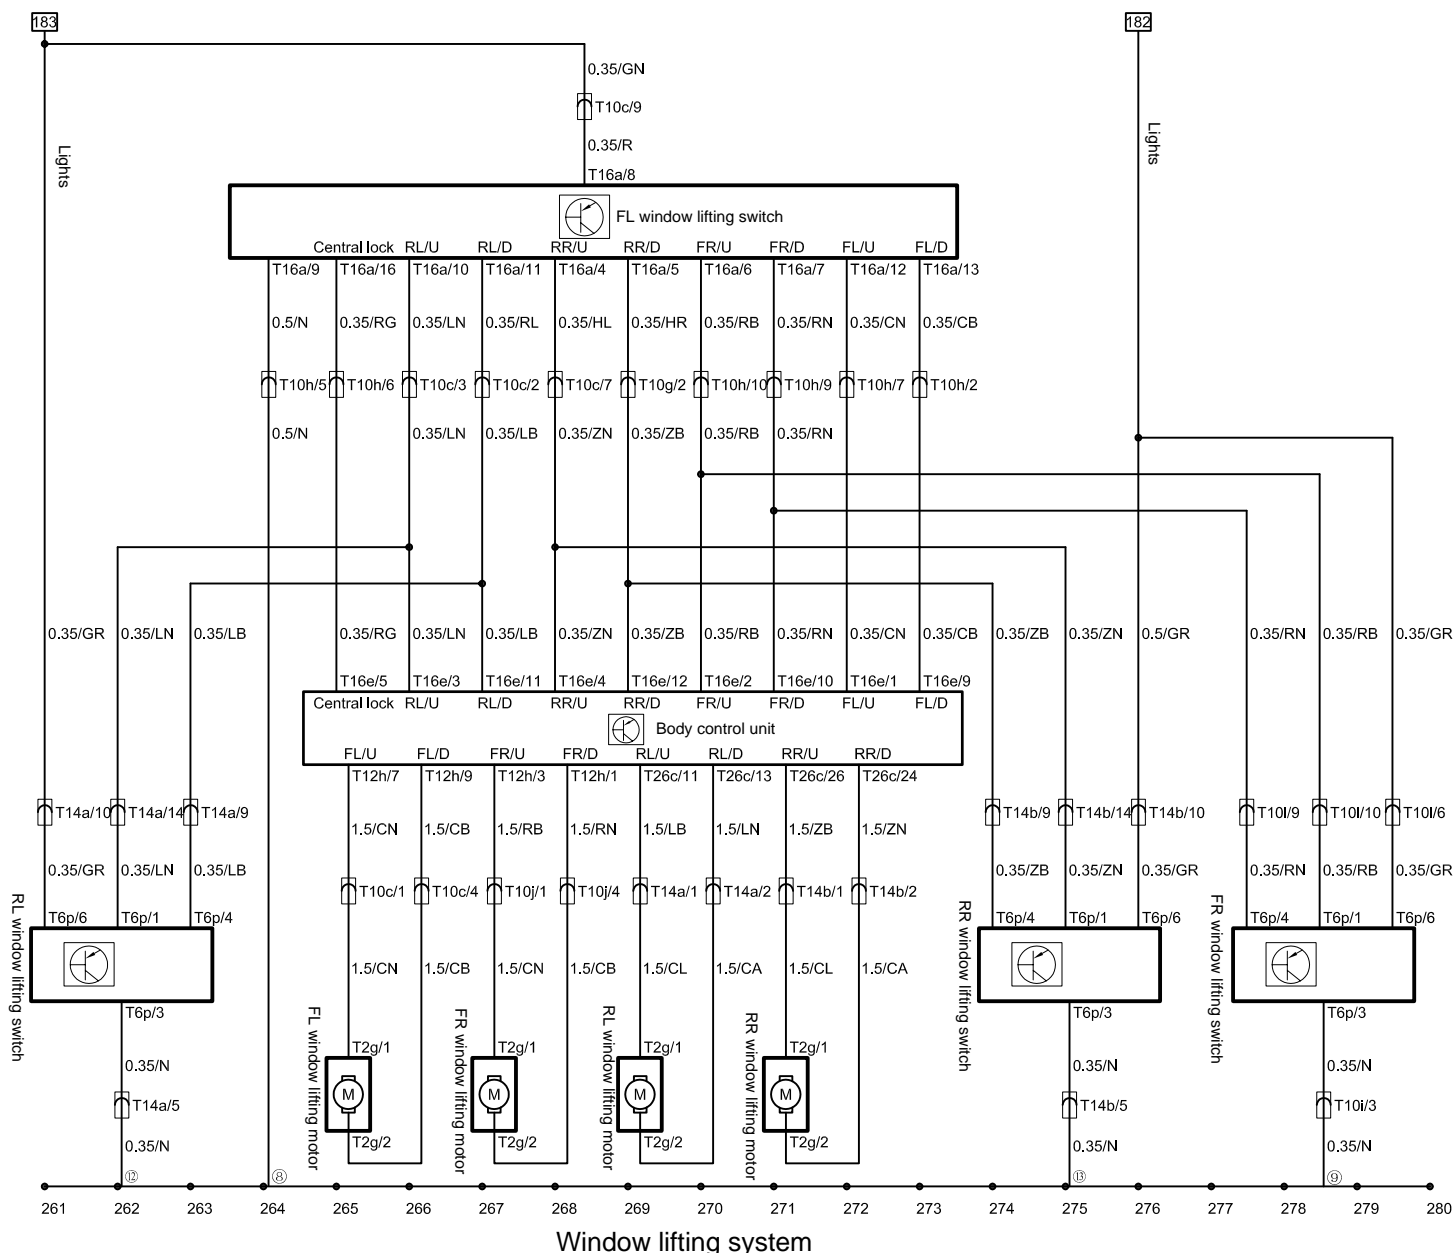

EJB-Engine compartment fuse box

PJB-Instrument panel fuse box

T2g-Window lifting motor connector, 2 holes, white

T6p-Window lifting switch connector, 6 holes, black

T10c-FL door and main wire harness plug-in B, 10 holes, white

T10g-FL door and main wire harness plug-in C, 10 holes, orange

T10h-FL door and main wire harness plug-in A, 10 holes, black

T10i-FR door and main wire harness plug-in A, 10 holes, black

T10j-FR door and main wire harness plug-in B, 10 holes, white

T12h-Body control unit connector A, 12 holes, white

T14a-RL door and main wire harness plug-in, 14 holes, white

T14b-RR door and main wire harness plug-in, 14 holes, white

T16a-FL window lifting switch connector, 16 holes, brown

T16e-Body control unit connector C, 16 holes, white

T26c-Body control unit connector B, 26 holes, white

EJB A-Connecting, from engine compartment fuse box to battery positive pole

PJB D-Connecting, instrument panel fuse box binding post

PJB F-Connecting, instrument panel fuse box binding post

PJB G-Connecting, instrument panel fuse box binding post

PJB H-Connecting, instrument panel fuse box binding post


⑧- Passenger compartment LH A pillar ground

⑨- Passenger compartment RH A pillar ground

⑫- Passenger compartment LH B pillar ground

⑬- Passenger compartment RH B pillar ground



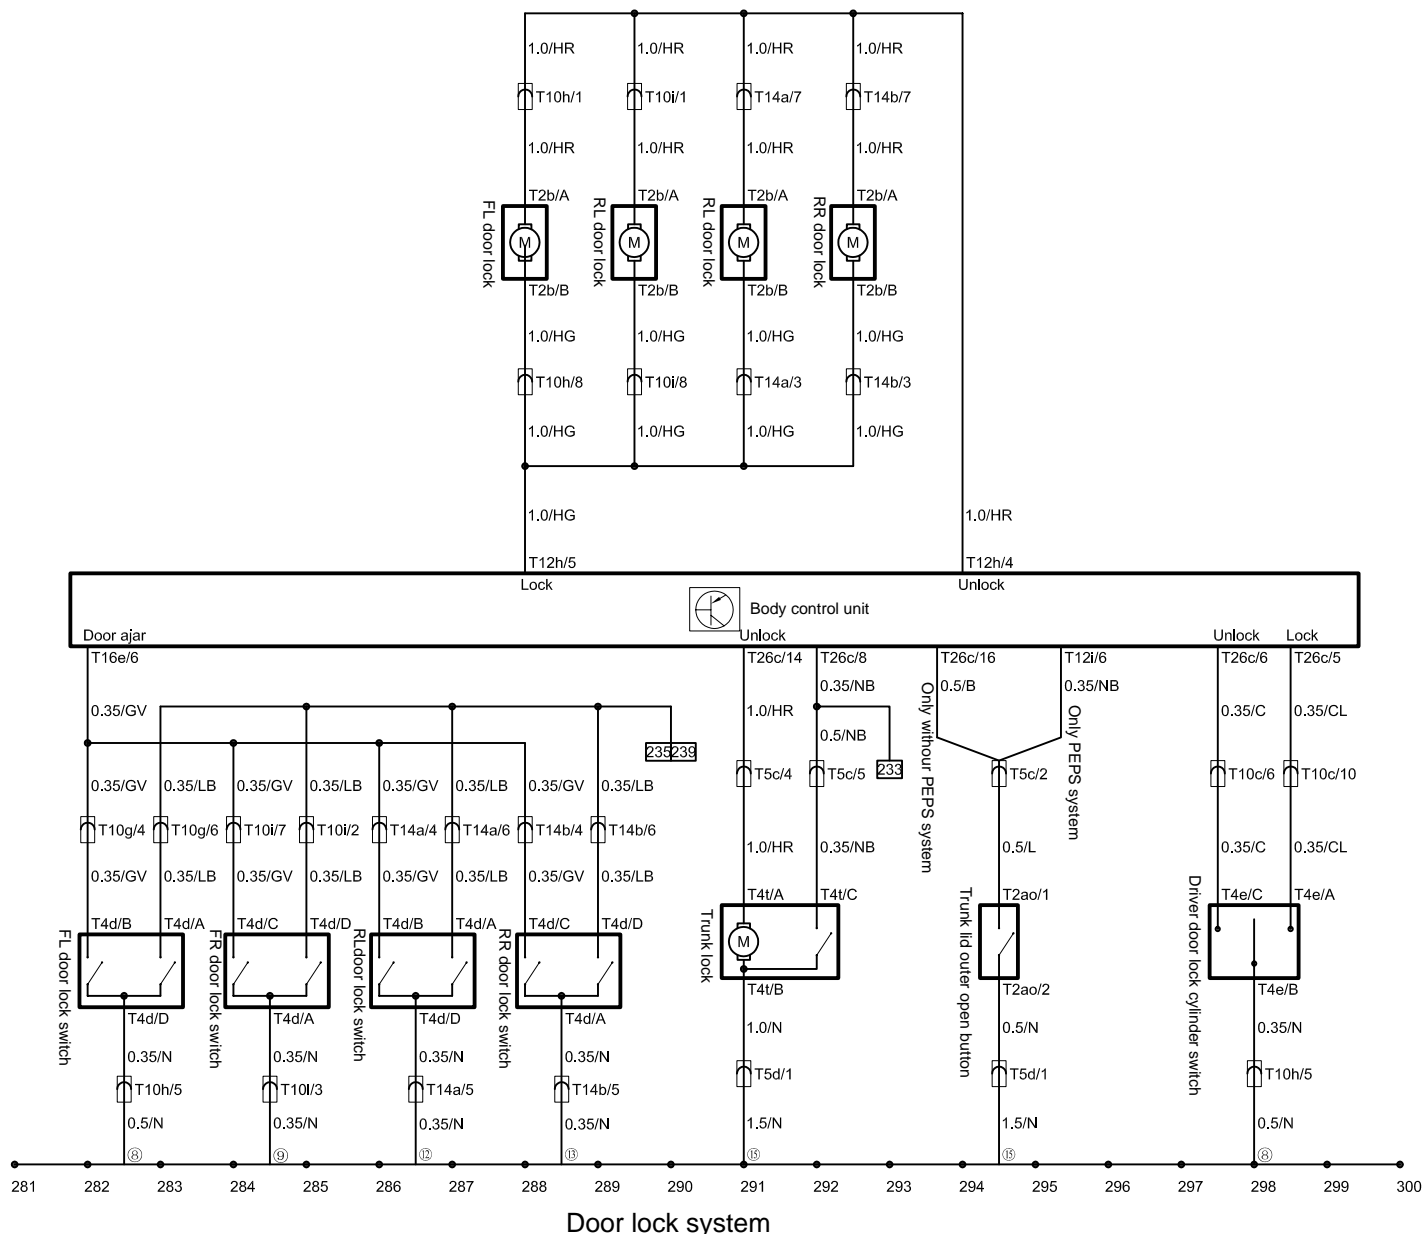

EJB-Engine compartment fuse box

PJB-Instrument panel fuse box

T2b-Door lock motor connector, 2 holes, black

T2ao-Trunk lid outer open button connector, 2 holes, white

T4d-Door lock micro switch connector, 4 holes, black

T4e-Driver door lock cylinder switch connector, 4 holes, grey

T4t-Trunk lock motor connector, 4 holes, white

T5c-Trunk and main wire harness plug-in A, 5 holes, black

T5d-Trunk and main wire harness plug-in B, 5 holes, brown

T10c-FL door and main wire harness plug-in B, 10 holes, white

T10g-FL door and main wire harness plug-in C, 10 holes, orange

T10h-FL door and main wire harness plug-in A, 10 holes, black

T10i-FR door and main wire harness plug-in A, 10 holes, black

T12h-Body control unit connector A, 12 holes, white

T12i-Body control unit connector E, 12 holes, white

T14a-RL door and main wire harness plug-in, 14 holes, white

T14b-RR door and main wire harness plug-in, 14 holes, white

T16e-Body control unit connector C, 16 holes, white

T26c-Body control unit connector B, 26 holes, white

EJB A-Connecting, from engine compartment fuse box to battery positive pole

PJB D-Connecting, instrument panel fuse box binding post

PJB F-Connecting, instrument panel fuse box binding post

PJB G-Connecting, instrument panel fuse box binding post

PJB H-Connecting, instrument panel fuse box binding post


⑧-Passenger compartment LH A pillar ground

⑨-Passenger compartment RH A pillar ground

⑫-Passenger compartment LH B pillar ground

⑬-Passenger compartment RH B pillar ground

⑮-Passenger compartment rear seat LH ground

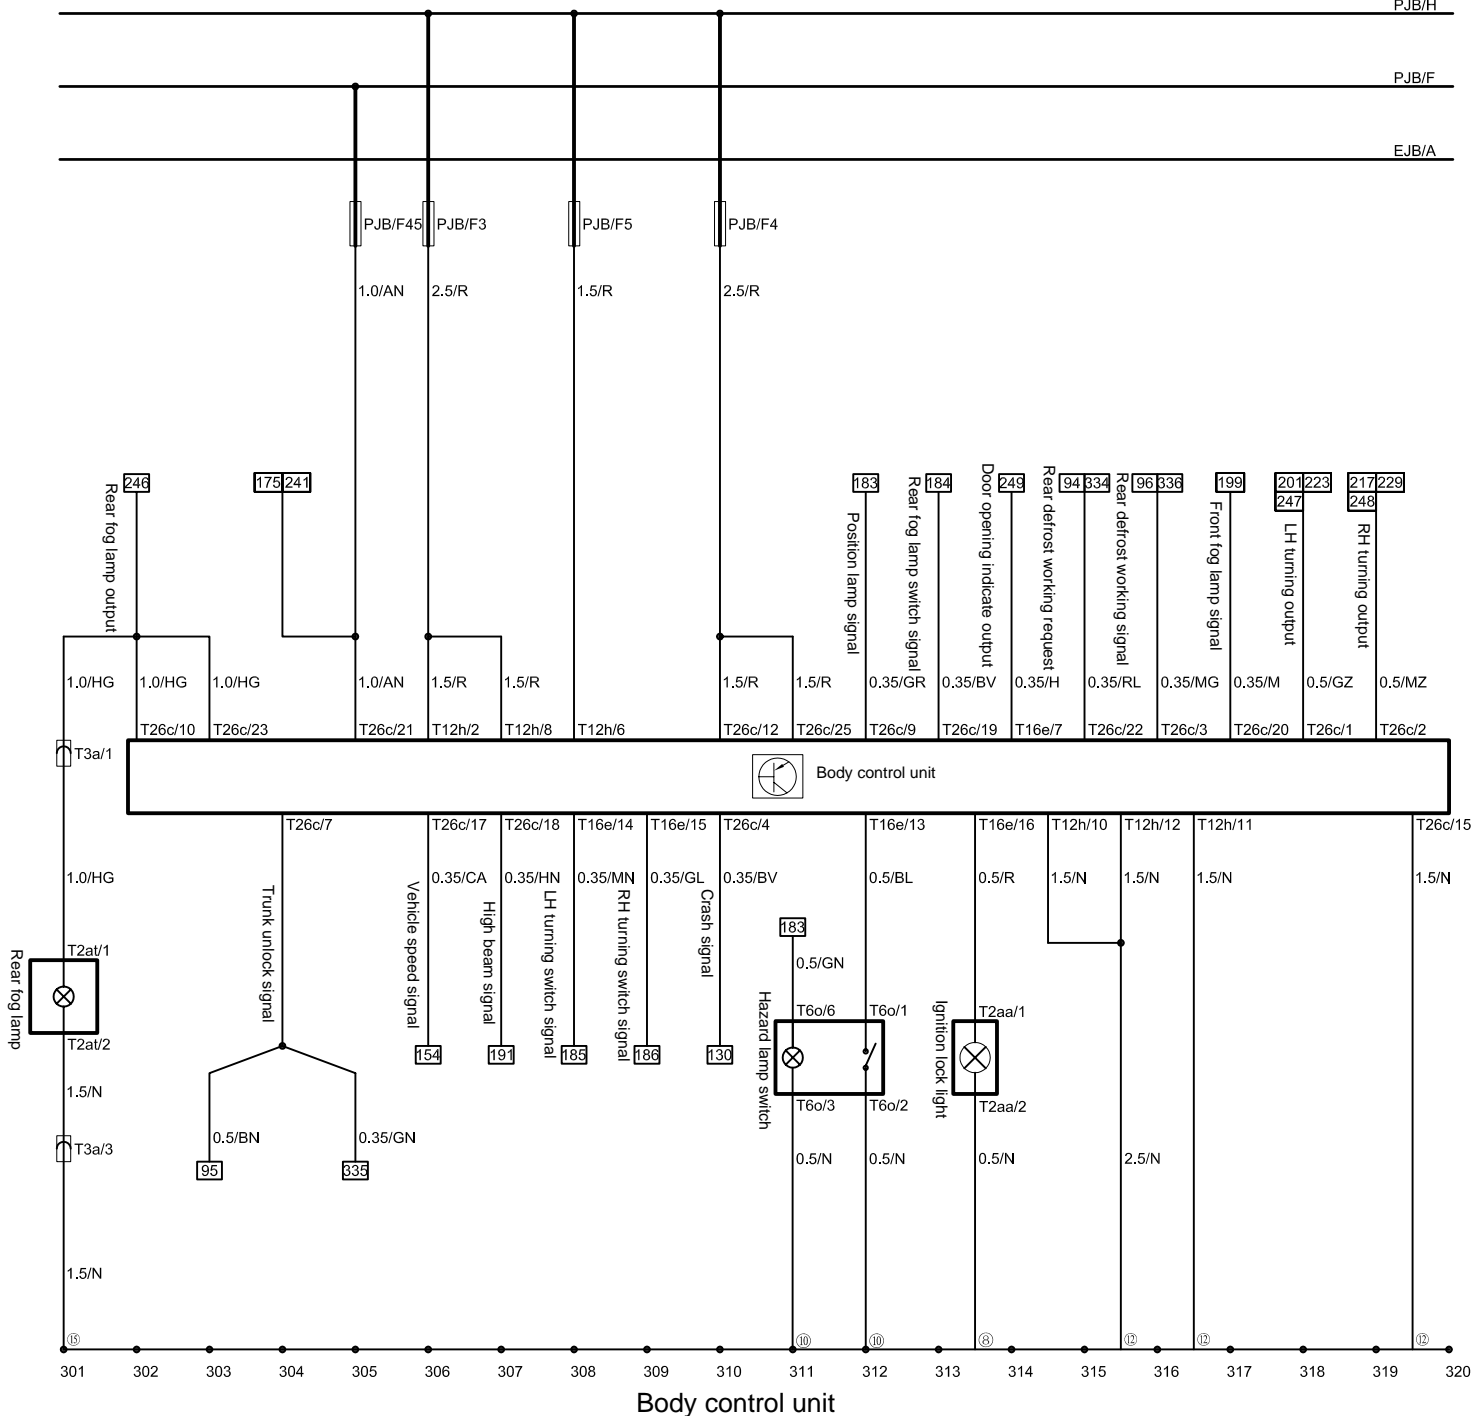

Body control unit

EJB-Engine compartment fuse box

PJB-Instrument panel fuse box

T2aa-Ignition lock light connector, 2 holes, white

T2at-Rear fog lamp connector, 2 holes, black

T3a-Rear bump and main wire harness plug-in A, 3 holes, white

T4k-RH rail door and main wire harness plug-in, 4 holes, white

T5c-Trunk and main wire harness plug-in A, 5 holes, black

T6o-Hazard warning switch connector, 6 holes, blue

T12h-Body control unit connector A, 12 holes, white

T16e-Body control unit connector C, 16 holes, white

T26c-Body control unit connector B, 26 holes, white

EJB A-Connecting, from engine compartment fuse box to battery positive pole

PJB D-Connecting, instrument panel fuse box binding post

PJB F-Connecting, instrument panel fuse box binding post

PJB G-Connecting, instrument panel fuse box binding post


PJB H-Connecting, instrument panel fuse box binding post

⑧-Passenger compartment LH A pillar ground

⑩-Instrument beam ground

⑫-Passenger compartment LH B pillar ground


⑮-Passenger compartment rear seat LH ground

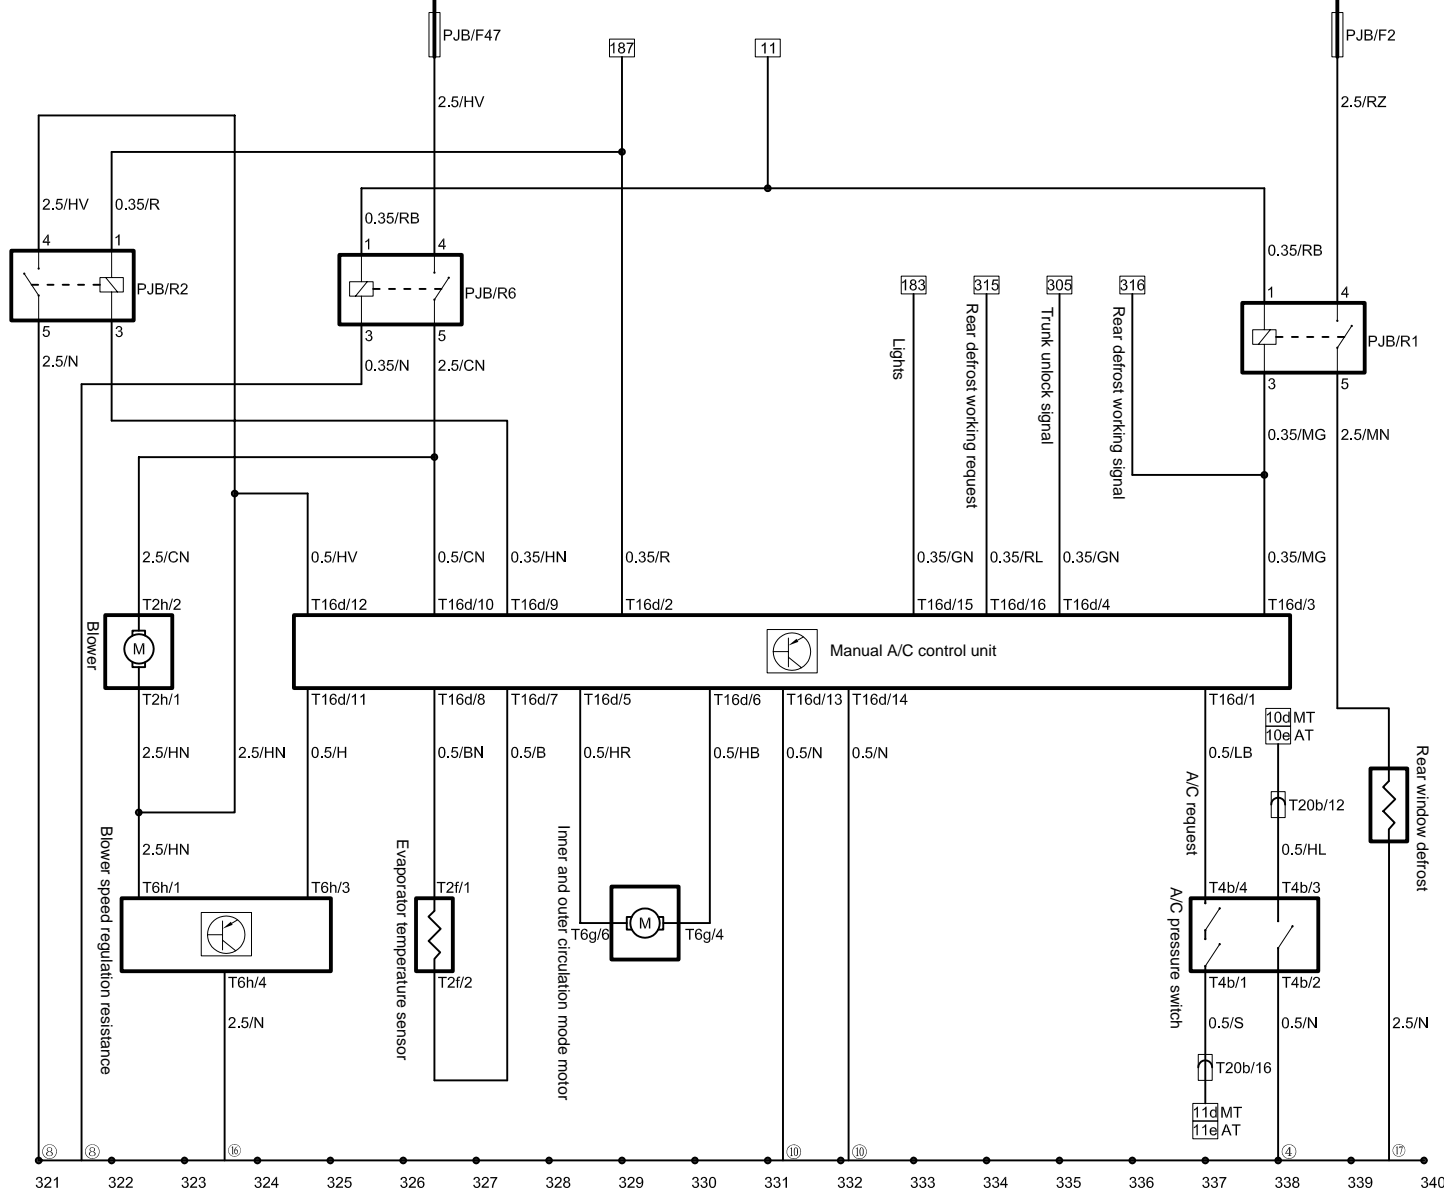


Manual air conditioner, heating and defrost system

- EJB-Engine compartment fuse box
- PJB-Instrument panel fuse box
- T2f-Evaporator temperature sensor connector, 2 holes, white
- T2h-Blower connector, 2 holes, white
- T4b-A/C pressure switch connector, 4 holes, grey
- T6g-Inner and outer circulation mode motor connector, 6 holes, green
- T6h-Blower speed regulation resistance connector, 6 holes, white
- T16d-A/C control unit connector A, 16 holes, black
- T20b-Engine and main wire harness plug-in B, 20 holes, black
- EJB A-Connecting, from engine compartment fuse box to battery positive pole
- PJB D-Connecting, instrument panel fuse box binding post
- PJB F-Connecting, instrument panel fuse box binding post
- PJB G-Connecting, instrument panel fuse box binding post
- PJB H-Connecting, instrument panel fuse box binding post

- ④-Engine compartment RF ground
- ⑧- Passenger compartment LH A pillar ground
- ⑩-Instrument beam ground
- ⑯- Passenger compartment rear seat RH ground
- ⑰- Passenger compartment RH C pillar ground

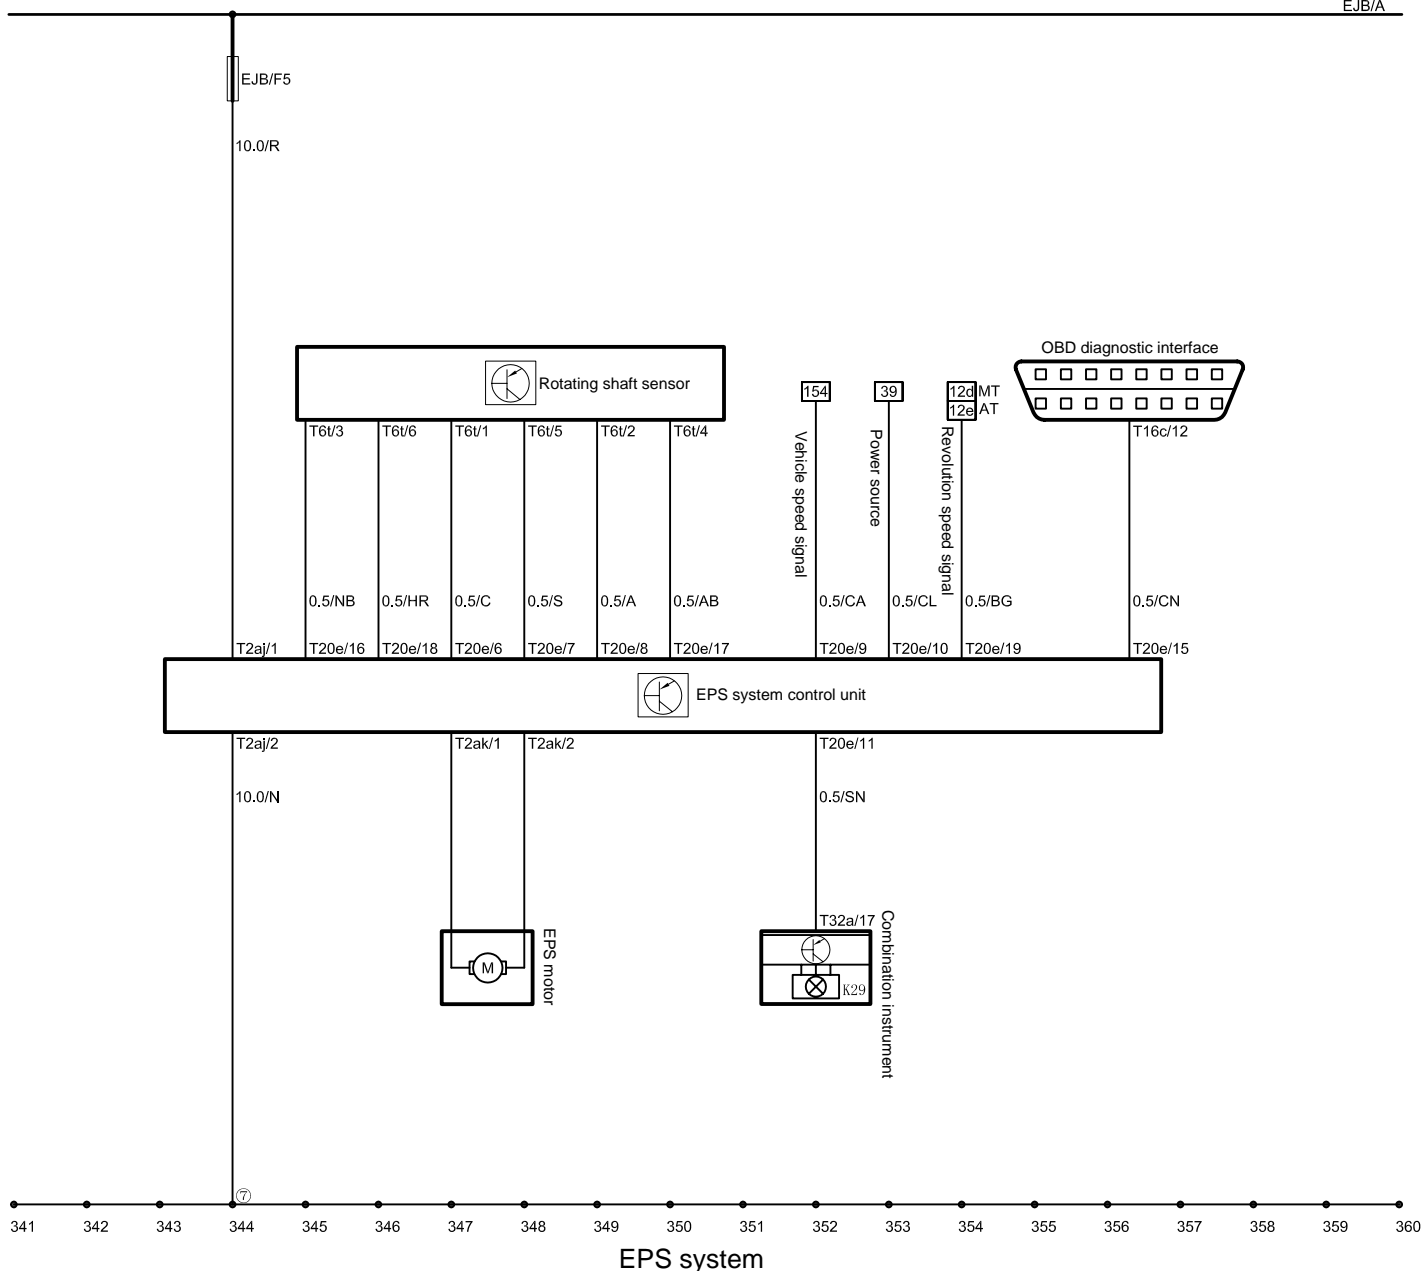


- K29-Combination instrument EPS system failure indicate
- EJB-Engine compartment fuse box
- PJB-Instrument panel fuse box
- T2aj-EPS system control unit connector C, 2 holes, black
- T2ak-EPS system control unit connector B, 2 holes, black
- T6t-EPS system rotating shaft sensor connector, 6 holes, white
- T16c-Diagnostic interface connector, 16 holes, black
- T20e-EPS system control unit connector A, 2 holes, white
- T32a-Combination instrument connector A, 32 holes, blues
- EJB A-Connecting, from engine compartment fuse box to battery positive pole
- PJB D-Connecting, instrument panel fuse box binding post
- PJB F-Connecting, instrument panel fuse box binding post
- PJB G-Connecting, instrument panel fuse box binding post
- PJB H-Connecting, instrument panel fuse box binding post
- ⑦-Passenger compartment LH a pillar ground

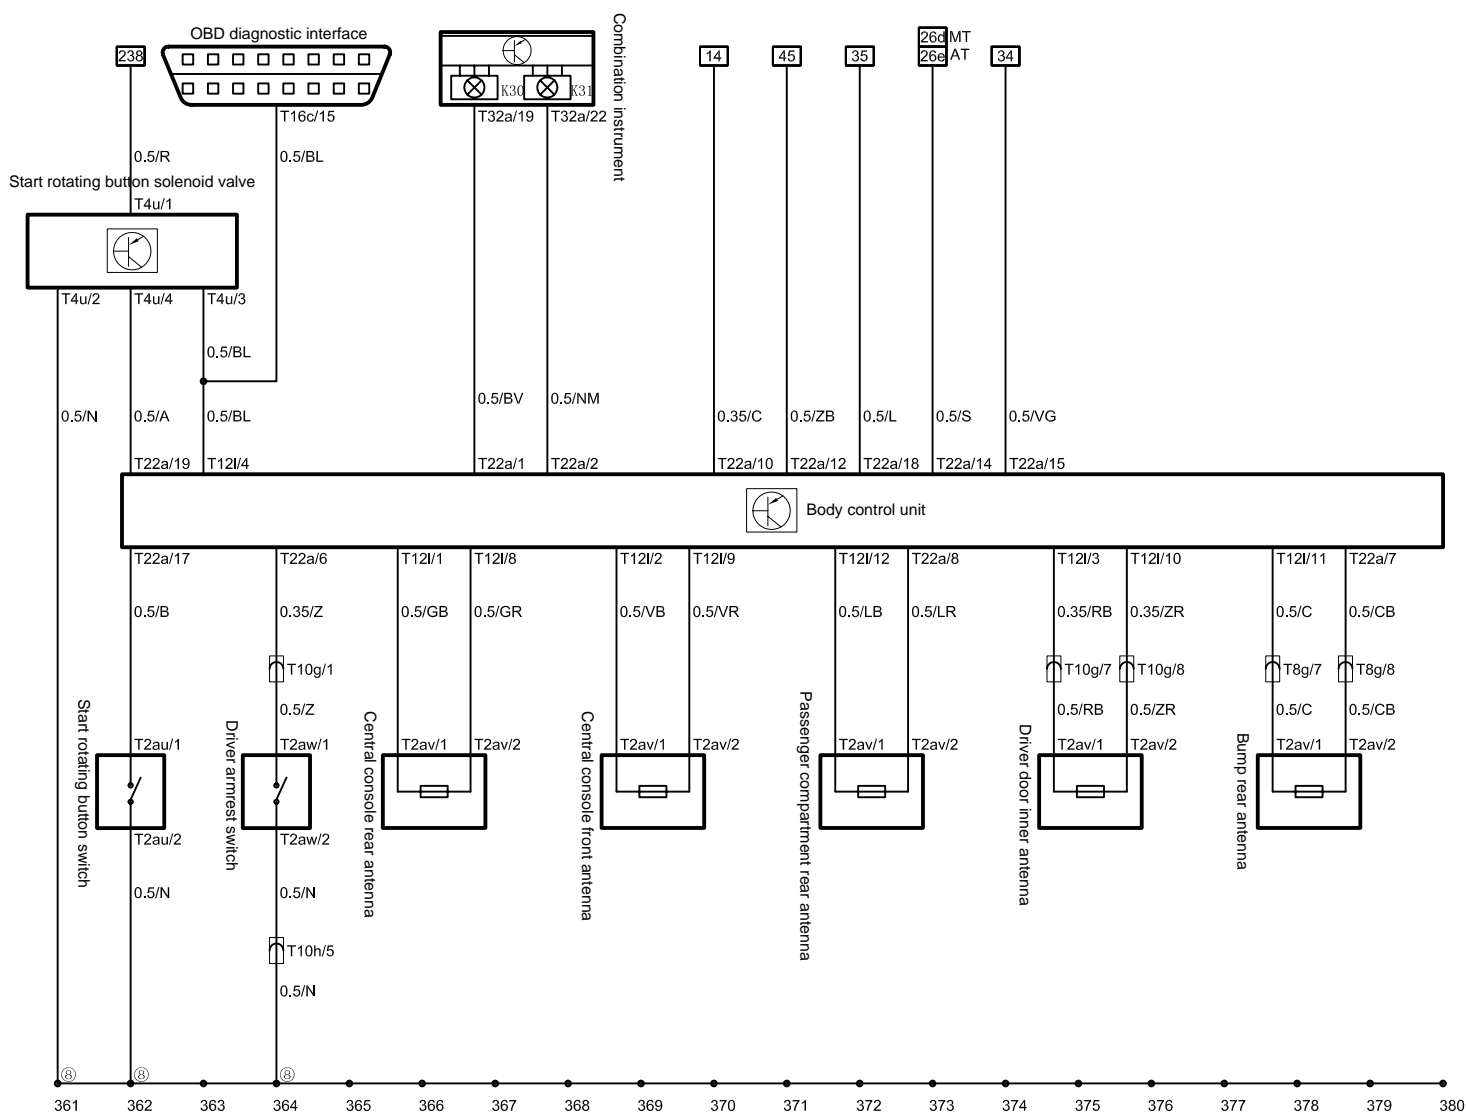

PEPS system

- K30-Combination instrument key matching right indicate
- K31-Combination instrument key matching wrong indicate
- EJB-Engine compartment fuse box
- PJB-Instrument panel fuse box
- T2au-Start rotating button switch connector, 2 holes, white
- T2av-PEPS antenna connector, 2 holes, white
- T2aw-Driver door outer armrest switch connector, 2 holes, white
- T4u-Start rotating button solenoid valve connector, 4 holes, white
- T8g-Rear bump and main wire harness plug-in B, 8 holes, white
- T10g-FL door and main wire harness plug-in C, 10 holes, orange
- T10h-FL door and main wire harness plug-in A, 10 holes, black
- T12i-Body control unit connector E, 12 holes, white
- T16c-Diagnostic interface connector, 16 holes, black
- T22a-Body control unit connector D, 22 holes, white
- T32a-Combination instrument connector A, 32 holes, blue
- EJB A-Connecting, from engine compartment fuse box to battery positive pole

- PJB D-Connecting, instrument panel fuse box binding post
- PJB F-Connecting, instrument panel fuse box binding post
- PJB G-Connecting, instrument panel fuse box binding post
- PJB H-Connecting, instrument panel fuse box binding post
- ⑧-Passenger compartment LH A pillar ground

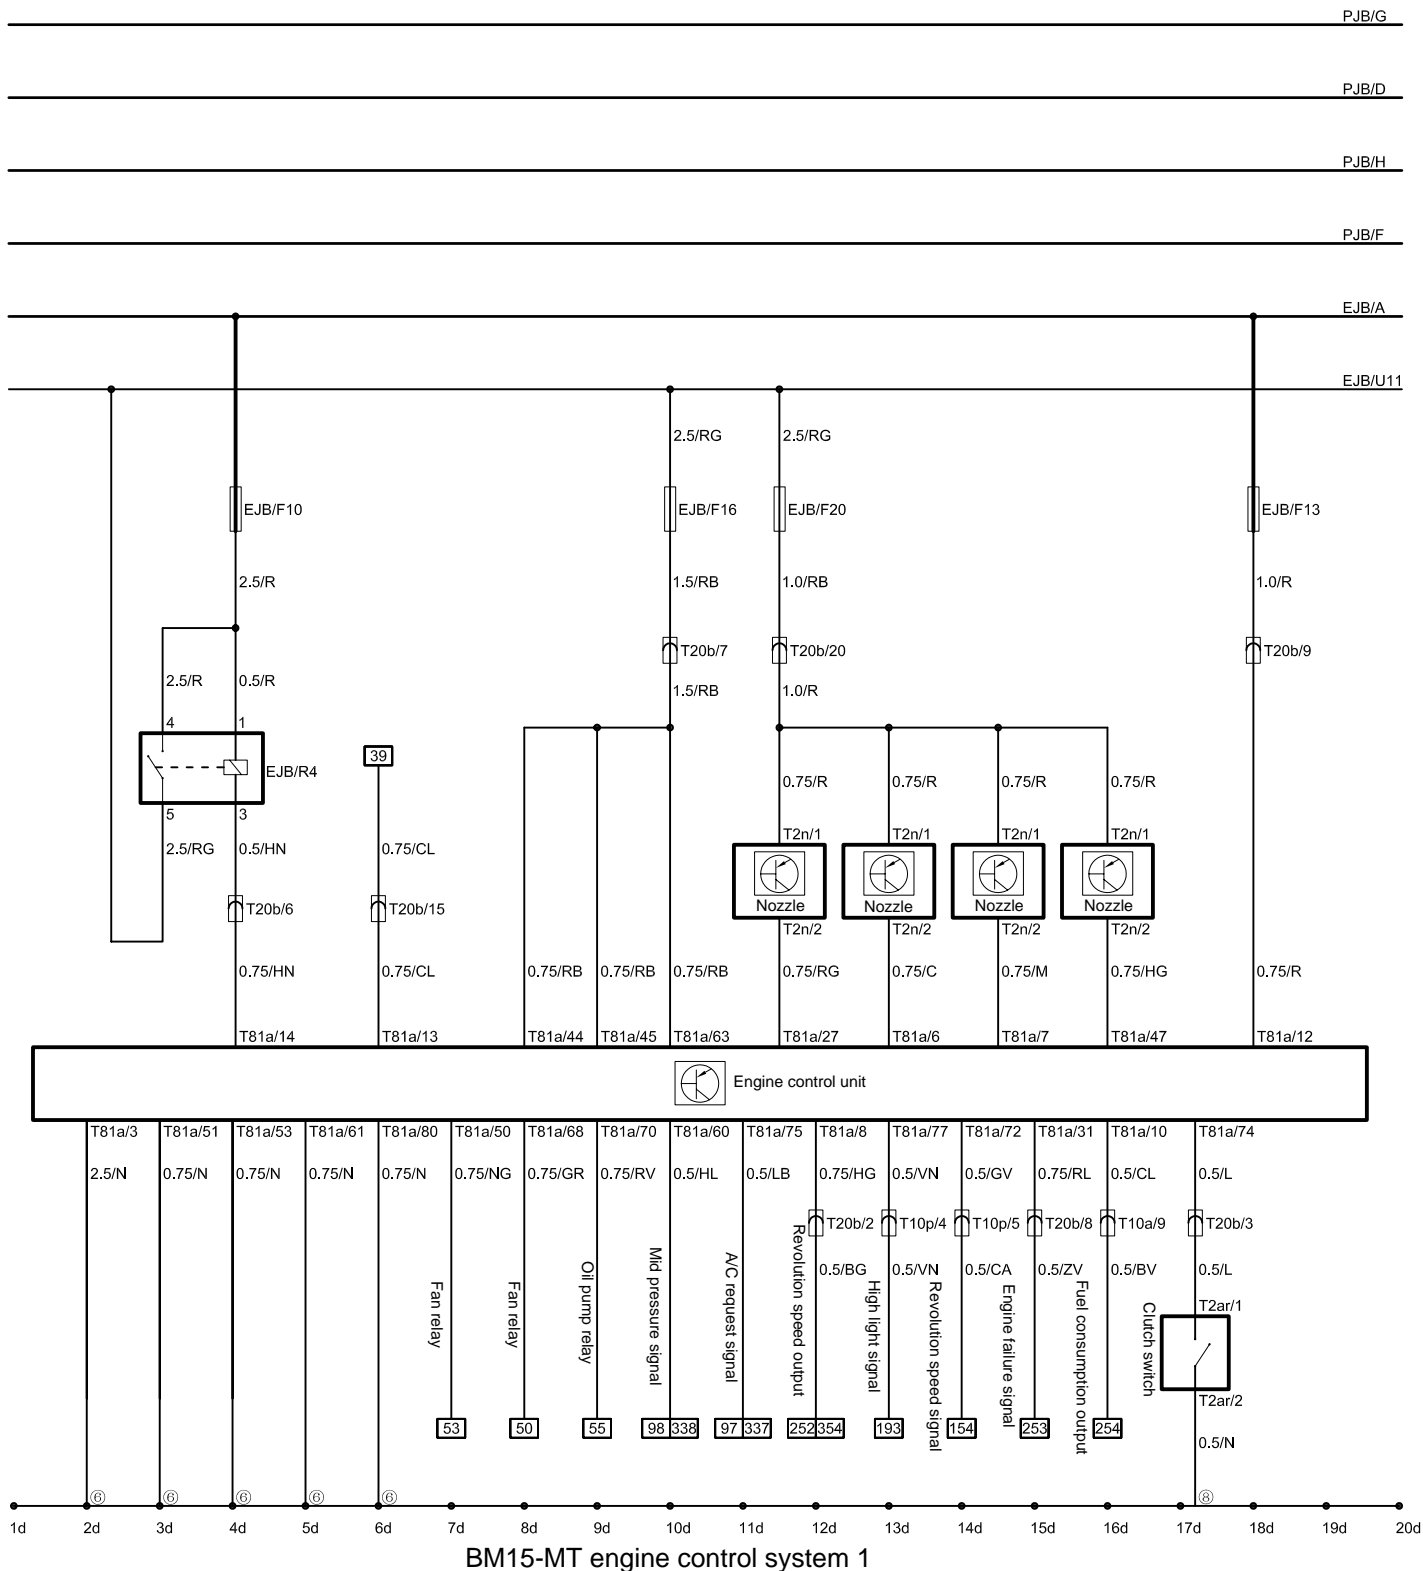

EJB-Engine compartment fuse box

PJB-Instrument panel fuse box

T2n-Nozzle connector, 2 holes, black

T2ar-Clutch switch connector, 2 holes, white

T10a-Engine and main wire harness plug-in A, 10 holes, black

T10p-Engine and main wire harness plug-in C, 10 holes, black

T20b-Engine and main wire harness plug-in B, 20 holes, black

T81a-Engine control unit connector, 81 holes, black

EJB A-Connecting, from engine compartment fuse box to battery positive pole

PJB D-Connecting, instrument panel fuse box binding post

PJB F-Connecting, instrument panel fuse box binding post


PJB G-Connecting, instrument panel fuse box binding post

PJB H-Connecting, instrument panel fuse box binding post

EJB U11-Connecting, engine compartment fuse box wire

⑥-Water channel inner engine wire harness ground

⑧-Passenger compartment LH A pillar ground

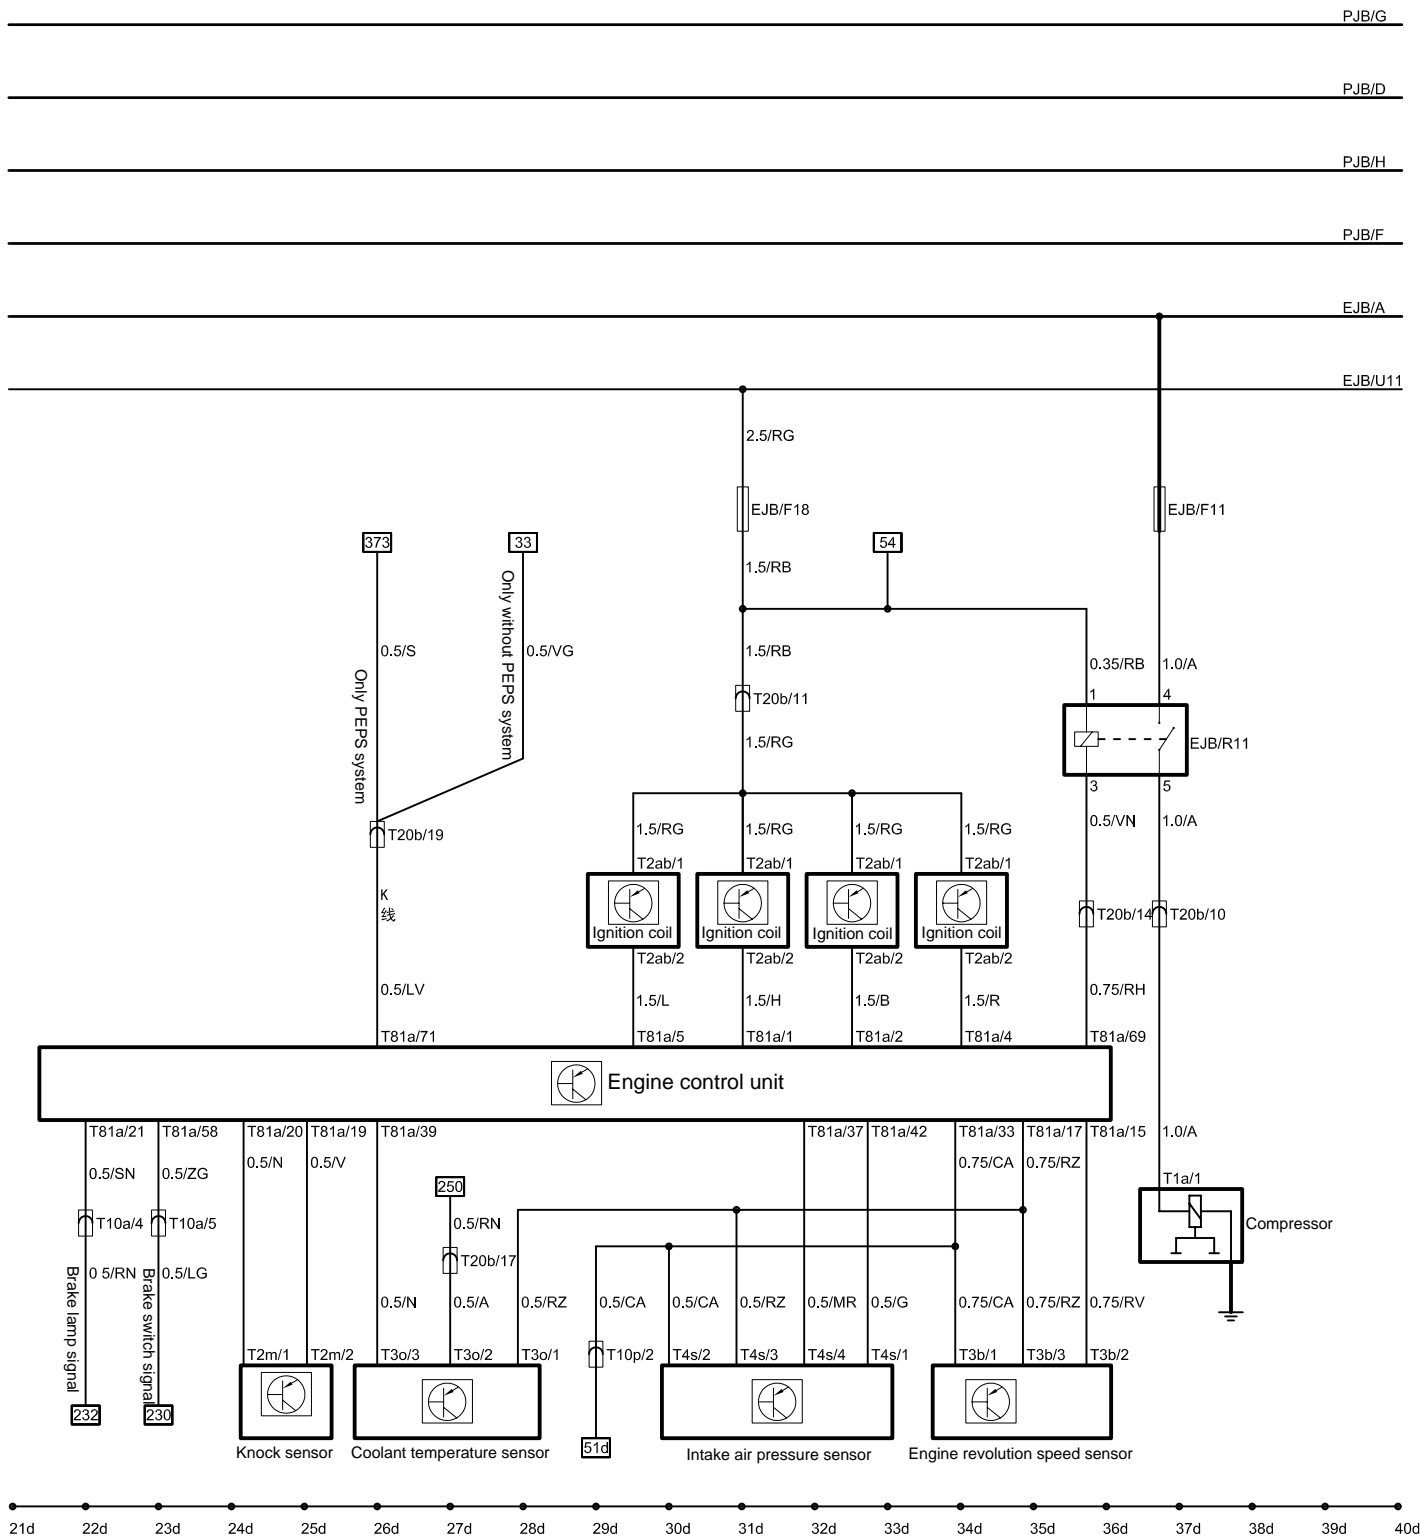

BM15-MT engine control system 2

EJB-Engine compartment fuse box

PJB-Instrument panel fuse box

T1a-A/C compressor connector, 1 hole, grey

T2m-Knock sensor connector, 2 holes, black

T2ab-Ignition coil connector, 2 holes, black/grey

T3b-Engine revolution speed sensor connector, 3 holes, black

T3o-Coolant temperature sensor connector, 3 holes, black

T4s-Intake air pressure sensor connector, 4 holes, black

T10a-Engine and main wire harness plug-in A, 10 holes, black

T10p-Engine and main wire harness plug-in C, 10 holes, black

T20b-Engine and main wire harness plug-in B, 20 holes, black

T81a-Engine control unit connector, 81 holes, black

EJB A-Connecting, from engine compartment fuse box to battery positive pole


PJB D-Connecting, instrument panel fuse box binding post

PJB F-Connecting, instrument panel fuse box binding post

PJB G-Connecting, instrument panel fuse box binding post

PJB H-Connecting, instrument panel fuse box binding post

EJB U11-Connecting, engine compartment fuse box wire

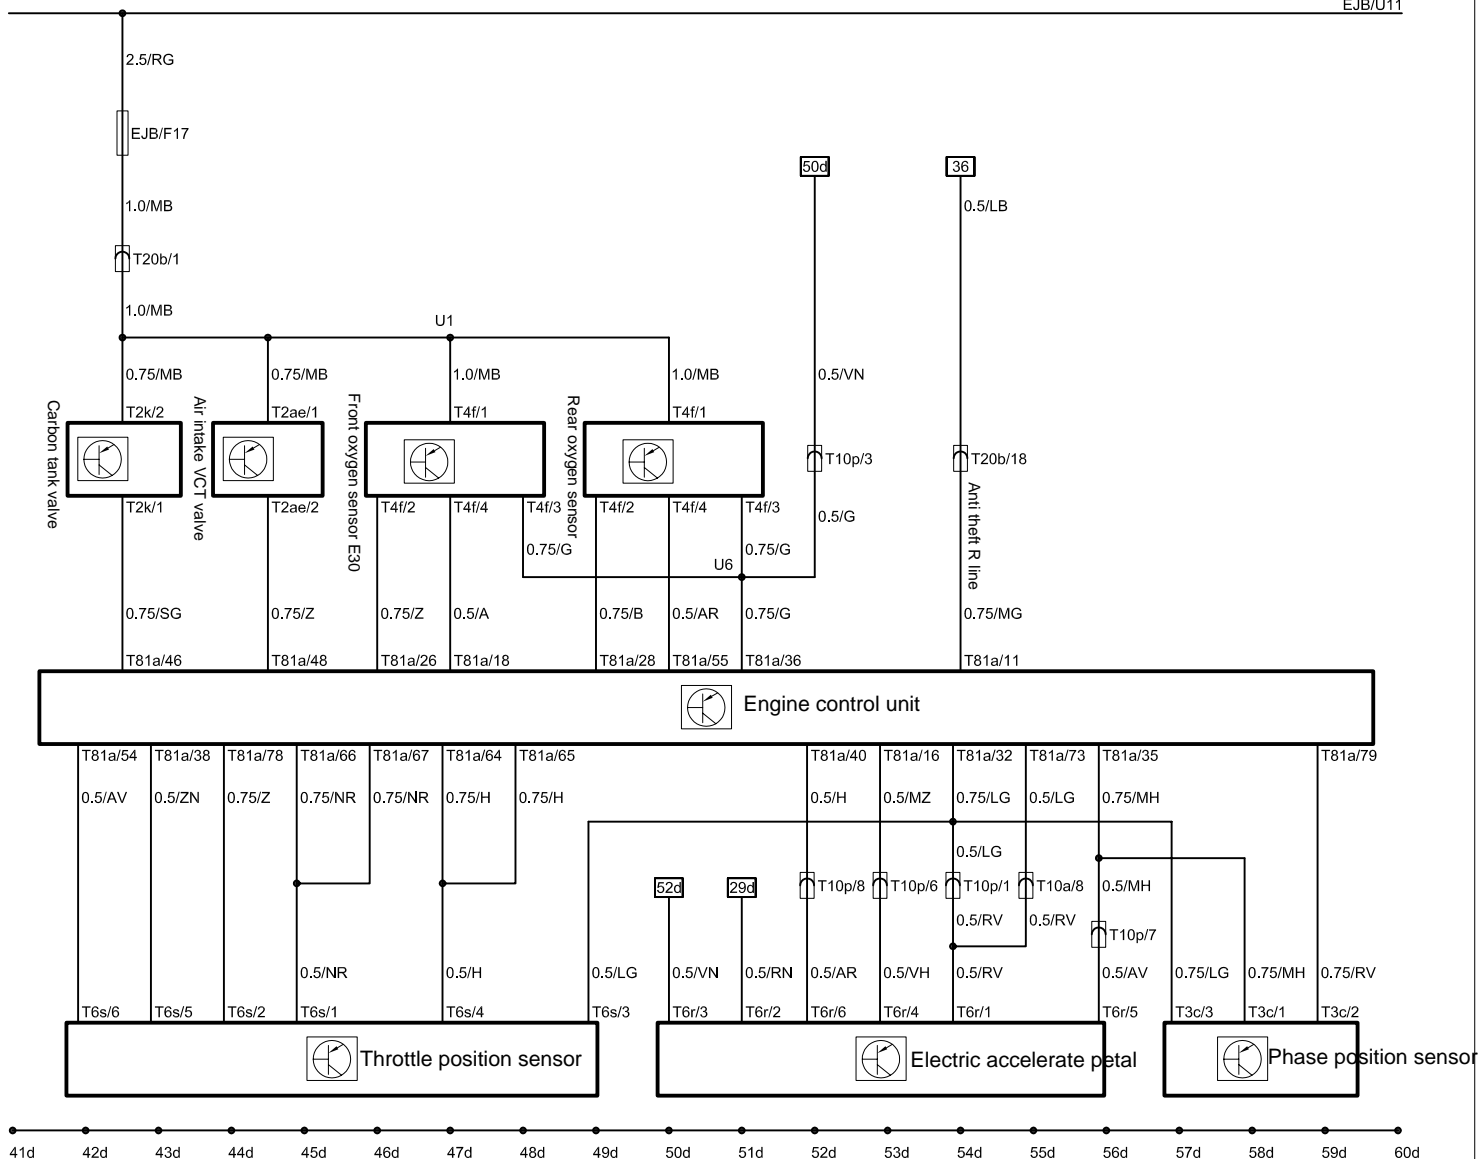

BM15-MT engine control system 3

EJB-Engine compartment fuse box

PJB-Instrument panel fuse box

T2k-Carbon tank solenoid valve connector, 2 holes, black

T2ae-Air intake VCT valve connector, 2 holes, black

T3c-Phase position sensor connector, 3 holes, black

T4f-Oxygen sensor connector, 4 holes, white

T6r-Electric accelerate pedal connector, 6 holes, black

T6s-Throttle position sensor connector, 6 holes, black

T10a-Engine and main wire harness plug-in A, 10 holes, black

T10p-Engine and main wire harness plug-in C, 10 holes, black

T20b-Engine and main wire harness plug-in B, 20 holes, black

T81a-Engine control unit connector, 81 holes, black

EJB A-Connecting, from engine compartment fuse box to battery positive pole

PJB D-Connecting, instrument panel fuse box binding post


PJB F-Connecting, instrument panel fuse box binding post

PJB G-Connecting, instrument panel fuse box binding post

PJB H-Connecting, instrument panel fuse box binding post


EJB U11-Connecting, engine compartment fuse box wire



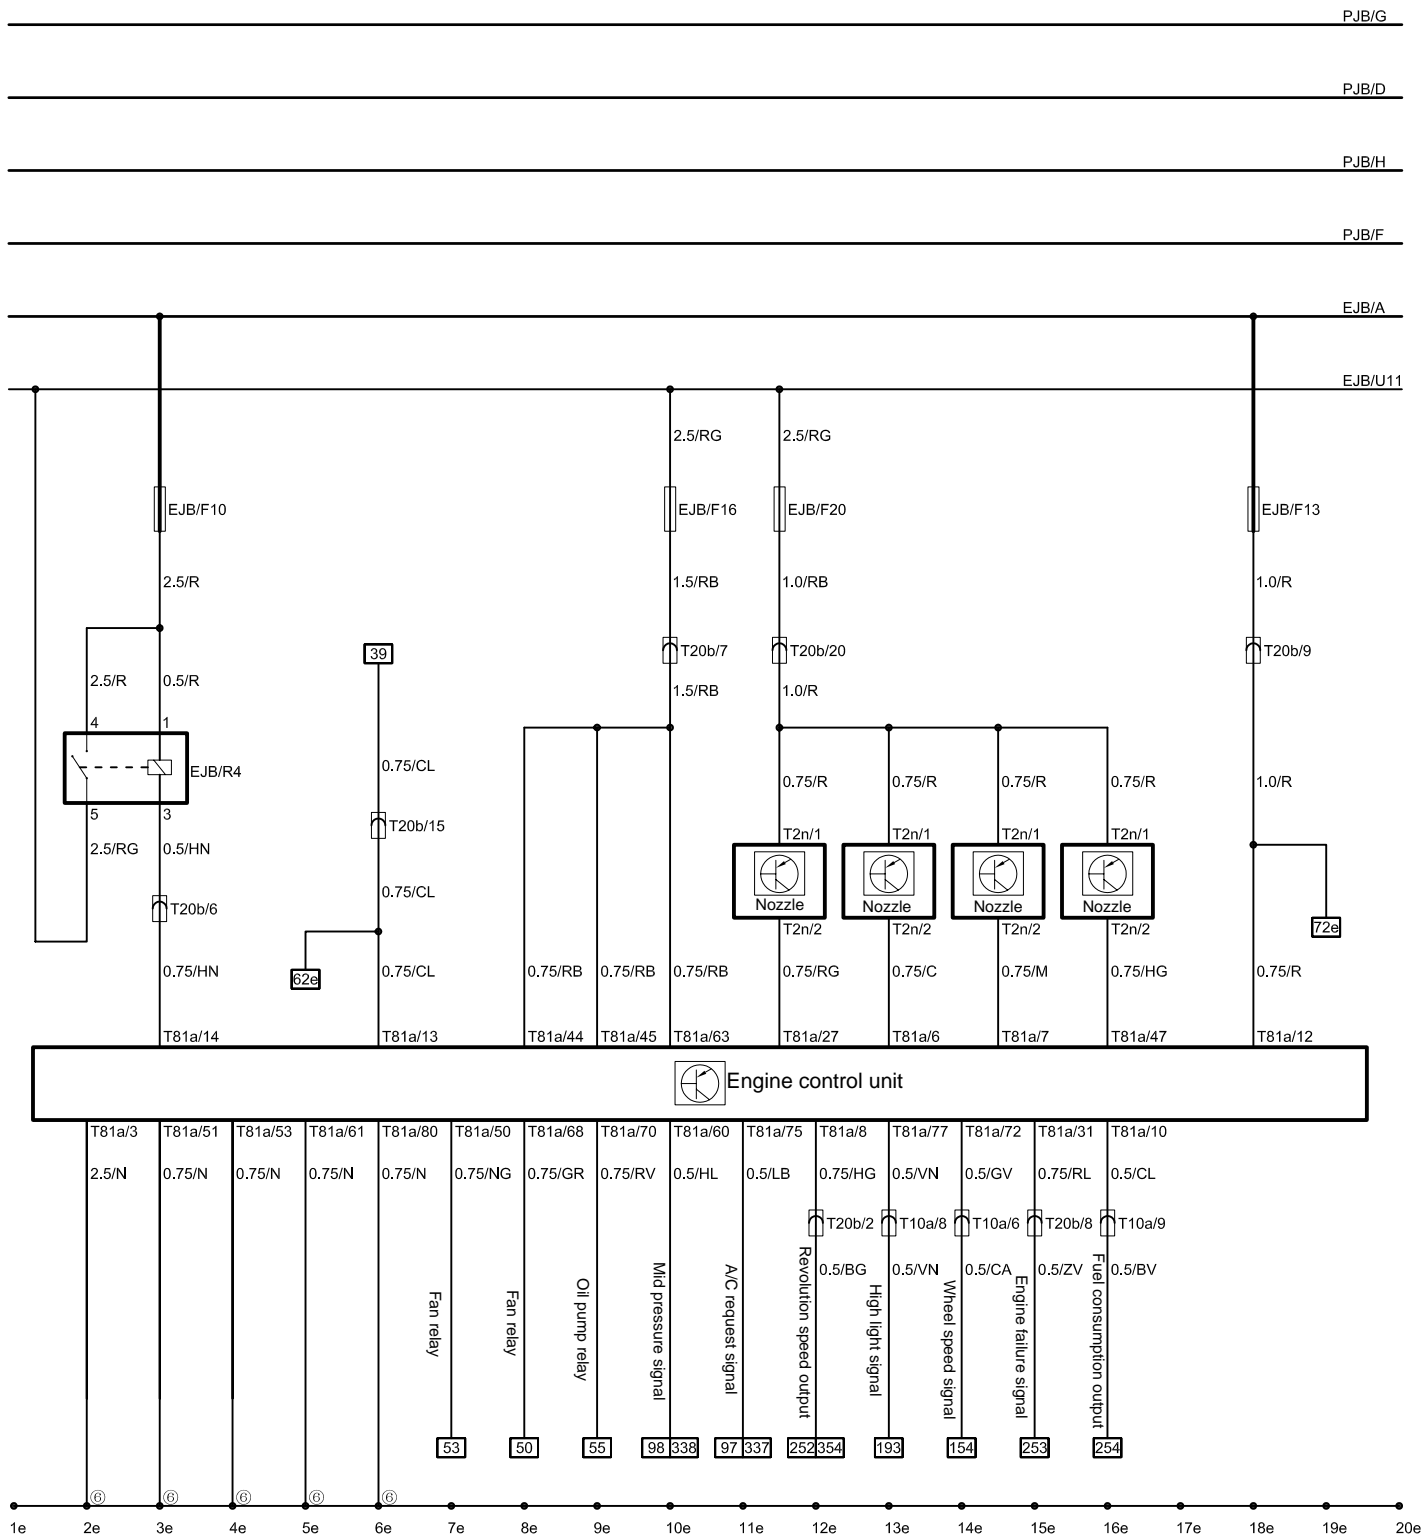

BM15T-AT engine control system 1

- EJB-Engine compartment fuse box
- PJB-Instrument panel fuse box
- T2n-Nozzle connector, 2 holes, black
- T10a-Engine and main wire harness connector A, 10 holes, black
- T20b-Engine and main wire harness connector B, 20 holes, black
- T81a-Engine control unit connector, 81 holes, black
- EJB A-Connecting, from engine compartment fuse box to battery positive pole
- PJB D-Connecting, instrument panel fuse box binding post
- PJB F-Connecting, instrument panel fuse box binding post
- PJB G-Connecting, instrument panel fuse box binding post
- PJB H-Connecting, instrument panel fuse box binding post
- EJB U11-Connecting, engine compartment fuse box wire
- ⓐ-Water channel inner engine wire harness ground

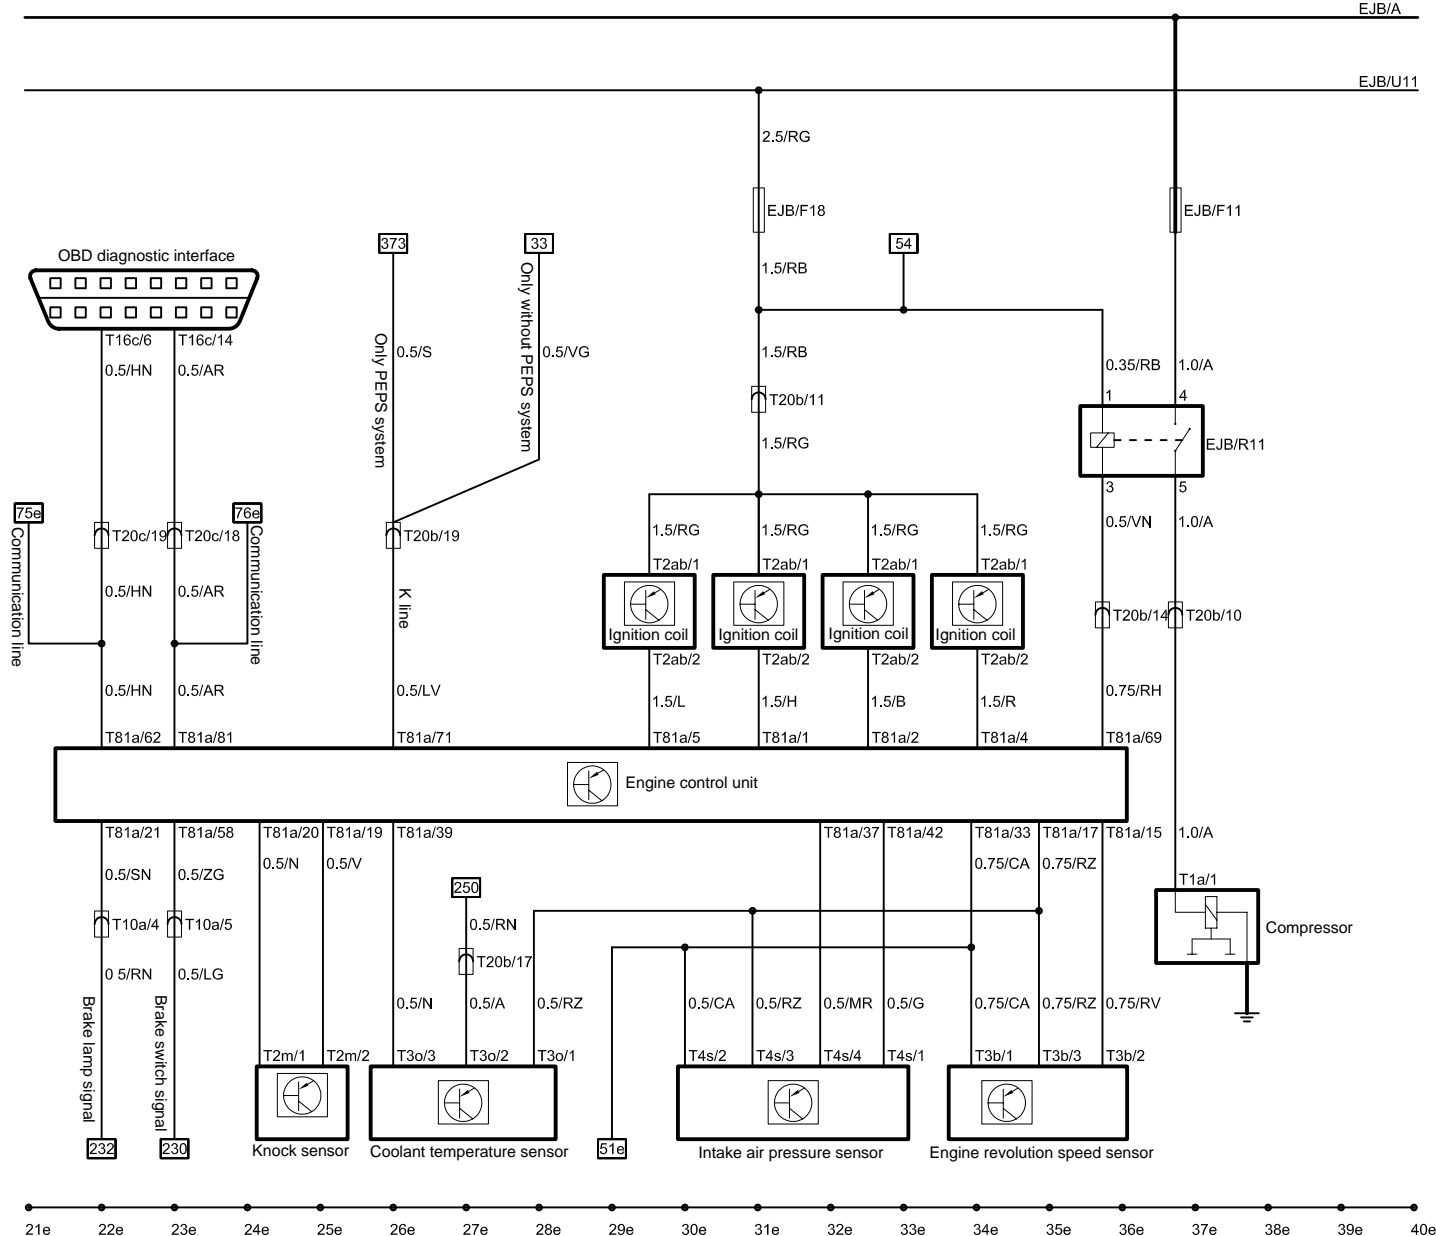

BM15-AT engine control system 2

EJB-Engine compartment fuse box

PJB-Instrument panel fuse box

T1a-A/C compressor connector, 1 hole, grey

T2m-Knock sensor connector, 2 holes, black

T2ab-Ignition coil connector, 2 holes, black/grey

T3b-Engine revolution speed sensor connector, 3 holes, black

T3o-Coolant temperature sensor connector, 3 holes, black

T4s-Intake air pressure sensor connector, 4 holes, black

T10a-Engine and main wire harness plug-in A, 10 holes, black

T16c-Diagnostic interface, 16 holes, black

T20b-Engine and main wire harness plug-in B, 20 holes, black

T20c-Engine and main wire harness plug-in E, 20 holes, blue

T81a-Engine control unit connector, 81 holes, black

EJB A-Connecting, from engine compartment fuse box to battery positive pole


PJB D-Connecting, instrument panel fuse box binding post

PJB F-Connecting, instrument panel fuse box binding post

PJB G-Connecting, instrument panel fuse box binding post

PJB H-Connecting, instrument panel fuse box binding post

EJB U11-Connecting, engine compartment fuse box wire

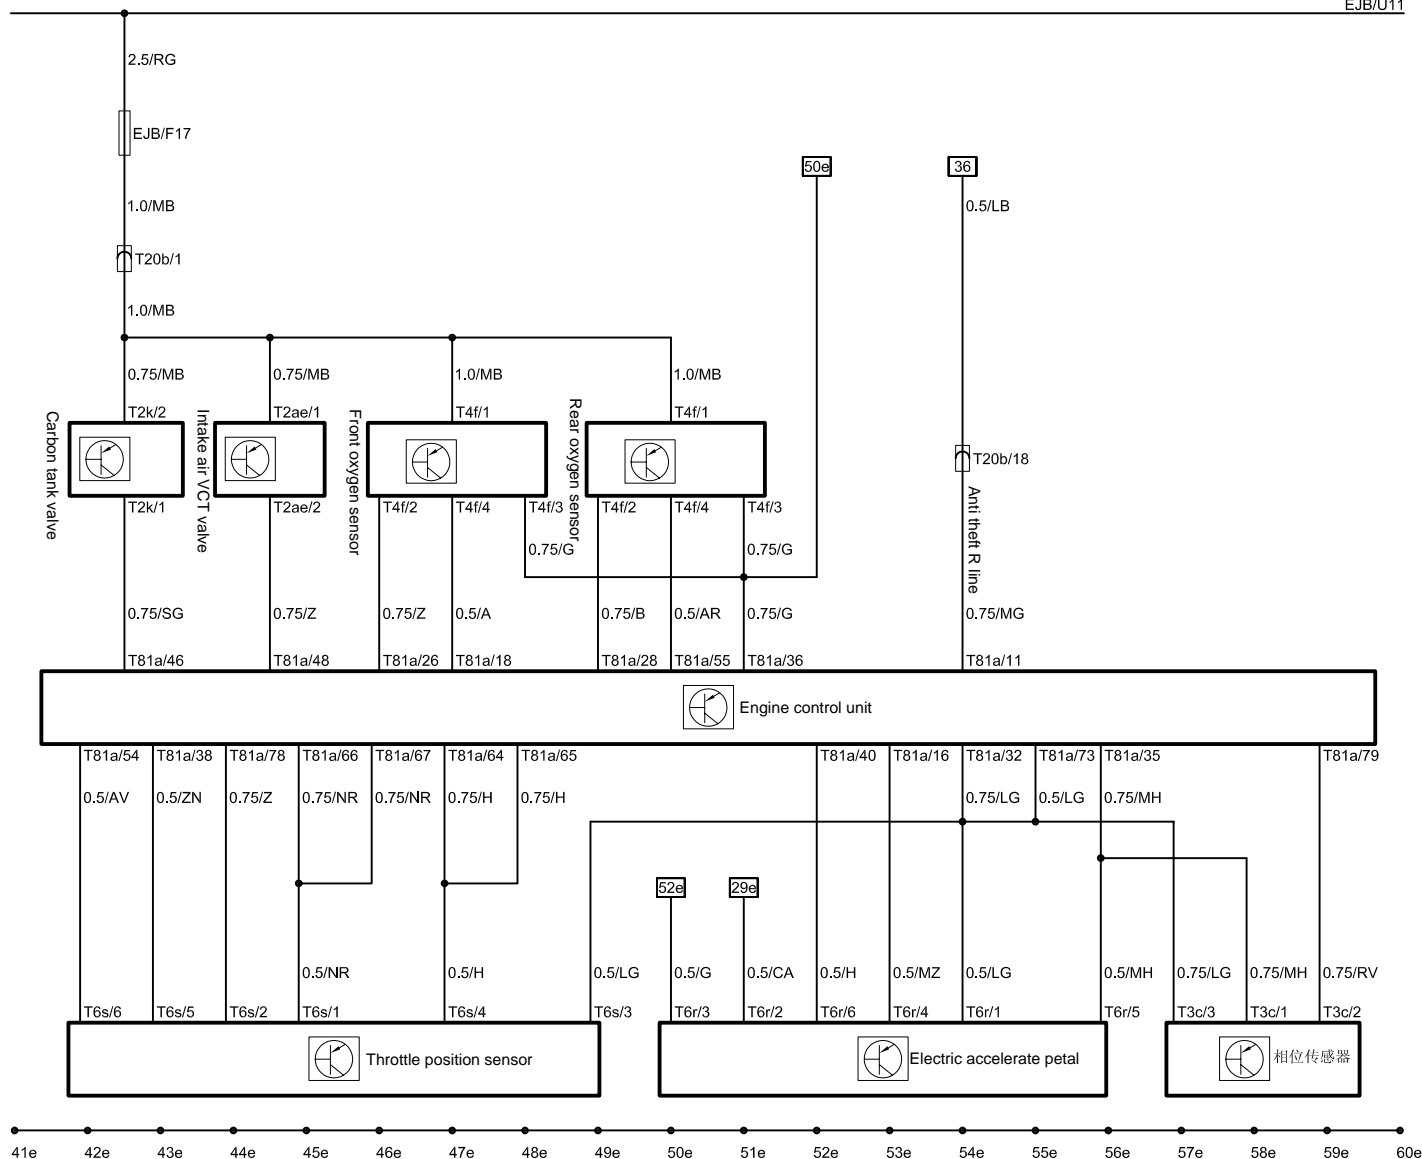

BM15-AT engine control system 3

EJB-Engine compartment fuse box

PJB-Instrument panel fuse box

T2k-Carbon tank solenoid valve connector, 2 holes, black

T2ae-Air intake VCT valve connector, 2 holes, black

T3c-Phase position sensor connector, 3 holes, black

T4f-Oxygen sensor connector, 4 holes, white

T6r-Electric accelerate pedal connector, 6 holes, black

T6s-Throttle position sensor connector, 6 holes, black

T20b-Engine and main wire harness plug-in B, 20 holes, black

T81a-Engine control unit connector, 81 holes, black

EJB A-Connecting, from engine compartment fuse box to battery positive pole


PJB D-Connecting, instrument panel fuse box binding post

PJB F-Connecting, instrument panel fuse box binding post

PJB G-Connecting, instrument panel fuse box binding post


PJB H-Connecting, instrument panel fuse box binding post

EJB U11-Connecting, engine compartment fuse box wire

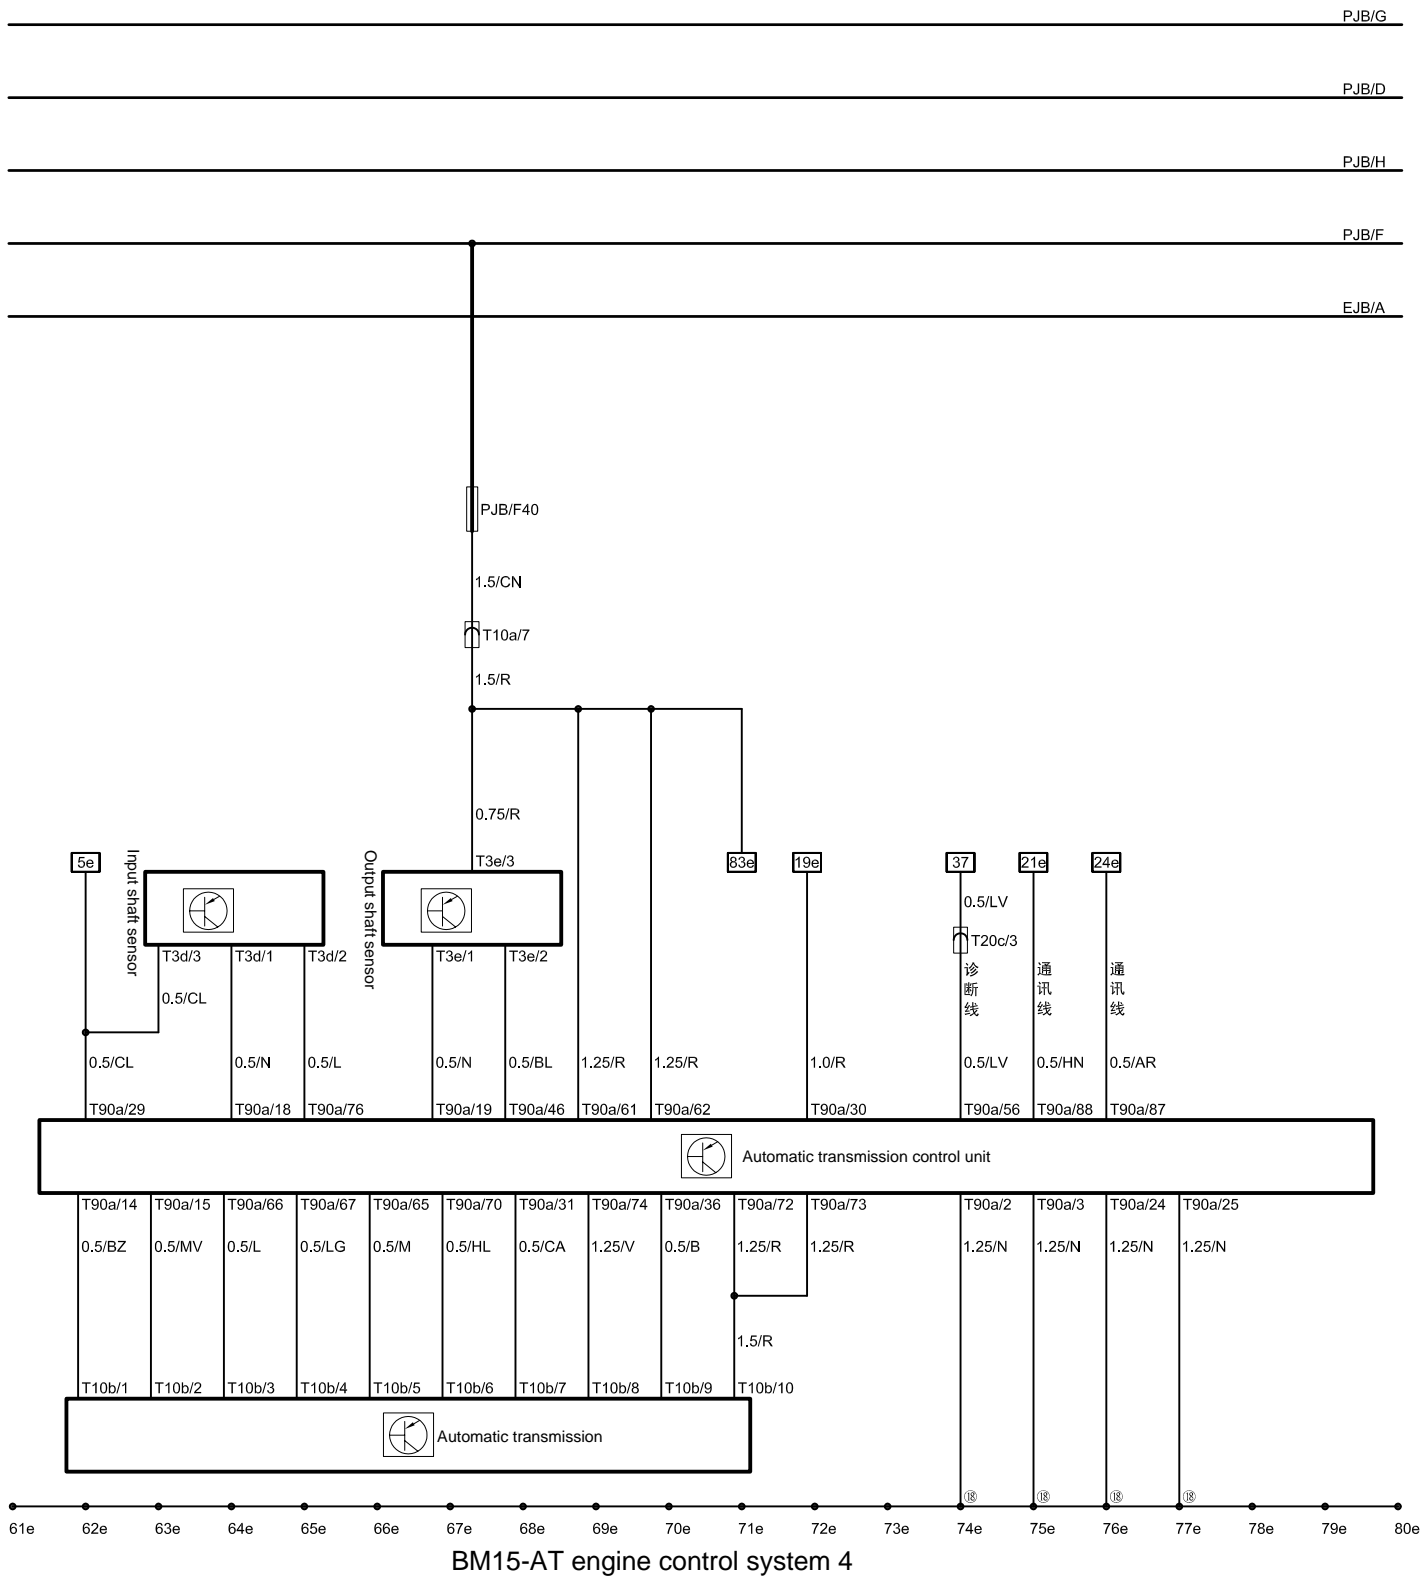

BM15-AT engine control system 4

- EJB-Engine compartment fuse box
- PJB-Instrument panel fuse box
- T3d-Input shaft sensor connector, 3 holes, black
- T3e-Output shaft sensor connector, 3 holes, black
- T10a-Engine and main wire harness plug-in A, 10 holes, black
- T10b-Automatic transmission connector, 10 holes, black
- T20c-Engine and main wire harness plug-in E, 20 holes, blue
- T90a-Automatic transmission control unit connector, 90 holes, black
- EJB A-Connecting, from engine compartment fuse box to battery positive pole
- PJB D-Connecting, instrument panel fuse box binding post
- PJB F-Connecting, instrument panel fuse box binding post
- PJB G-Connecting, instrument panel fuse box binding post
- PJB H-Connecting, instrument panel fuse box binding post
- EJB U11-Connecting, engine compartment fuse box wire
- 18-Passenger compartment LH A pillar ground

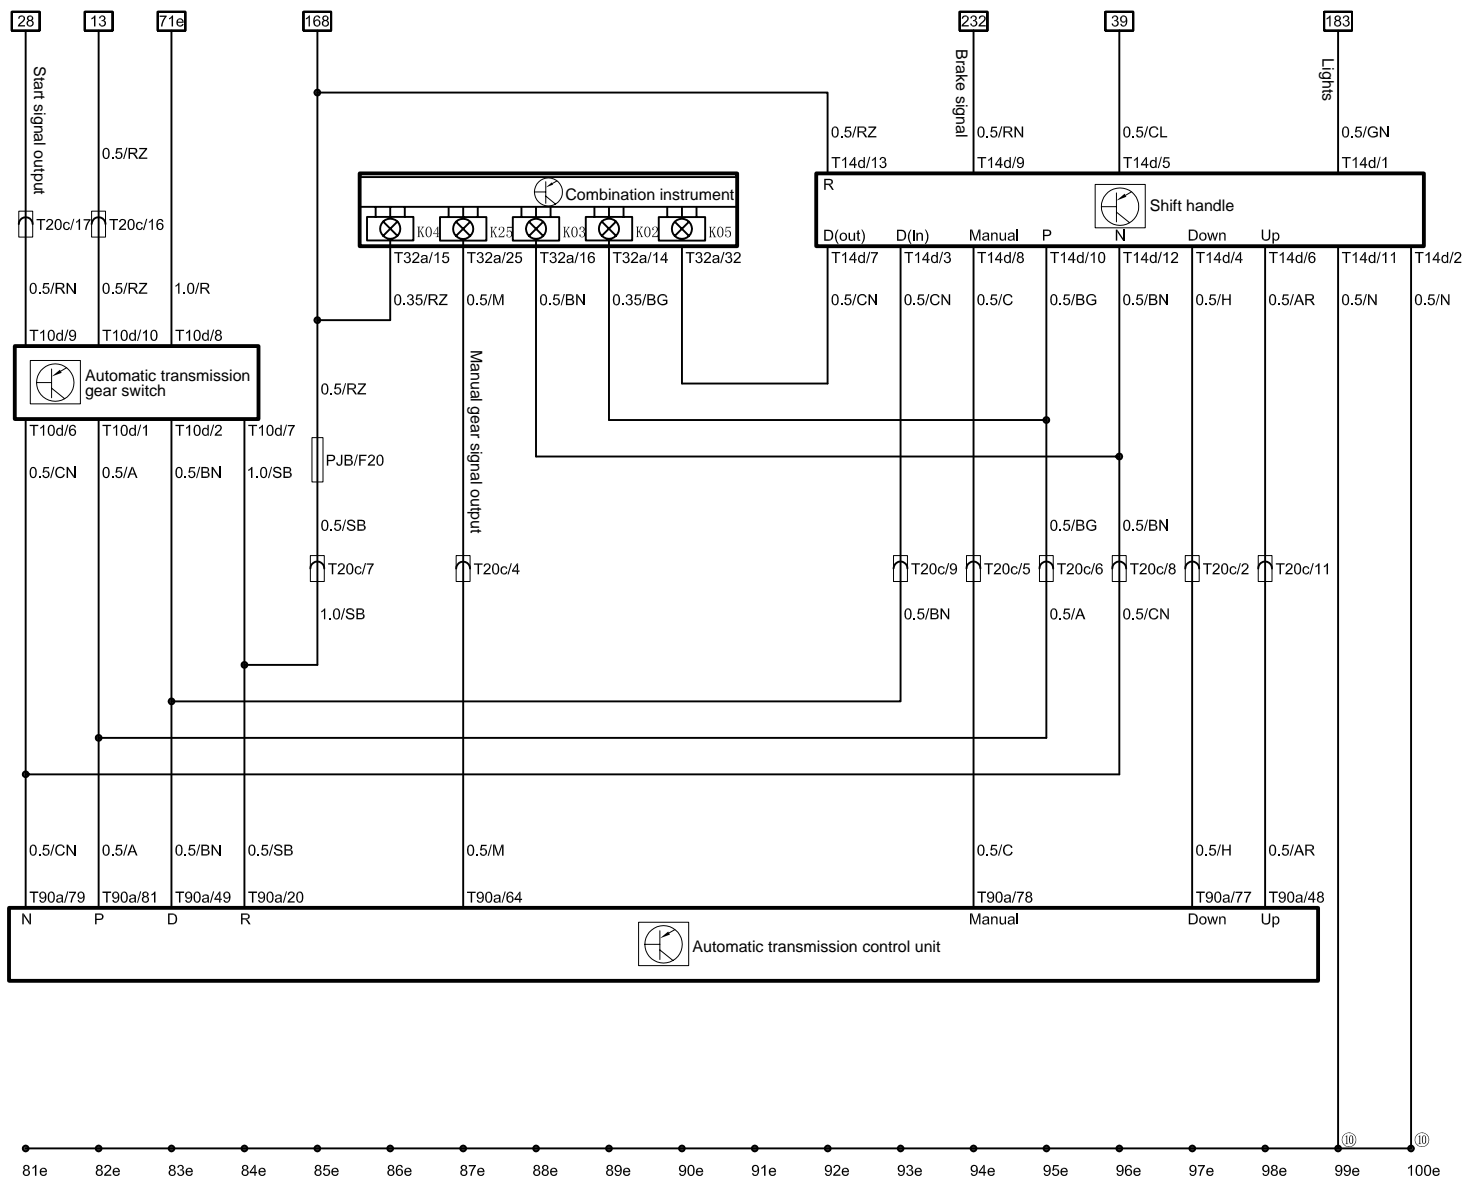

BM15-AT engine control system 5

- K02-Combination instrument P gear indicate
- K03-Combination instrument N gear indicate
- K04-Combination instrument R gear indicate
- K05-Combination instrument D gear indicate
- K25-Combination instrument manual mode gear indicate
- EJB-Engine compartment fuse box
- PJB-Instrument panel fuse box
- T10d-Automatic transmission connector, 10 holes, black
- T14d-Shift handle connector, 14 holes, white
- T20c-Engine and main wire harness plug-in E, 20 holes, blue
- T32a-Combination instrument connector A, 32 holes, blue
- T90a-Automatic transmission control unit connector, 90 holes, black
- EJB A-Connecting, from engine compartment fuse box to battery positive pole
- PJB D-Connecting, instrument panel fuse box binding post
- PJB F-Connecting, instrument panel fuse box binding post
- PJB G-Connecting, instrument panel fuse box binding post
- PJB H-Connecting, instrument panel fuse box binding post
- EJB U11-Connecting, engine compartment fuse box wire
- ⑩-Instrument panel beam ground



**SAIPA YADAK**

Daroupakhsh St.17th Km Karaj Makhsos Road-TEHRAN-IRAN

[www.saipayadak.org](http://www.saipayadak.org)