


Introduction (1)

GI-1

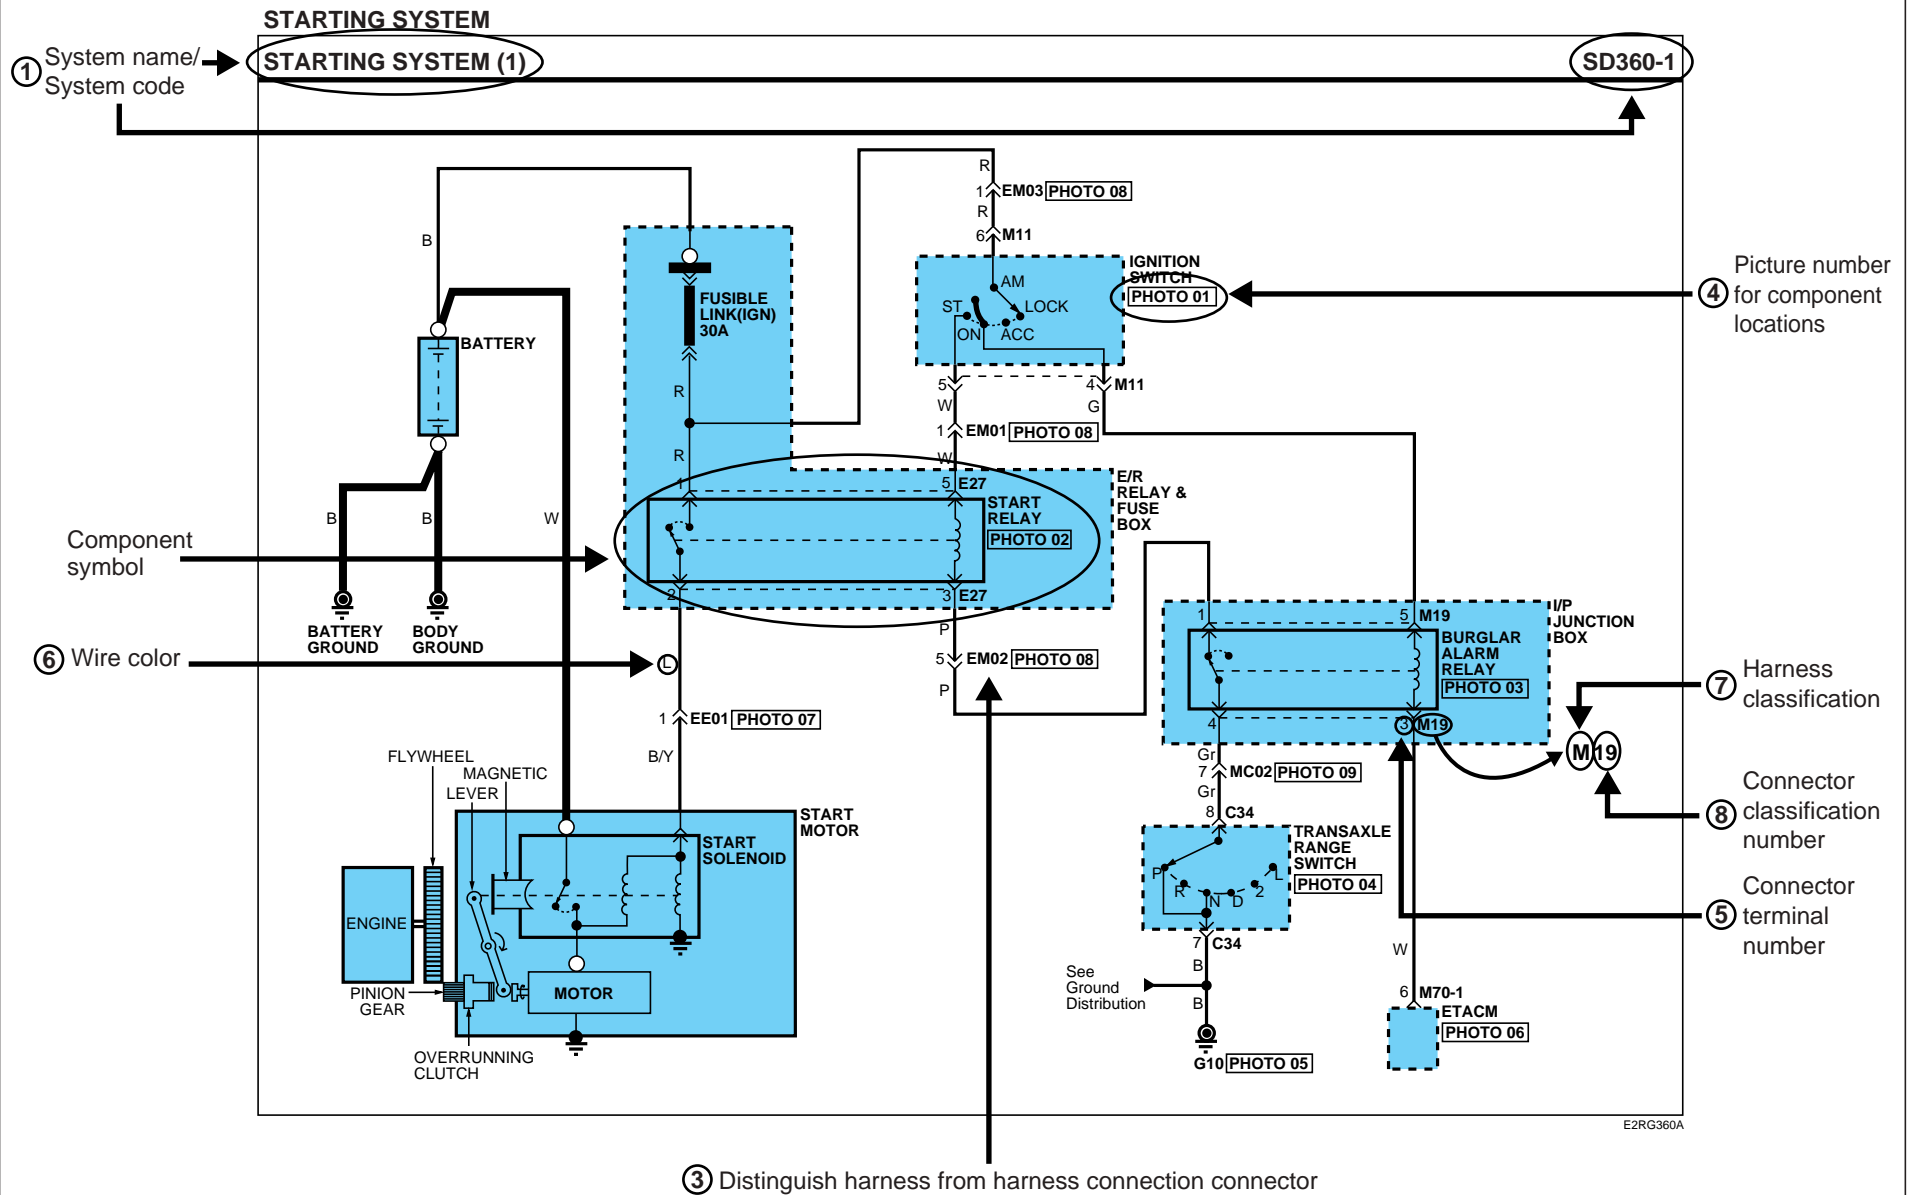

INTRODUCTION

Introduction (2)







GI-2

STARTING SYSTEM

STARTING SYSTEM (2)

SD360-2


② Connector configurations (components)
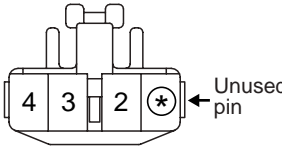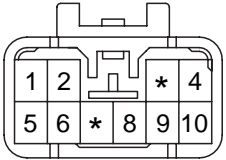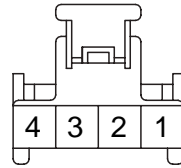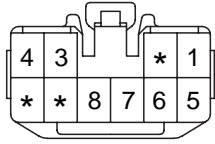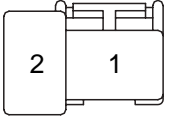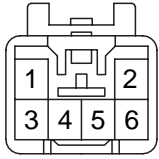
<p>M05</p>  <p>KET_090II_04F_W</p>	<p>M06</p>  <p>KET_090II_10M_W</p>	<p>M11</p>  <p>KUM_AR_04F_W</p>	<p>M13</p>  <p>KET_090II_10F_W</p>
<p>M67</p>  <p>AMP_PLM2_02F_B</p>	<p>M81</p>  <p>KET_090II_06M_W</p>	<p>BLANK</p>	<p>BLANK</p>

E2RG360B

Explanation of connector code

M05

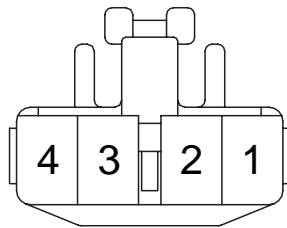

KET_090II_04F_W

a b c d e

a : Connector manufacturer

b : Terminal series number

c : The number of connector terminals

d : Connector distinguishing

- Female Pin : F
- Male Pin : M

e : Connector color abbreviations

- B (Black)
- Br (Brown)
- G (Green)
- Gr (Gray)
- L (Blue)
- R (Red)
- W (White)
- Y (Yellow)

INTRODUCTION

Introduction (3)

GI-3

① Pages by system/ Name of Schematic diagram

- Each page is consisted of circuits by system. This schematic diagram includes the path of electricity flow, connection condition for each switch, and the function of other relevant circuits at once. It is applicable to real service work.
- It is very important to understand relevant circuits exactly before troubleshooting diagnosis.
- Circuits by system depends upon part number and are indicated on schematic diagram index.


② Connector configuration (components)

- The connector figure of components in the schematic diagram by system is indicated on the last page of schematic diagram.
- It shows the front of the connector on the harness side when not to the harness connector. The terminal number on each connector can be obtained by following the pattern used in ⑤ connector view and numbering order. Unused terminals are marked with an asterisk (*).

③ Connector configurations (connection between harnesses)

- When connecting the harness with connector between harnesses, it shows female and male connectors and indicates them on the connector configurations group.

 
EM02



④ Component locations

- To find the components easily, a component locations diagram is indicated with "PHOTO NO" on the lower portion of the component name.
- To make it easy to distinguish connectors, the connector in the picture is indicated being installed in the vehicle.

PHOTO 03

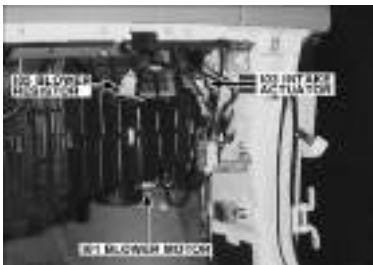

⑤ CONNECTOR VIEW AND NUMBERING ORDER

Female	Male	Remarks
		<p>It is not the shape of the connector housing, but the connector pin that distinguishes between male or female connectors. When numbering female and male connectors, refer to the numbering order in the following table. Some connectors may not follow this method of numbering order. For individual detailed numbering, refer to the CONNECTOR CONFIGURATIONS.</p>
		<p>Numbered in order from upper right to lower left</p> <p>Numbered in order from upper left to lower right</p>

NOTE

UNLESS OTHERWISE STATED, ALL CONNECTOR VIEWS ARE FROM THE TERMINAL SIDE OF THE CONNECTOR.

INTRODUCTION

Introduction (4)

GI-4

⑥ WIRE COLOR ABBREVIATIONS

The following abbreviations are used to identify wire colors in the circuit schematics.

Symbol	Color of wire	Symbol	Color of wire
B	Black	O	Orange
Br	Brown	P	Pink
G	Green	R	Red
Gr	Gray	W	White
L	Blue	Y	Yellow
Lg	Light Green	Pp	Purple
T	Tan	LI	Light Blue

* **(Y/B)**: Black stripe with yellow ground (2 colors)

↑ ↑
the color of the color of
background stripe

⑦ HARNESS CLASSIFICATION

Electrical wiring connectors are classified according to the wiring parts in the Harness Layouts.


Symbol	Harness name	Location
A	Air Bag, Air Bag EXT. harness	Floor and under crash pad
C	Control, Injector, Ignition Coil, Oil Control Valve harness	Engine compartment, Passenger compartment
D	Door, Door EXT. harness	Door
E	Front, Front Warning EXT., Front End Module, Battery Cable, Generator EXT. harness	Engine compartment, Battery
F	Floor, EPB EXT. harness	Floor
M	Main, Console EXT. harness	Passenger compartment
R	Trunk Lid, Roof, BWS EXT. harness	Roof, Trunk
S	Seat harness	Seat

* It depends on vehicles, it is necessary to check the harness name symbol on the harness layouts for detailed symbol.

⑧ CONNECTOR IDENTIFICATION

A connector identification symbol consists of a wiring harness location classification symbol corresponding to a wiring harness location and number corresponding to the connector. These connector locations can be found in the HARNESS LAYOUTS.


For example:

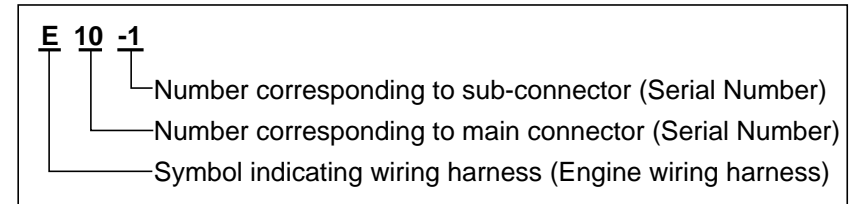

NOTE

Connectors which connect each wiring harness are represented by the following symbols.


For example:

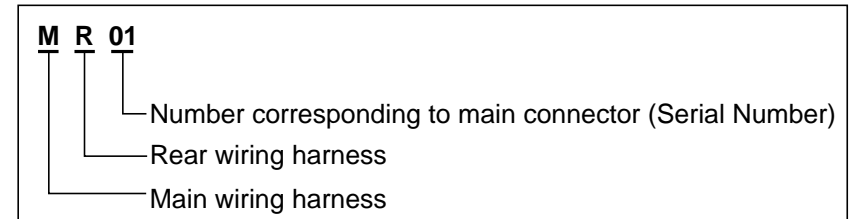

JUNCTION BLOCK IDENTIFICATION


A junction block identification symbol consists of a wiring harness location classification symbol corresponding to a wiring harness location and number corresponding to the connector in the junction block.

For example:

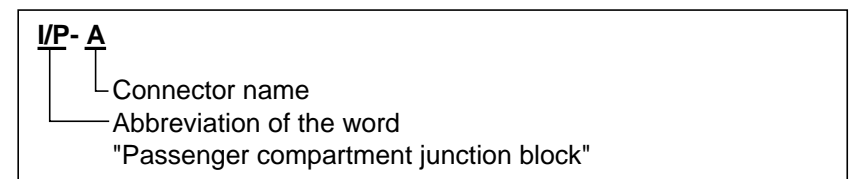

HARNESS LAYOUTS

Harness layouts show the routing of the major wiring harnesses, the in-line connectors and the splices between the major harnesses. These layouts will make electrical troubleshooting easier.

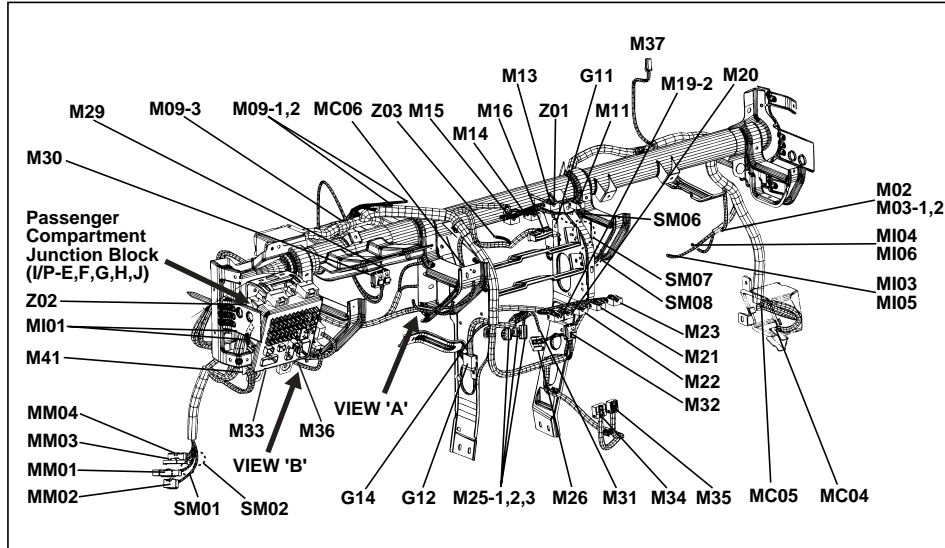




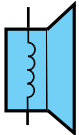
 
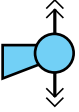

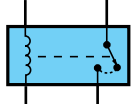

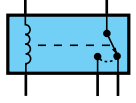

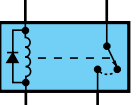
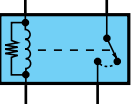
Symbols (1)

Section	Symbol	Meaning	Section	Symbol	Meaning	Section	Symbol	Meaning	Section	Symbol	Meaning
C O M P O N E N T		A solid line means the entire component is shown.	C O N N E C T O R		Shows the name of each connector on the component location index for reference.	S H I E L D W I R E		This represents RFI (Radio Frequency Interference) Shielding around a wire. The shielding is always connected to ground.	L A M P		Double filament
		A broken line indicates only part of the component is shown.			Indicates the number of corresponding terminal. (Only relevant terminal on the corresponding schematic diagram).			Single filament			
		This means the connector connects directly to the component.	W I R E		A wavy line means the wire is broken but is to be continued.	J O I N T C O N N E C T O R		This is a connector showing the joining wires.	D I O D E		Diode
		This indicates the connector connects to a lead (pigtail), wired directly to the component.			Wire insulation is yellow with a red strip.			Led diode			
		This indicates a screw terminal on the component.	S P L I C E S		Current path is continued on the same page or another page. The arrow shows the direction of current flow. You should look for the "A" in the marked position.	S L O W B L O W		Power supplied at all times. Name Capacity	T R		NPN
		This ground symbol (dot and 3 lines overlapping the component) means the housing of the component is attached to a metal part of the vehicle.			A wire connects to another circuit. The wire is shown again on that circuit which the arrow is pointing.			PNP			
		The name of the component appears next to its upper right corner.	G R O U N D		Name of Circuit	F U S E		This means power is supplied with the ignition on position. This means the short bar connects to other fuses. Identification Current rating	G E N E R A L C O M P O N E N T S Y M B O L		These switches move together: a dashed line shows a mechanical connection between them.
		Shows the number of pictures for component location.			Wire choices for options or different models are labeled and shown with a "choice" bracket like this.			NOT IN ON DASH FUSE BOX FUSE 10 10A			Switch (1 contact point)
					This symbol means the end of the wire is attached to a metal part of the vehicle.						Heater

SYMBOLS

Symbols (2)

GI-7

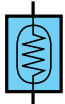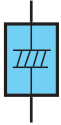Section	Symbol	Meaning	Section	Symbol	Meaning
GENERAL COMPONENTS SYMBOL		Sensor	GENERAL COMPONENTS SYMBOL		Condenser
		Sender			Speaker
		Injector			Horn, Buzzer, Siren, Chime Bell
		Solenoid	RELAY		Normally open contact
		Motor			This is a relay shown with no current flowing through its coil. When a current flows through coil, contact will toggle.
		Battery			Diode interior relay
				Resistance interior relay	

Troubleshooting Instructions (1)

GI-8

TROUBLESHOOTING INSTRUCTIONS

TROUBLESHOOTING PROCEDURES

The following five-step troubleshooting procedure is recommended.

1. Verify the customer's complaints

Turn on all the components in the problem circuit to check the accuracy of the customer's complaints. Note the symptoms.

Do not begin disassembly or testing until you have narrowed down the probable causes.

2. Read and analyze the schematic diagram

Locate the schematic for the problem circuit. Determine how the circuit is supposed to work by tracing the current paths from the power source through the system components to ground. If you do not understand how the circuit should work, read the circuit operation text. Also check other circuits that share with the problem circuit. The name of circuits that share the same fuse, ground, or switch, for example, are referred to on each diagram. Try to operate any shared circuits you did not check in step 1. If the shared circuit works, the shared wiring is okay, and the cause must be within the wiring used only by the problem circuit.

If several circuits fail at the same time, the fuse or ground is a likely cause.

3. Inspect the circuit/ component with the problem isolated

Make a circuit test to check the diagnosis you made in step 2. Remember that a logical, simple procedure is the key to efficient troubleshooting. Narrow down the probable causes using the troubleshooting hints and system diagnosis charts.

Test for the most likely cause of failure first.

Try to make tests at points that are easily accessible.

4. Repair the problem

Once the problem is found, make the necessary repairs.

5. Make sure the circuit works

Repeat the system check to be sure you have repaired the problem. If the problem was a blown fuse, be sure to test all of the circuits on that fuse.

TROUBLESHOOTING EQUIPMENT

VOLTMETER AND TEST LAMP


Use a test lamp or a voltmeter on circuits without solidstate units and use a test lamp to check for voltage. A test lamp is made up of a 12-volt light bulb with a pair of leads attached. After grounding one lead, touch the other lead to various points along the circuit where voltage should be present.

When the bulb goes on, there is voltage at the point being tested.

CAUTION

A number of circuits include solid-state modules, such as the Engine Control Module(ECM), used with computer command control injection. Voltage in these circuits should be tested only with a 10-megaohm or higher impedance digital multimeter. Never use a test lamp on circuits that contain solid state modules. Damage to the modules may result.

A voltmeter can be used in place of a test lamp. While a test lamp shows whether the voltage is present or not, a voltmeter indicates how much voltage is present.

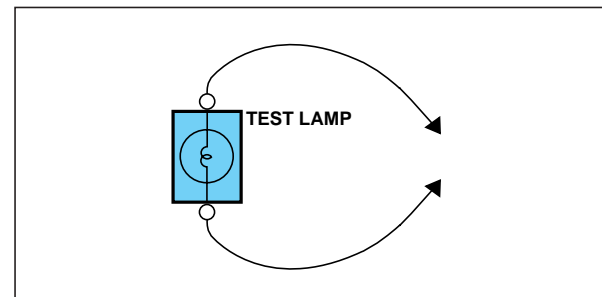**SELF-POWERED TEST LAMP AND OHMMETER**

Use a self-powered test lamp or an ohmmeter to check for continuity.

The ohmmeter shows how much resistance there is between two points along a circuit. Low resistance means good continuity.

TROUBLESHOOTING INSTRUCTIONS

Troubleshooting Instructions (2)


GI-9

CAUTION

Never use a self-powered test lamp on circuits that contain solid state modules. Damage to these modules may result.

An ohmmeter can be used in place of a self-powered test lamp. The ohmmeter shows how much resistance there is between two points along a circuit. Low resistance means good continuity.

Circuits which include any solid-state devices should be tested only with a 10-megaohm or higher impedance digital multimeter. When measuring resistance with a digital multimeter, the battery negative terminal should be disconnected. Otherwise, there may be incorrect readings. Diodes and solid-state devices in a circuit can make an ohmmeter give a false reading. To find out if a component is affecting a measurement, take one reading, reverse the leads and take a second reading. If different the solid-state device is affecting the measurement.

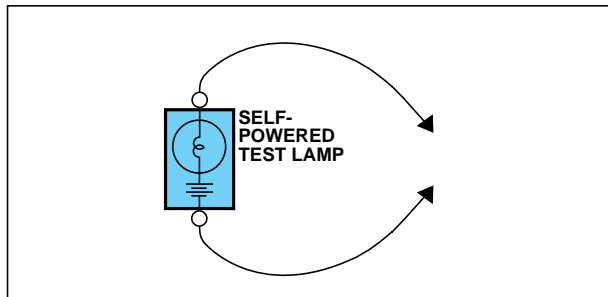


JUMPER WIRE WITH FUSE

Use a jumper wire with a fuse to by-pass an open circuit.

A jumper wire is made up of an in-line fuse holder connected to a set of test leads. This tool is available with small clamp connectors providing adaption to most connectors without damage.

CAUTION

Do not use a fuse with a higher rating than the specified fuse that protects the circuit being tested. Do not use this tool in any situation to substitute an input or output at the solid-state control module, such as ECM, TCM, etc.

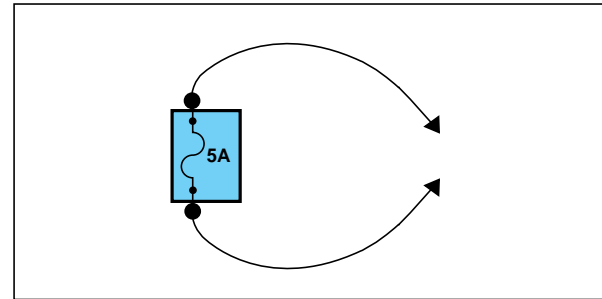

SHORT FINDER

A short finder is available to locate a short to ground. The short finder creates a pulsing magnetic field in the shorted circuit and shows you the location of the short through body trim or sheet metal.

TROUBLESHOOTING TEST

1. TESTING FOR VOLTAGE


This test measures voltage in a circuit. When testing for voltage at a connector, you do not have to separate the two halves of the connector. Instead, probe the connector from the back(backprobe). Always check both sides of the connector because dirt and corrosion between its contact surfaces can cause electrical problems.

- A. Connect one lead of a test lamp or voltmeter to a ground. If you are using a voltmeter, be sure it is the voltmeter's negative test lead you have connected to ground.
- B. Connect the other lead of the test lamp or voltmeter to a selected test point(connector or terminal).
- C. If the test lamp glows, there is voltage present. If you are using a voltmeter, note the voltage reading. A loss of more than 1 volt from specification indicates a problem.

TROUBLESHOOTING INSTRUCTIONS


Troubleshooting Instructions (3)

GI-10

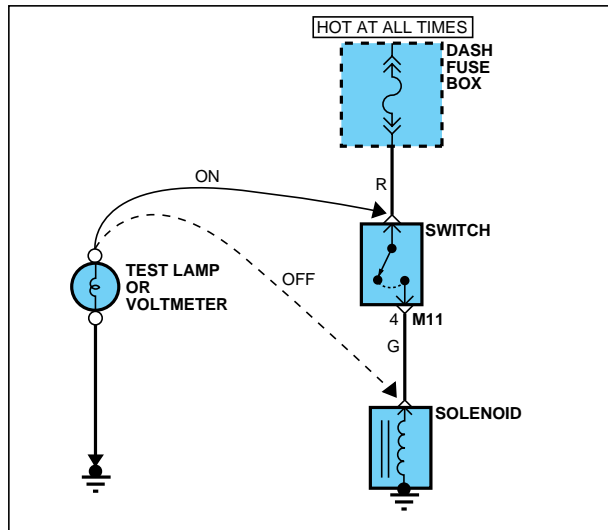


2. TESTING FOR CONTINUITY

- Disconnect the battery negative terminal.
- Connect one lead of a self-powered test lamp or ohmmeter to one end of the part of the circuit you wish to test. If you are using an ohmmeter, hold the leads together and adjust the ohmmeter to read zero ohms.
- Connect the other lead to the other end.
- If the self-power test lamp glows, there is continuity. If you are using an ohmmeter, low or zero resistance means good continuity.

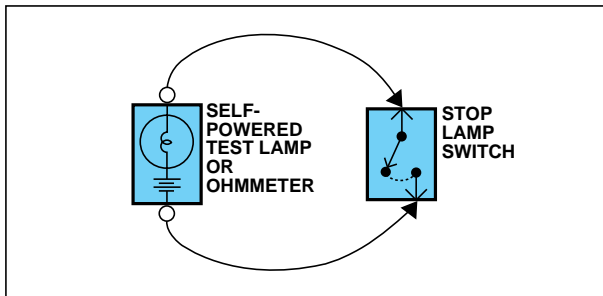


3. TESTING FOR SHORT TO GROUND

- Disconnect the battery negative terminal.
- Connect one lead of a self-powered test lamp or an ohmmeter to the fuse terminal on the load side.
- Connect the other lead to a ground.
- Beginning near the fuse block move the harness from side to side. Continue this procedure (about six inches apart) while watching the self-powered test lamp or ohmmeter.
- When the self-powered test lamp glows, or ohmmeter registers, there is a short to a ground in the wiring near that point.

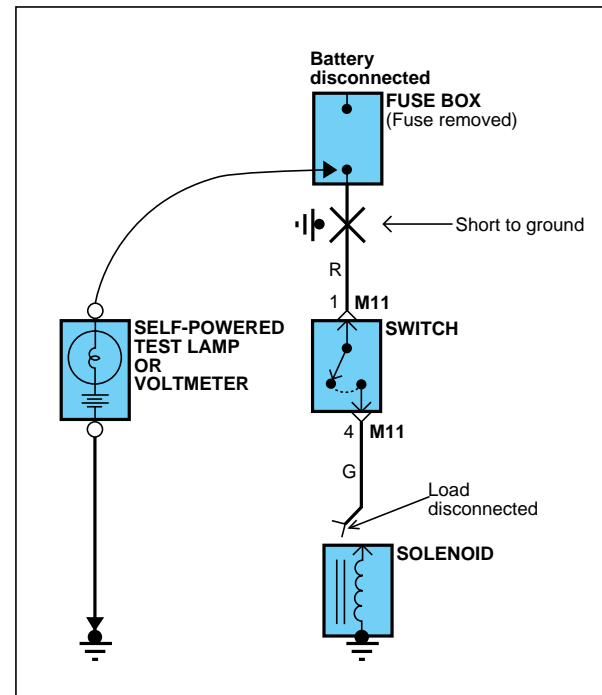

4. TESTING FOR A SHORT WITH A SHORT FINDER

- A. Remove the blown fuse. Leave the battery connected.
- B. Connect the short finder across the fuse terminals.
- C. Close all switches in series in the circuit that is being testing.
- D. Turn on the short circuit locator. It sends pulses of current to the short.
This creates a pulsing magnetic field around the wiring between the fuse box and the short.
- E. Beginning at the fuse box, slowly move the short finder along the circuit wiring. The meter will show current pulses through sheet metal and body trim. As long as the meter is between the fuse and the short, the needle will move with each current pulse. Once the meter is moved past the point of the short, the needle will stop moving. Check around this area to locate the cause of the short circuit.

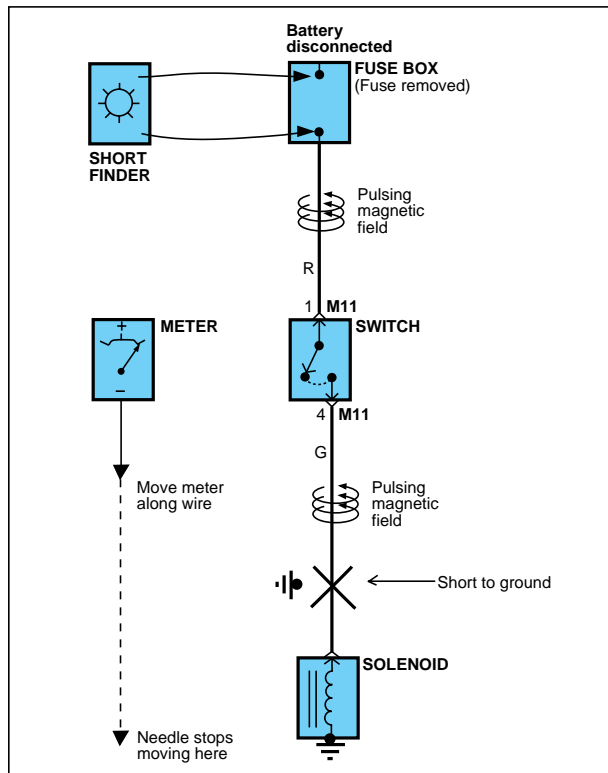


*** REFERENCE SERVICE TOOLS**

Tool Number	Tool Name
TRK00A	Wiring Repair Kit (Standard Kit)
TRK001	Wire Stripper Set
TRK002	Remover Tool Set
TRK003	Terminal Tension Gauge Set
TRK004	Cable Tie Set
TRK005	Shrink Tube Set
TRK006	Jump Connector Kit(A)
TRK007~10	General Connector Kit(B~E)
TRK011	Terminal With Lead Wire Kit(F)
TRK012	Composition Kit(G)
TRK013	Lead Wire Set
TRK014	Carrying Case
TRK015	User's Guide & Parts Information
TRK016	Inner Box(Large)
TRK017	Inner Box(Small)
TRK018	Solder

* For more details, refer to the User's guide & parts Information of the Wiring Repair Kit (Pub. No. : OSG200208).

*** Wiring Repair Kit**

[Standard Kit (TRK00A)]

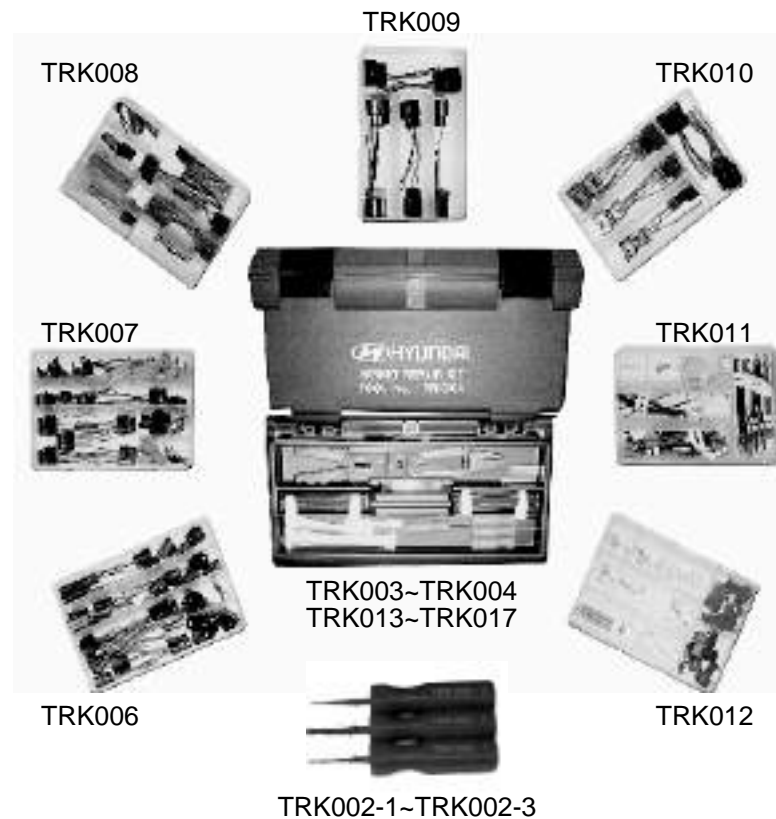

*** Optional Items**



REWORK PROCEDURE

1. Use of Wire stripper set (TRK001)

- 1) Disconnect the battery cable.
- 2) Choose the correct clamping slot for the wire and strip off the wire coat.
- ◎ If the incorrect crimping slot is used, the terminal may be damaged and may not fit into the connector.



2. Use of Remover tool set (TRK002)

► **Flat tip type** : Removal of single locking male/female terminal from the connector.

- 1) Remove the front or rear retainer (holder, stopper) of the connector.



- 2) Ensure that the tip of the tool is inserted into the gap between the elastic arm of key and terminal.



- 3) Remove the terminal and check the terminal condition, if there is a damaged, replace it with a new terminal.

► **Double tip type** : Removal of double locking male/female terminal from the connector.



3. Use of Terminal tension gauge set (TRK003)

- 1) Select the tension gauge that matches the female terminal to be checked.



- 2) Insert a tension gauge into the female terminal and check the terminal condition. (as shown in the photograph)



◎ If the tension of female terminal is not tight enough, remove it and replace the terminal and wire assembly (including seal).



4. Use of Ring terminal (TRK012-4)

- 1) Strip off about 5mm of the wire coat at the end of the wire.



- 2) Joint the stripped wire with ring terminal and crimp using wire stripper.



- 3) Put the shrink tube over the connection area and shrink the tube using electrical hot gun.

**5. Use of Inline solder (TRK012-5) and Shrink tube set (TRK005)**

- 1) Strip off about 5mm of the wire coat at the end of the wires.



- 2) Insert each wire into the opposite ends of the inline solder and crimp using wire stripper.



- 3) Put the shrink tube over the connection area and shrink the tube using electrical hot gun.



- ◎ Shrink tube should be securely wrapped around the inline solder area.



6. Use of Terminal with lead wire kit (TRK011)

- 1) Remove the damaged connector and terminal using remover tool.



- 2) Select the right wire, which is fitted with the terminal specification from terminal with lead wire box and cut of the end of wire using wire stripper.



- 3) Put the end of each cut off wire in the middle of the splice joint terminal and compress using wire stripper.



- 4) Put the shrink tube over the connection area and shrink the tube using electrical hot gun.



- 5) Insert the terminal with lead wire into the connector.



Fuse & Relay Information (1)



SD100-1

I/P JUNCTION BOX LH

LAYOUT

< FRONT >

< REAR >

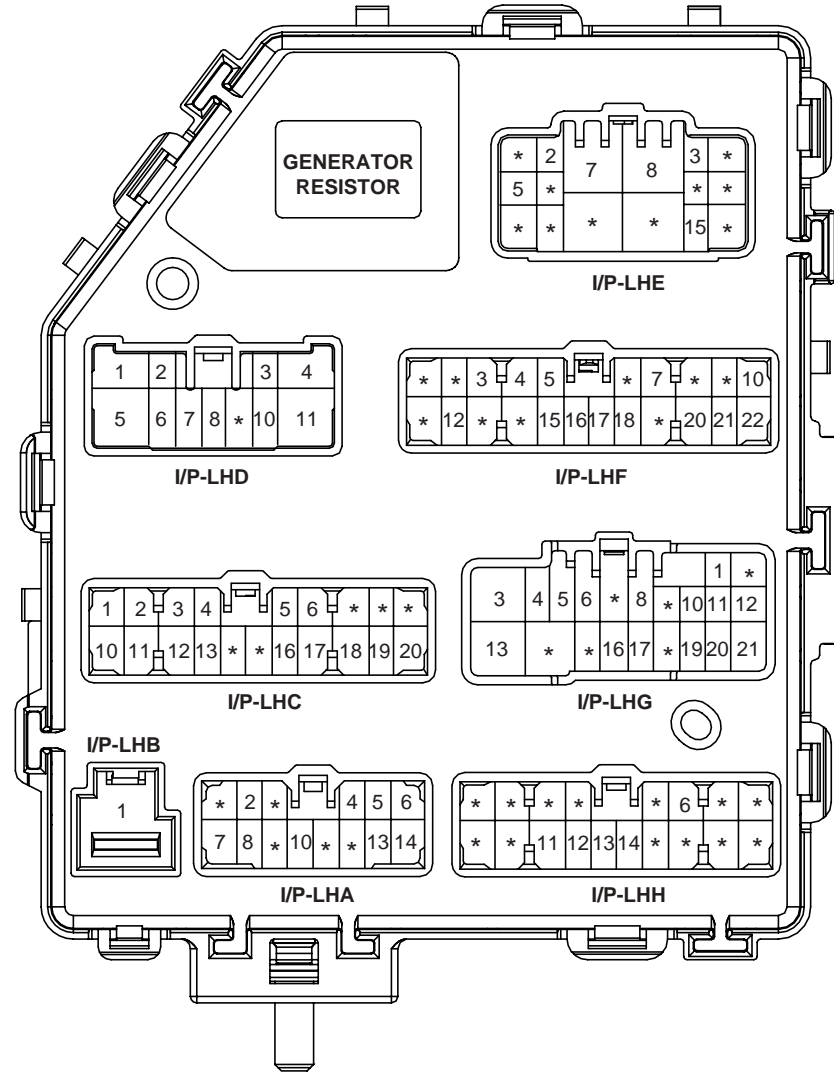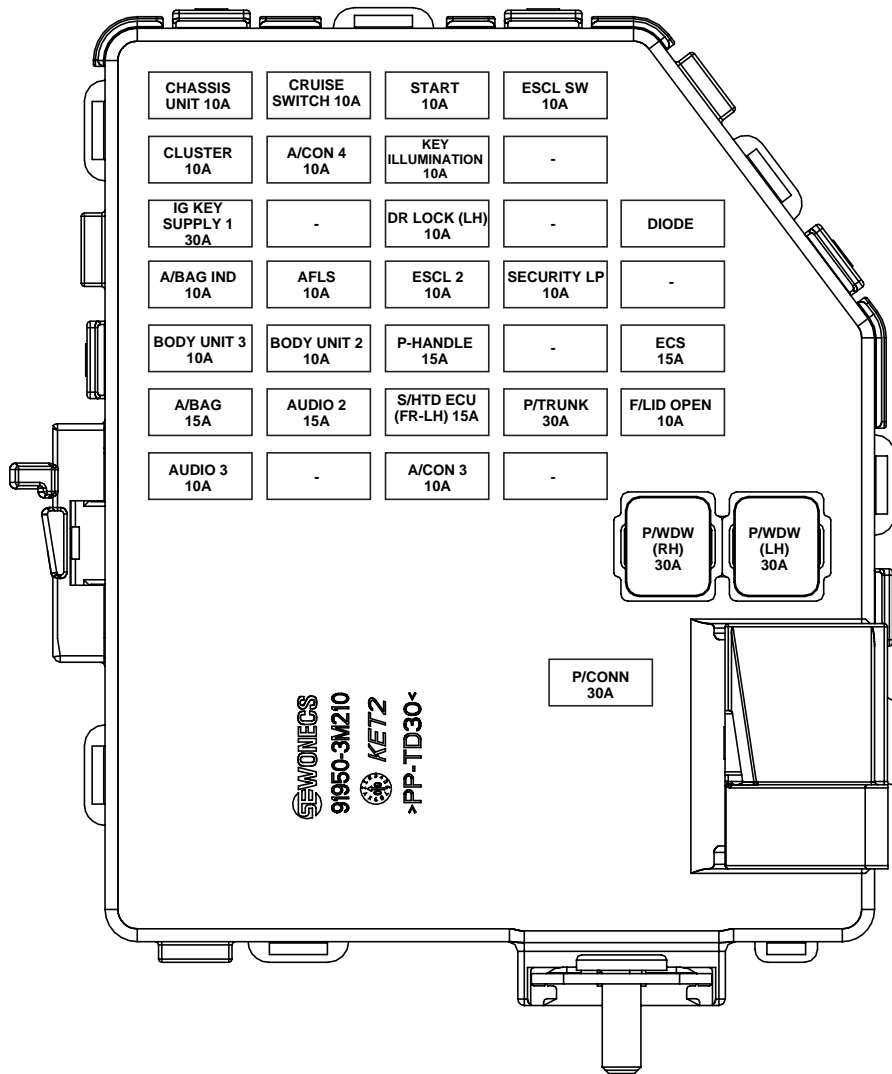

※ USE THE DESIGNATED FUSE AND RELAY ONLY

FUSE & RELAY INFORMATION

Fuse & Relay Information (2)

SD100-2

CIRCUIT

Description		(A)	Circuit Protected
FUSIBLE LINK	P/WDW (LH)	30A	Driver Power Window Module, Rear Power Window Module LH
	P/WDW (RH)	30A	Passenger Power Window Module, Rear Power Window Module RH
FUSE	CHASSIS UNIT	10A	Console Switch LH/RH, ECS Control Module, Steering Angle Sensor, Key Lock Module
	CRUISE SWITCH	10A	Multifunction Switch, Crash Pad Switch, A/C Control Module, Instrument Cluster, Rear Seat Warmer Module LH, Driver Seat Warmer Module Rear Seat Warmer Module RH, Passenger Seat Warmer Module, Passenger CCS Control Module, Driver CCS Control Module, Generator
	START	10A	Transmission Range Switch
	ESCL SW	10A	Fob Holder, Start Stop Button Switch
	CLUSTER	10A	Instrument Cluster (IND.)
	A/CON 4	10A	A/C Control Module
	KEY ILLUMINATION	10A	Start Stop Button Switch, Door Warning Switch, Fob Holder, Key Solenoid
	IG KEY SUPPLY 1	30A	E/R Junction Box Fuse (INHIBITOR SW 10A, ECU-2 10A, EHPS 10A, CRUISE 10A, TCU 15A, ESP 10A, STOP LP 10A, AFLS 10A)
	DR LOCK (LH)	10A	Driver Door Module
	A/BAG IND	10A	Instrument Cluster (Air Bag IND.)
	AFLS	10A	Auto Head Lamp Leveling Device Sensor, Adaptive Front Lighting Module, Head Lamp LH, Head Lamp RH
	ESCL 2	10A	PDM
	SECURITY LP	10A	Data Link Connector, Auto Light Sensor & Security Indicator, Rear Door Module LH/RH
	BODY UNIT 3	10A	FAM, IPM, Tilt & Telescopic Module, PDM, Driver Door Module, Passenger Door Module, IMS Control Module, Multifunction Switch Electronic Parking Brake Module, Power Trunk Lid Control Module, Forward & Rear Parking Assist Control Module
	BODY UNIT 2	10A	FAM, Multifunction Switch, Tilt & Telescopic Module, Instrument Cluster, Driver Door Module, Passenger Door Module, Power Trunk Lid Control Module, IMS Control Module, Rear Curtain Module
	P/HANDLE	15A	Tilt & Telescopic Module
	ECS	15A	ECS Control Module
	A/BAG	15A	SRS Control Module
	AUDIO 2	15A	Audio, Front Monitor, AV Head Module, Rear Monitor (With AV), Rear Audio Switch, Media Module (With AV)
	S/HTD ECU (FR-LH)	15A	Driver CCS Control Module, Driver Seat Warmer Module (W/O CCS)
	P/TRUNK	30A	Power Trunk Lid Control Module
	F/LID OPEN	10A	Trunk Lid & Fuel Filler Door Switch (Fuel Filler Door Switch)
	AUDIO 3	10A	AV Head Module, Audio, Active Headrest Sensor Module
A/CON 3	10A	RF Receiver, A/C Control Module	
P/CONN	30A	I/P Junction Box LH Fuse (BODY UNIT 2 10A, A/CON 3 10A, AUDIO 2 15A)	

※ USE THE DESIGNATED FUSE AND RELAY ONLY

FUSE & RELAY INFORMATION


Fuse & Relay Information (3)

SD100-3


I/P JUNCTION BOX RH

LAYOUT

< FRONT >

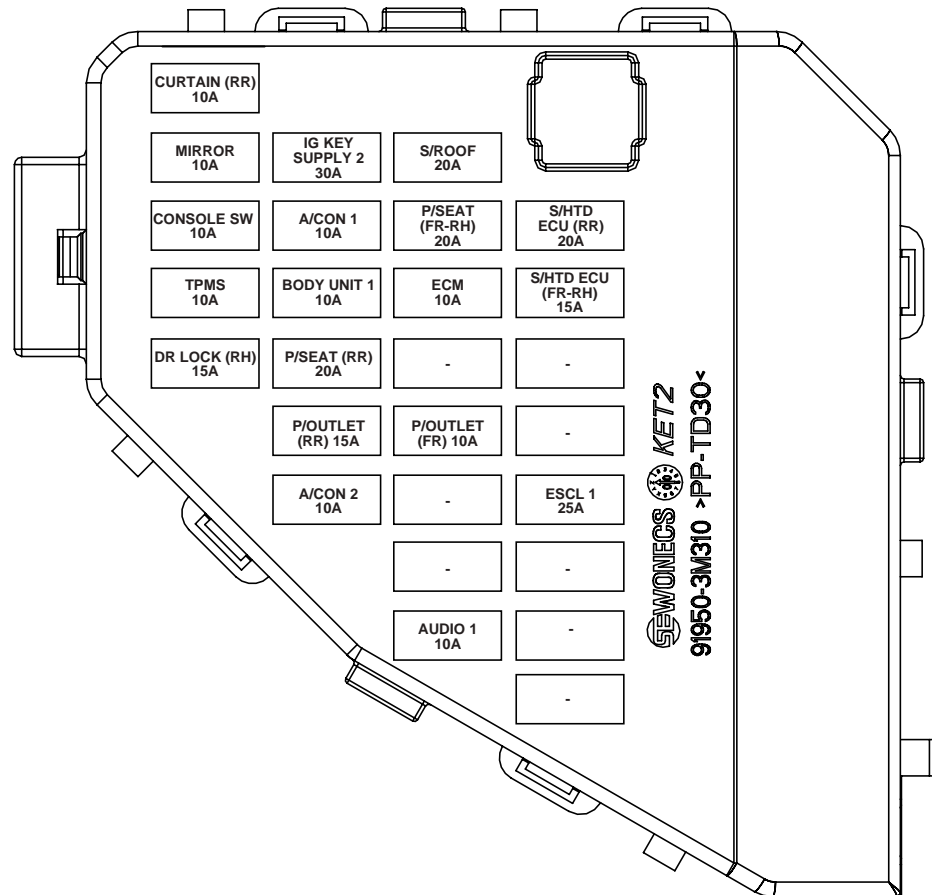

< REAR >

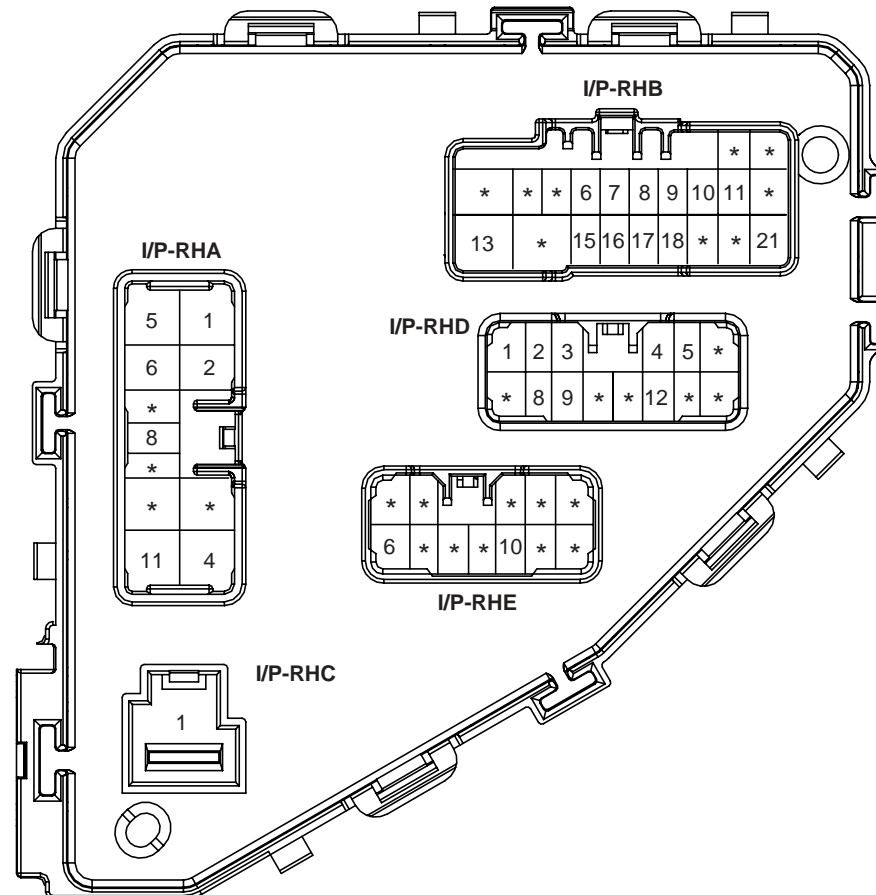

※ USE THE DESIGNATED FUSE AND RELAY ONLY

FUSE & RELAY INFORMATION

Fuse & Relay Information (4)

SD100-4

CIRCUIT

FUSE	(A)	Circuit Protected
CURTAIN (RR)	10A	Rear Curtain Module
MIRROR	10A	Driver Door Module, Passenger Door Module
IG KEY SUPPLY 2	30A	E/R Junction Box Fuse (AQS 10A, WASHER 15A)
S/ROOF	20A	Overhead Console Lamp
CONSOLE SW	10A	Console Switch LH/RH, Piezo Buzzer
A/CON 1	10A	Active Incar Sensor, A/C Control Module
P/SEAT (FR-RH)	20A	Passenger Power Seat Relay Box
S/HTD ECU (RR)	20A	Rear Seat Warmer Module LH/RH, Rear Power Seat Control Switch
TPMS	10A	-
BODY UNIT 1	10A	Instrument Cluster, Rheostat, Driver CCS Control Module, Passenger CCS Control Module, PDM, IPM
ECM	10A	Electro Chromic Mirror, Overhead Console Lamp, Rain Sensor, Rear Curtain Module, Camera Module
S/HTD ECU (FR-RH)	15A	Passenger CCS Control Module, Passenger Seat Warmer Module
DR LOCK (RH)	15A	Passenger Door Module
P/SEAT (RR)	20A	Rear Power Seat Relay Box, Rear Slide Limit Switch LH
P/OUTLET (RR)	15A	Rear Accessory Socket
P/OUTLET (FR)	10A	ACC Socket Relay
A/CON 2	10A	A/C Control Module, IPM, PDM, Key Lock Module
ESCL 1	25A	PDM
AUDIO 1	10A	Audio, Camera Module, Rear Audio Switch, Front Monitor, Media Module, AV Head Module


※ USE THE DESIGNATED FUSE AND RELAY ONLY

FUSE & RELAY INFORMATION

Fuse & Relay Information (5)

SD100-5

FUSE & RELAY BOX LAYOUT

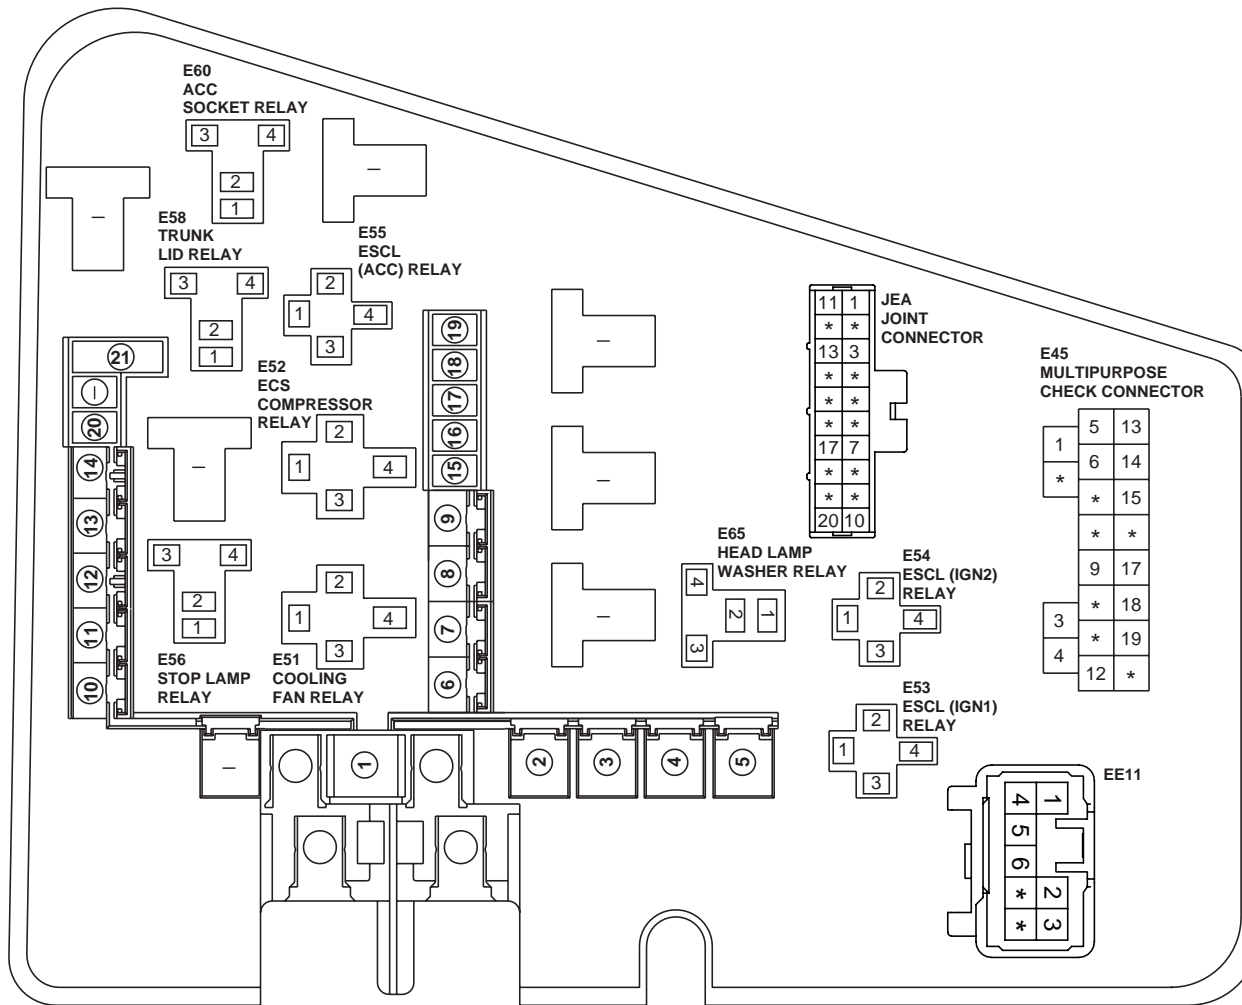

✘ USE THE DESIGNATED FUSE AND RELAY ONLY

FUSE & RELAY INFORMATION

Fuse & Relay Information (6)

SD100-6

CIRCUIT

FUSE	NO	FUSE	(A)	Circuit Protected
FUSIBLE LINK	1	ALT	200A	Generator
	2	I/P LH PWR	60A	I/P Junction Box LH
	3	I/P RH PWR	60A	I/P Junction Box RH
	4	COOLING	60A	Cooling Fan Relay
	5	EHPS	80A	EHPS Module
	6	AIR ECS	40A	ECS Compressor Relay
	7	AMP-1	40A	AV JBL AMP
	8	AMP-2	30A	AMP
	9	ESCL(ACC)	30A	ESCL (ACC) Relay
	10	ABS-1	30A	ESP Control Module, Multipurpose Check Connector
	11	ABS-2	30A	ESP Control Module, Multipurpose Check Connector
	12	ESCL(IGN1)	30A	ESCL (ING 1) Relay
	13	ESCL(IGN2)	30A	ESCL (ING 2) Relay
	14	P/SEAT FL	30A	Driver Power Seat Relay Box, IMS Control Module, Driver Lumbar Support Switch
FUSE	15	H/LP WASHER	20A	Head Lamp Washer Relay
	16	B/UP LP	10A	-
	17	ACC SOCKET	25A	ACC Socket Relay
	18	T/LID	10A	Trunk Lid Relay
	19	DRL	15A	-
	20	STOP LP	10A	Stop Lamp Relay, Stop Lamp Switch, IPM
	21	B/UP LP	10A	Rear Combination Lamp LH/RH (IN), Electro Chromic Mirror, Camera Module, Rear Curtain Module

※ USE THE DESIGNATED FUSE AND RELAY ONLY

FUSE & RELAY INFORMATION


Fuse & Relay Information (7)

SD100-7

E/R JUNCTION BOX

LAYOUT

< FRONT >

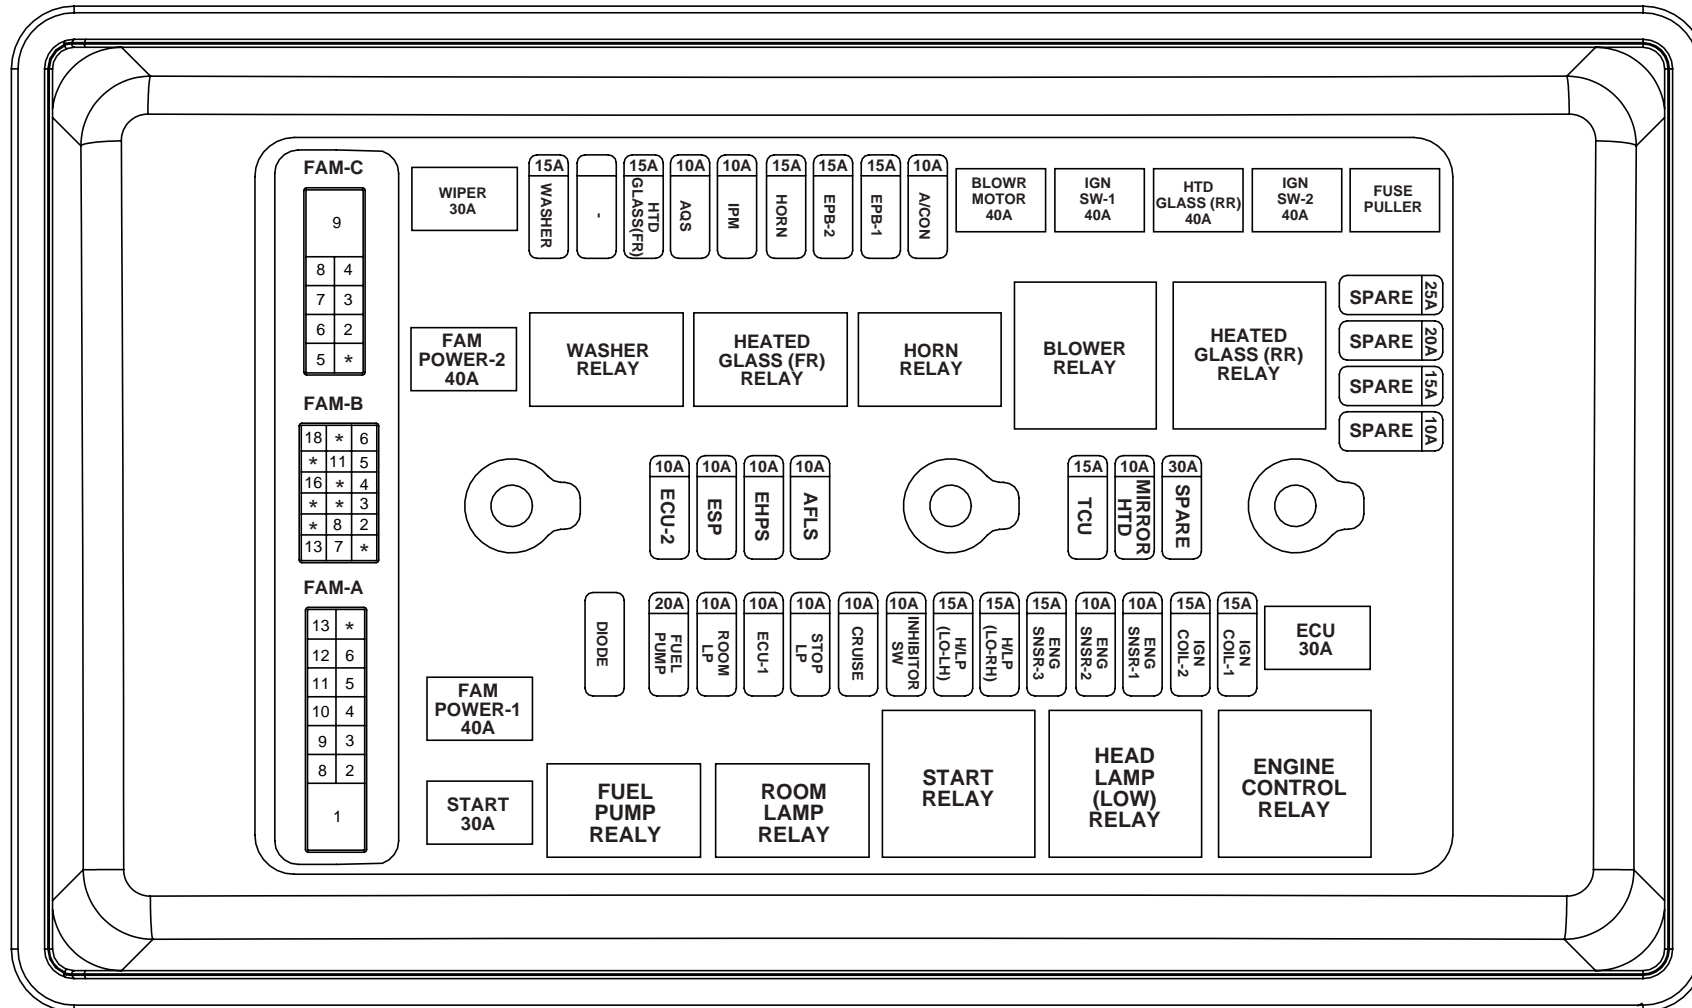

※ USE THE DESIGNATED FUSE AND RELAY ONLY

FUSE & RELAY INFORMATION

Fuse & Relay Information (8)

SD100-8

CIRCUIT

Description		(A)	Circuit Protected
FUSIBLE LINK	WIPER	30A	Electronic Control Wiper Module
	FAM POWER-1	40A	FAM
	FAM POWER-2	40A	FAM
	START	30A	Start Relay
	ECU	30A	Engine Control Relay
	BLOWER MOTOR	40A	Blower Relay
	IGN SW-1	40A	Ignition Switch (IG 2, START)
	HTD GLASS (RR)	40A	Heated Glass (RR) Relay
	IGN SW-2	40A	Ignition Switch (IG 1, ACC)
FUSE	A/CON	10A	A/C Control Module
	EPB-1	15A	Electronic Parking Brake Module
	EPB-2	15A	Electronic Parking Brake Module
	HORN	15A	Horn Relay
	IPM	10A	IPM
	AQS	10A	AQS Sensor, Electronic Control Wiper Module, Blower Relay, Head Lamp (Low) Relay
	HTD GLASS (FR)	15A	Heated Glass (FR) Relay
	WASHER	15A	Washer Relay
	MIRROR HTD	10A	A/C Control Module, Power Outside Mirror & Mirror Folding Motor LH/RH
	TCU	15A	TCM
	AFLS	10A	Head Lamp LH/RH
	EHPS	10A	EHPS Module
	ESP	10A	ESP Control Module, Multipurpose Check Connector
	ECU-2	10A	ECM
	IGN COIL-1	15A	Ignition Coil #2,4,6
	IGN COIL-2	15A	Ignition Coil #1,3,5, Condenser
	ENG SNSR-1	10A	ECM, Mass Air Flow Sensor, Oxygen Sensor #1,2,3,4
	ENG SNSR-2	10A	Canister Purge Control Solenoid Valve, Variable Intake Manifold Valve, Oil Control Valve, ECM, Cooling Fan Relay, Immobilizer Module
	ENG SNSR-3	15A	ECM, Injector #1~#6, Fuel Pump Relay
	H/LP (LO-RH)	15A	Head Lamp RH
	H/LP (LO-LH)	15A	Head Lamp LH, ECM
	INHIBITOR SW	10A	Transmission Range Switch
	CRUISE	10A	Smart Cruise Control Module
	STOP LAMP	10A	Stop Lamp Switch, Stop Lamp Relay, Generator
	ECU-1	10A	ECM, TCM
	ROOM LAMP	10A	Room Lamp Relay
FUEL PUMP	20A	Fuel Pump Relay	

※ USE THE DESIGNATED FUSE AND RELAY ONLY

FUSE & RELAY INFORMATION


Fuse & Relay Information (9)

SD100-9

E/R JUNCTION BOX

LAYOUT

<REAR >

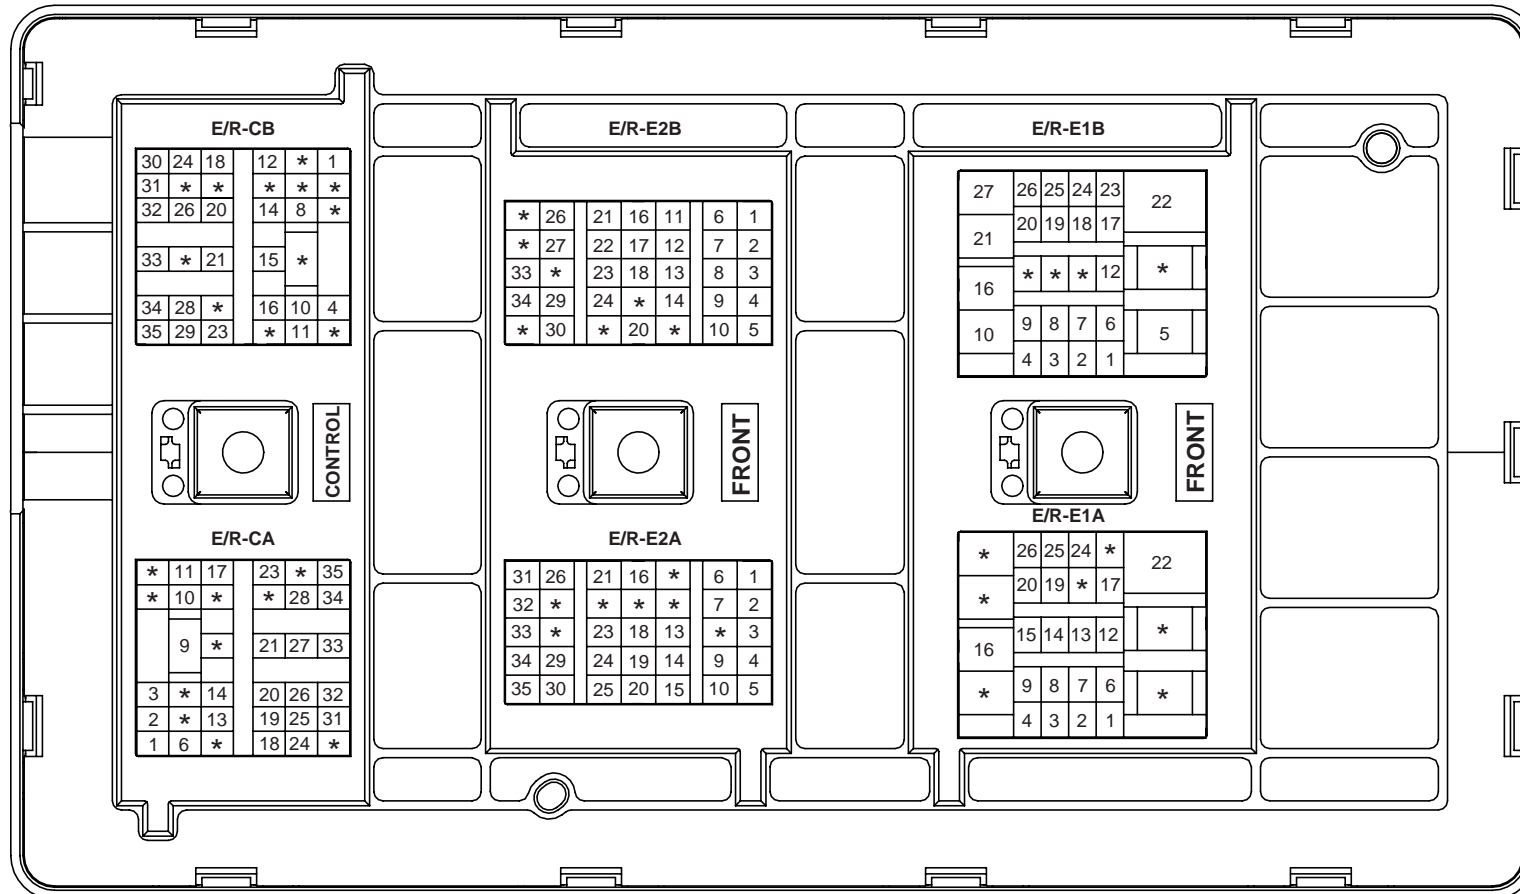

※ USE THE DESIGNATED FUSE AND RELAY ONLY

FUSE & RELAY INFORMATION

Fuse & Relay Information (10)

SD100-10


MEMO

POWER DISTRIBUTION

E2D35ED8

Power Distribution (1)


SD110-1

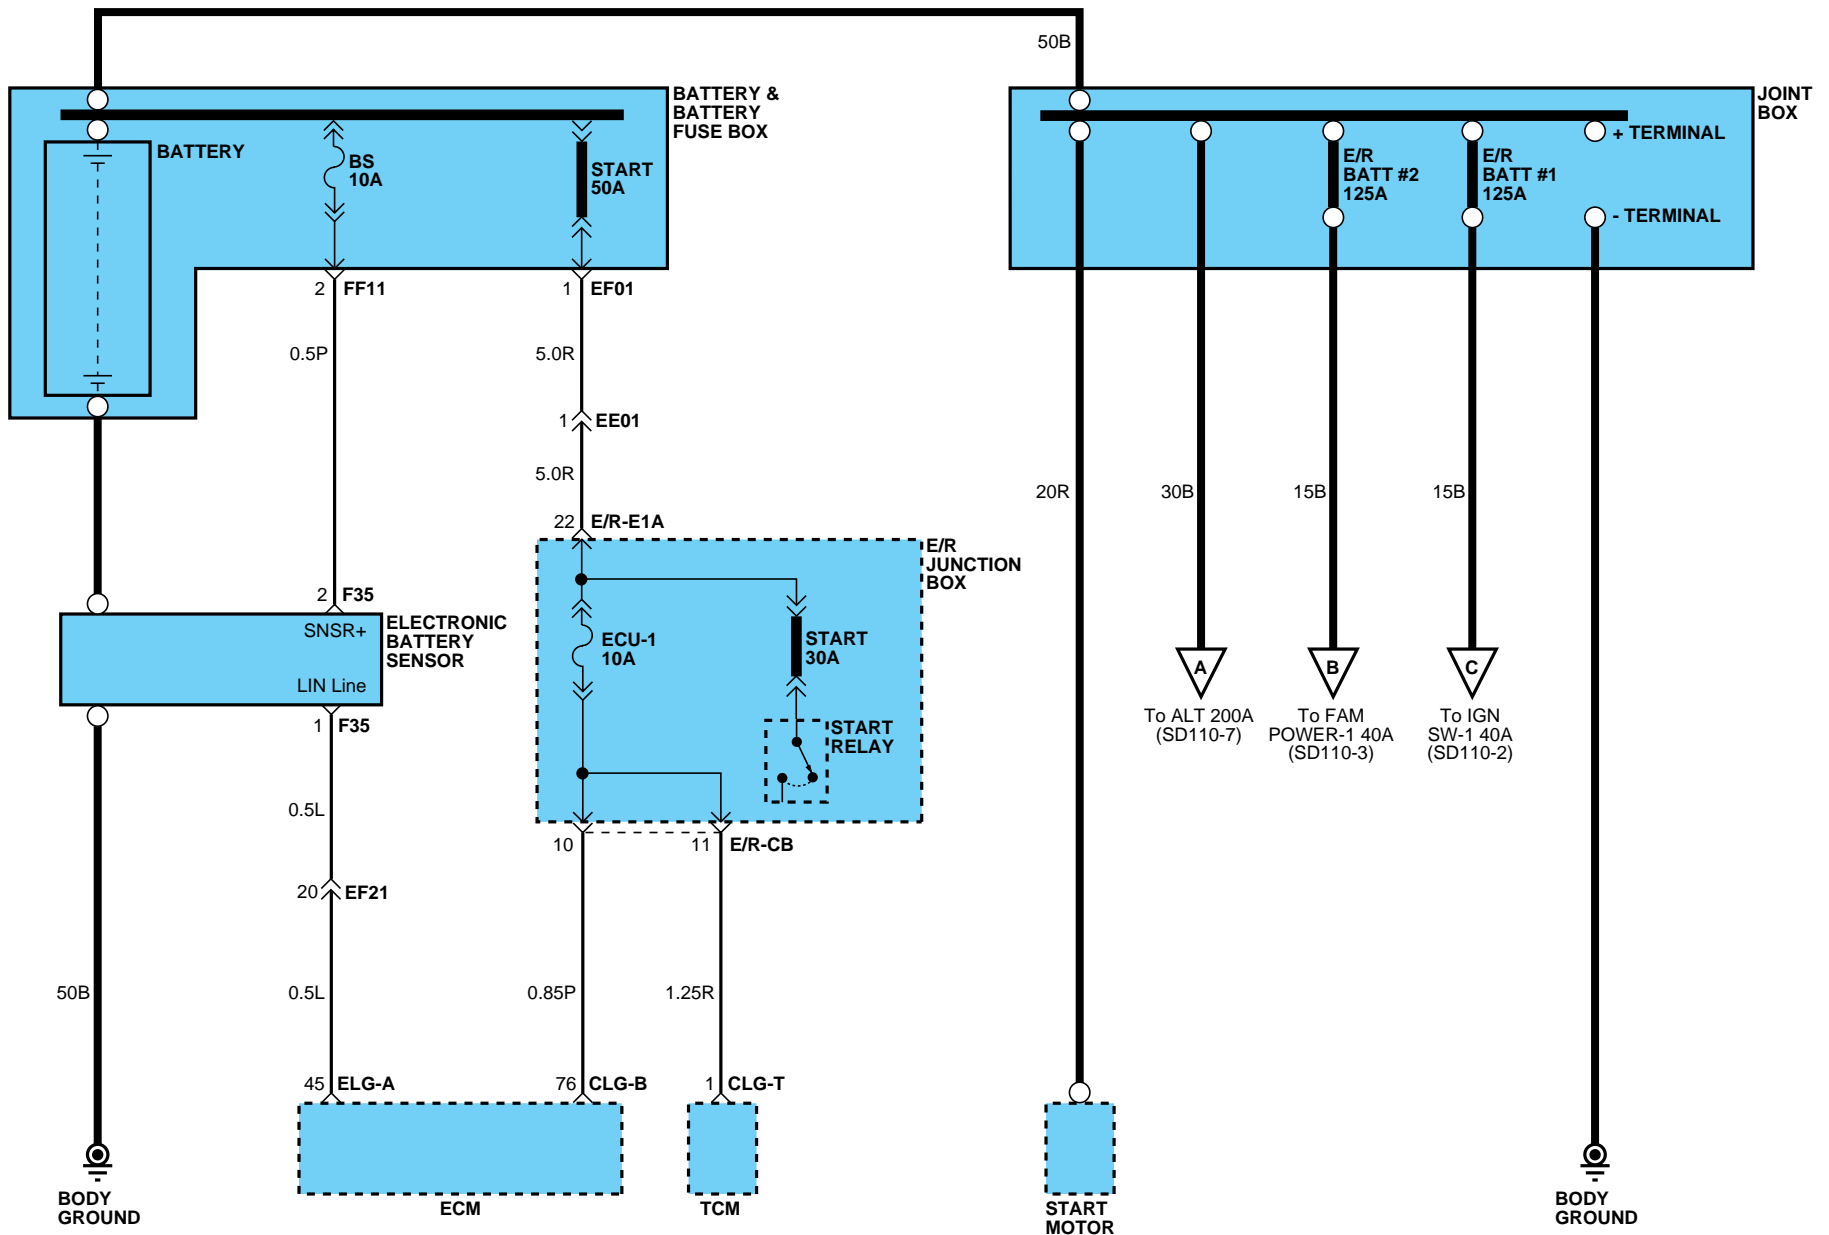

POWER DISTRIBUTION

Power Distribution (2)


SD110-2

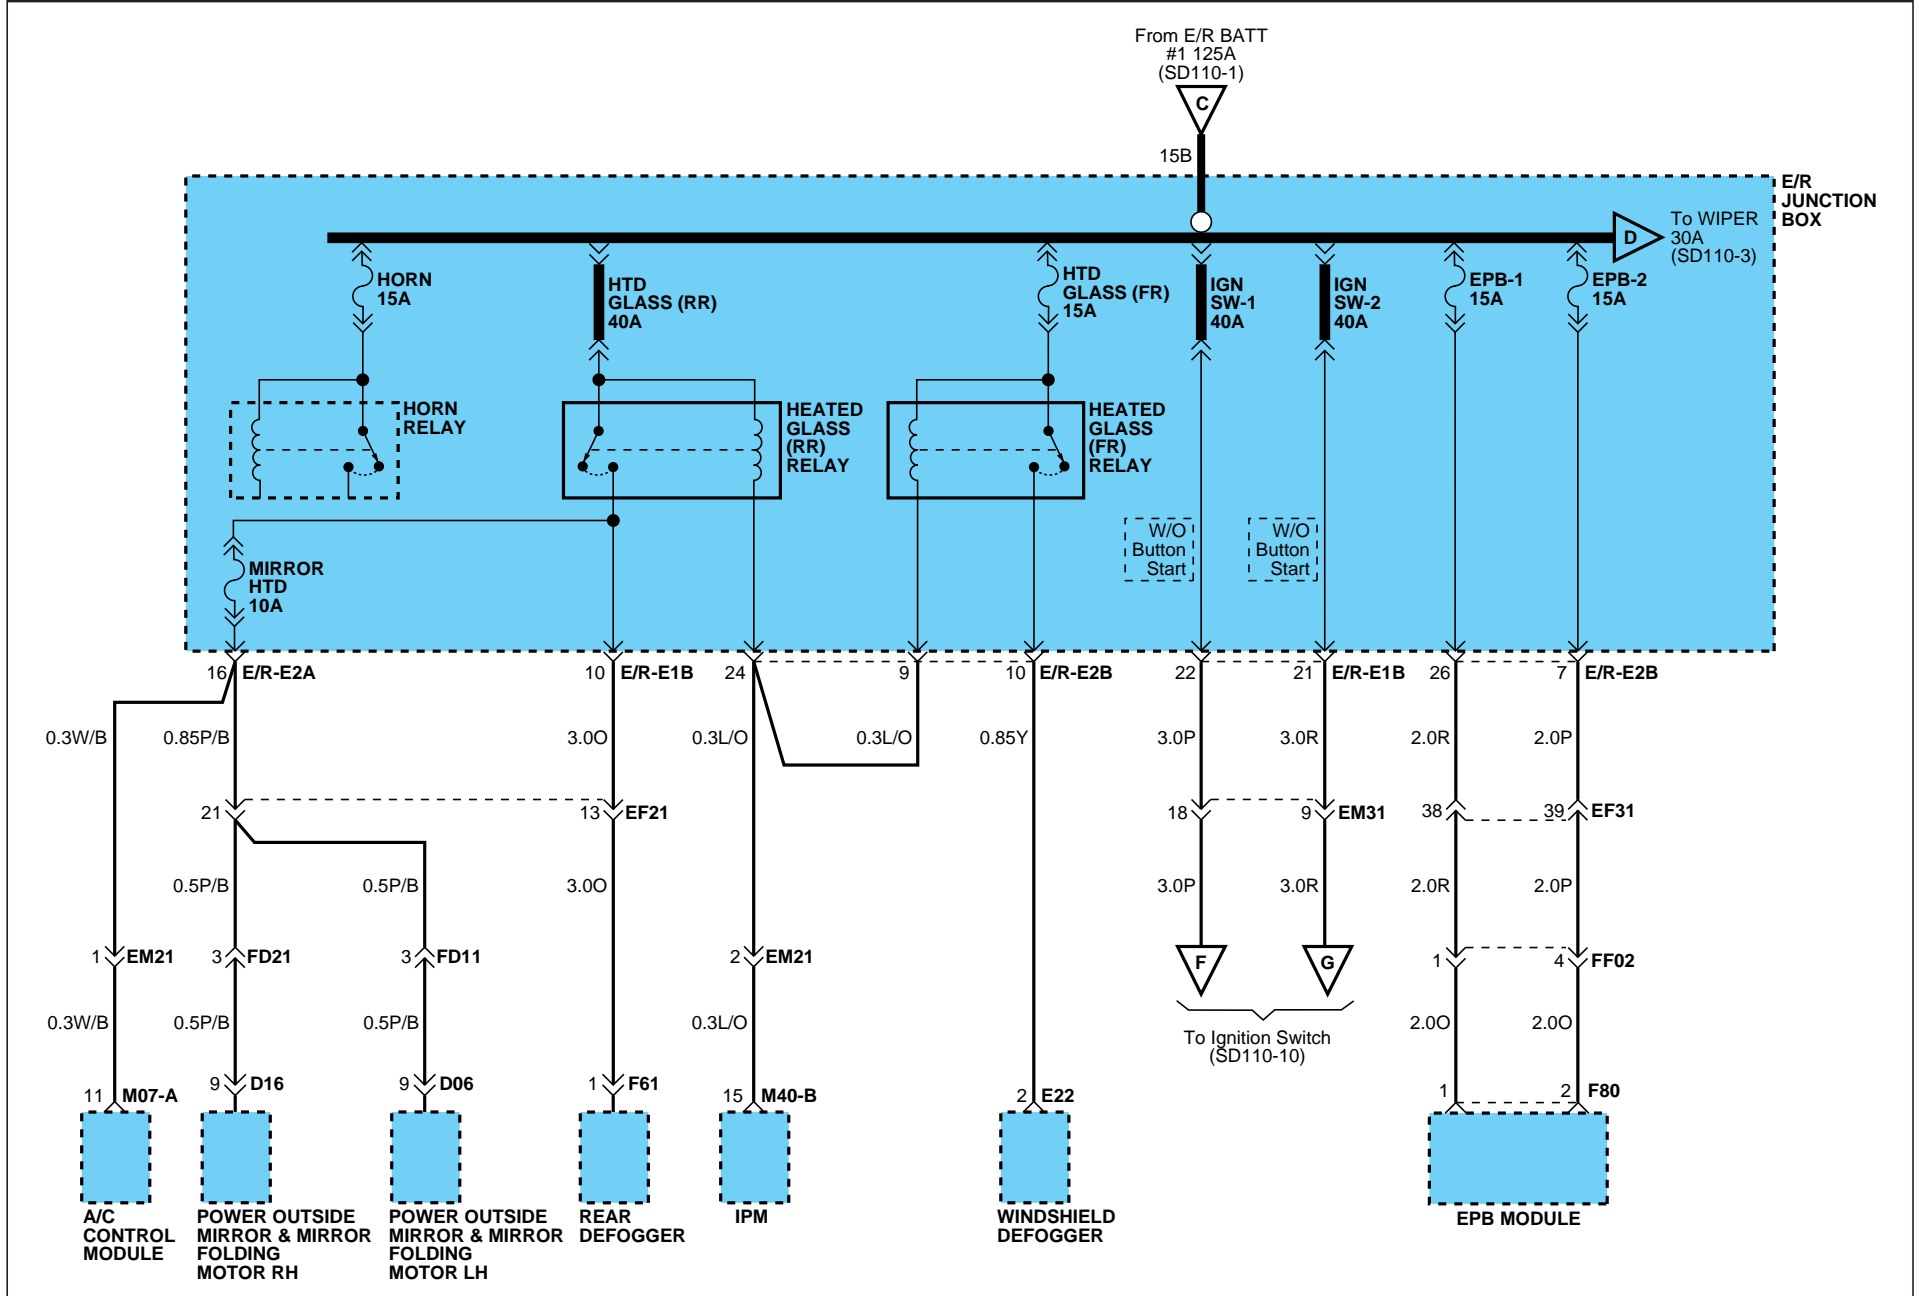

POWER DISTRIBUTION

Power Distribution (3)


SD110-3

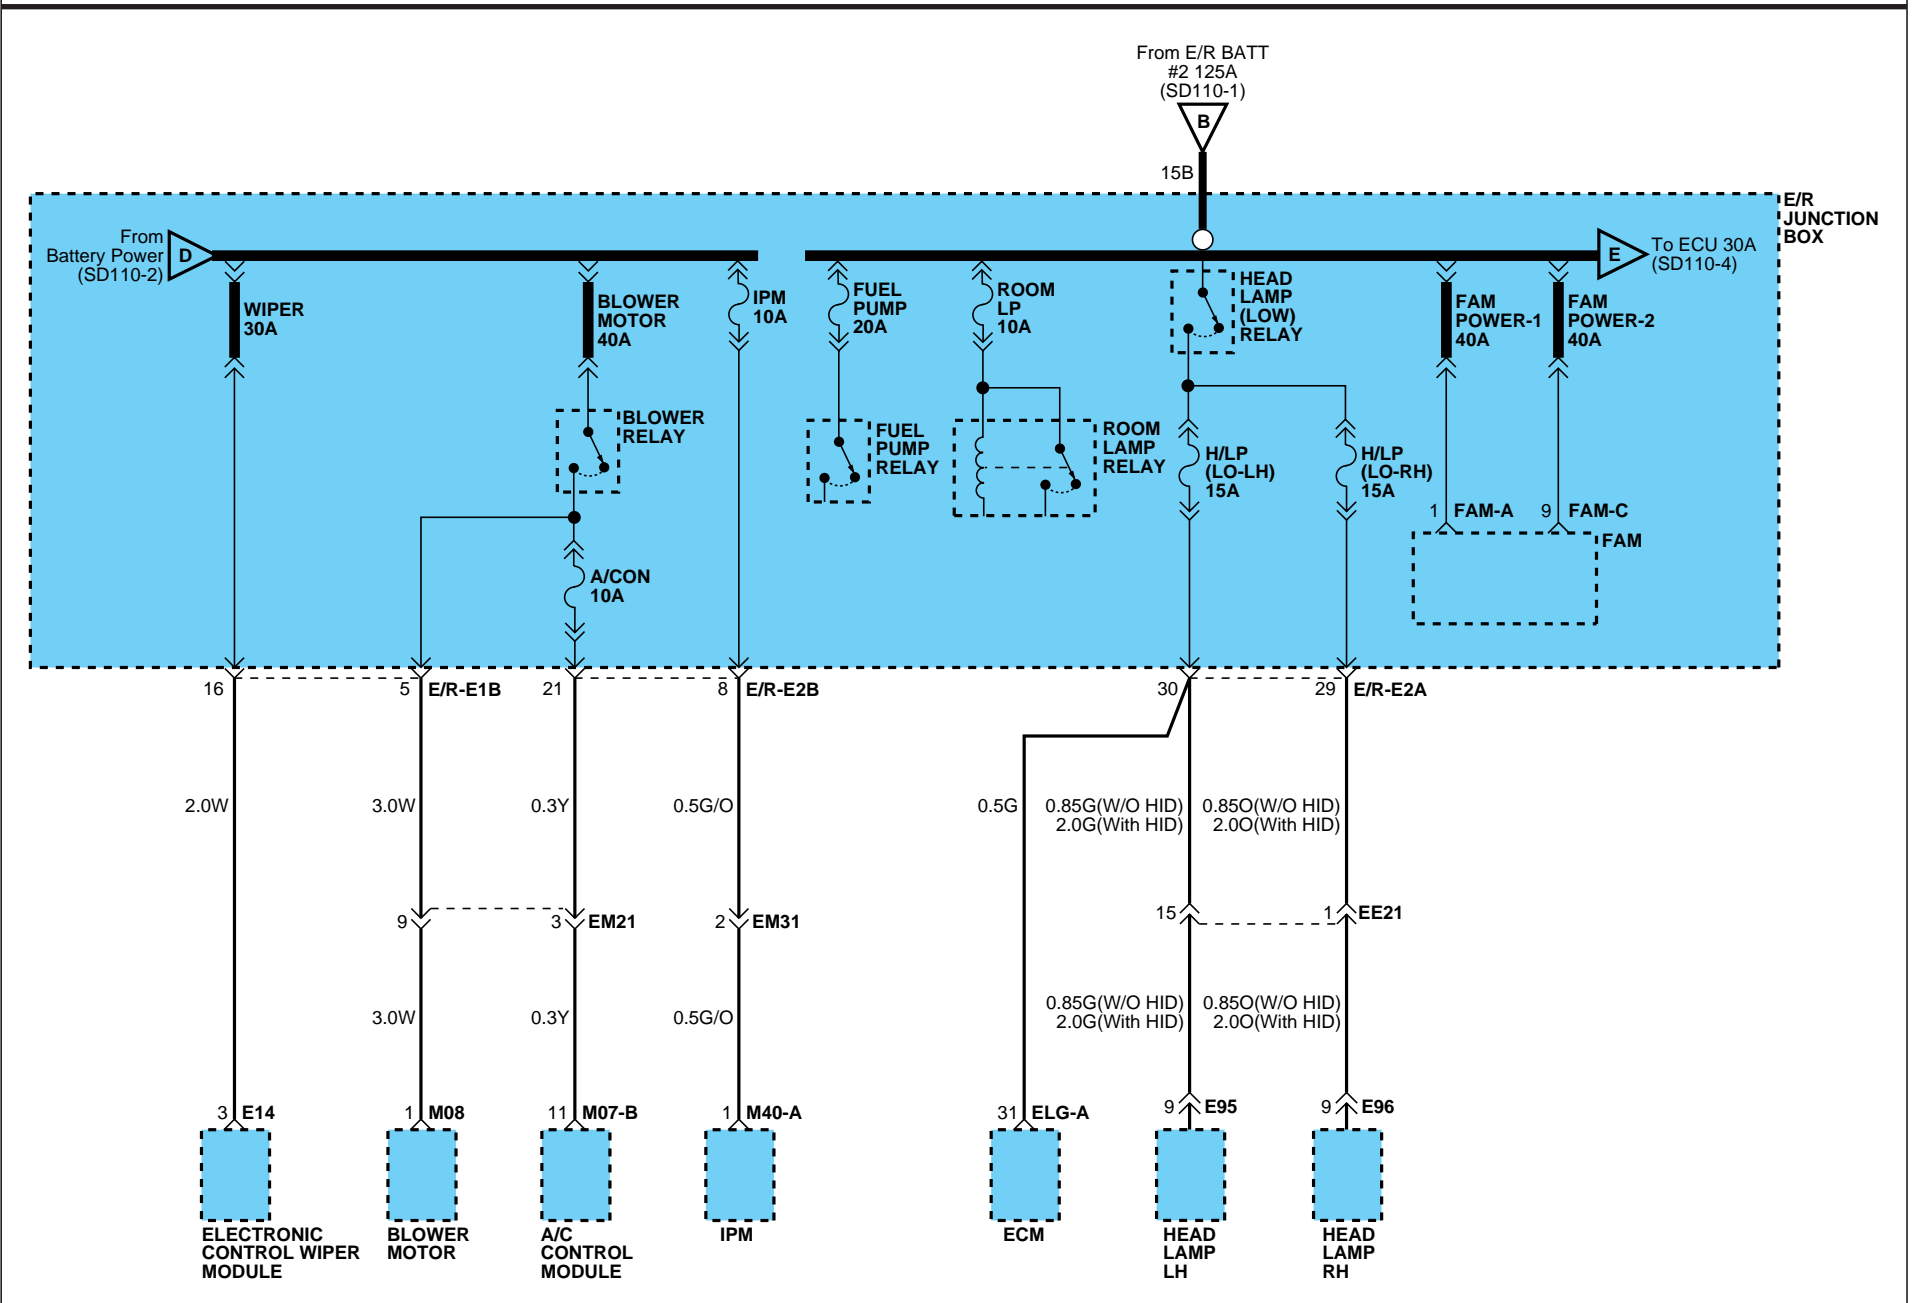

POWER DISTRIBUTION

Power Distribution (4)


SD110-4

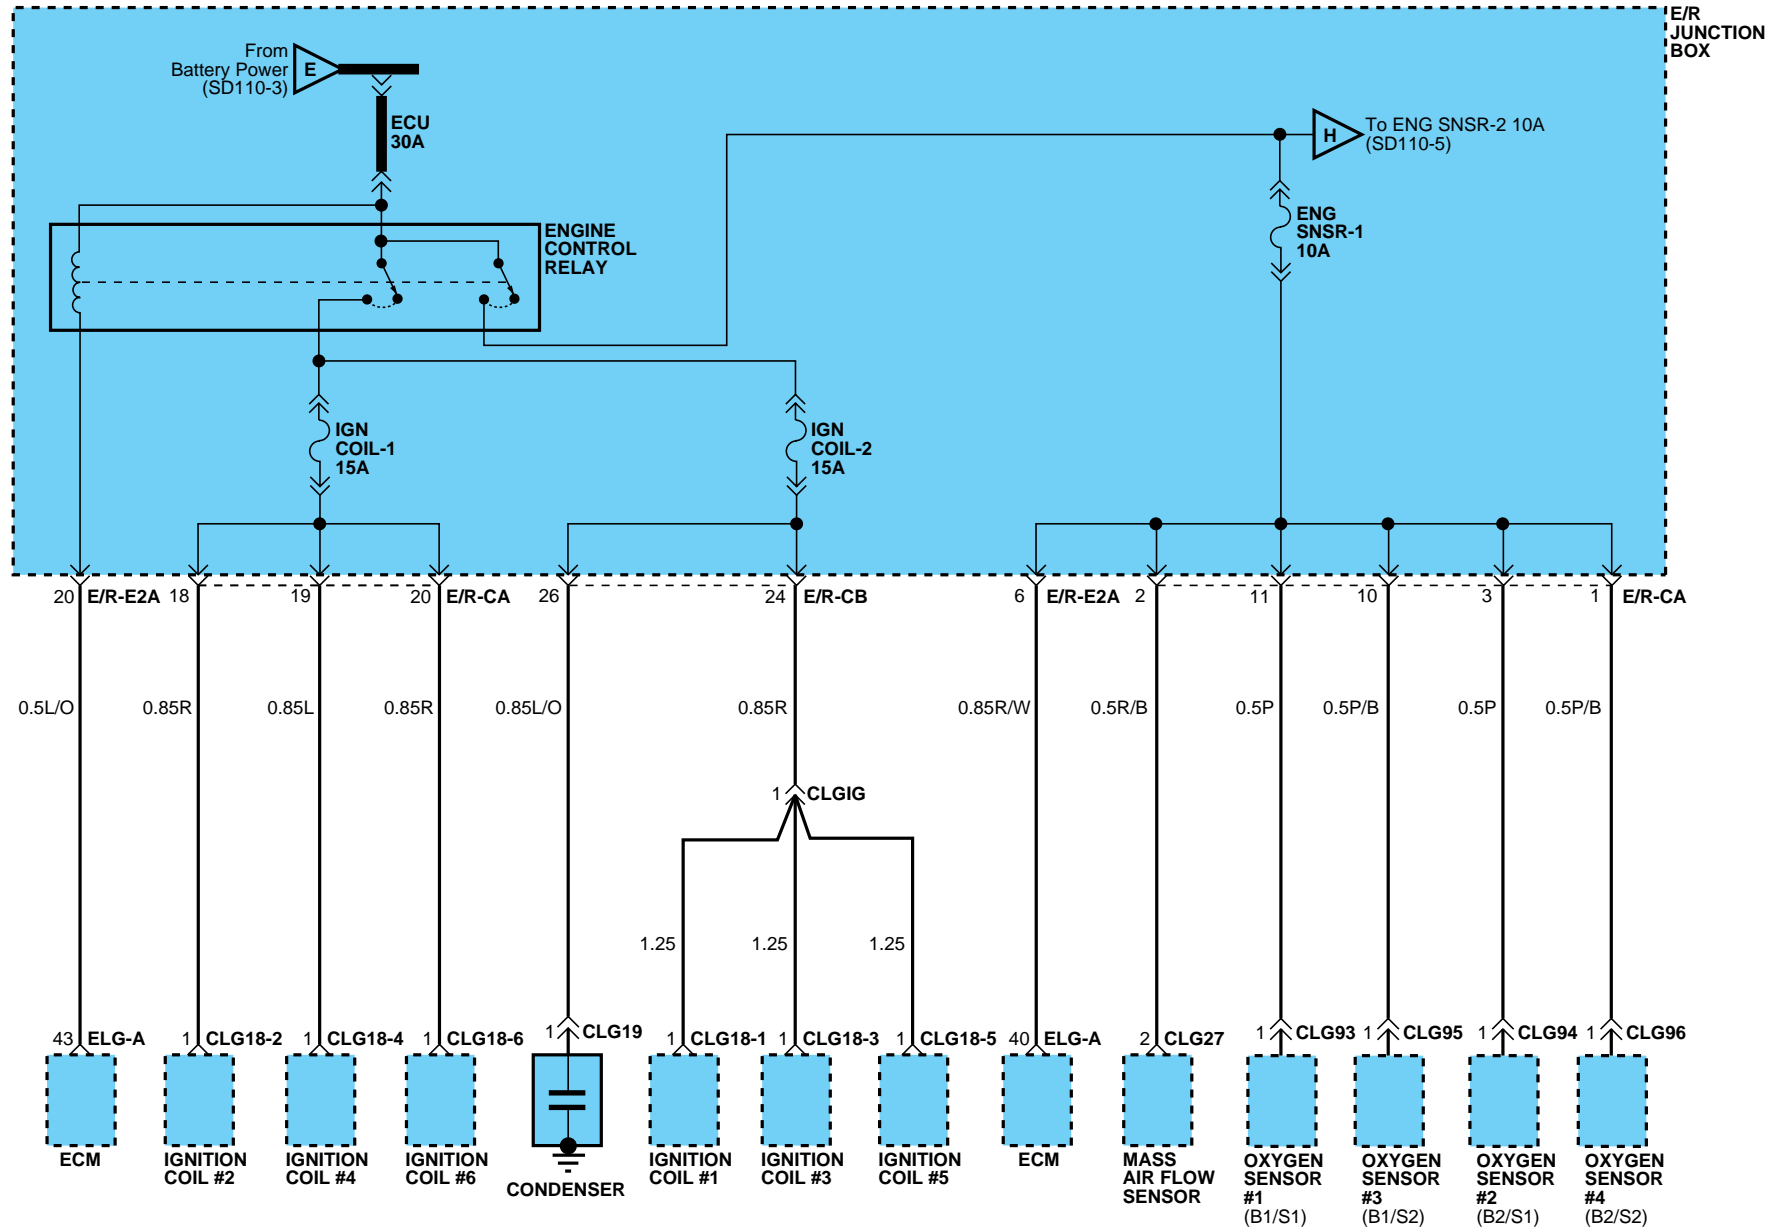

POWER DISTRIBUTION

Power Distribution (5)


SD110-5

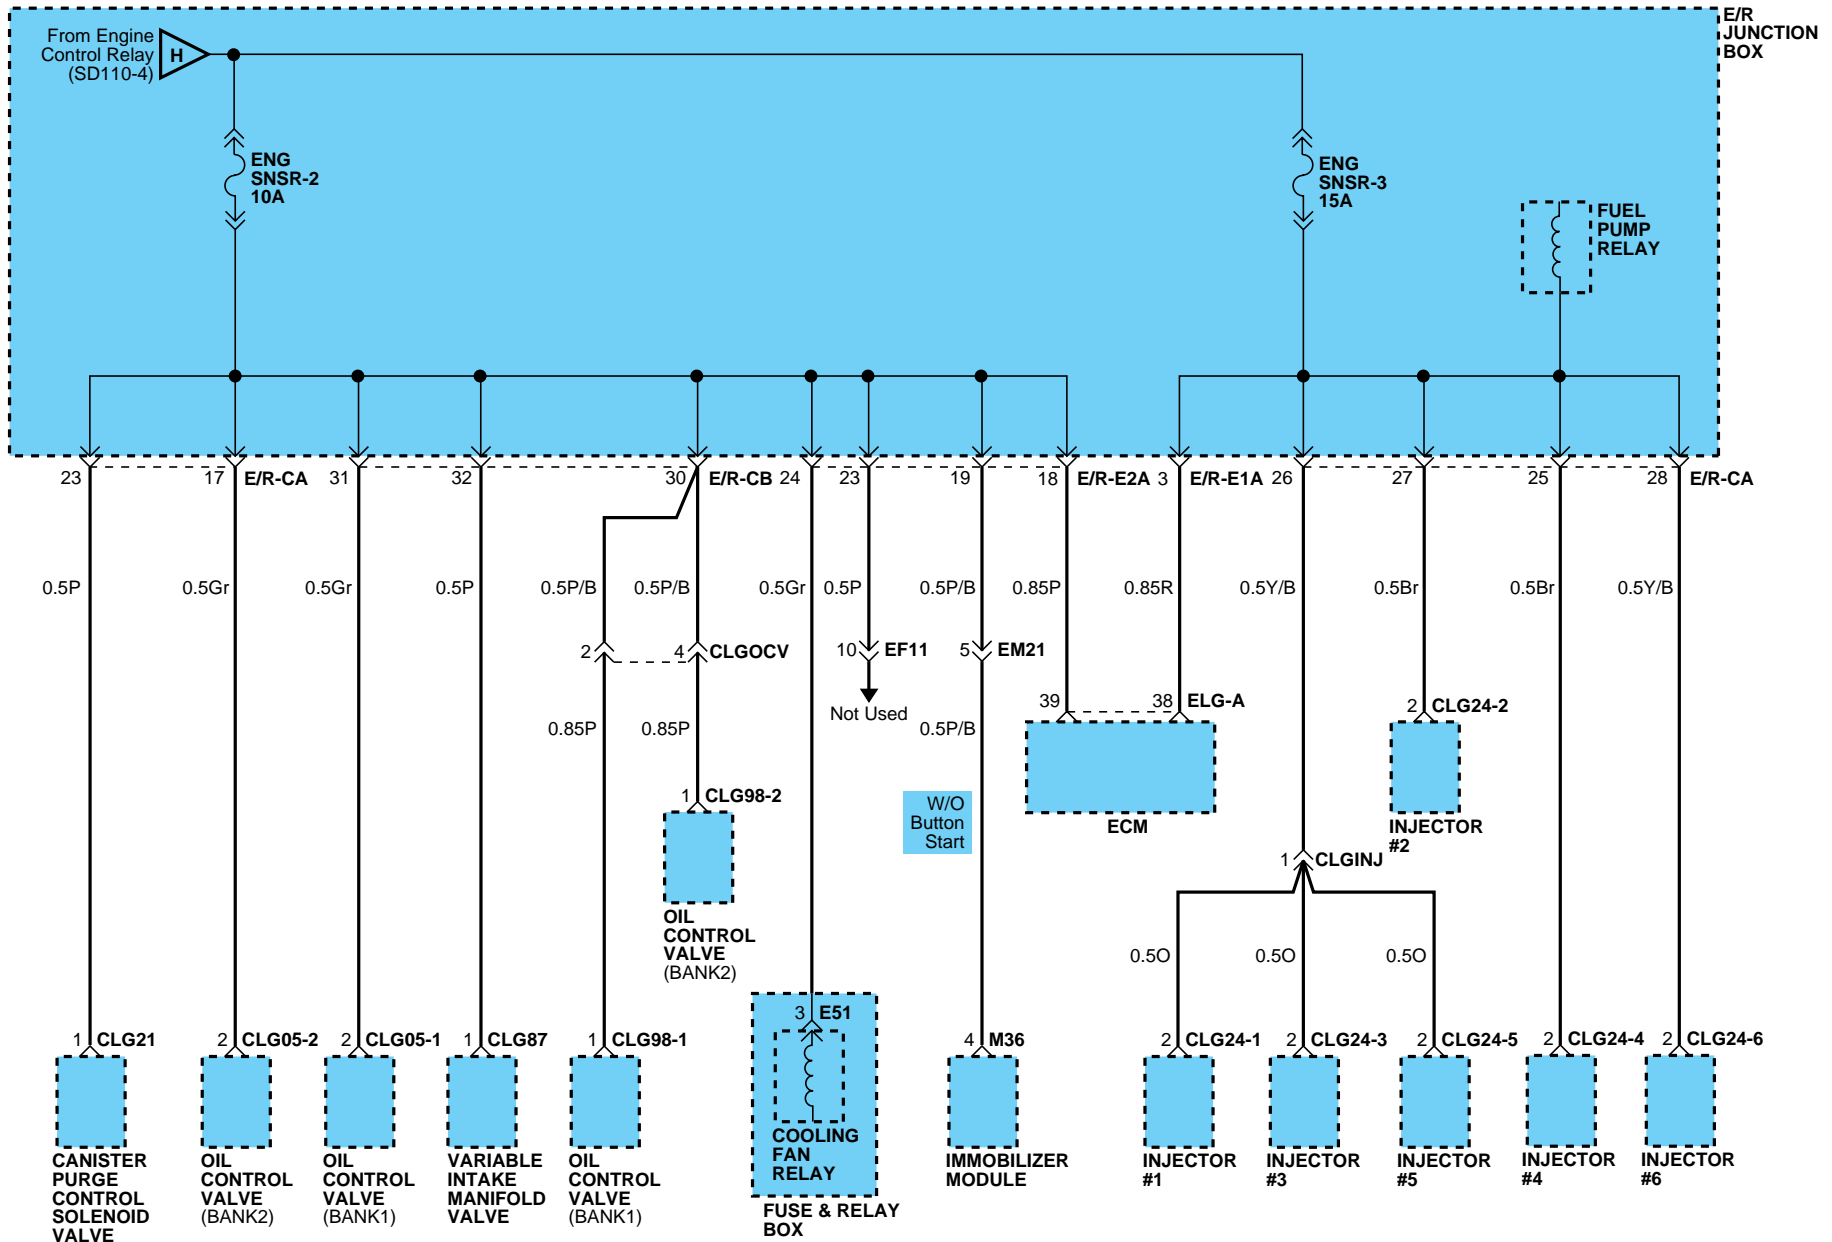

POWER DISTRIBUTION

Power Distribution (6)


SD110-6

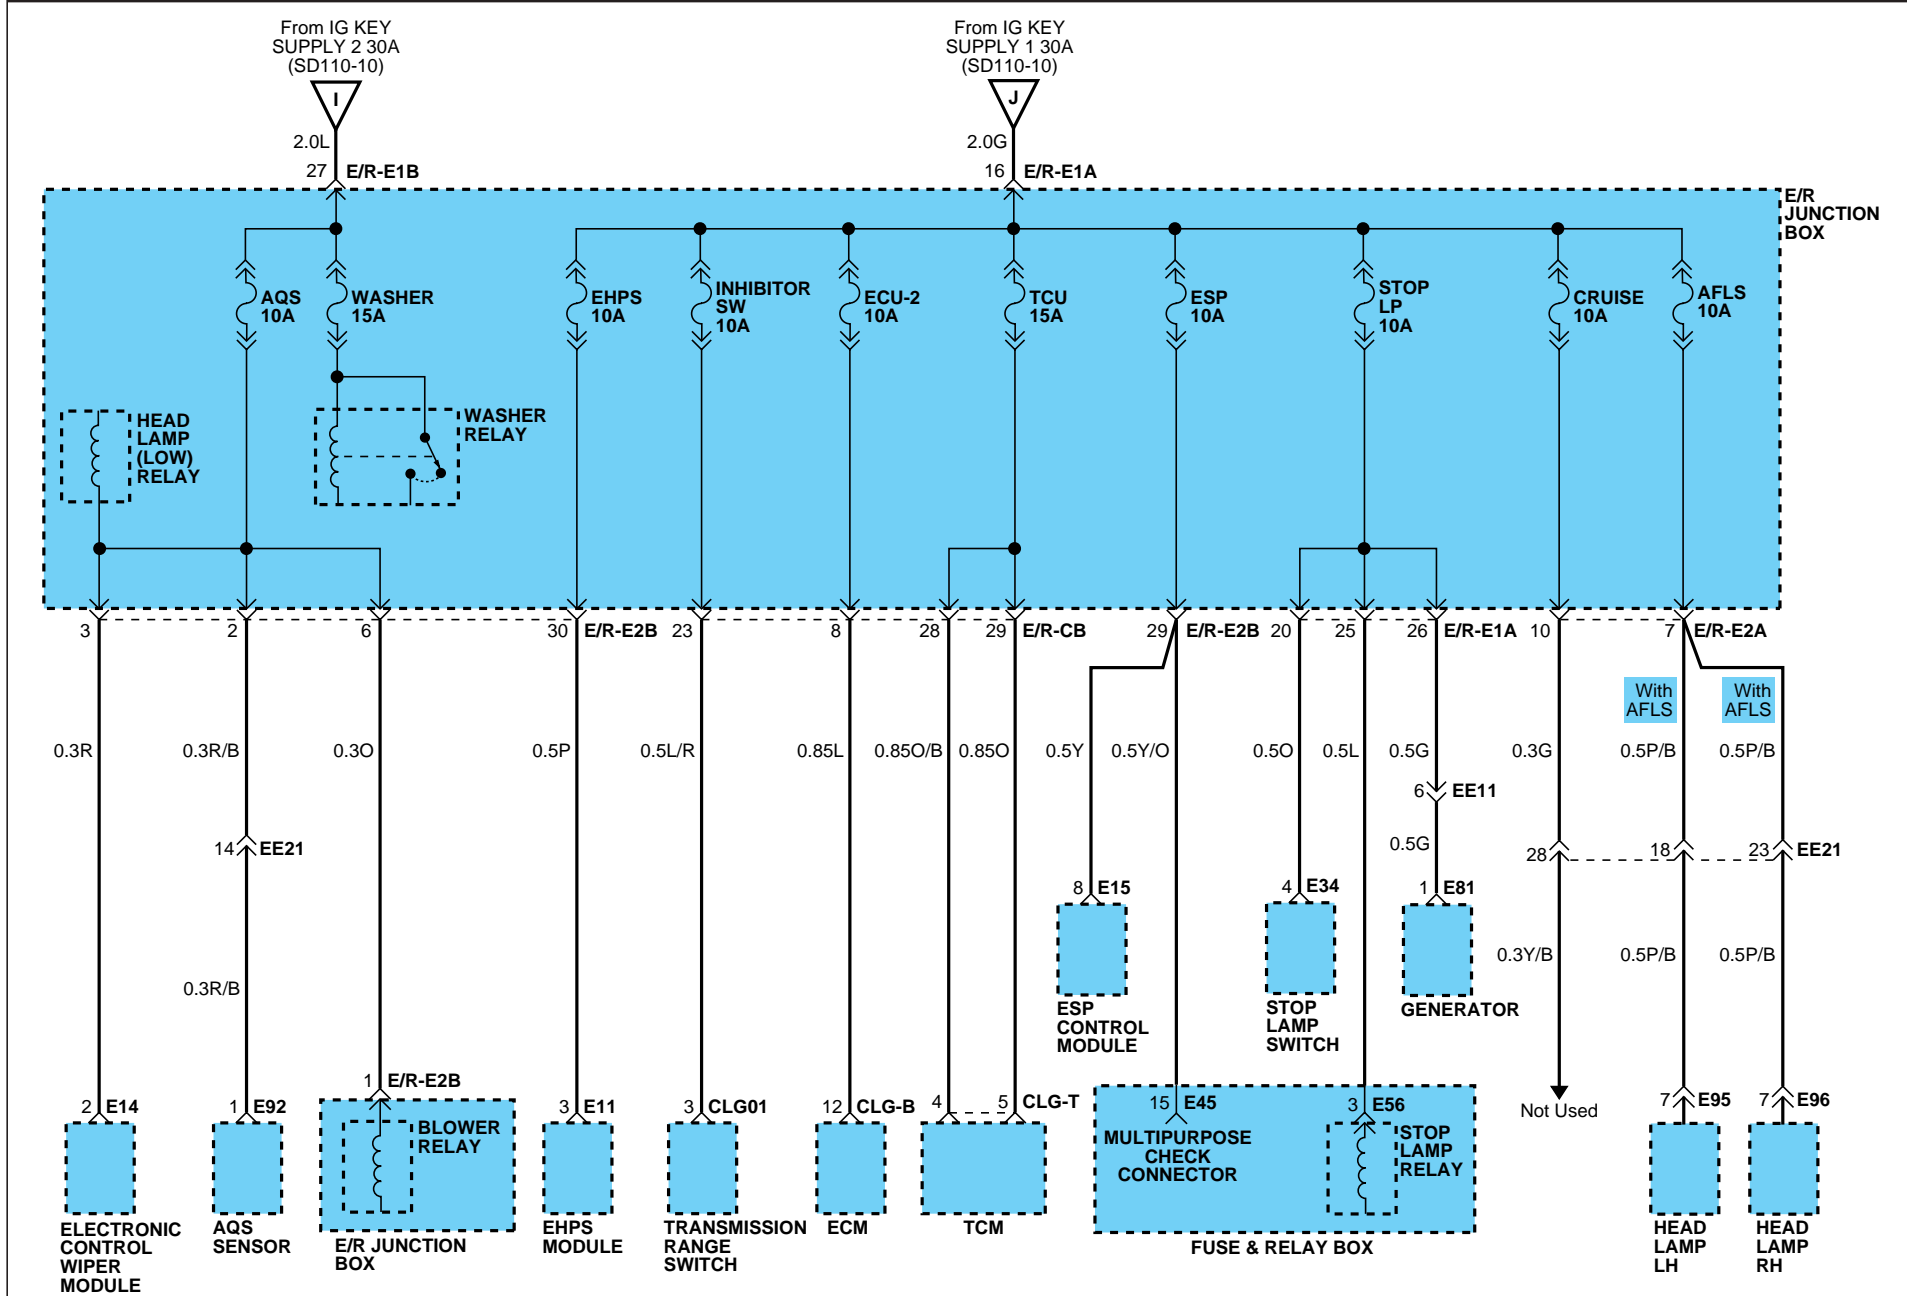

POWER DISTRIBUTION

Power Distribution (7)


SD110-7

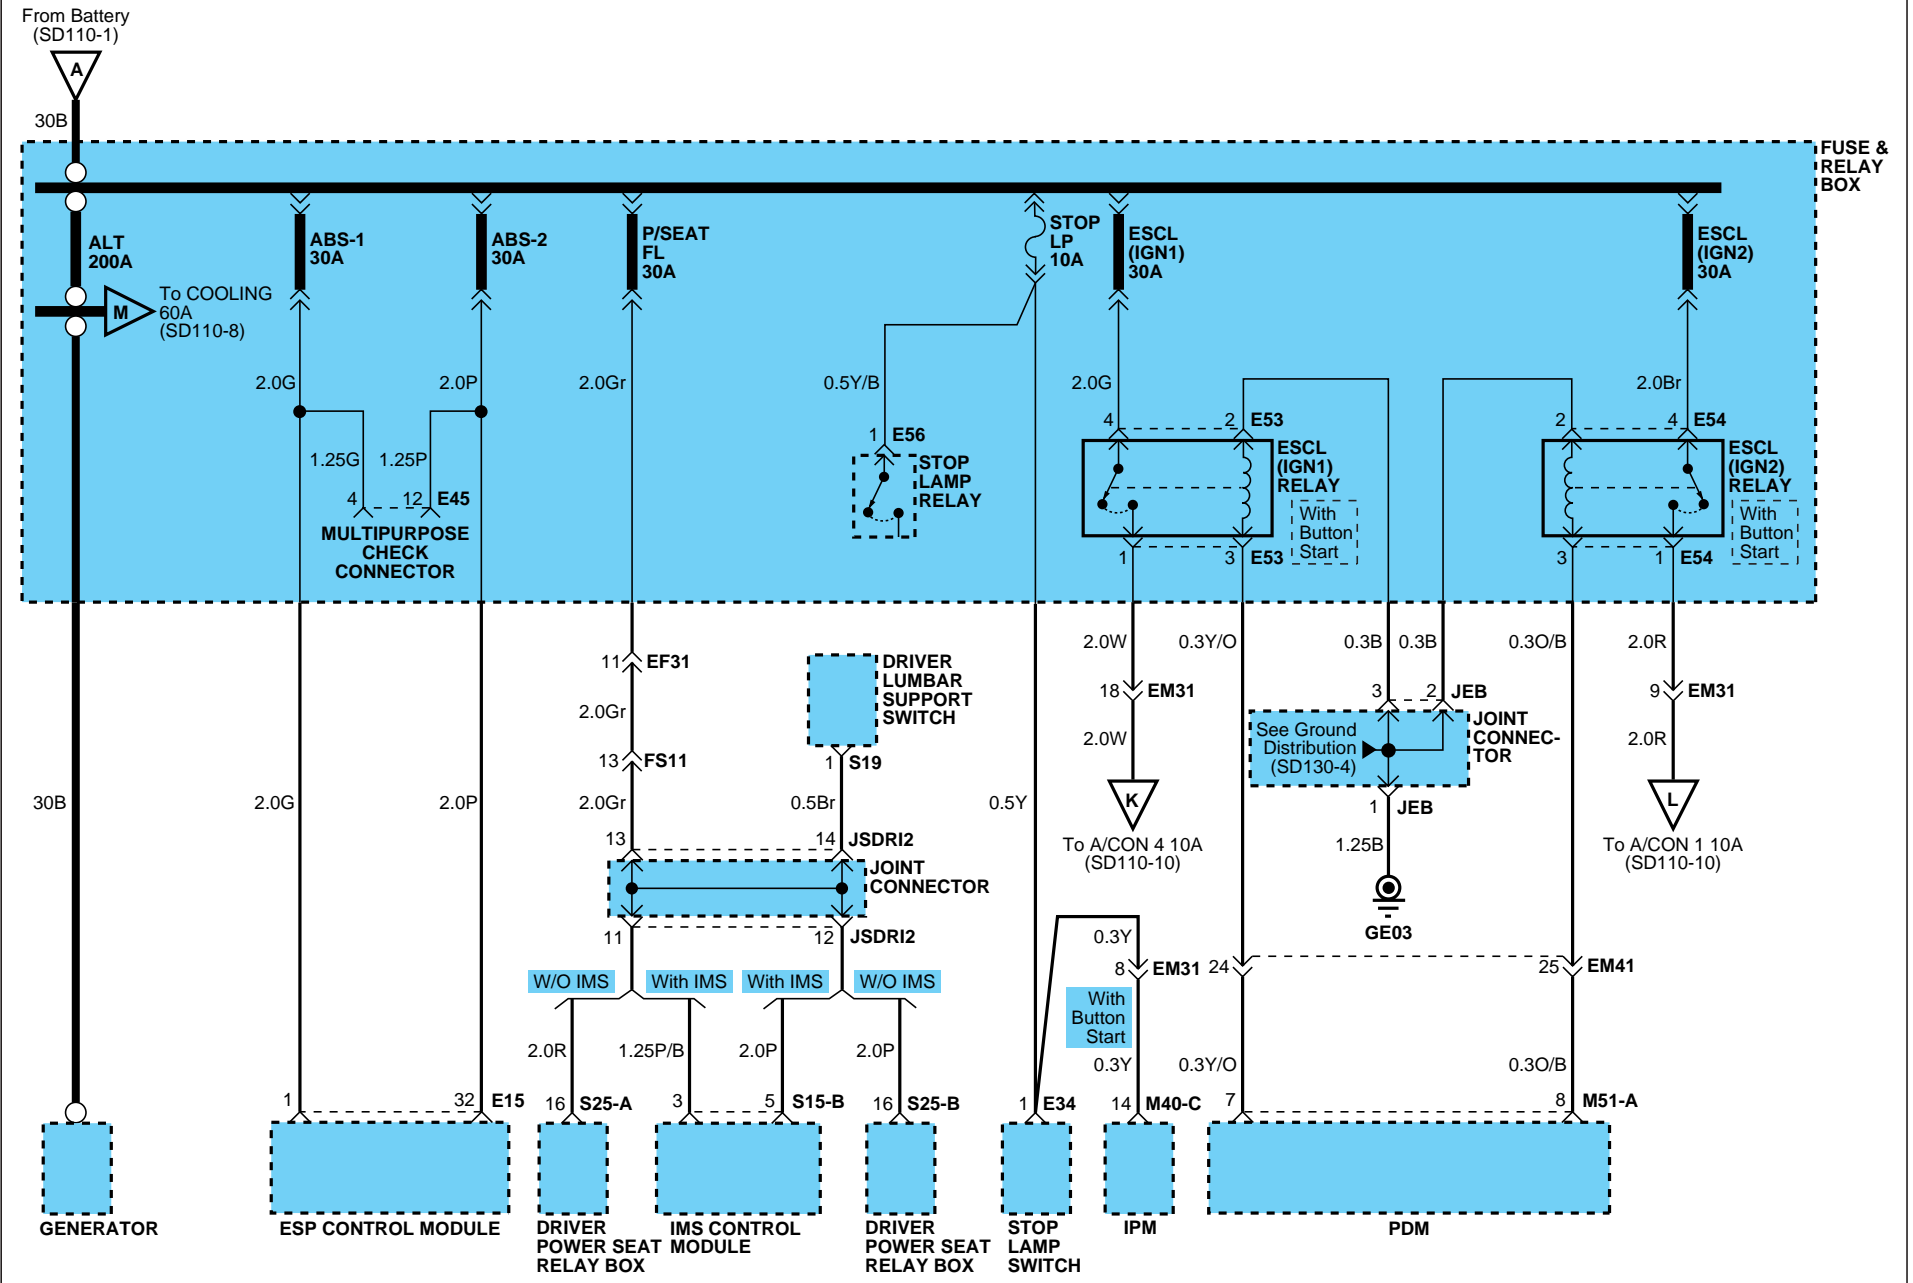

POWER DISTRIBUTION

Power Distribution (8)


SD110-8

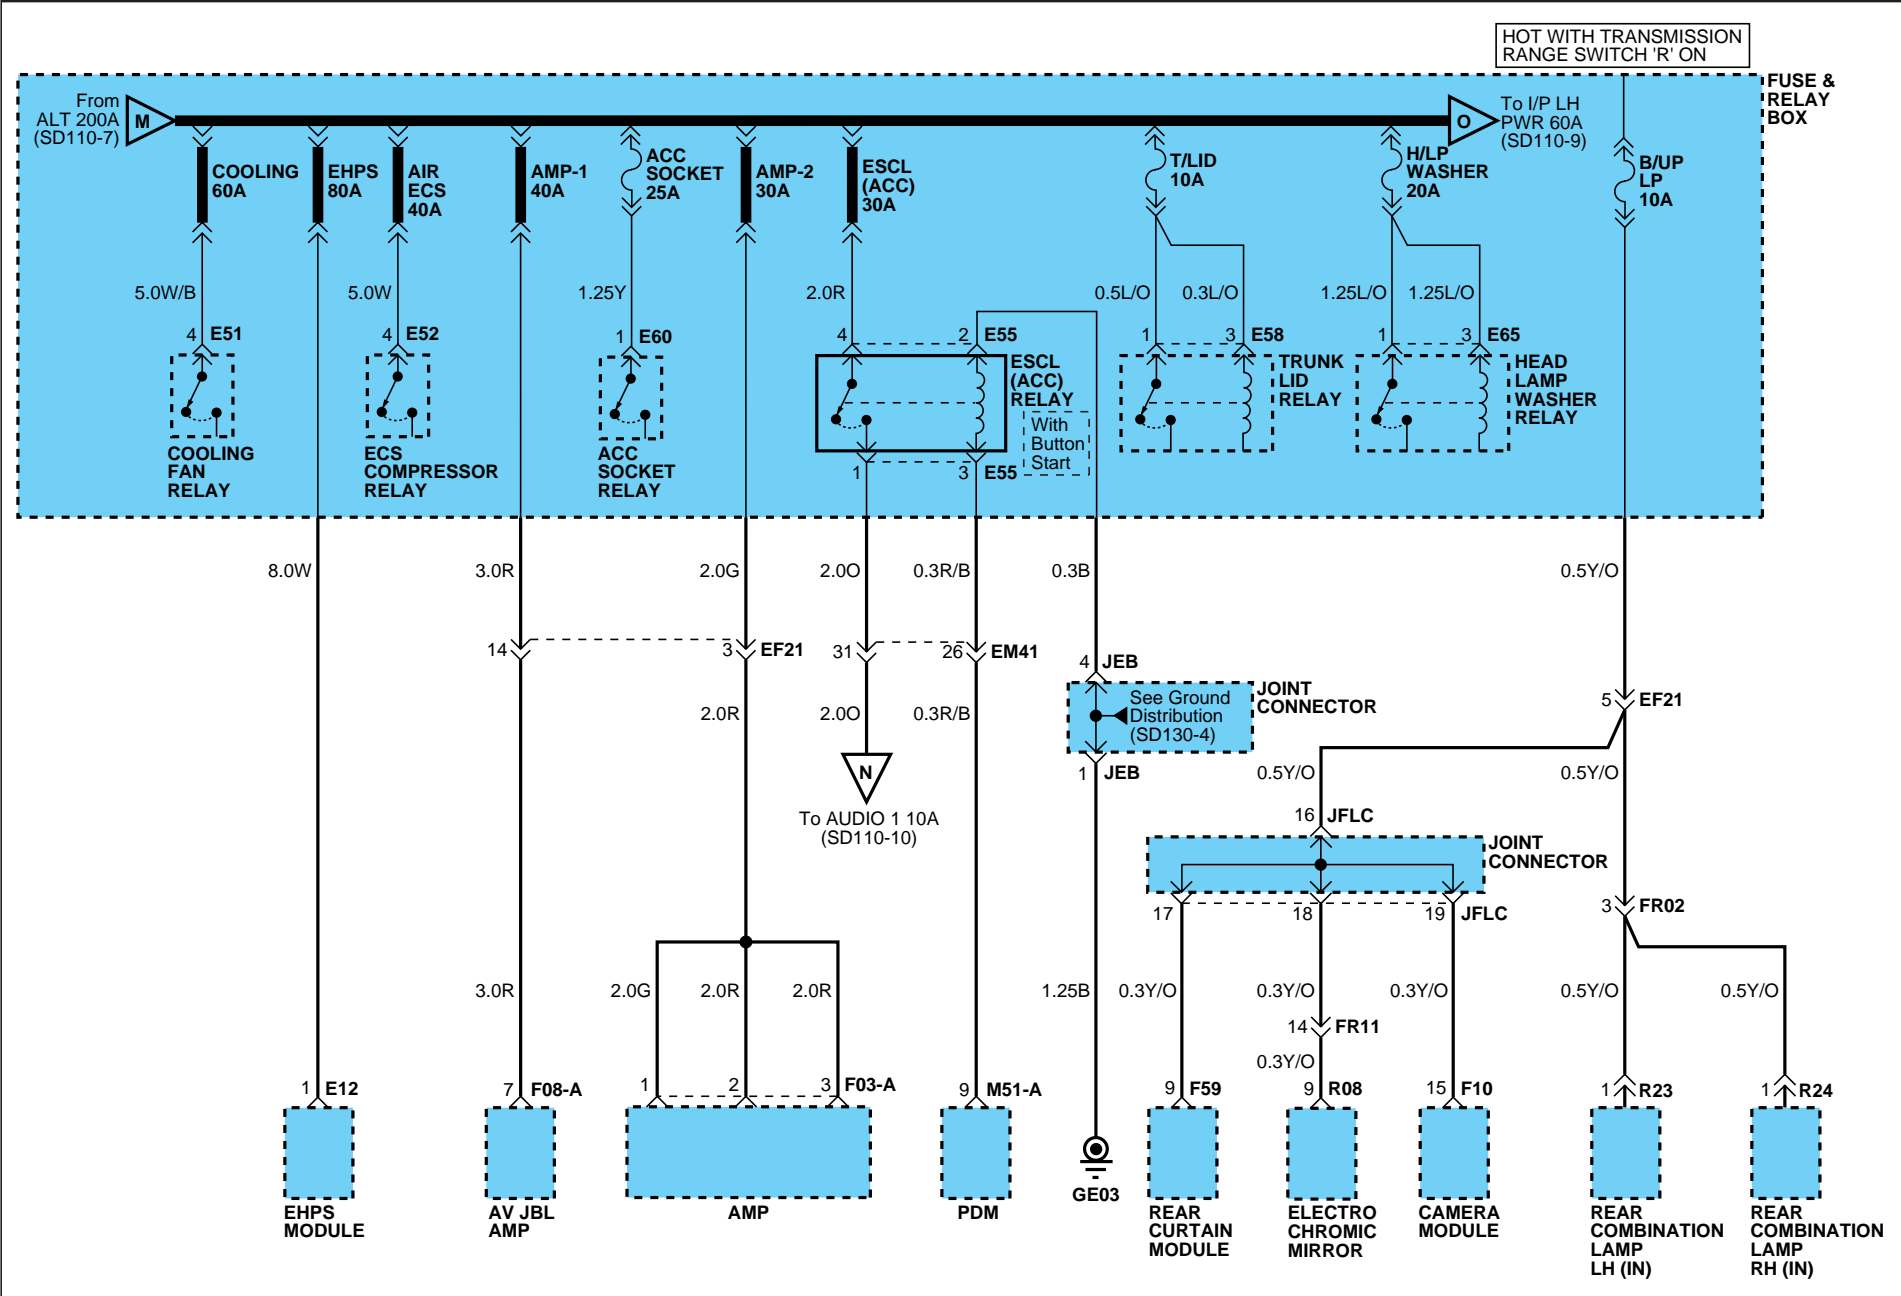

POWER DISTRIBUTION

Power Distribution (9)


SD110-9

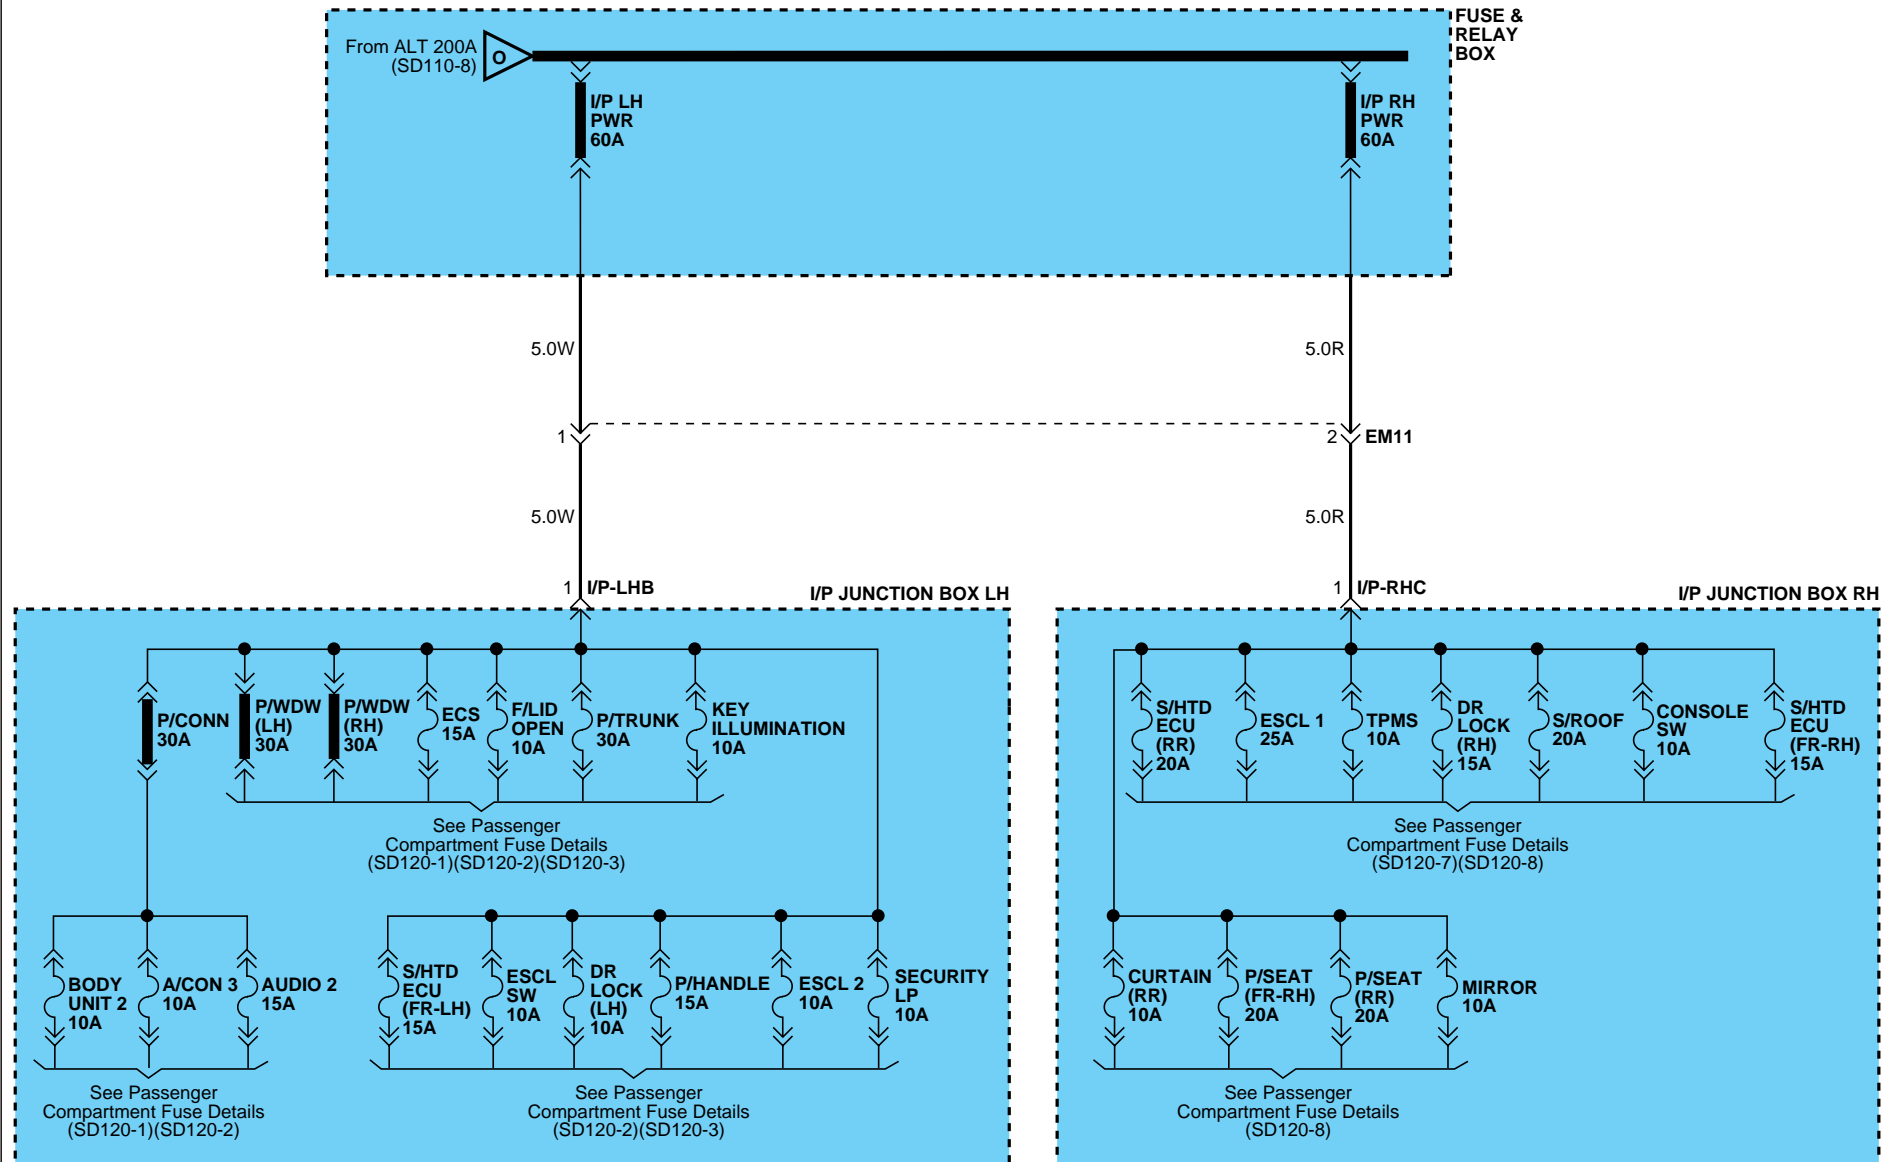

POWER DISTRIBUTION


Power Distribution (10)

SD110-10

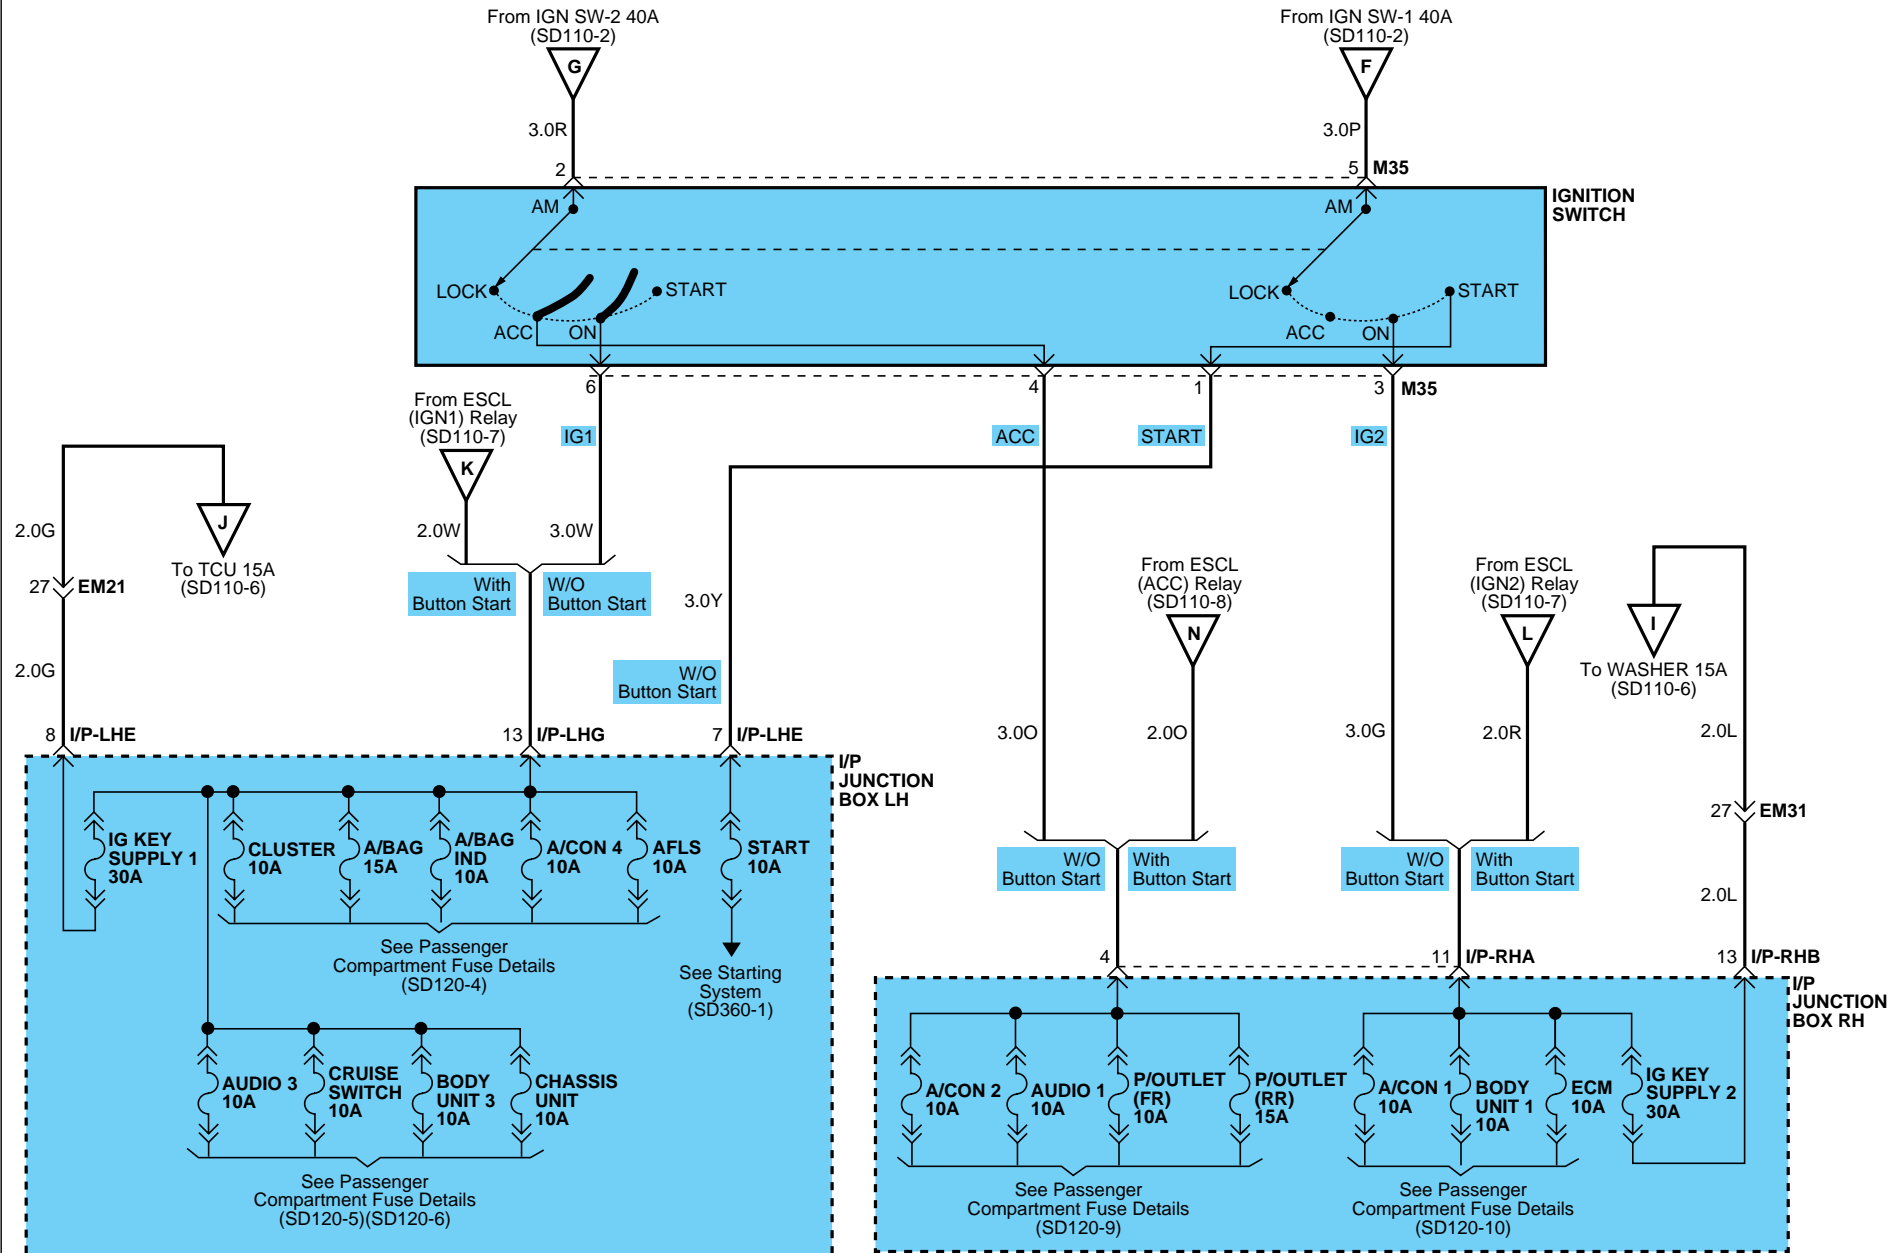

Passenger Compartment Fuse Details (1)


SD120-1

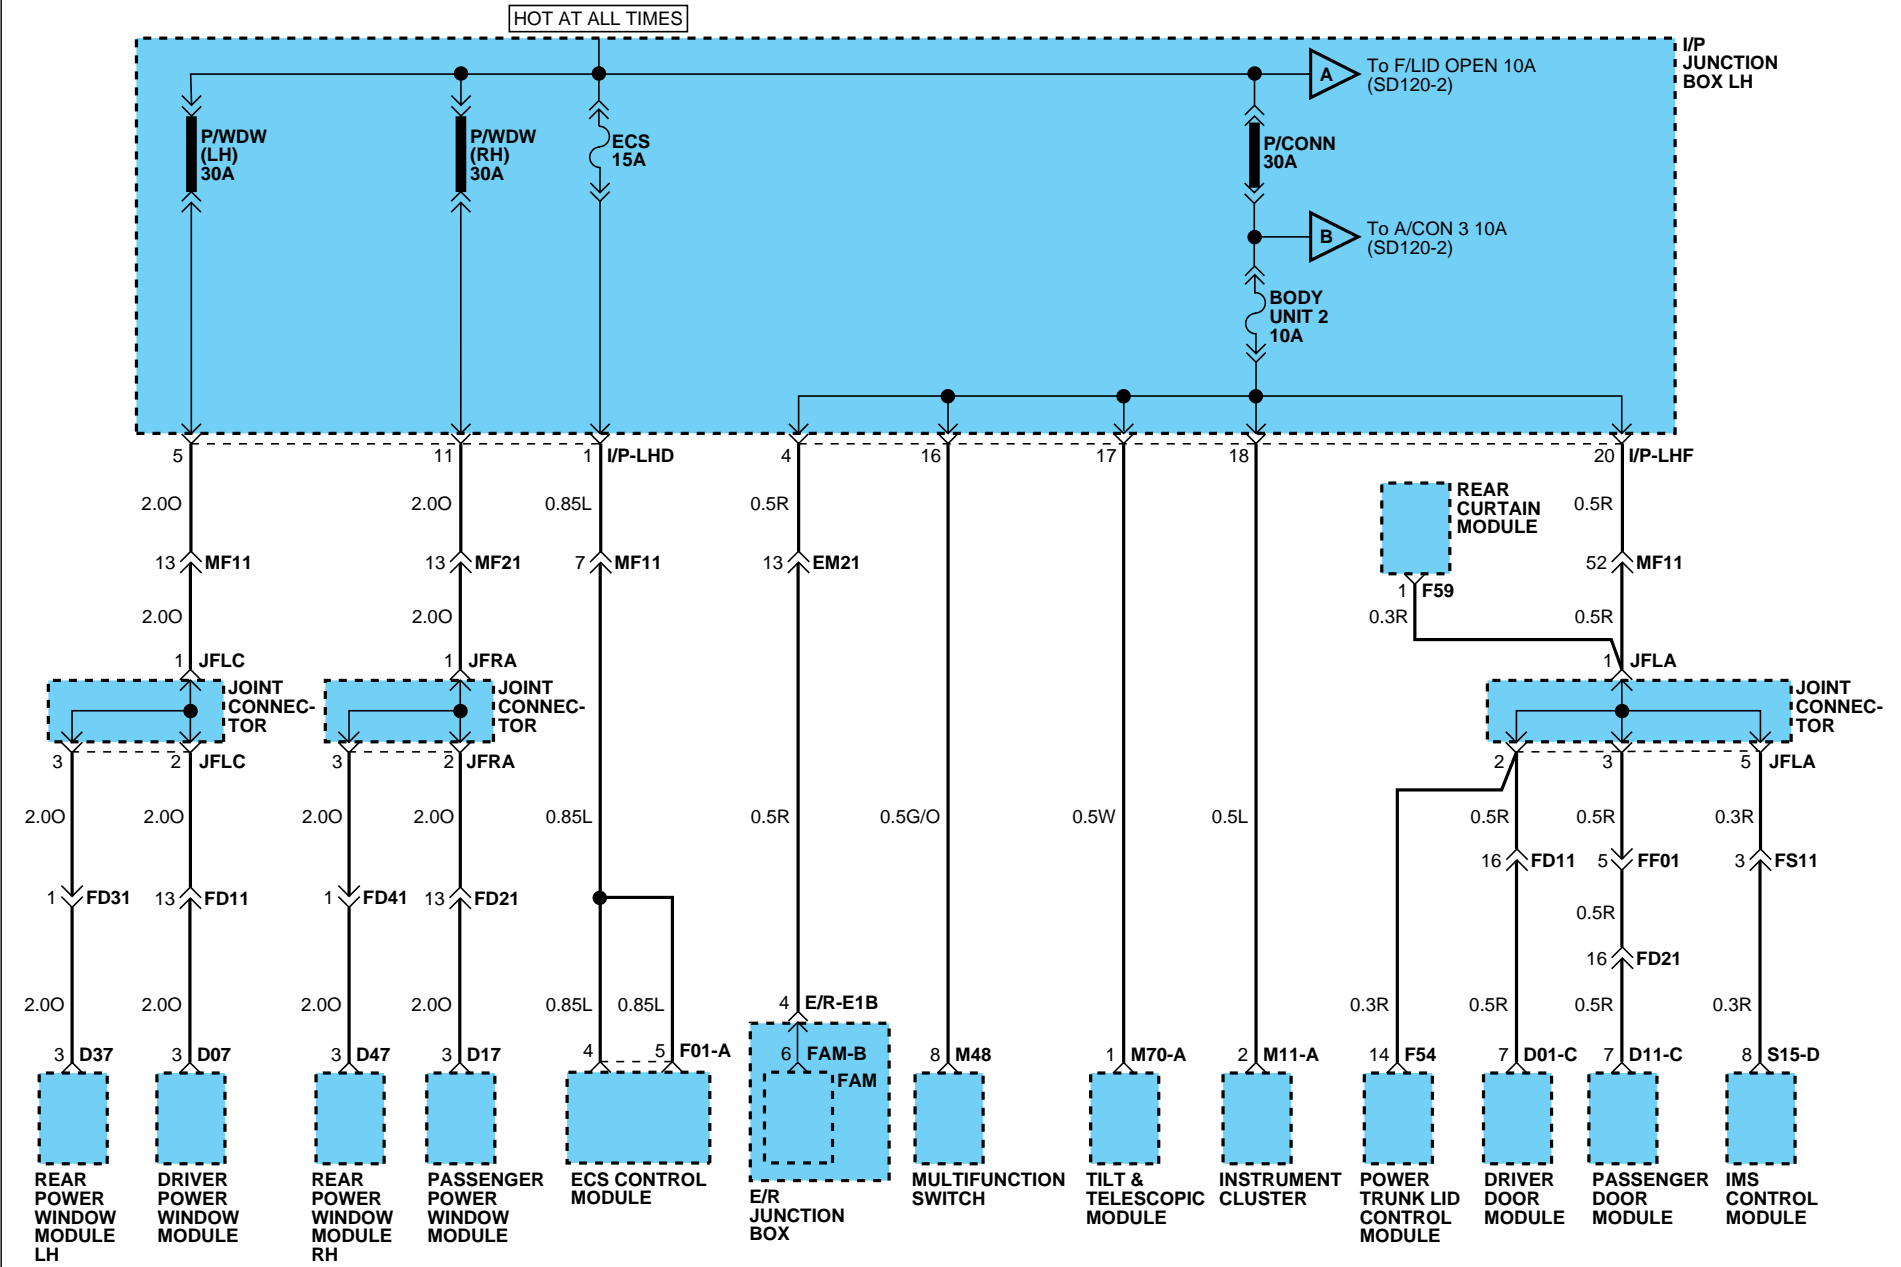

PASSENGER COMPARTMENT FUSE DETAILS

Passenger Compartment Fuse Details (2)


SD120-2

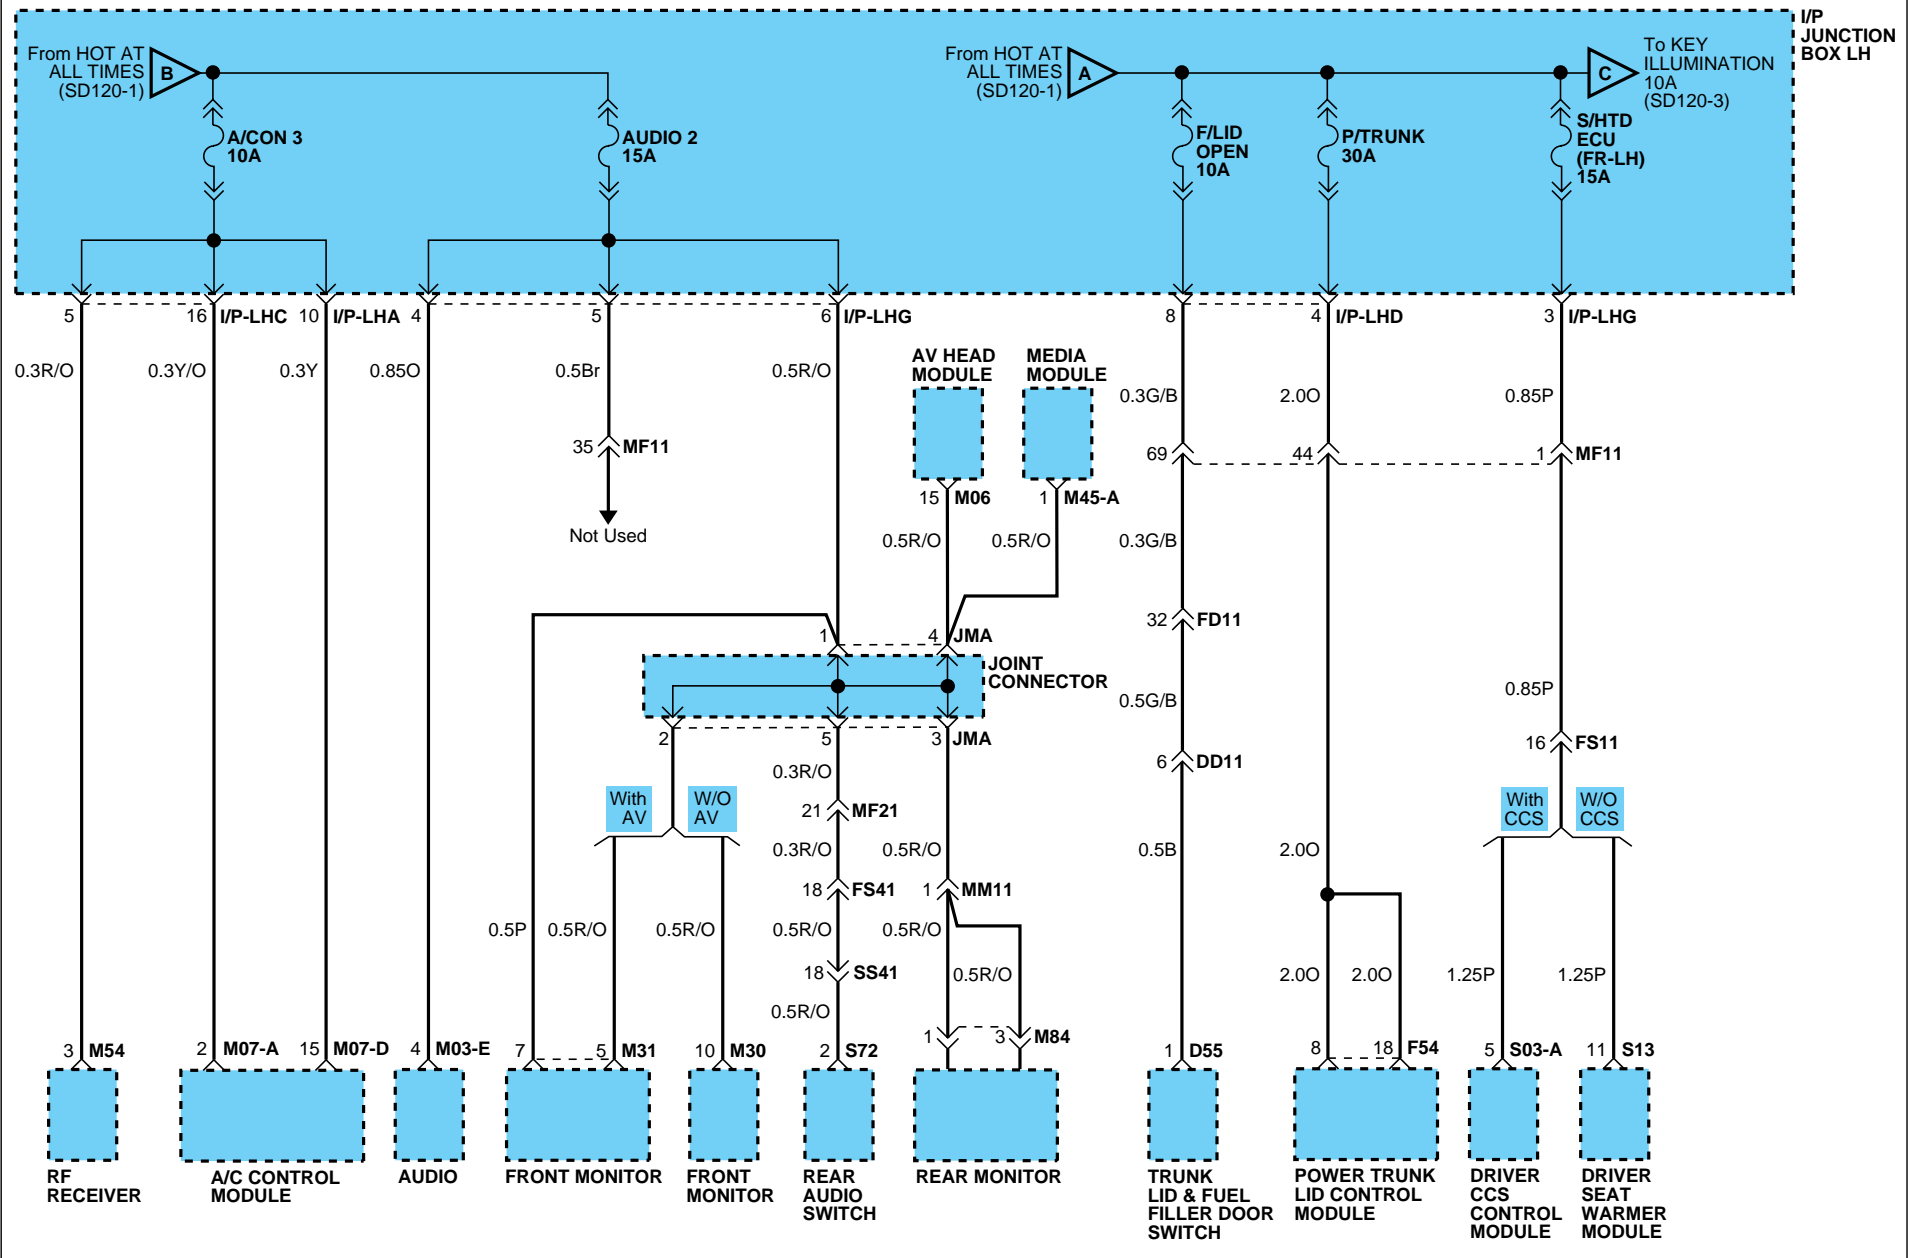

PASSENGER COMPARTMENT FUSE DETAILS

Passenger Compartment Fuse Details (3)


SD120-3

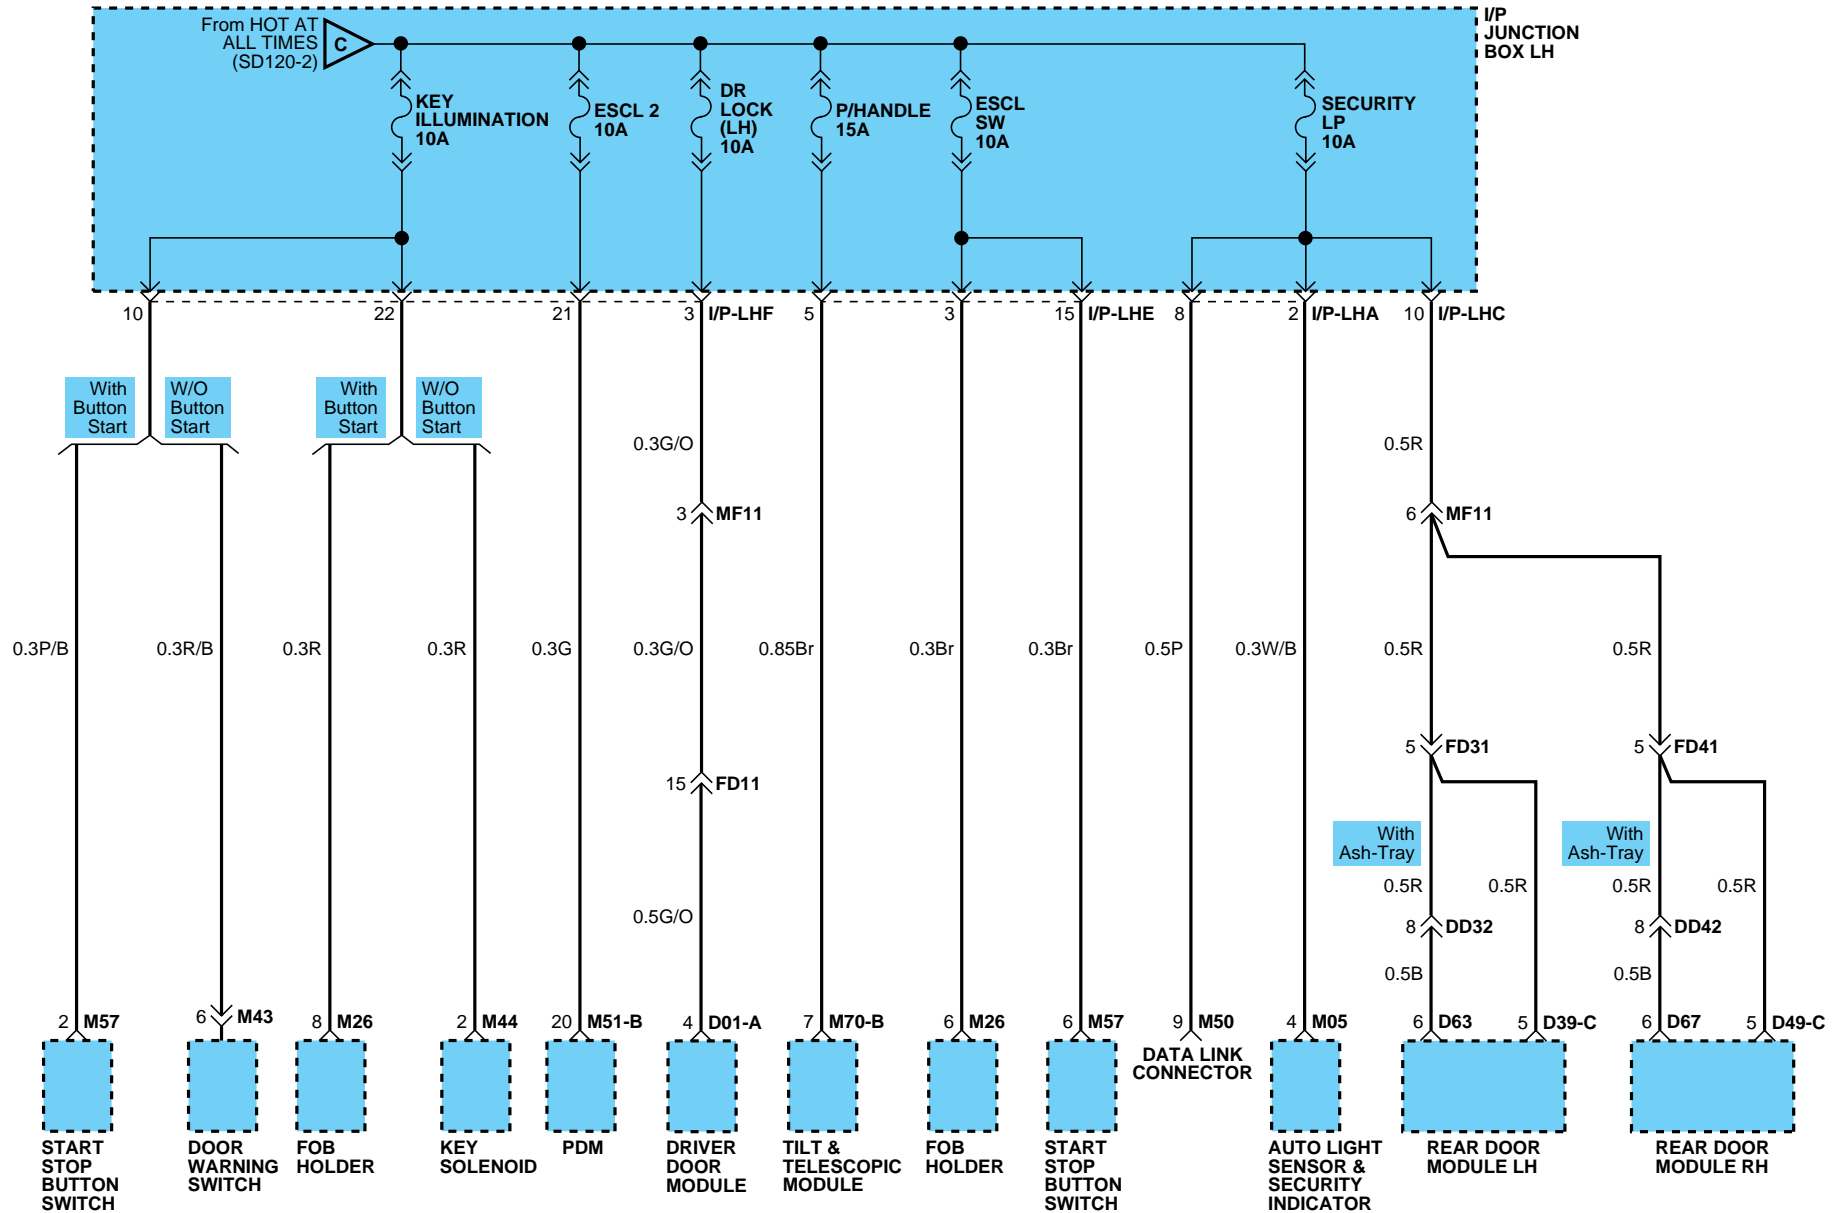

PASSENGER COMPARTMENT FUSE DETAILS

Passenger Compartment Fuse Details (4)


SD120-4

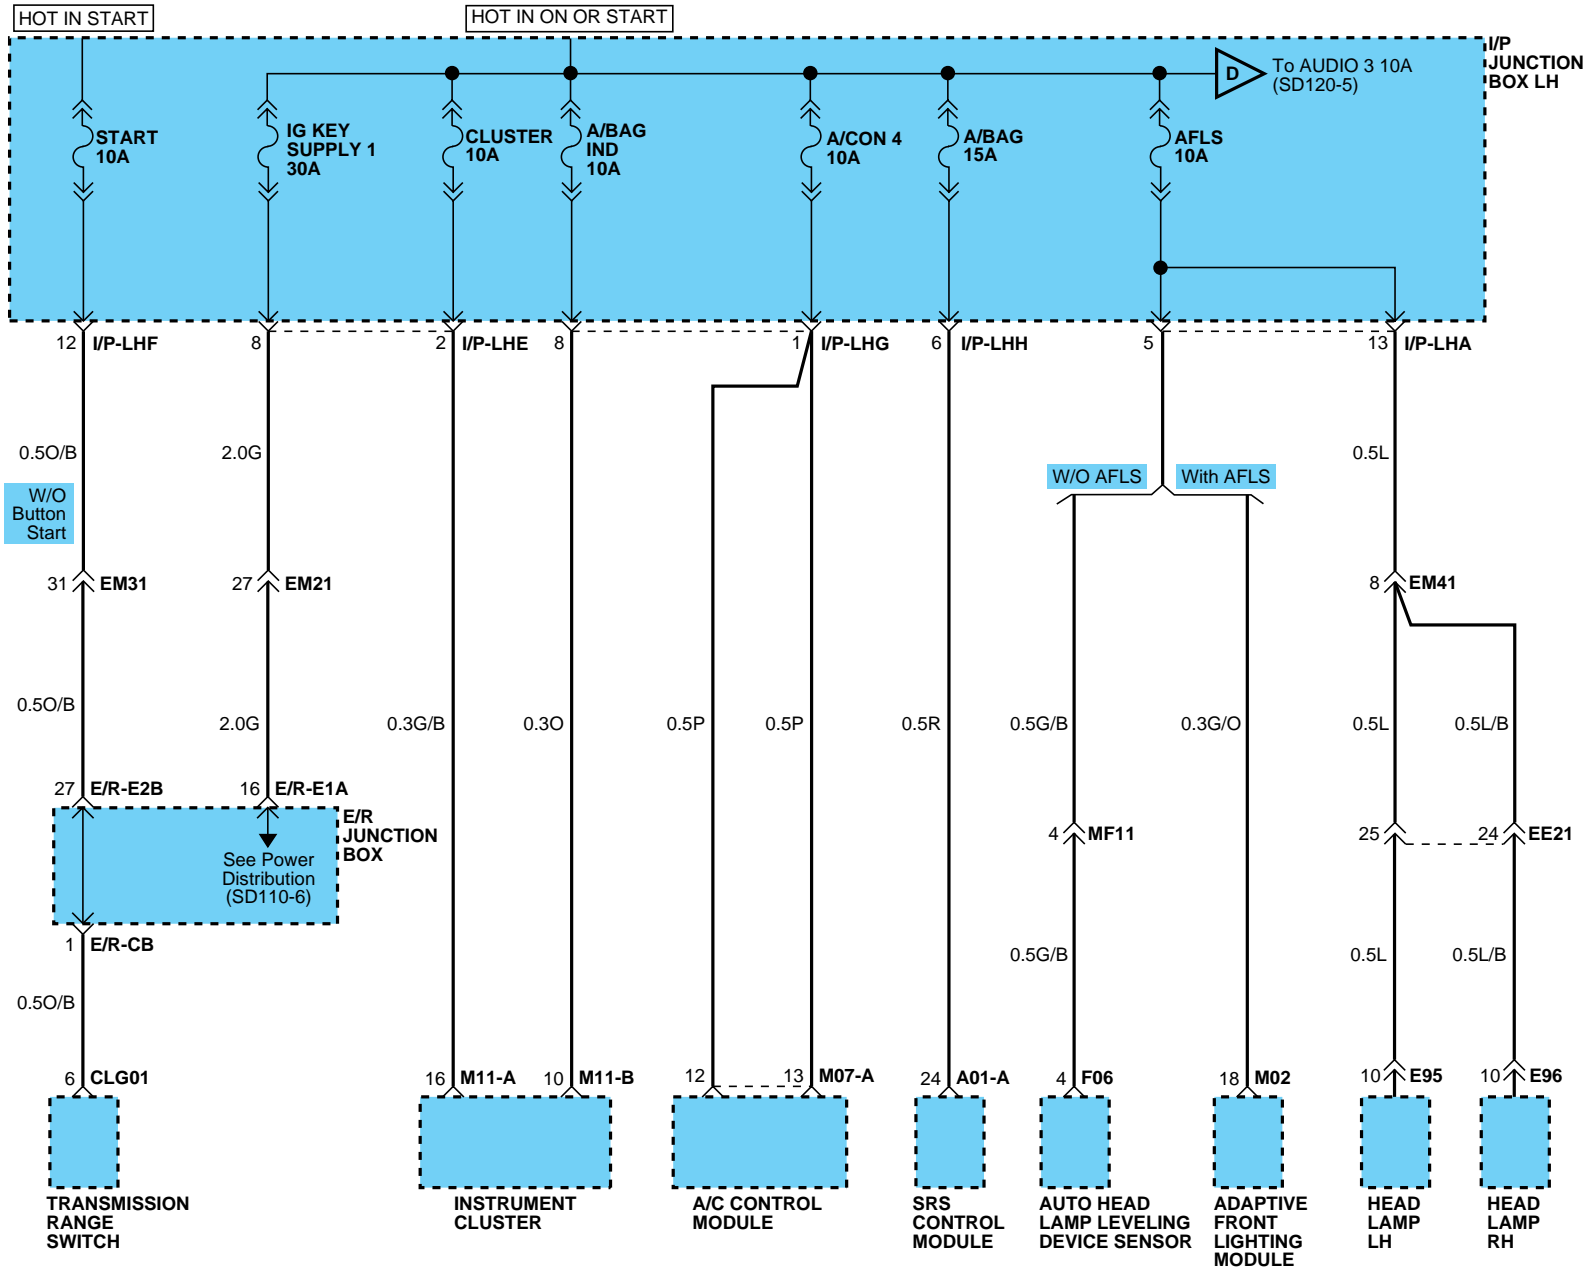

PASSENGER COMPARTMENT FUSE DETAILS

Passenger Compartment Fuse Details (5)


SD120-5

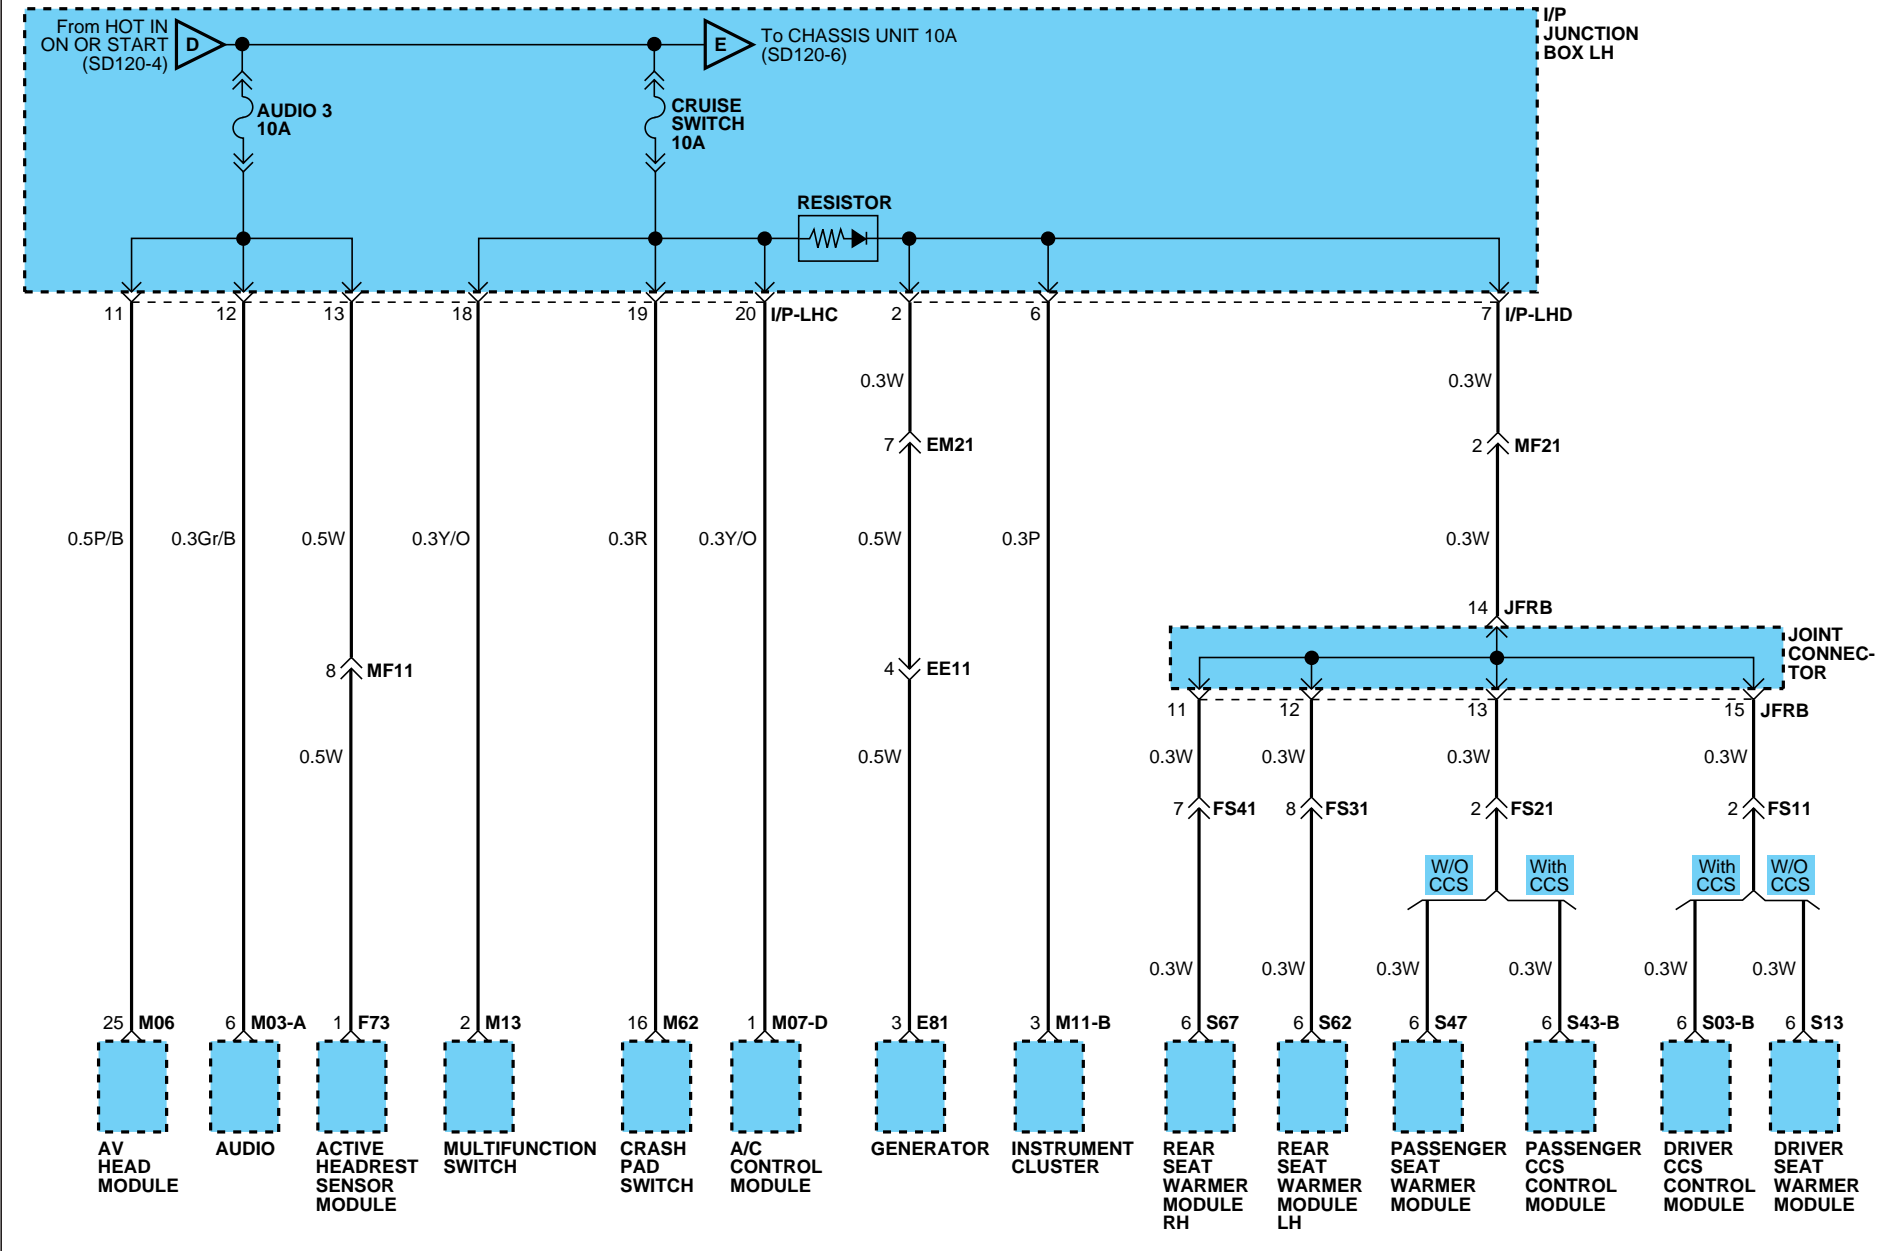

PASSENGER COMPARTMENT FUSE DETAILS

Passenger Compartment Fuse Details (6)


SD120-6

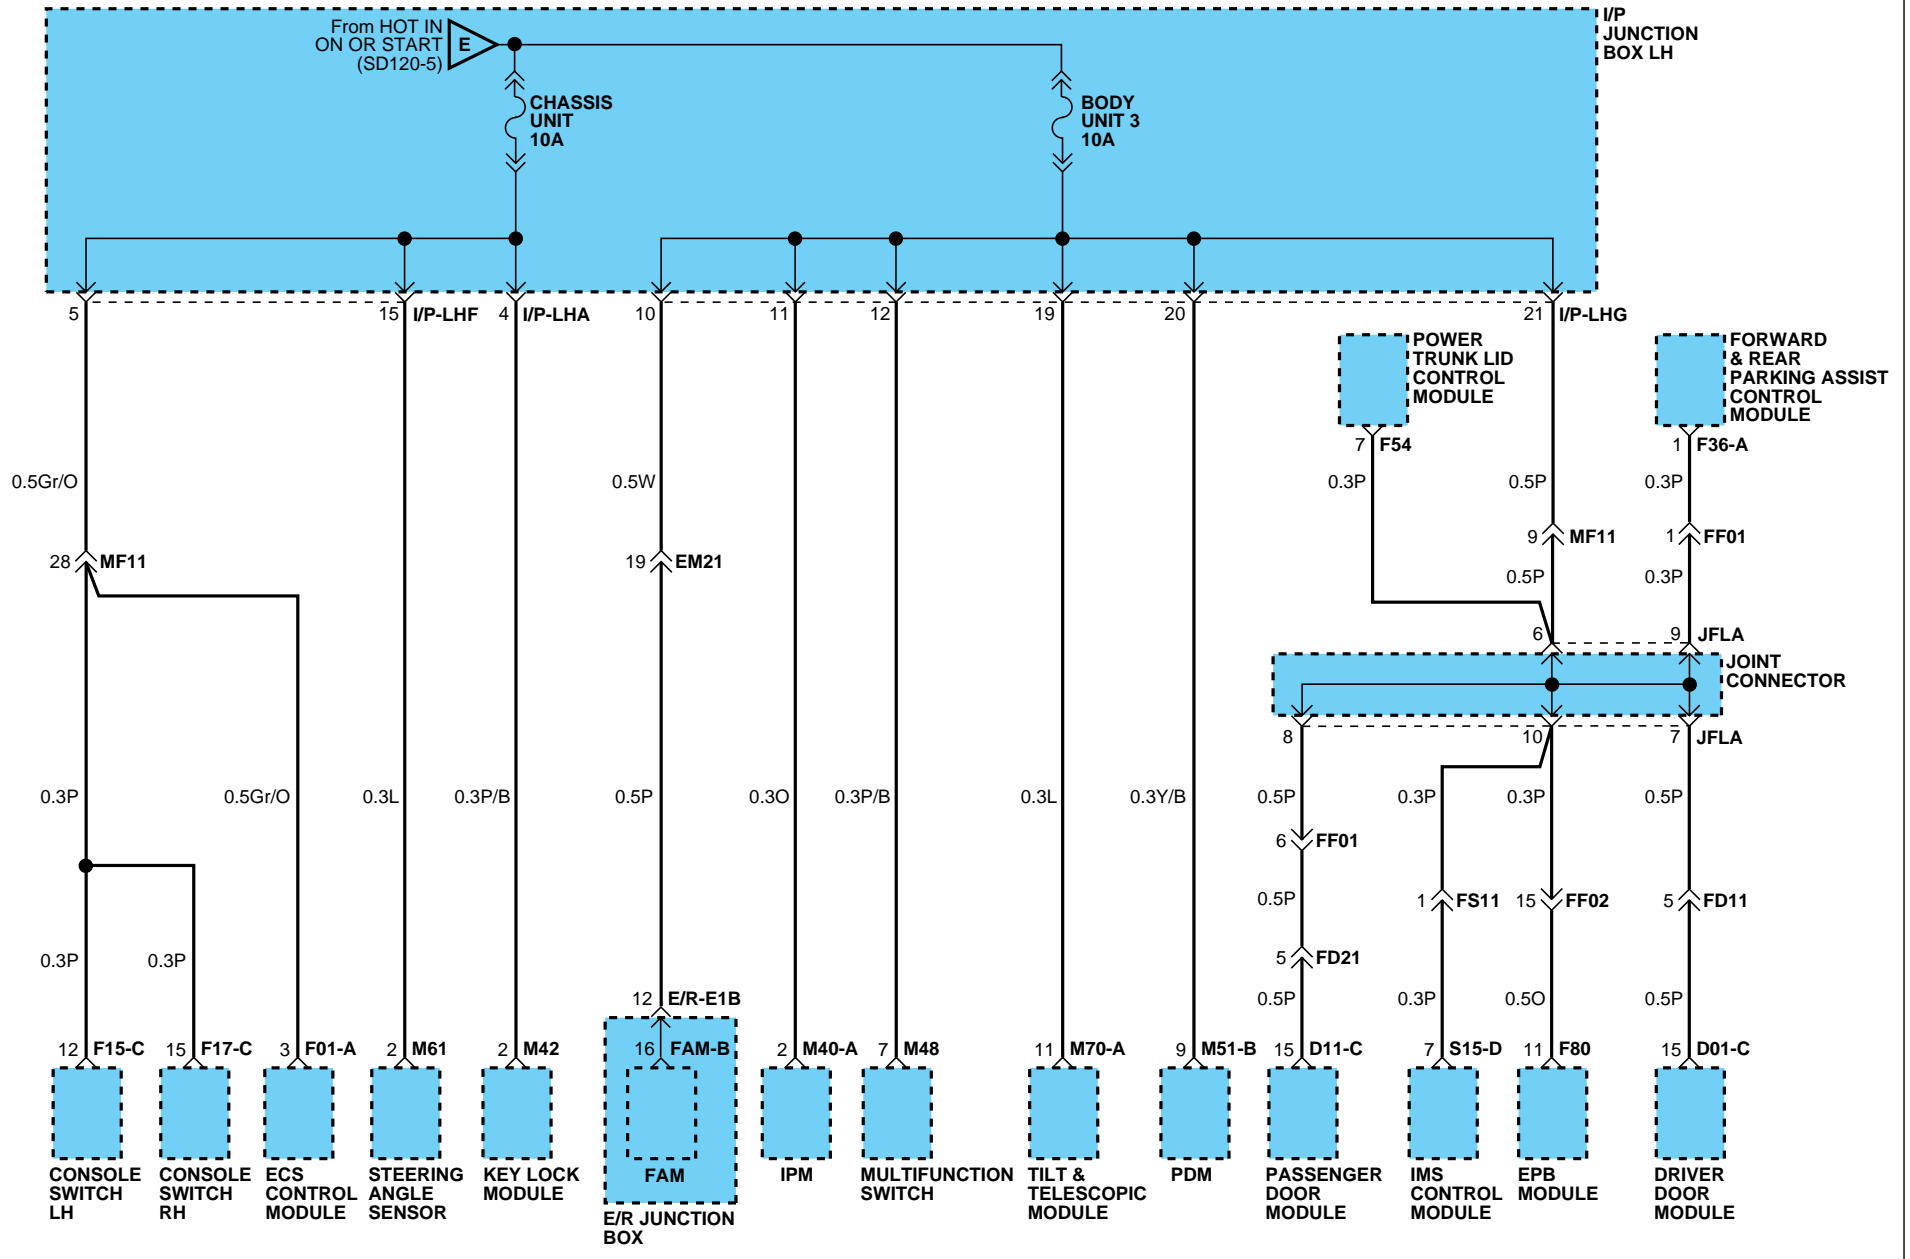

PASSENGER COMPARTMENT FUSE DETAILS

Passenger Compartment Fuse Details (7)


SD120-7

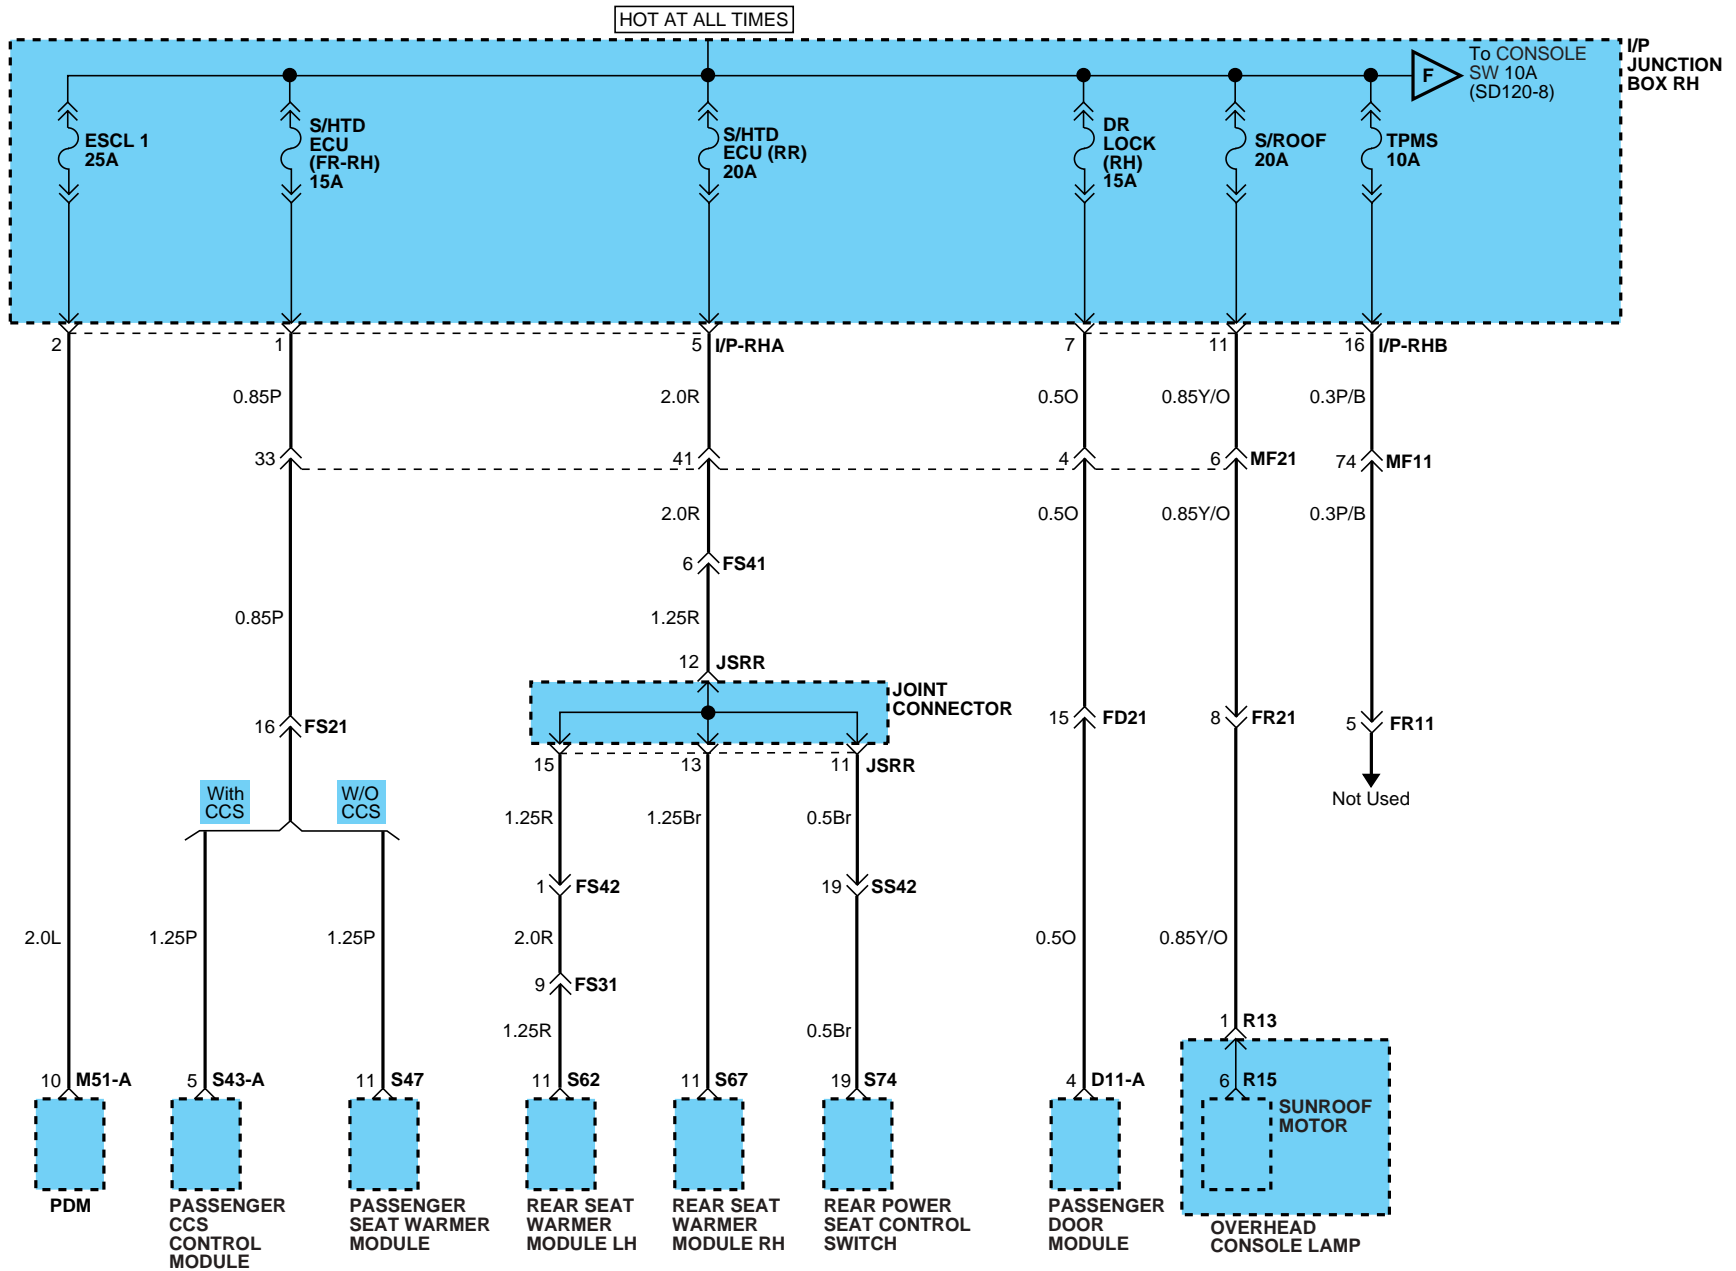

PASSENGER COMPARTMENT FUSE DETAILS

Passenger Compartment Fuse Details (8)


SD120-8

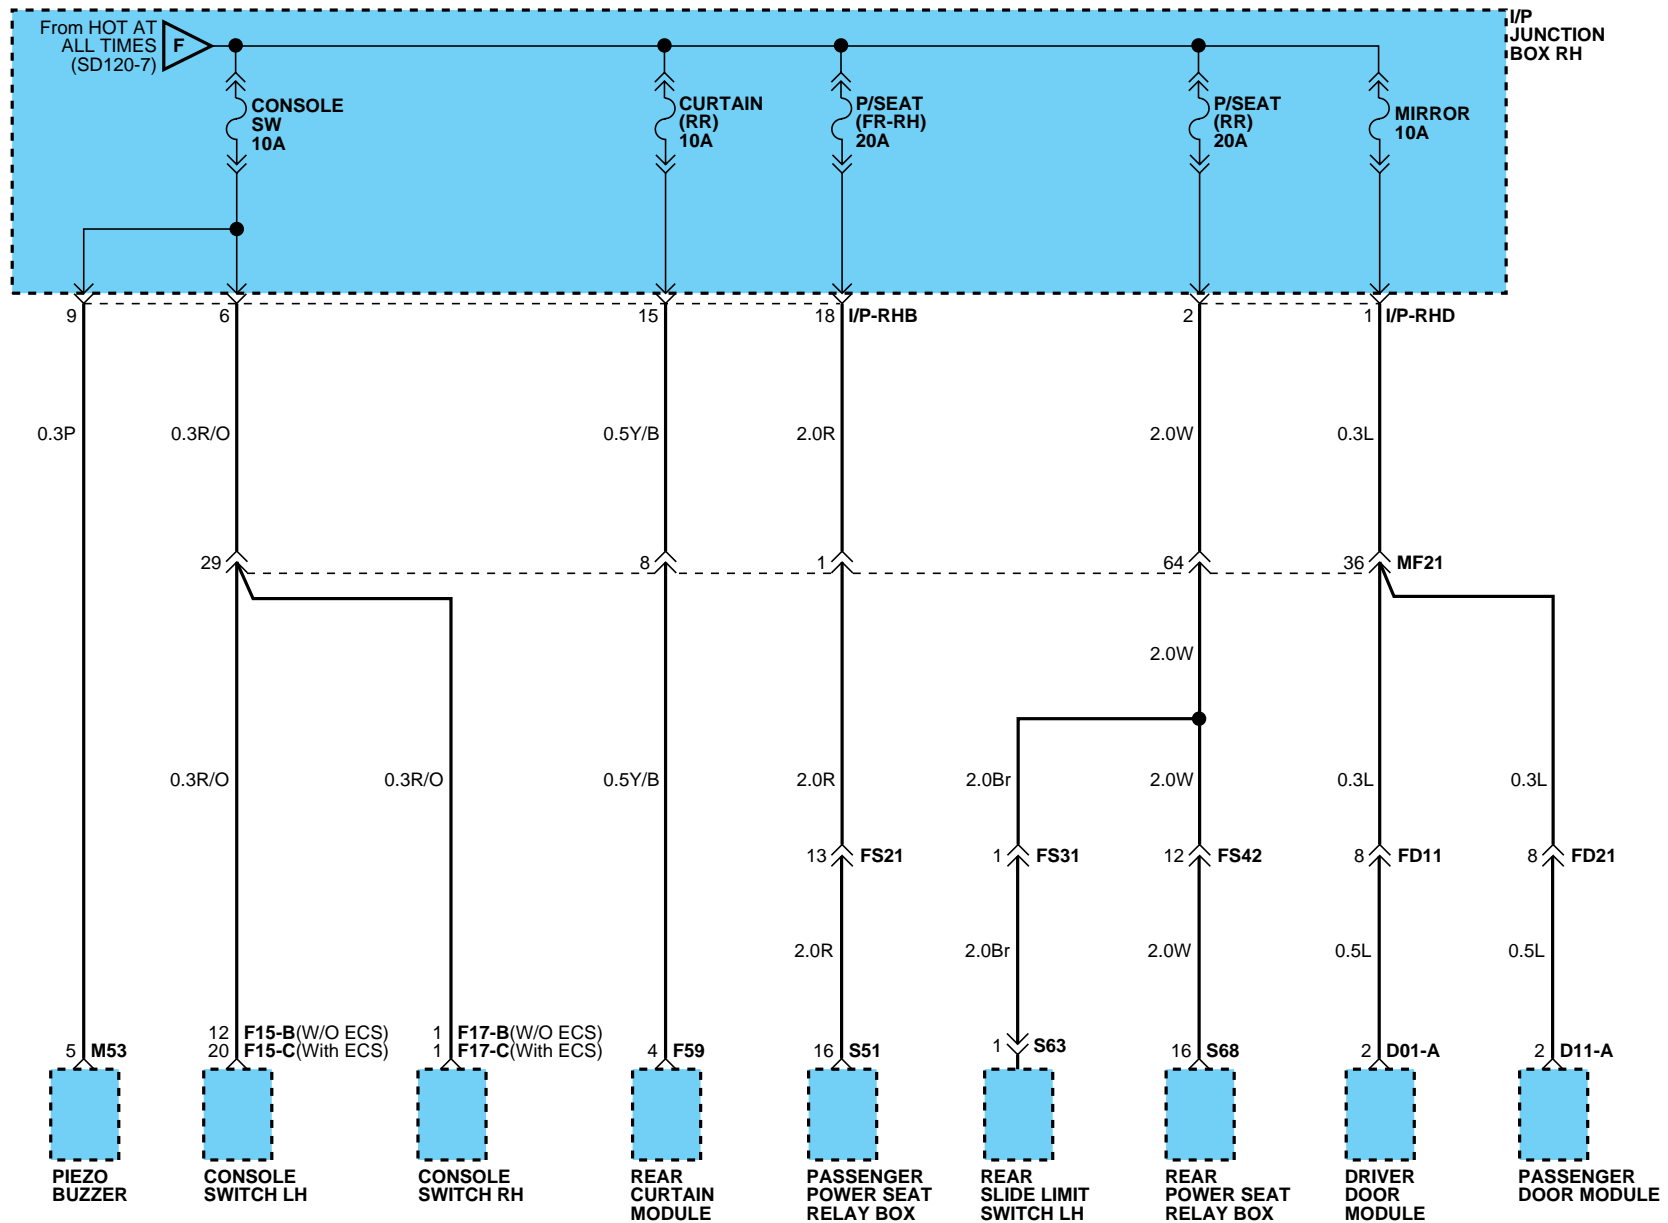

PASSENGER COMPARTMENT FUSE DETAILS

Passenger Compartment Fuse Details (9)


SD120-9

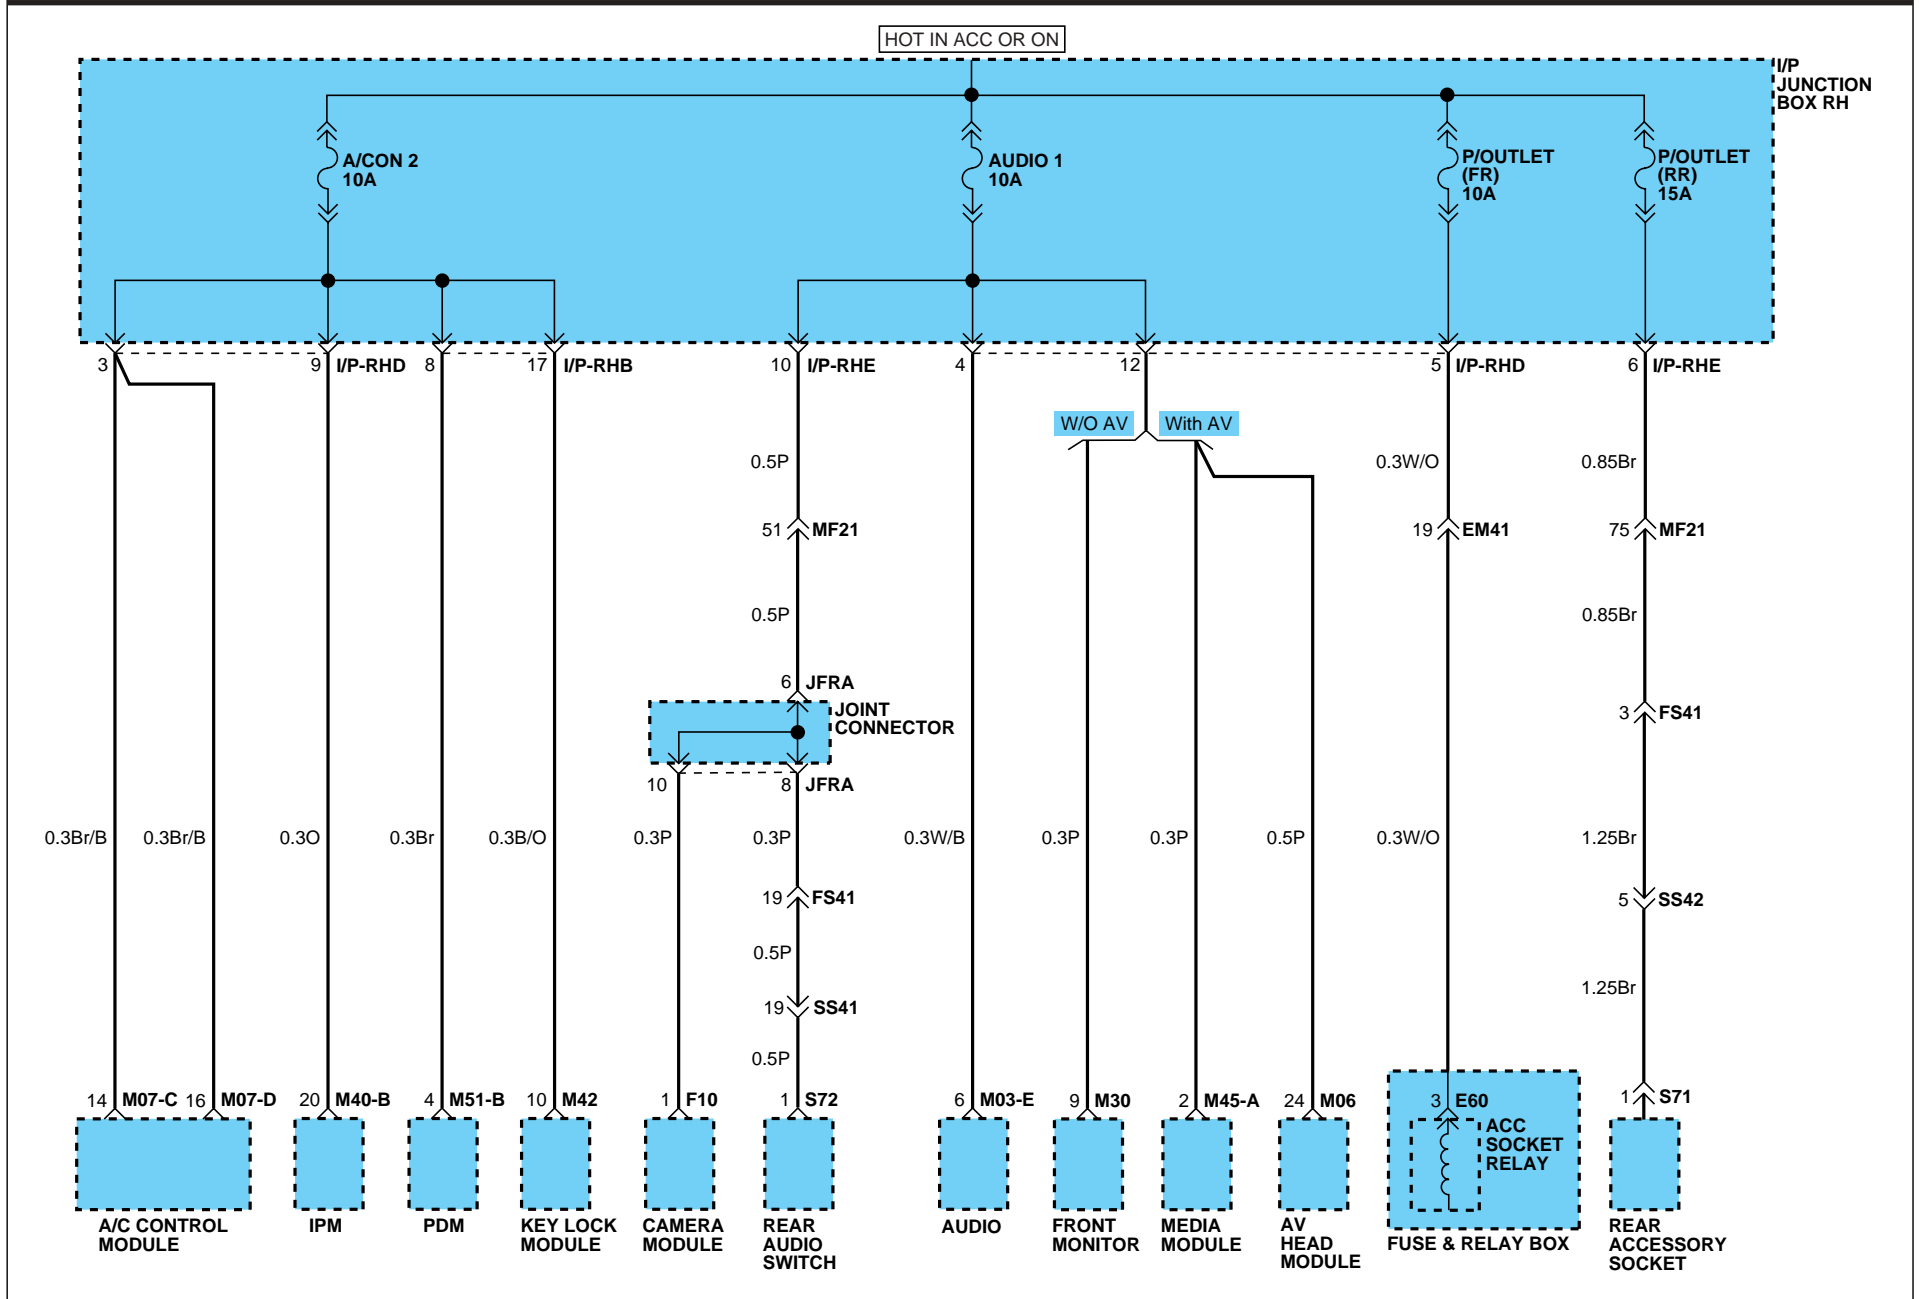

PASSENGER COMPARTMENT FUSE DETAILS


Passenger Compartment Fuse Details (10)

SD120-10

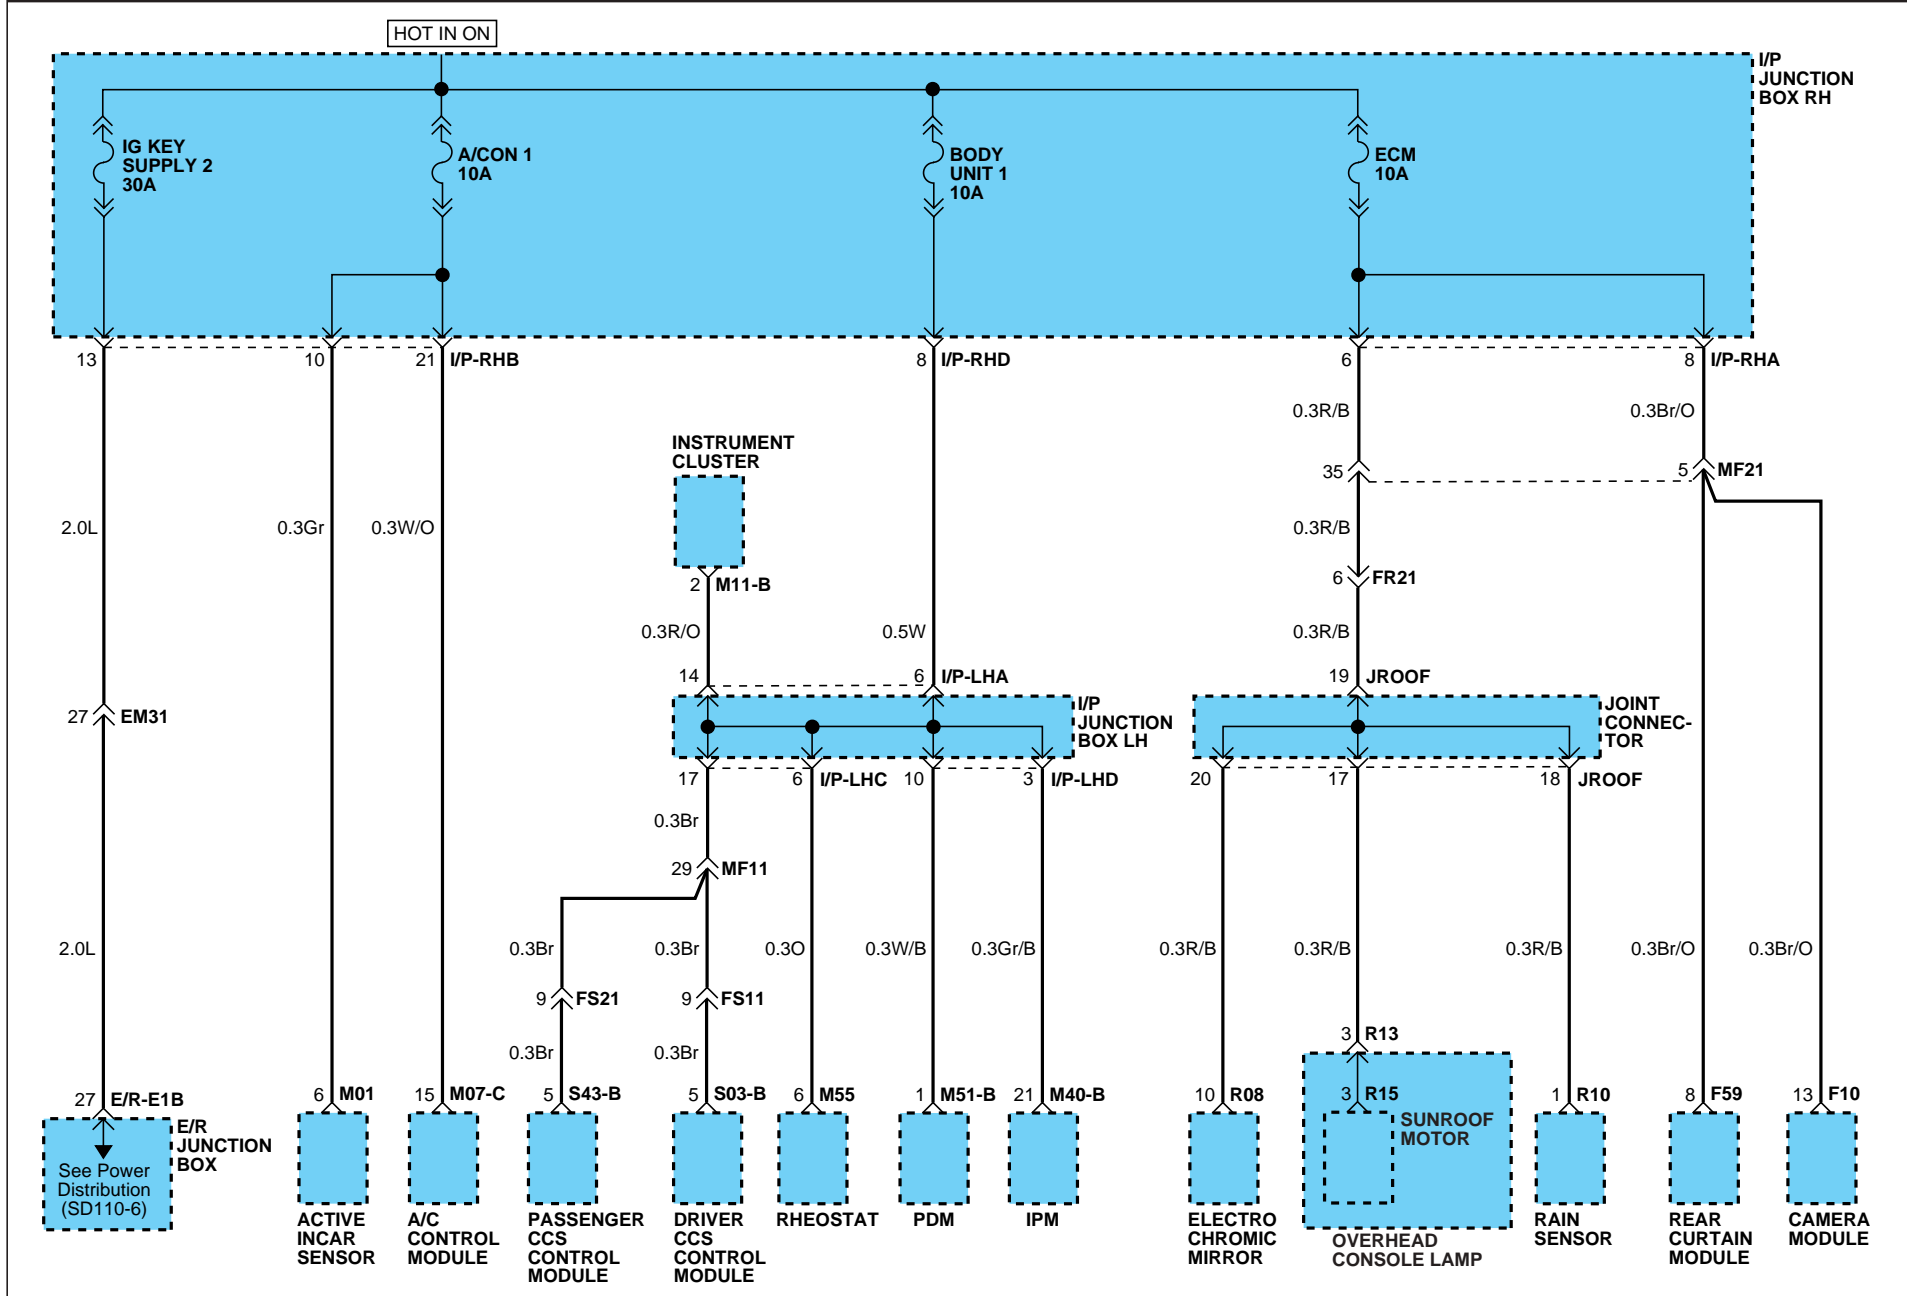

Ground Distribution (1)


SD130-1

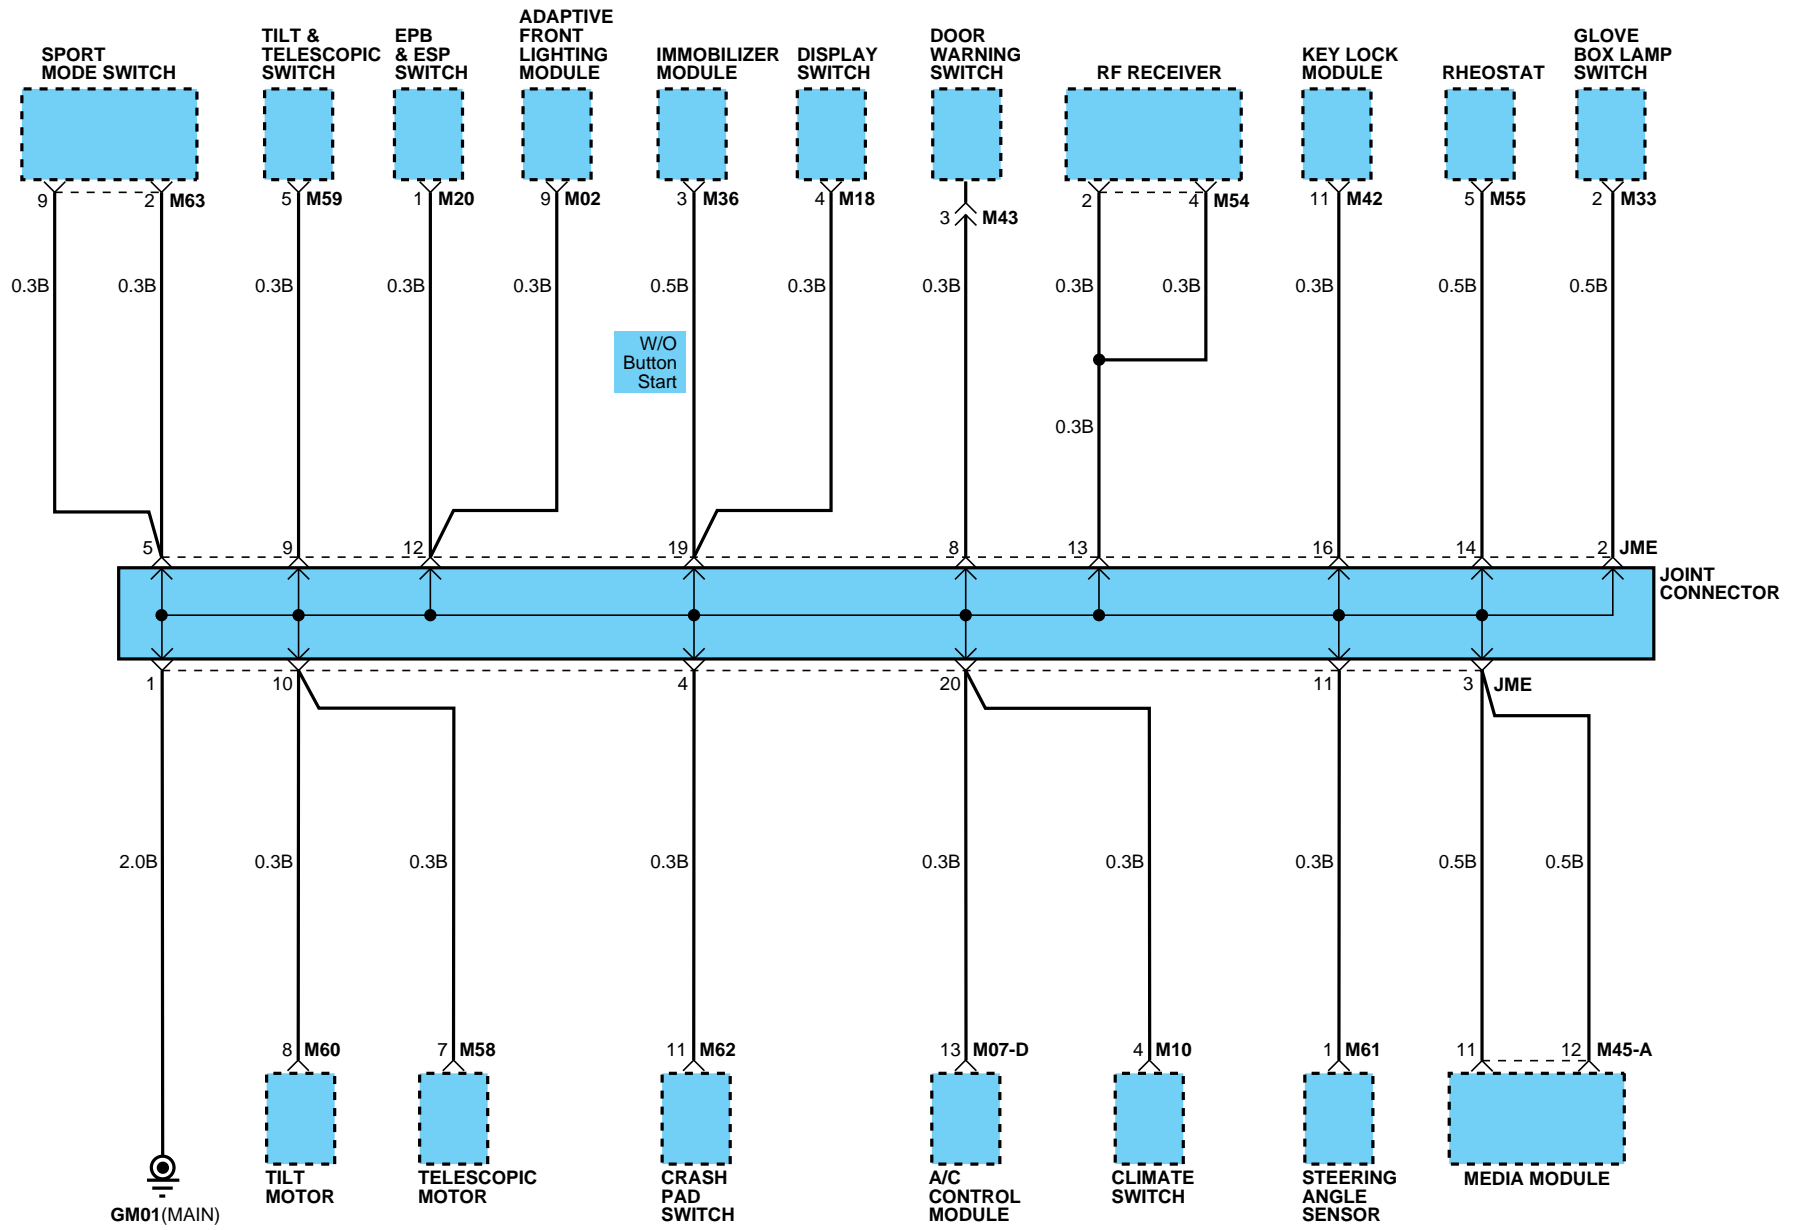

GROUND DISTRIBUTION

Ground Distribution (2)


SD130-2

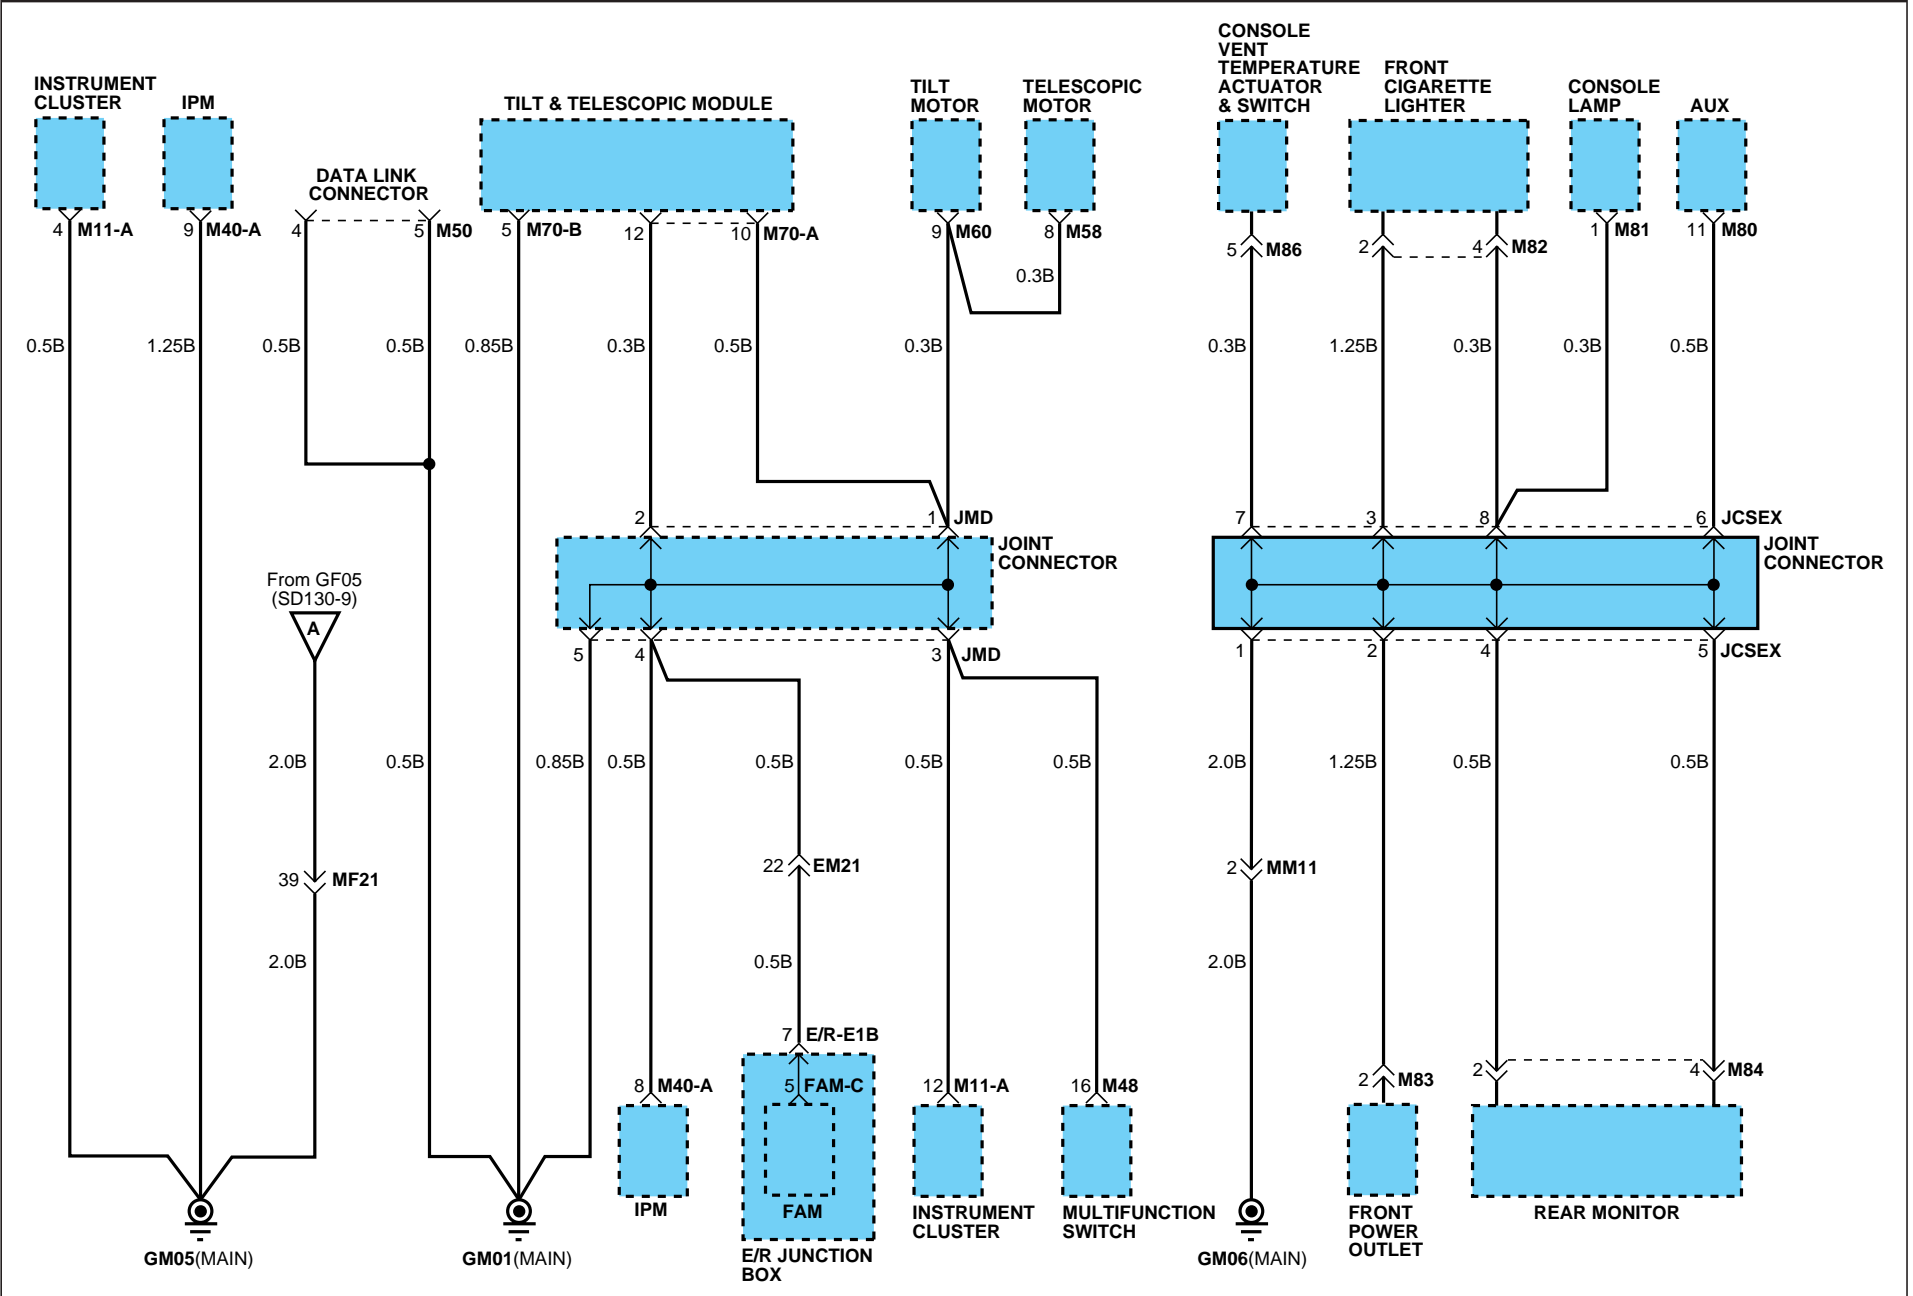

GROUND DISTRIBUTION

Ground Distribution (3)


SD130-3

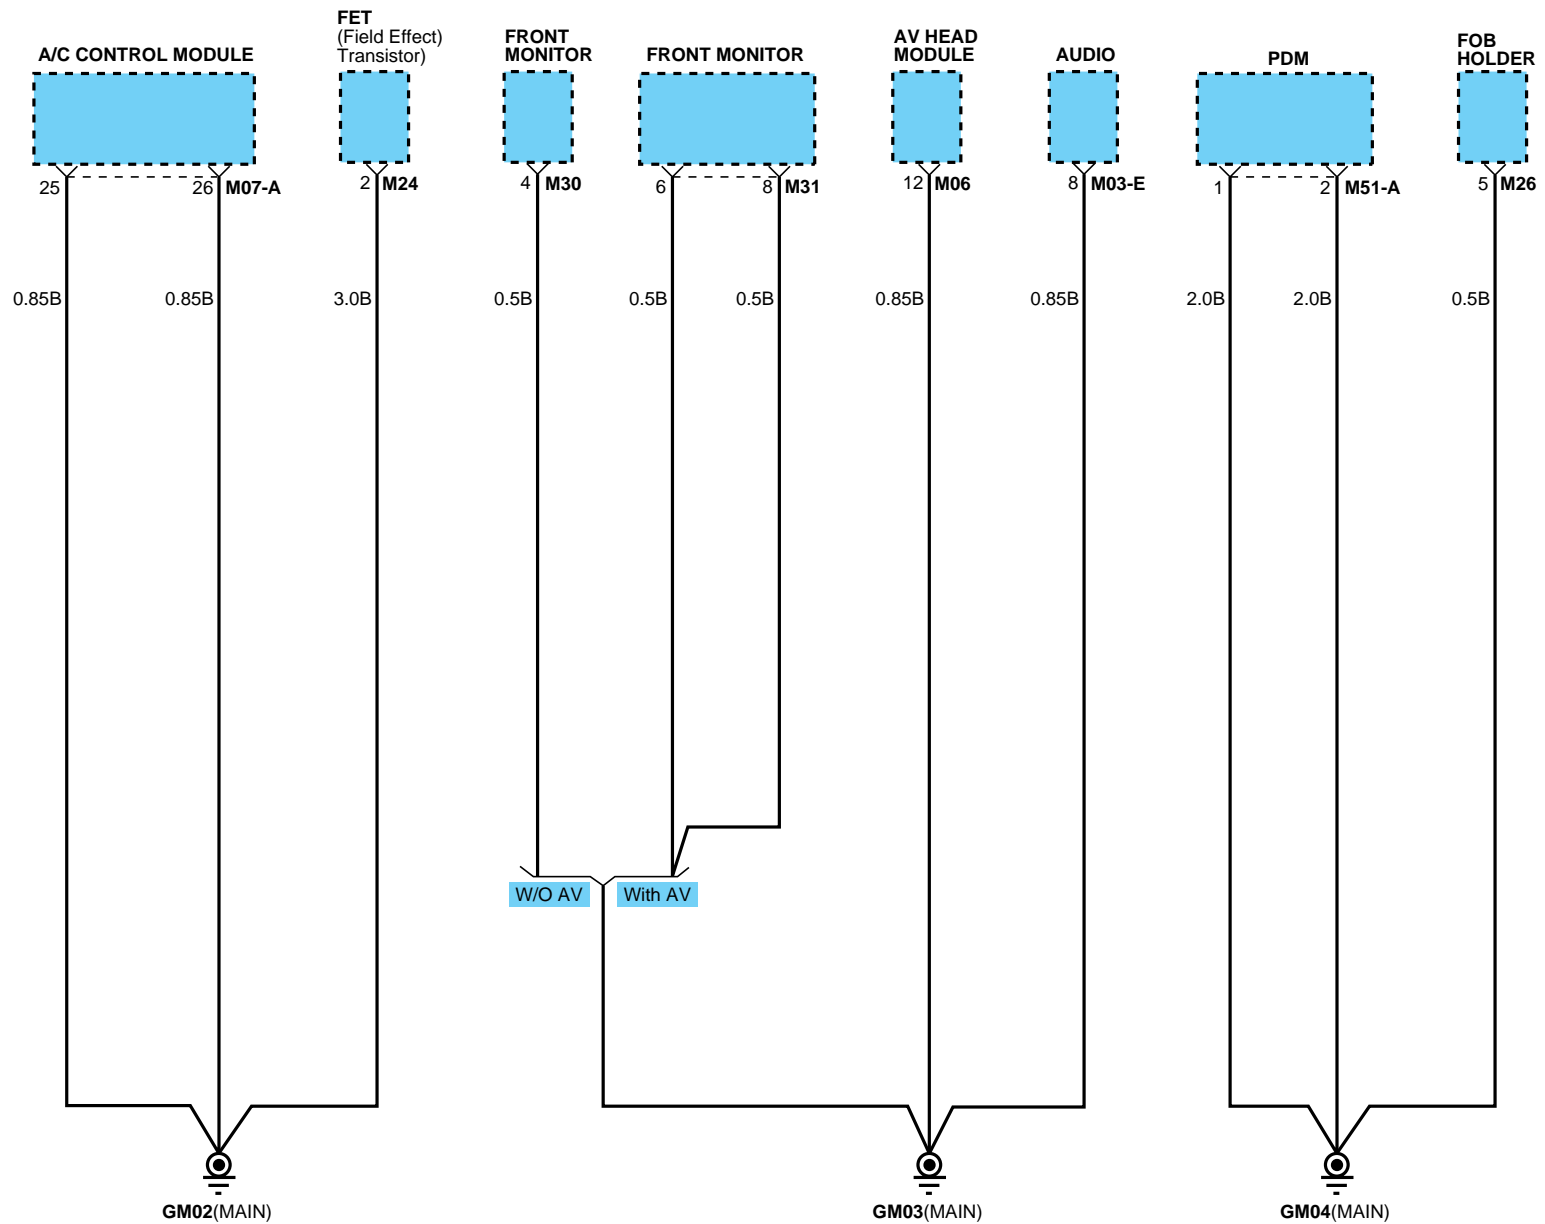

GROUND DISTRIBUTION

Ground Distribution (4)


SD130-4

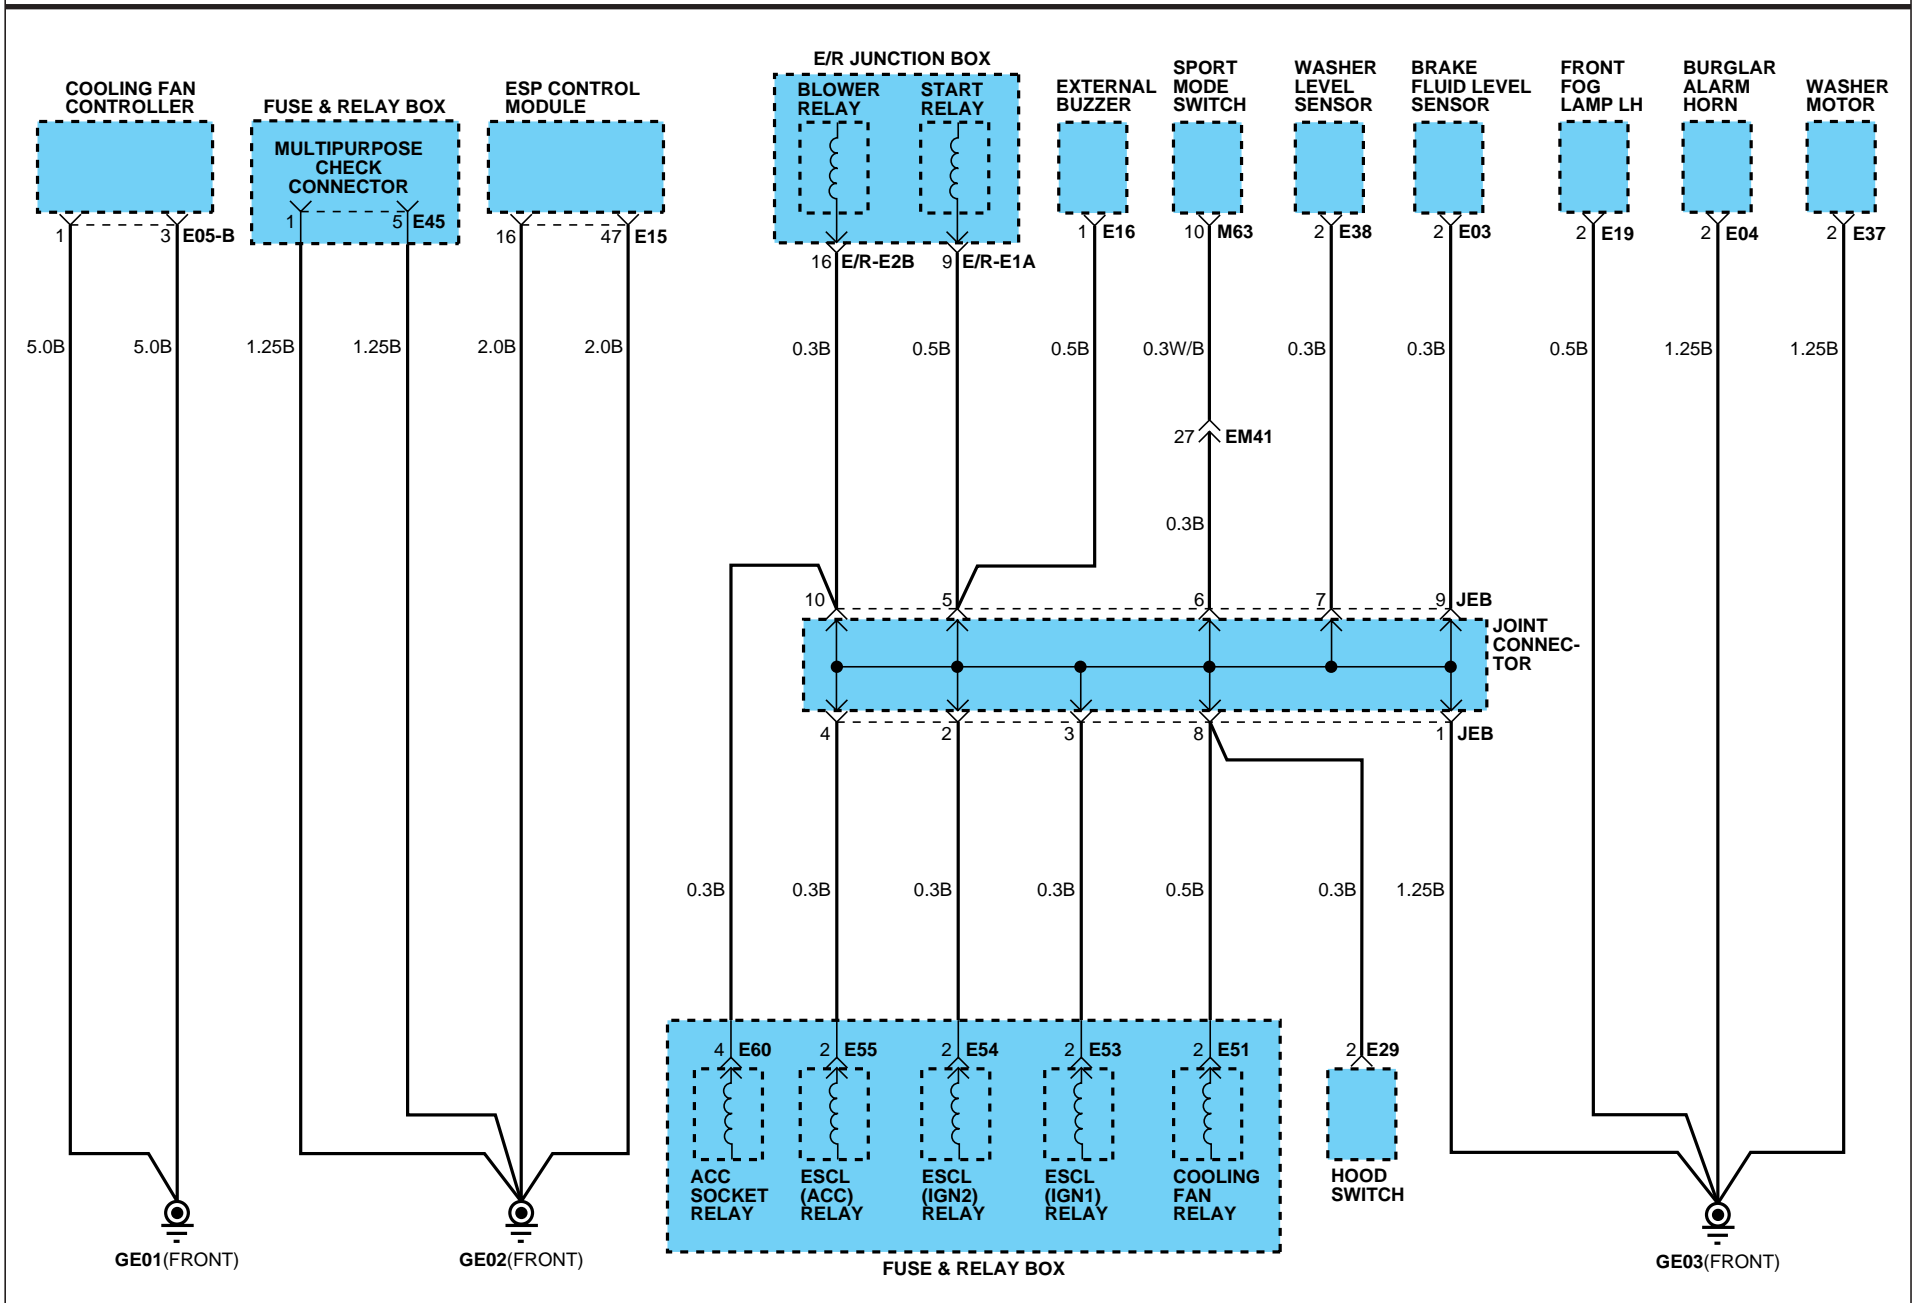

GROUND DISTRIBUTION

Ground Distribution (5)


SD130-5

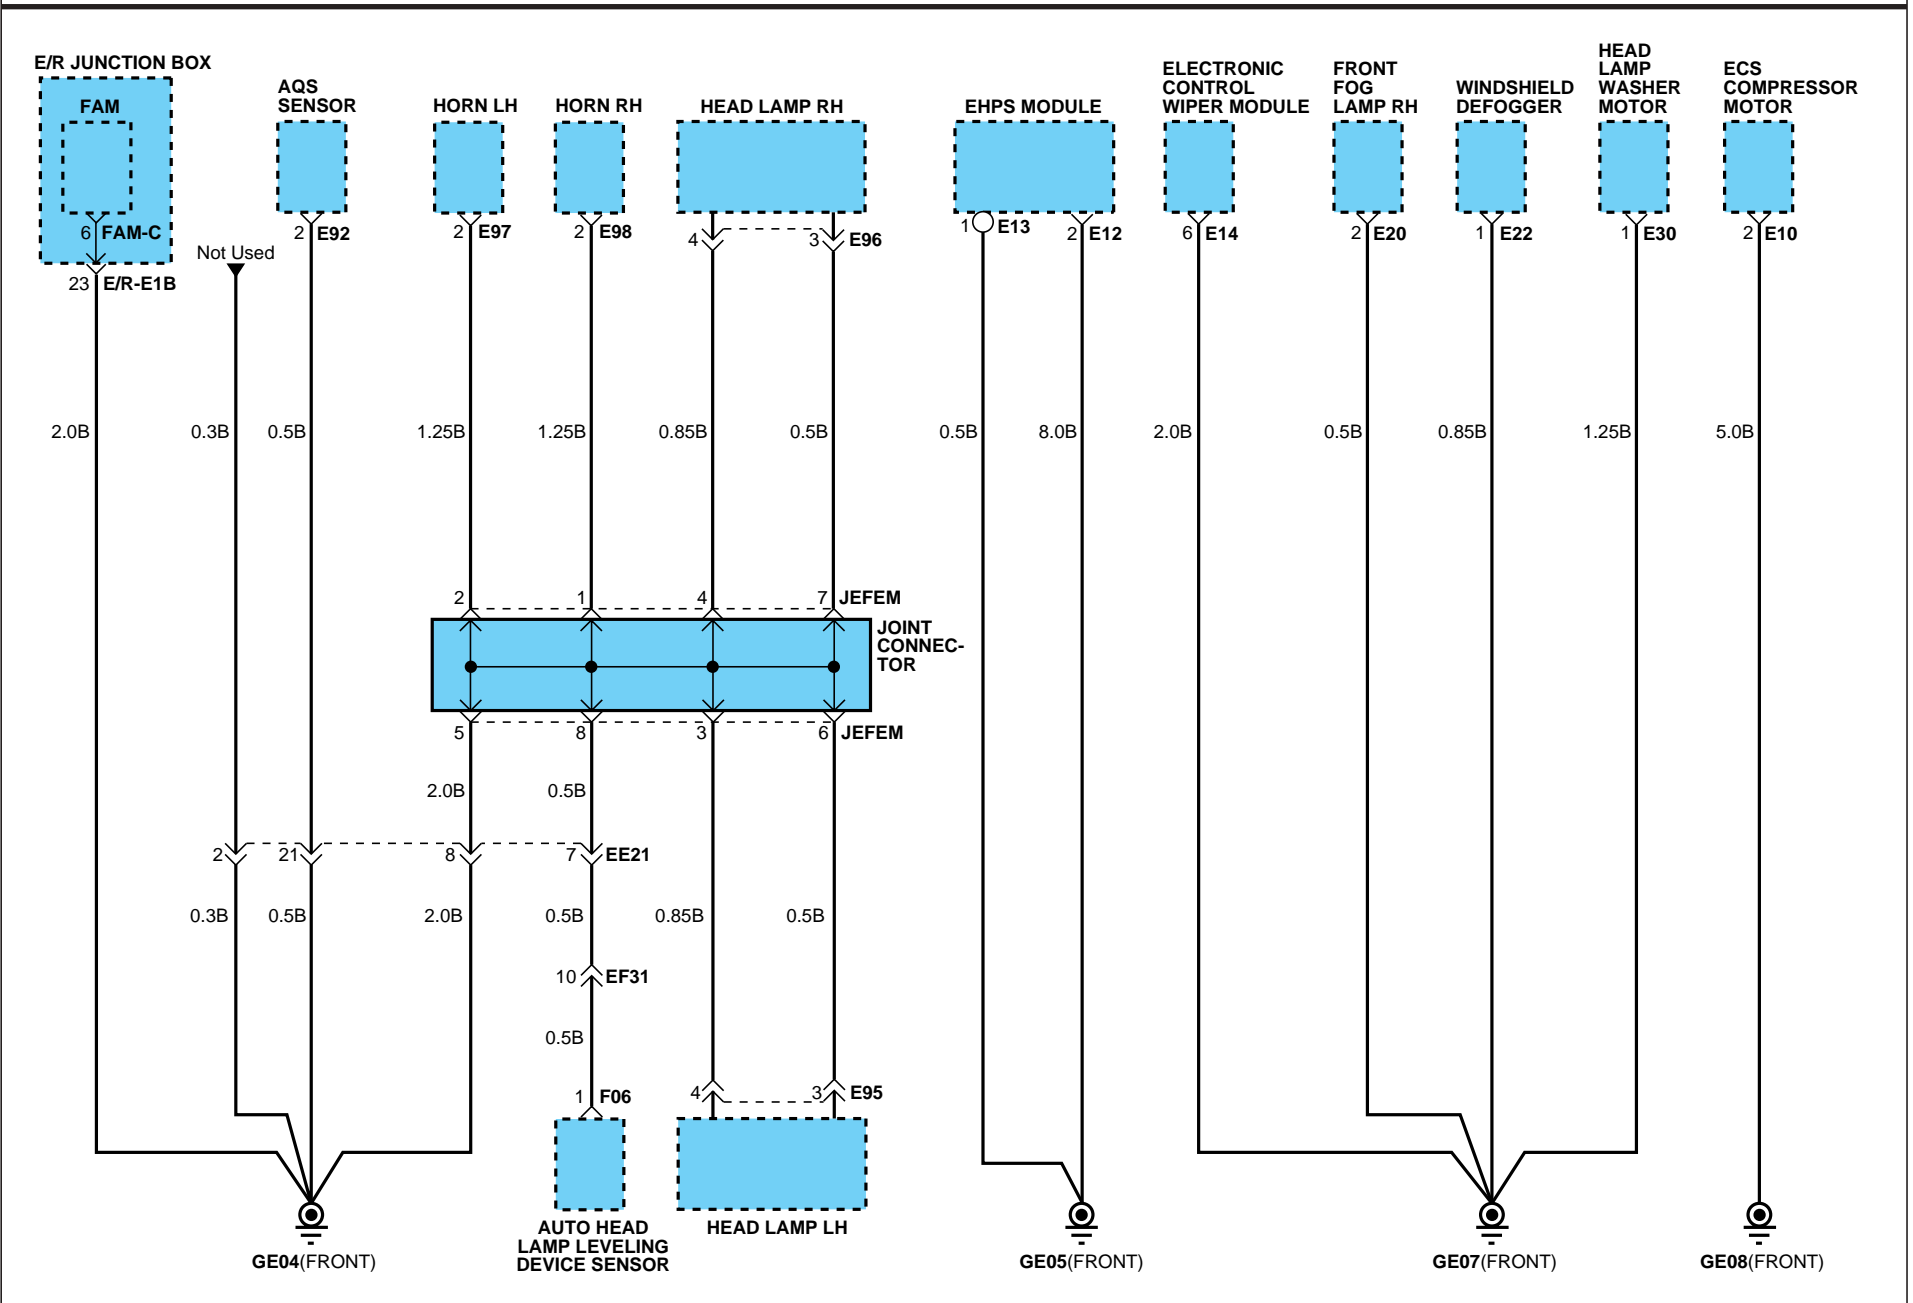

GROUND DISTRIBUTION

Ground Distribution (6)


SD130-6

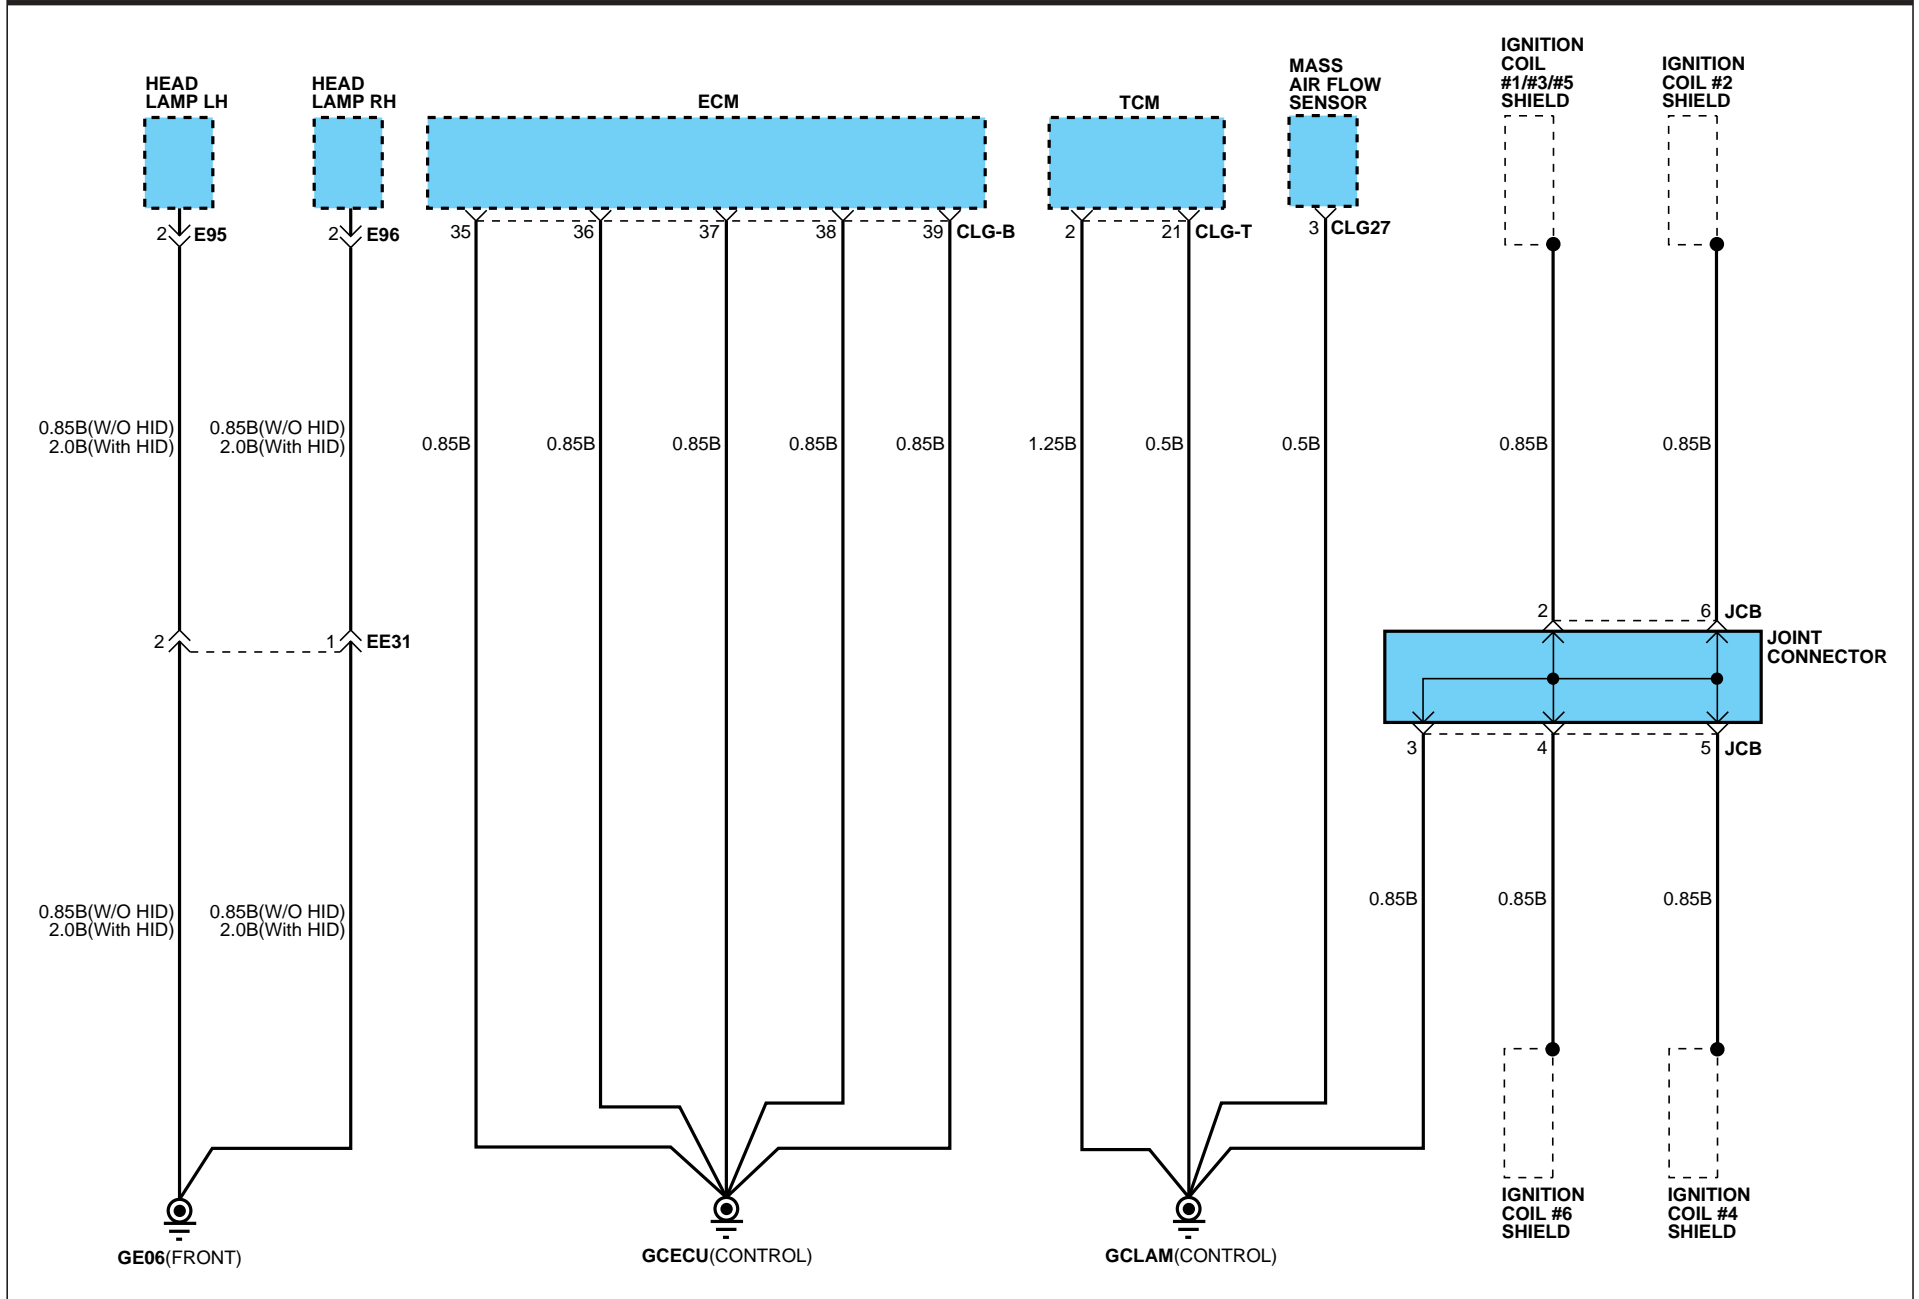

GROUND DISTRIBUTION

Ground Distribution (7)


SD130-7

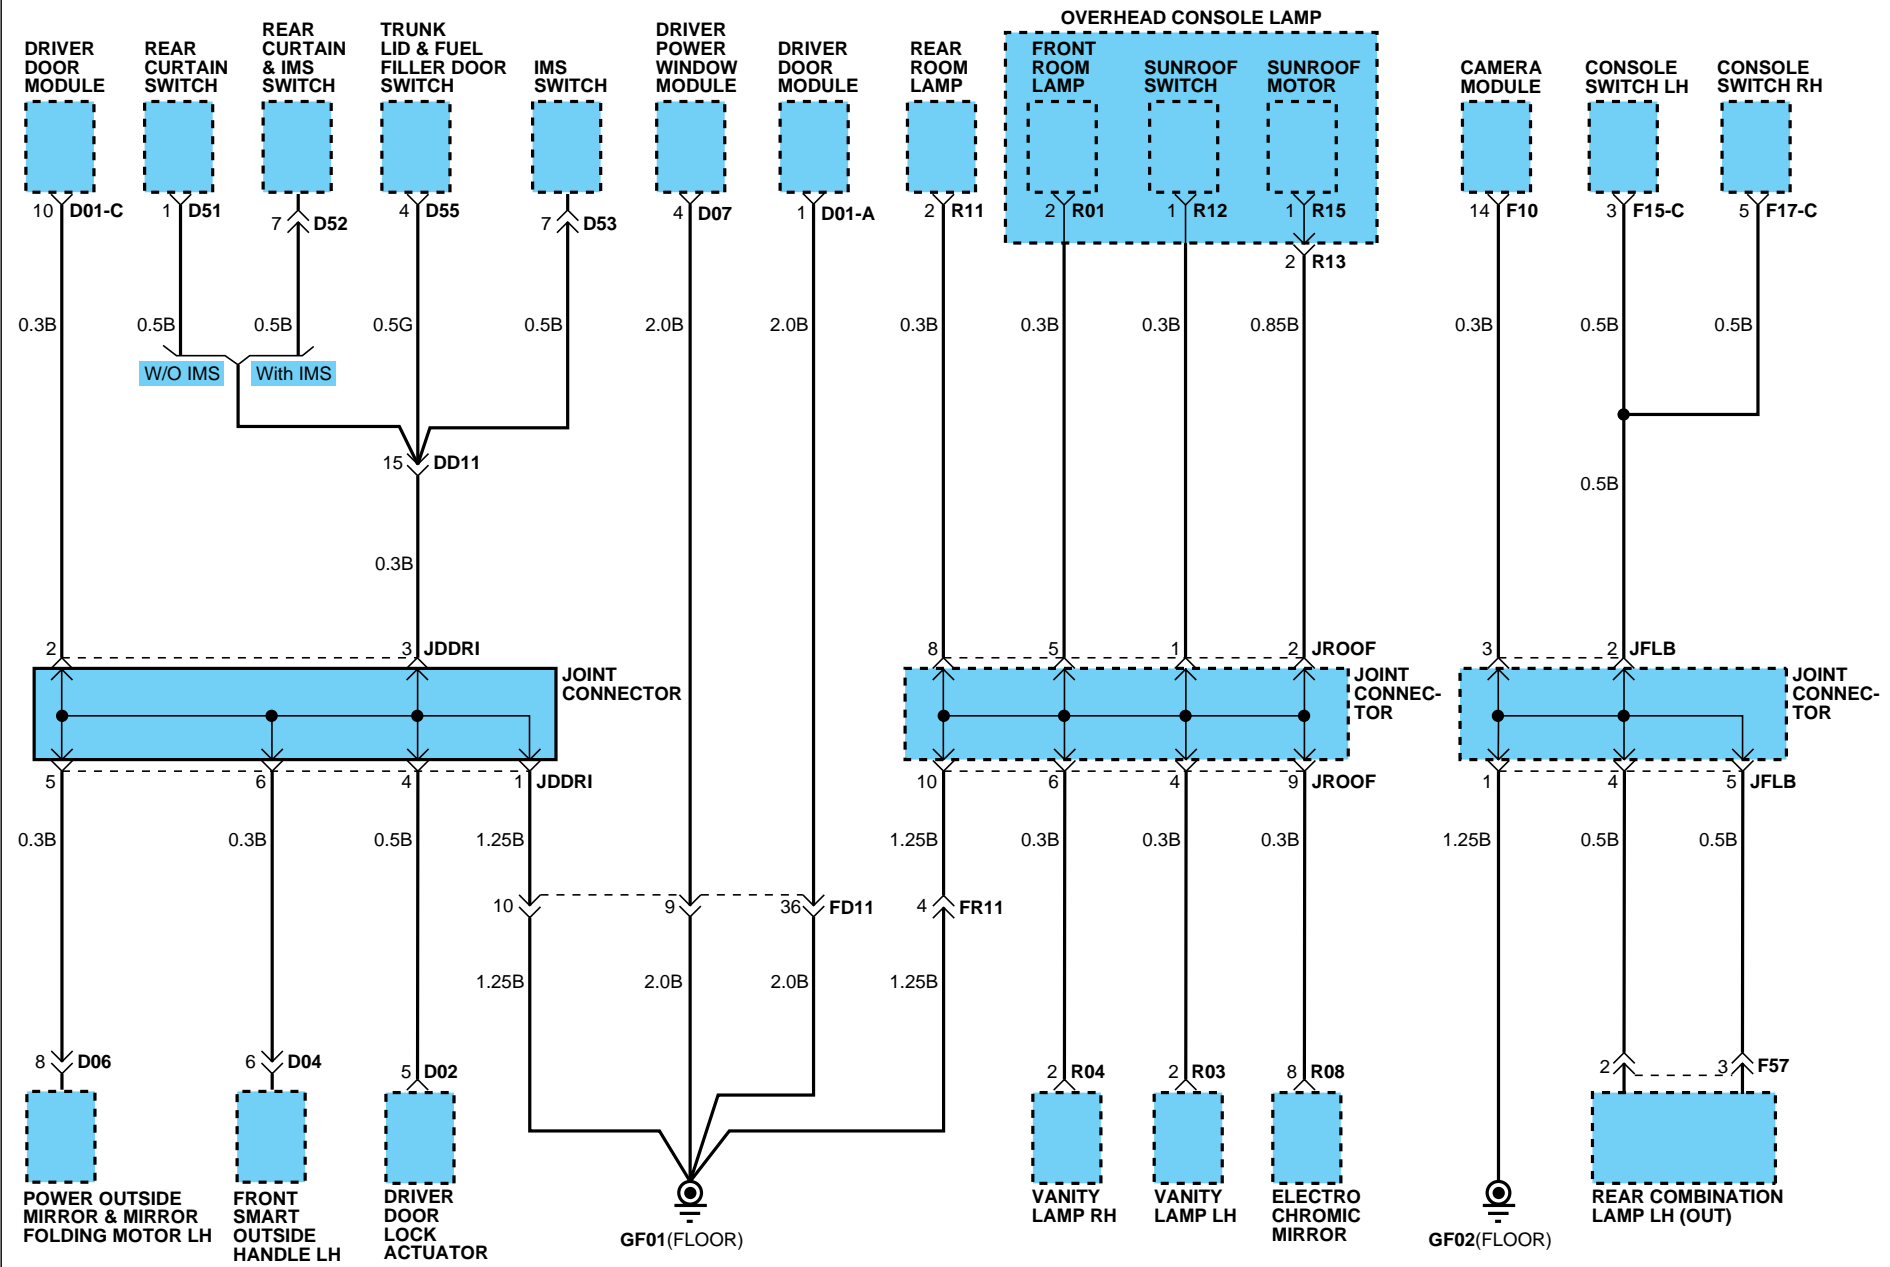

GROUND DISTRIBUTION

Ground Distribution (8)


SD130-8

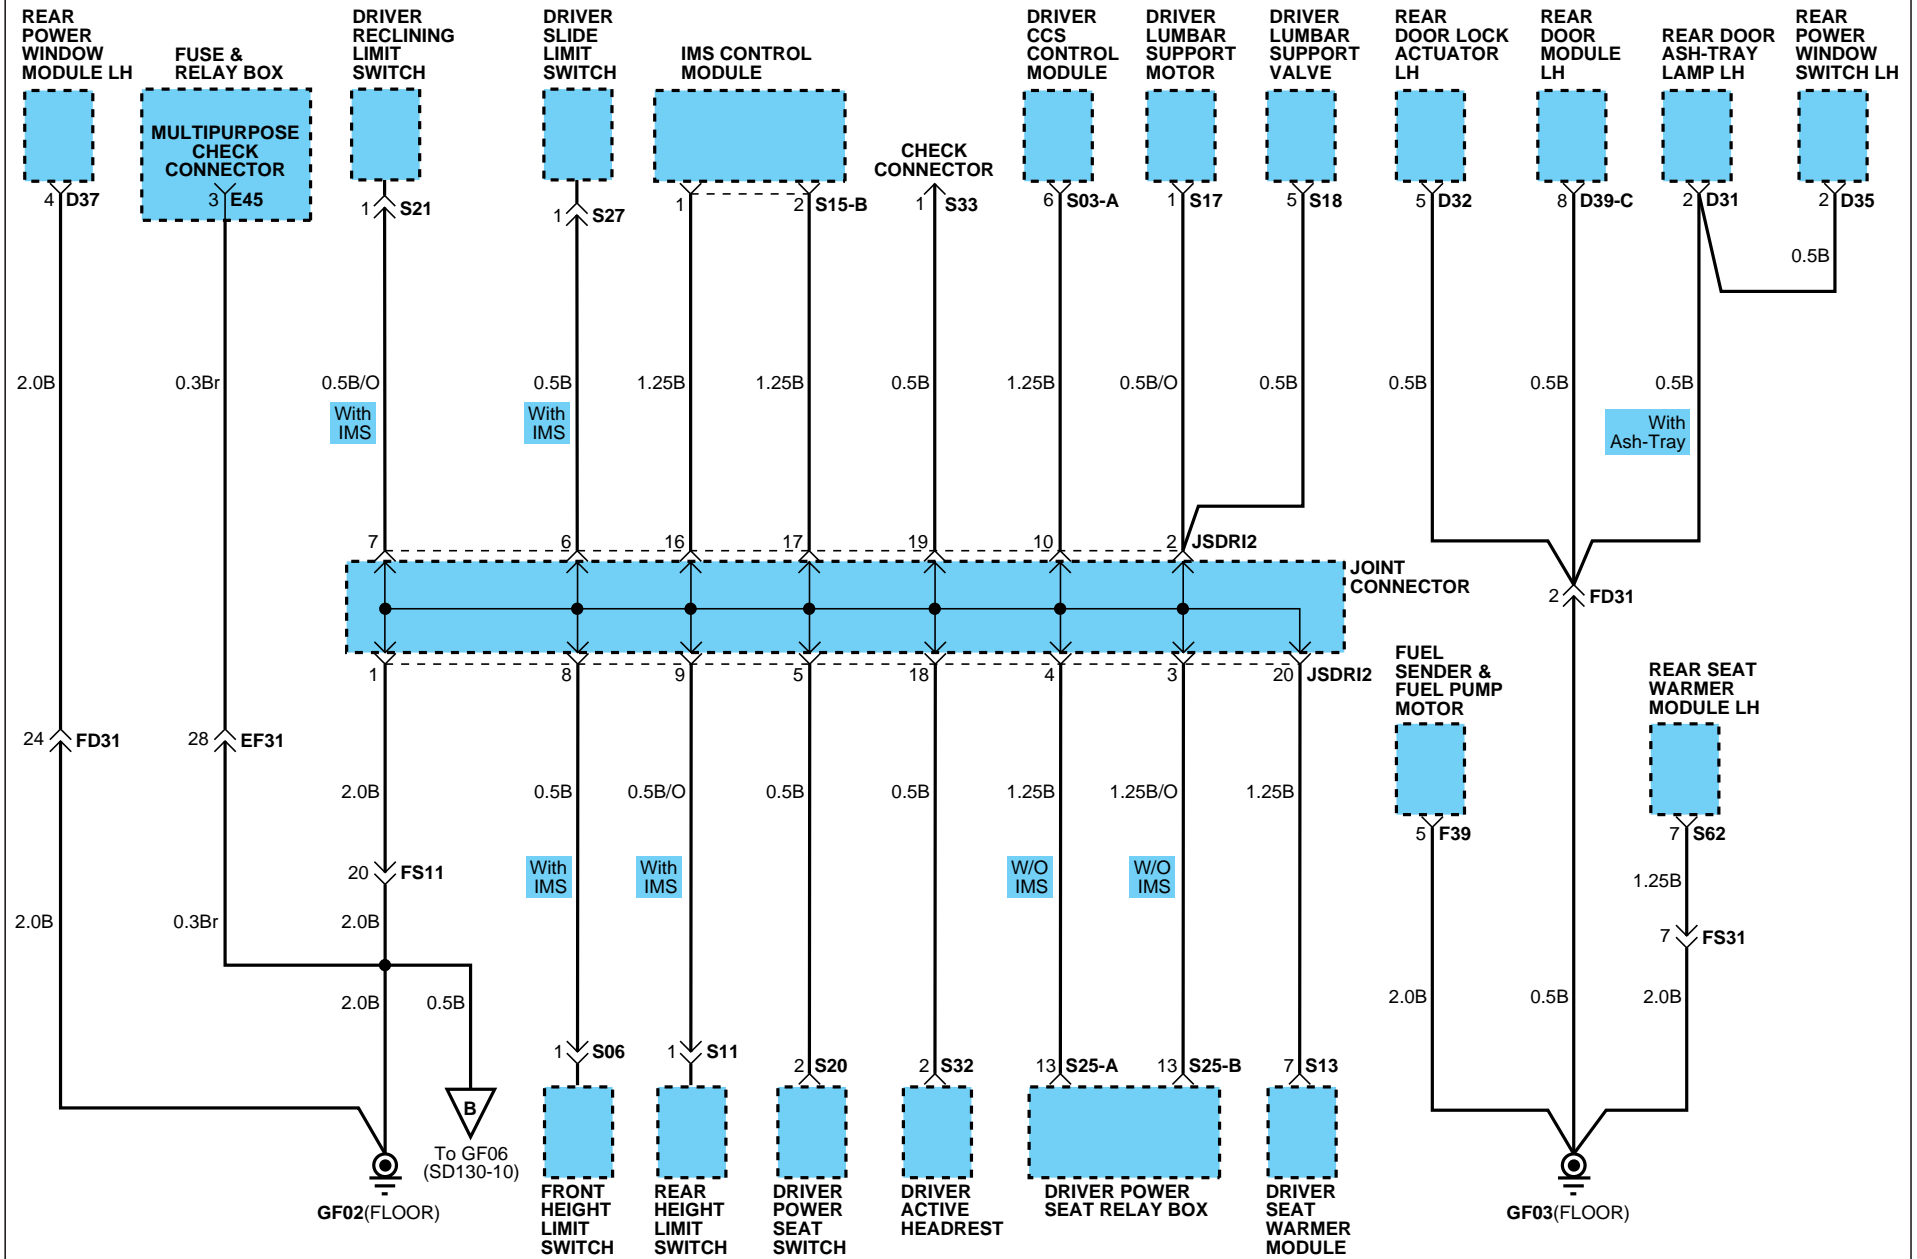

GROUND DISTRIBUTION

Ground Distribution (9)


SD130-9

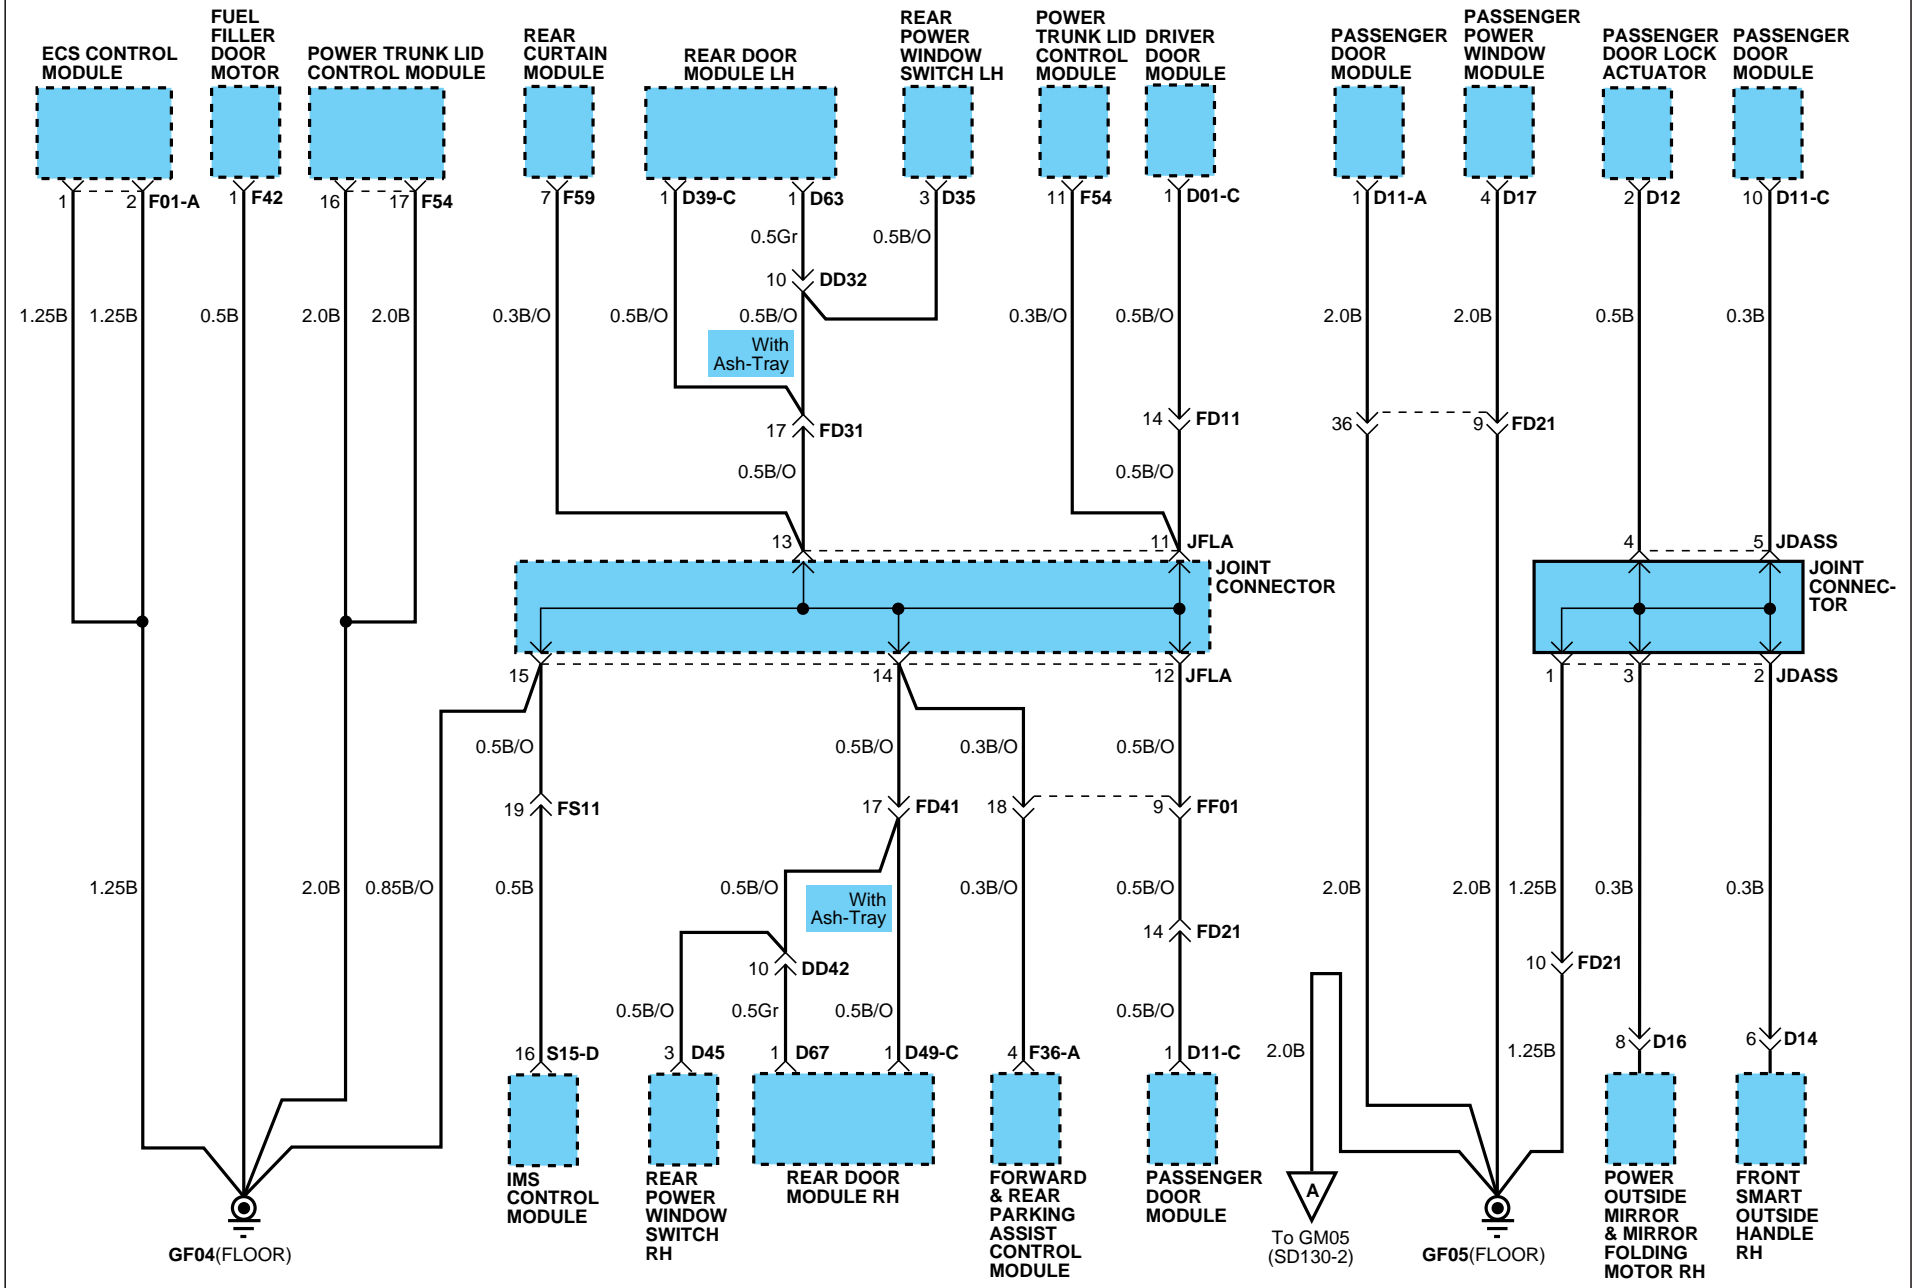

GROUND DISTRIBUTION

Ground Distribution (10)


SD130-10

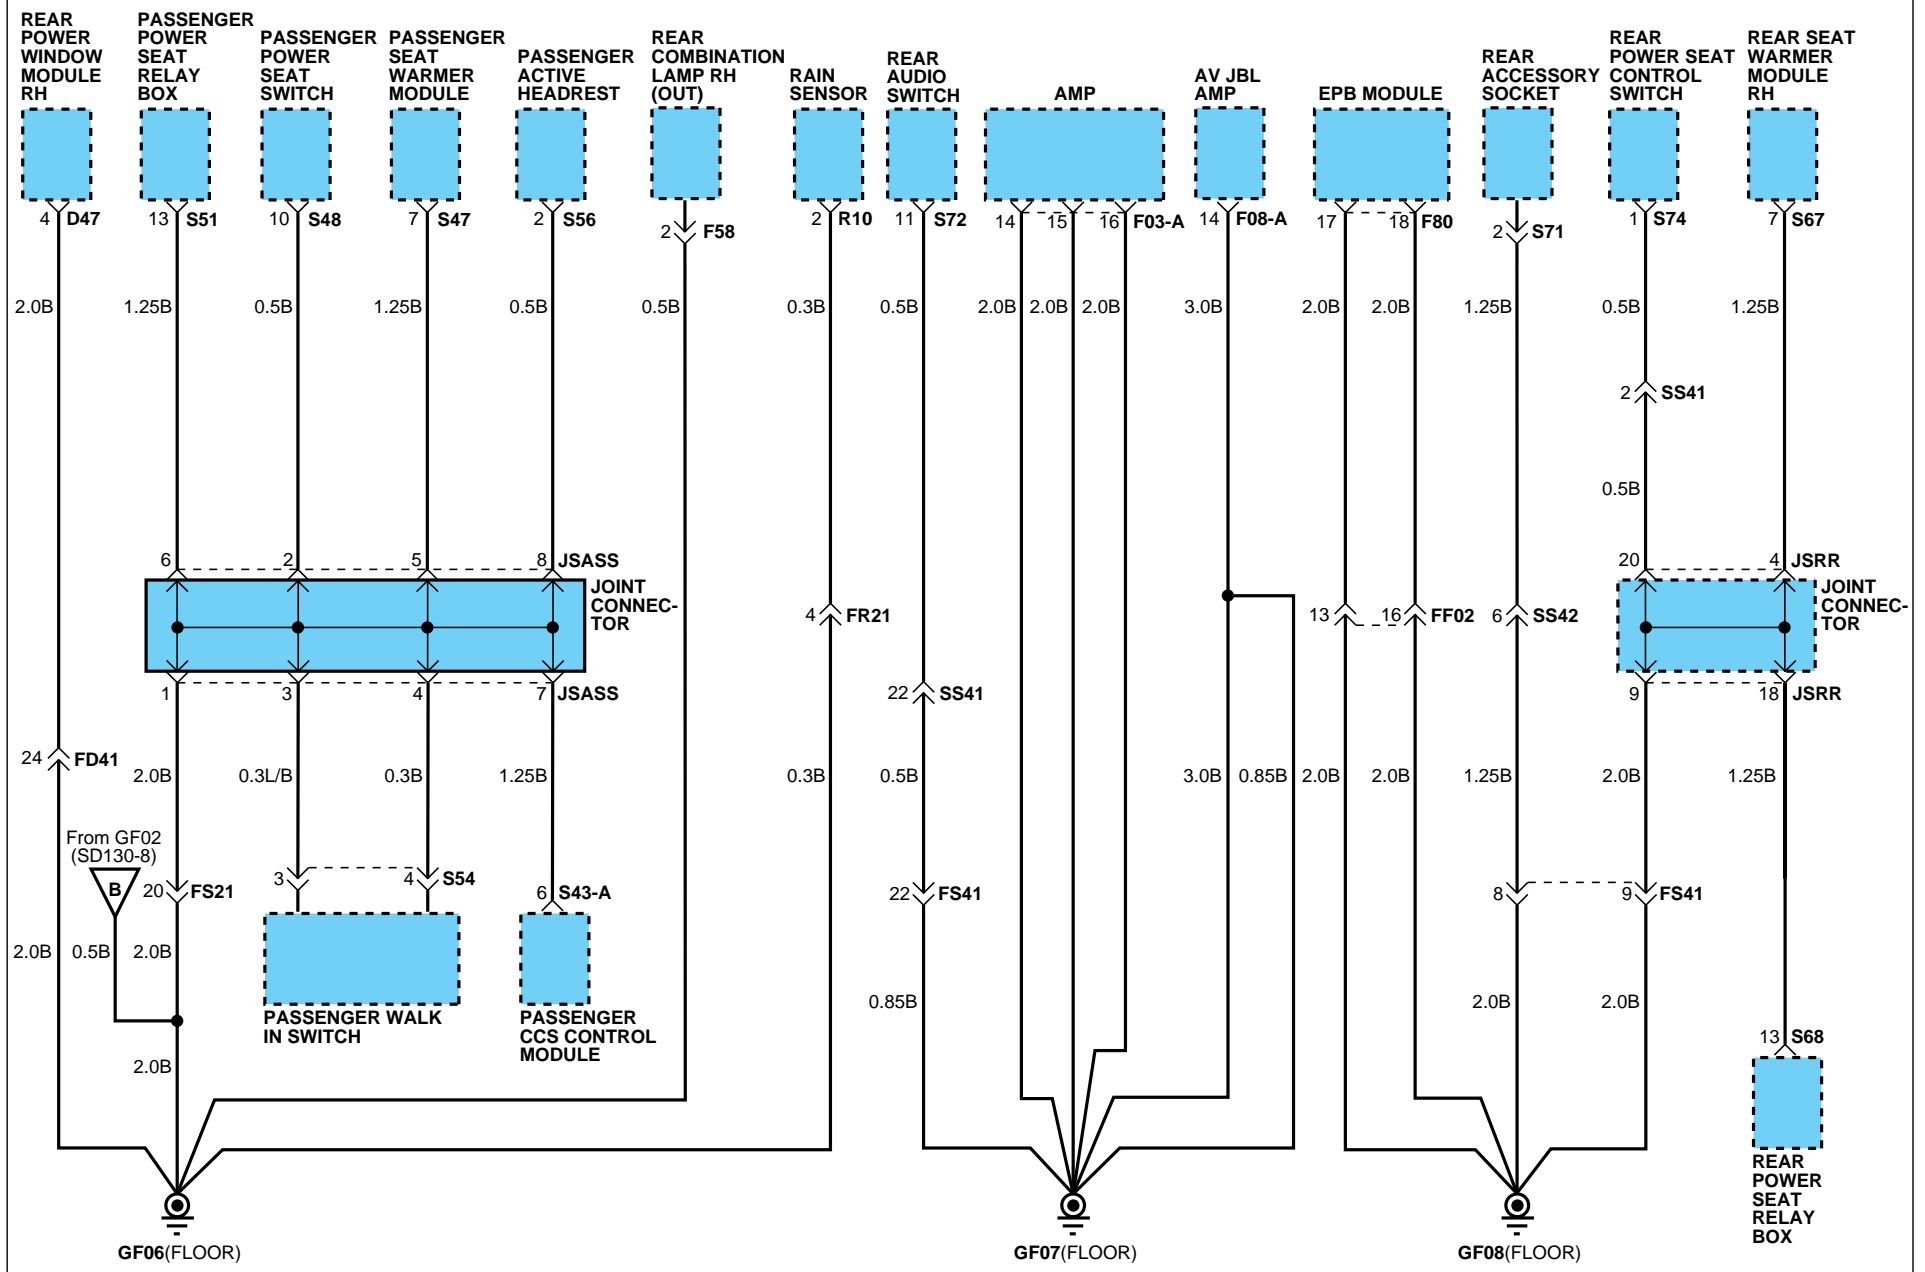

GROUND DISTRIBUTION

Ground Distribution (11)

SD130-11

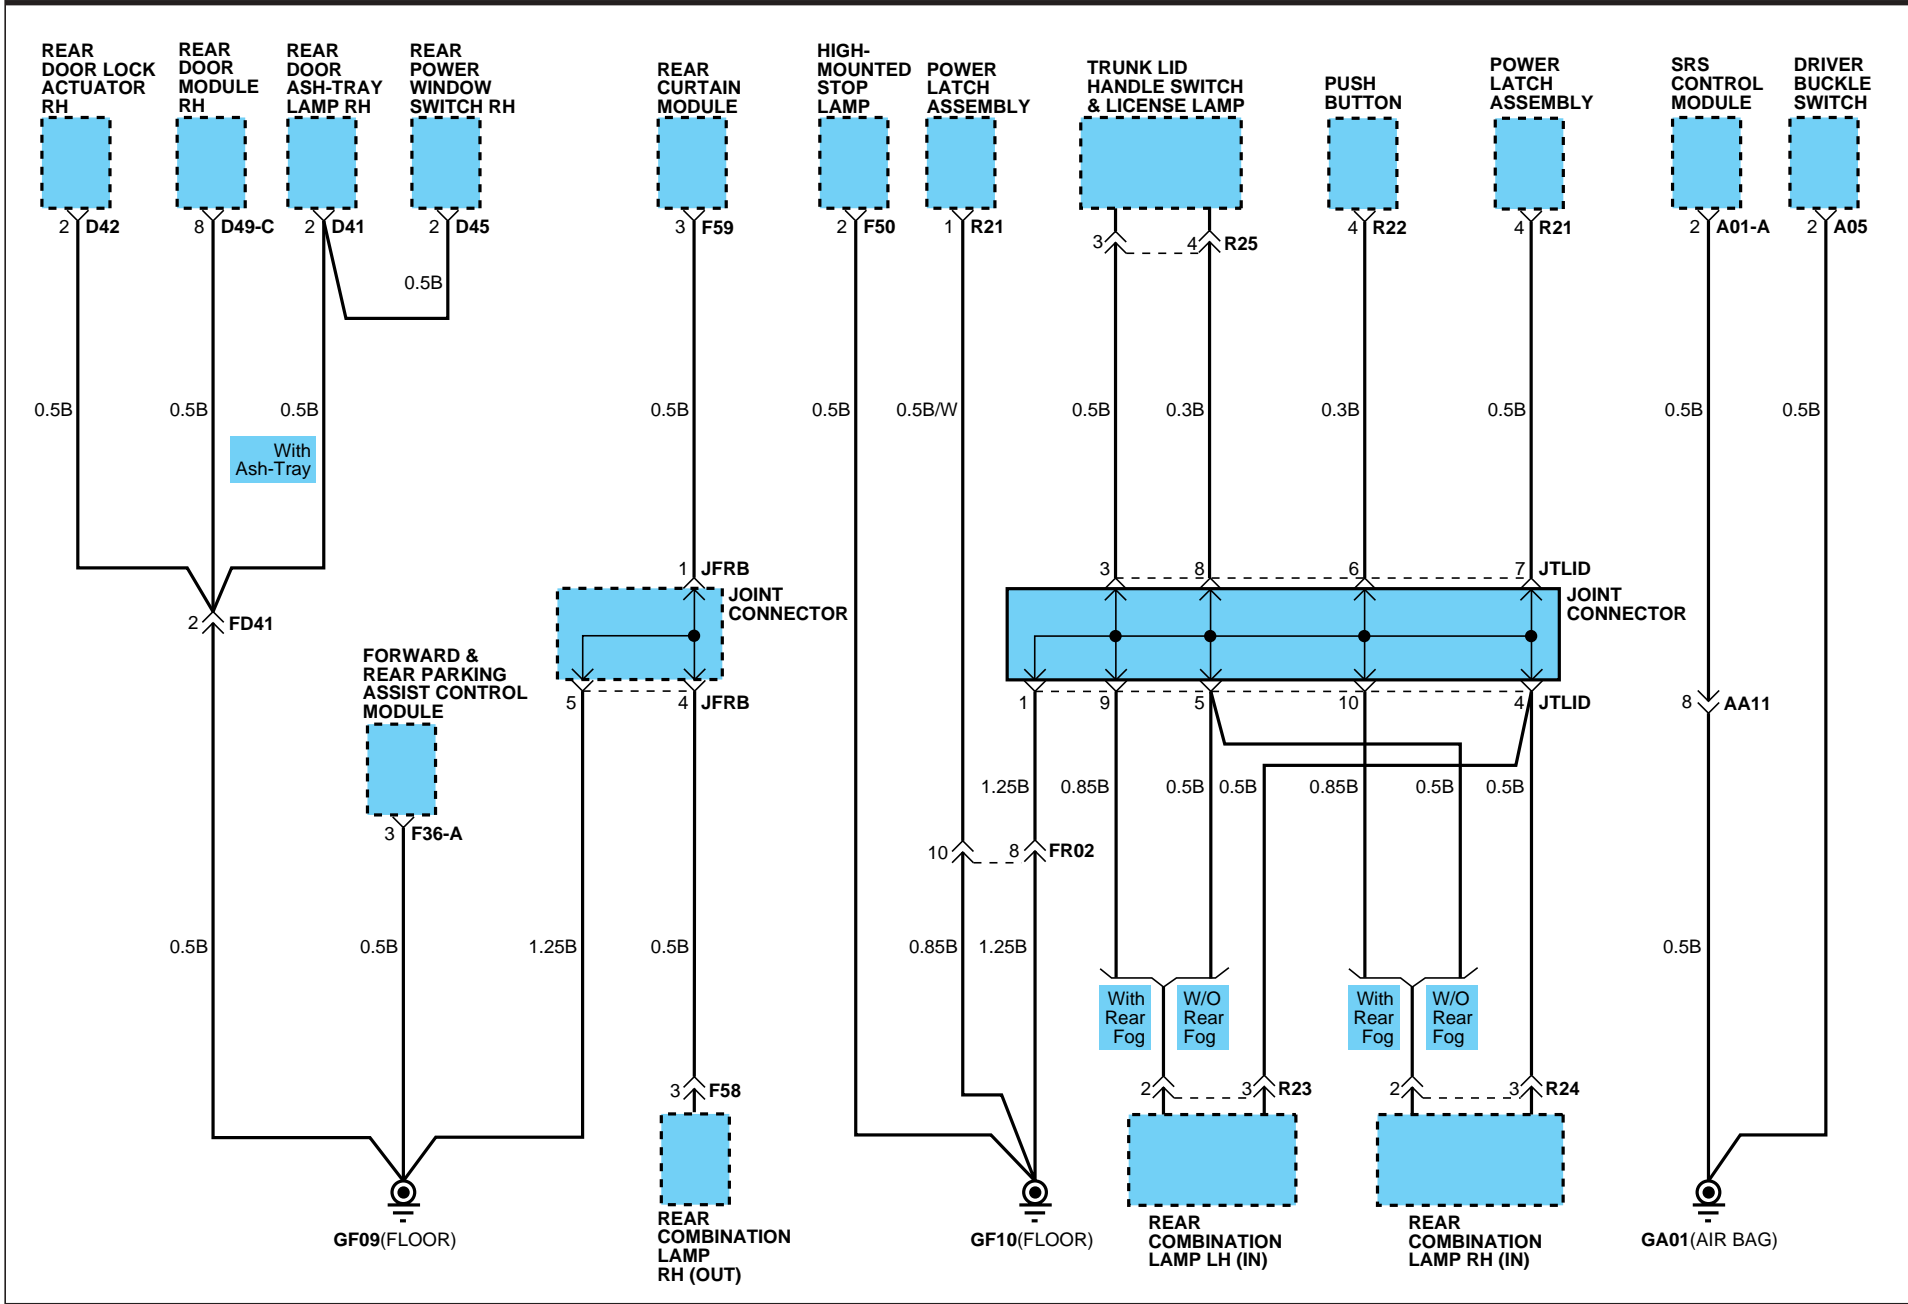

GROUND DISTRIBUTION


Ground Distribution (12)

SD130-12

MEMO

Data Link Details (1)


SD200-1

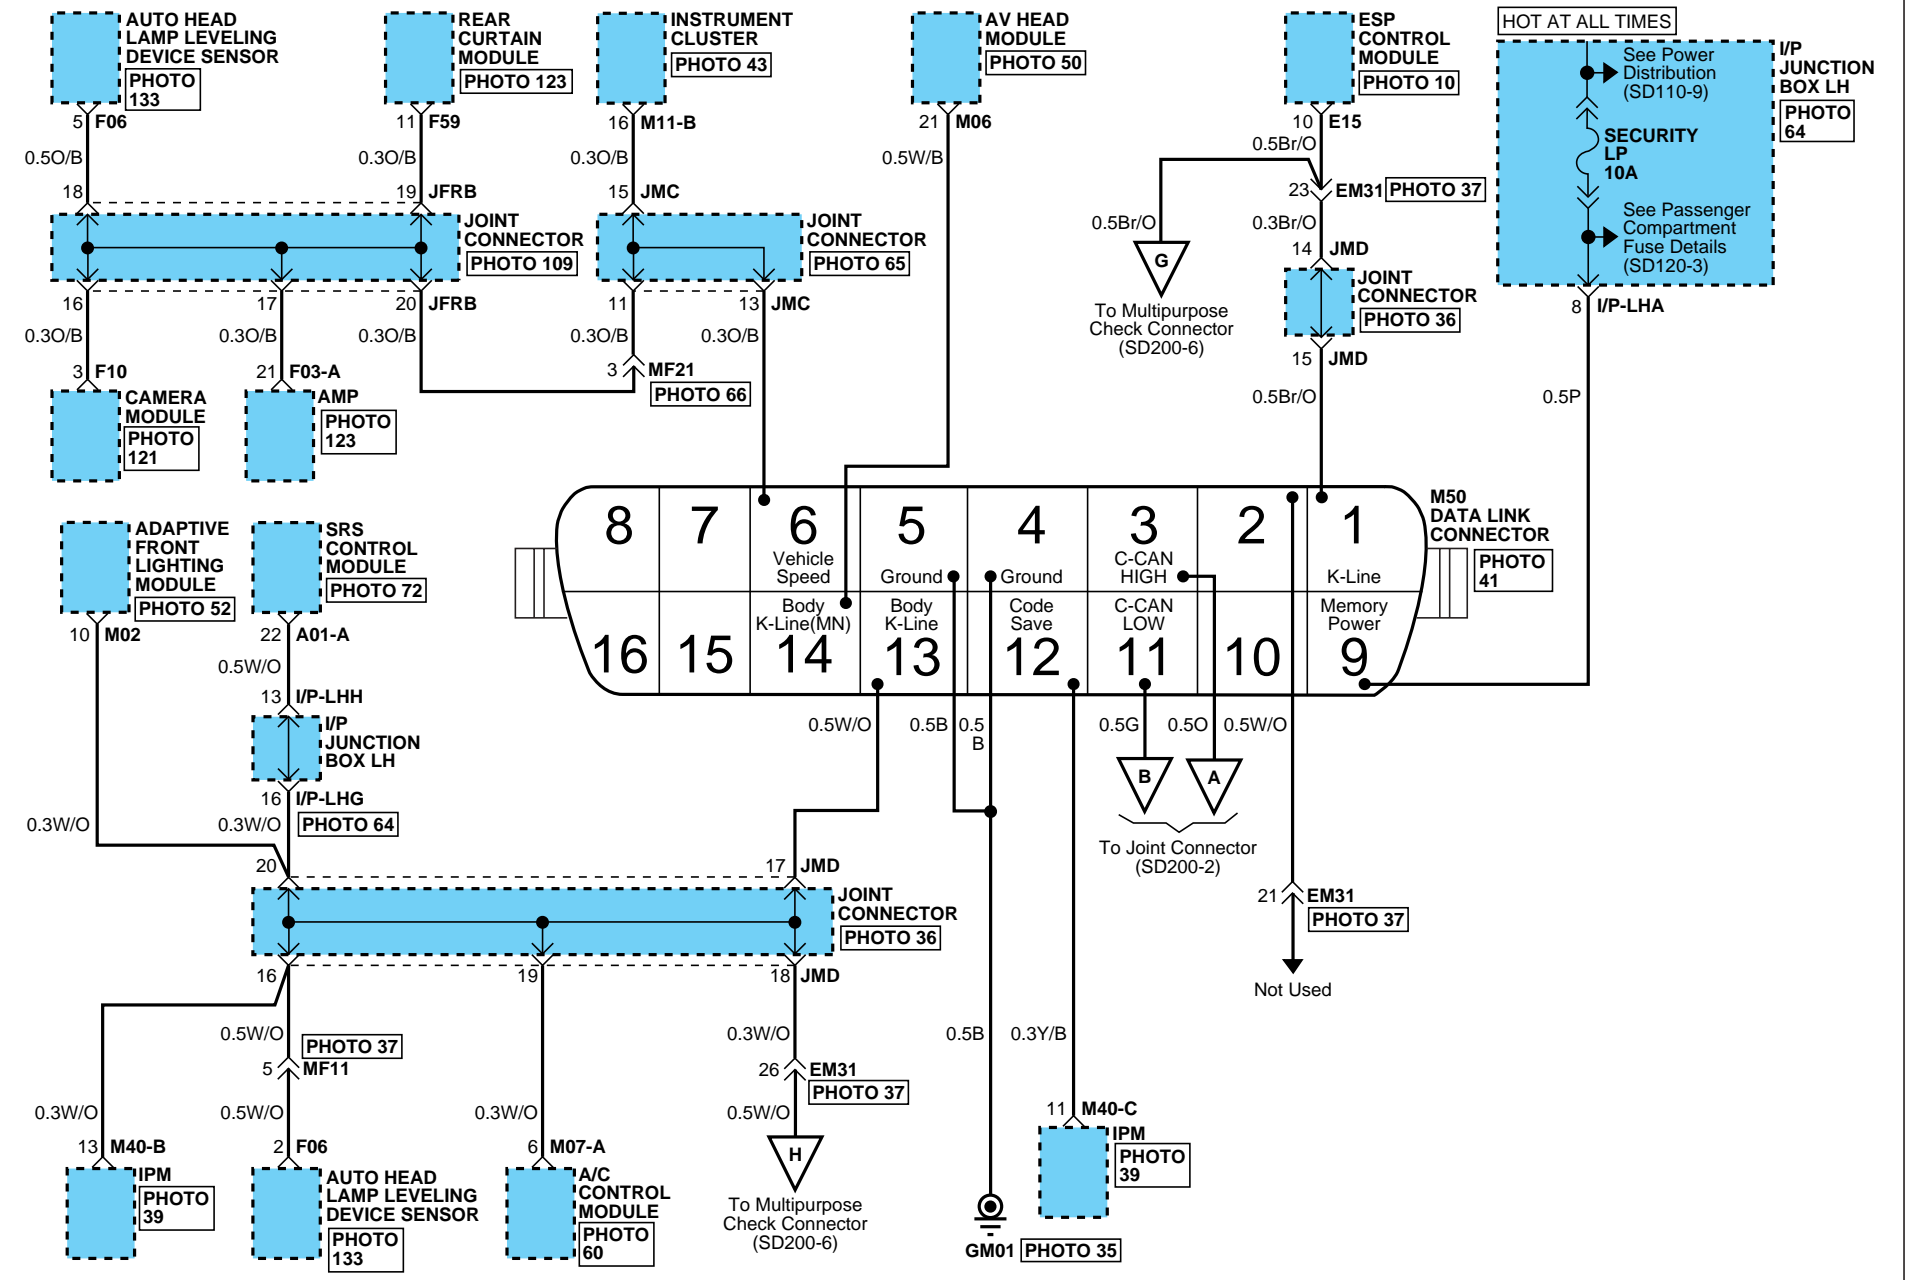

DATA LINK DETAILS

Data Link Details (2)


SD200-2

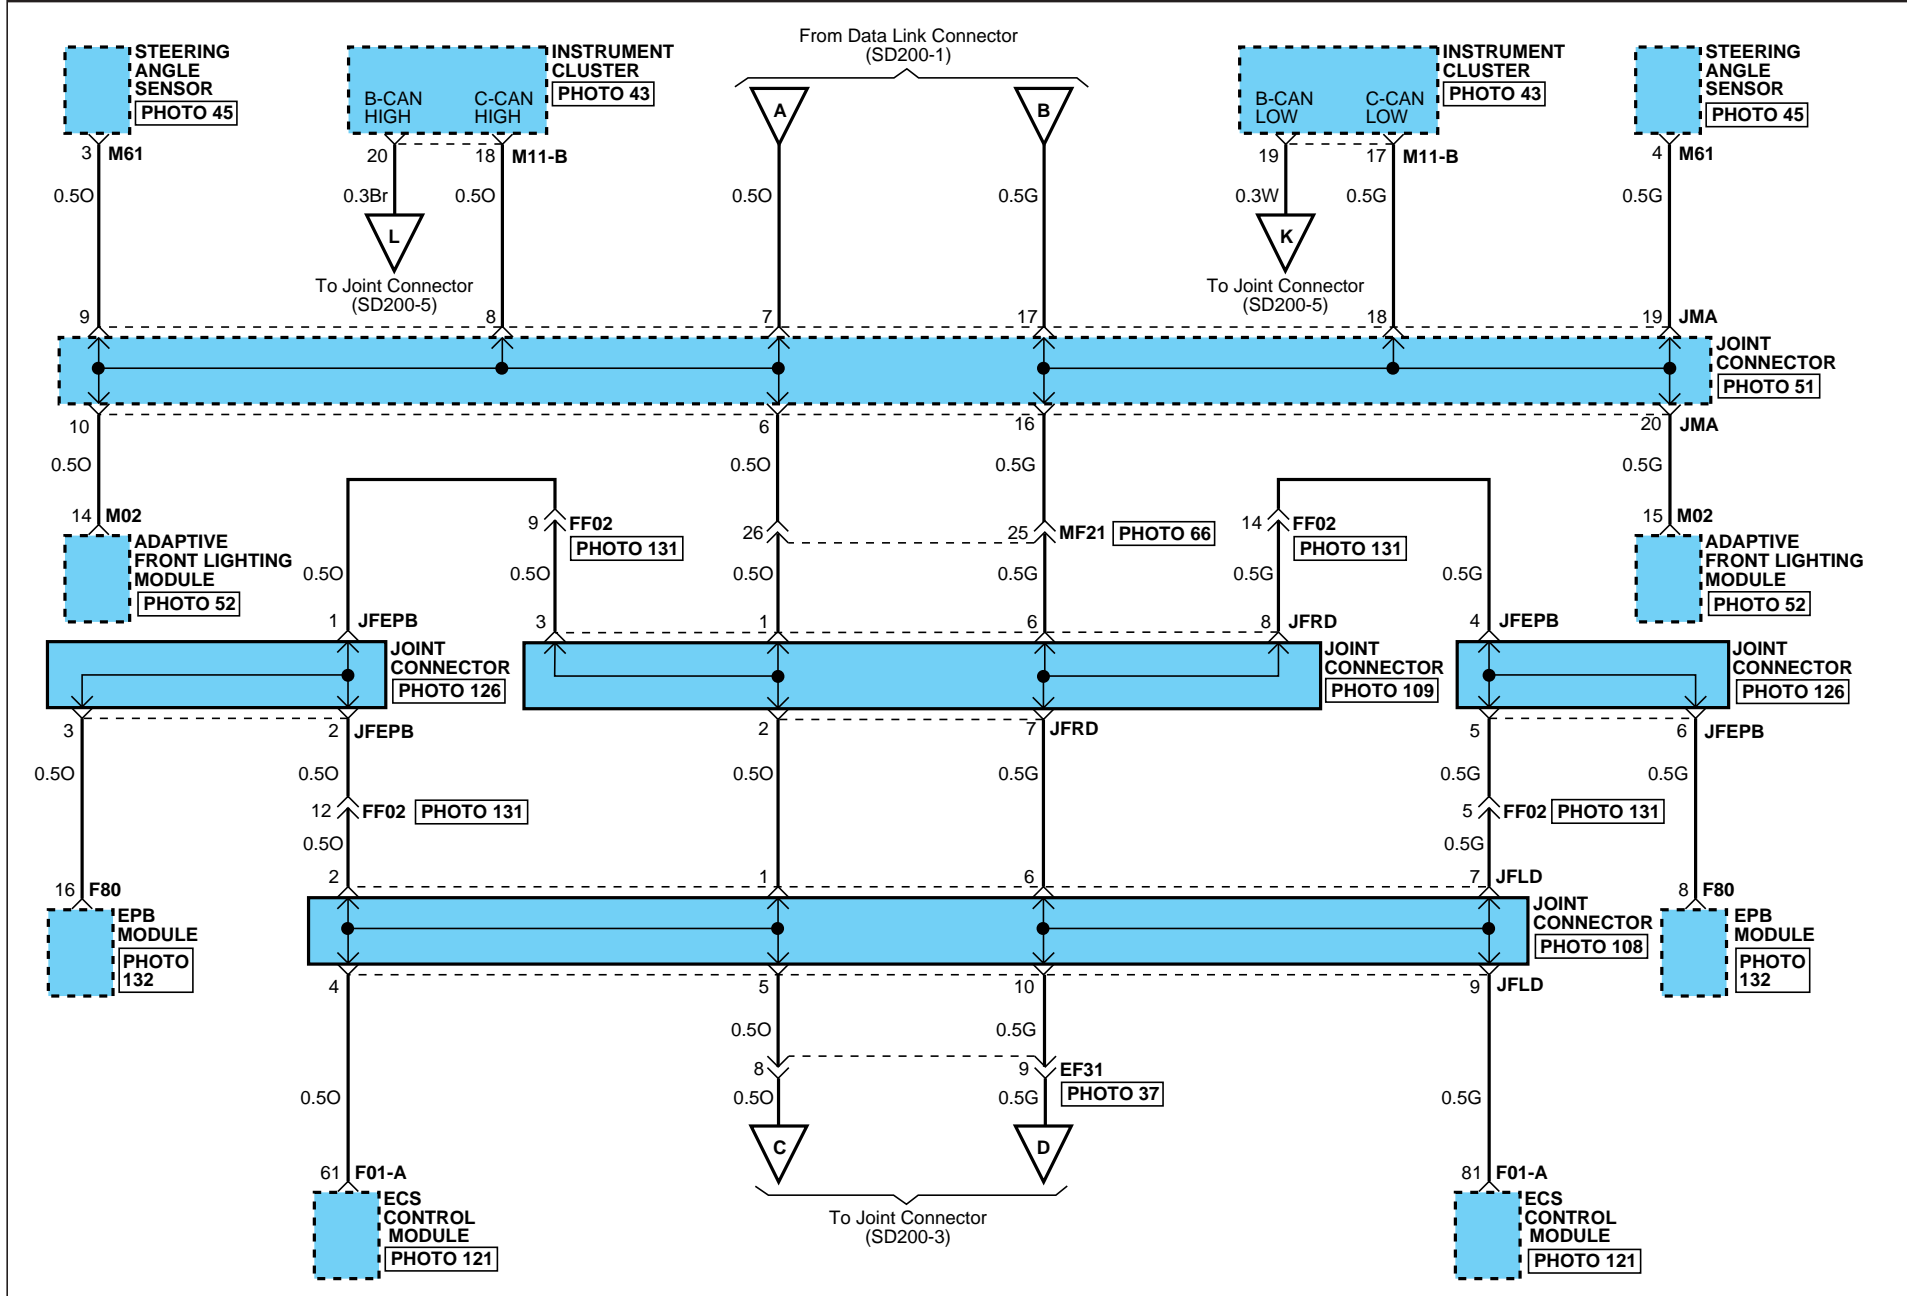

DATA LINK DETAILS

Data Link Details (3)


SD200-3

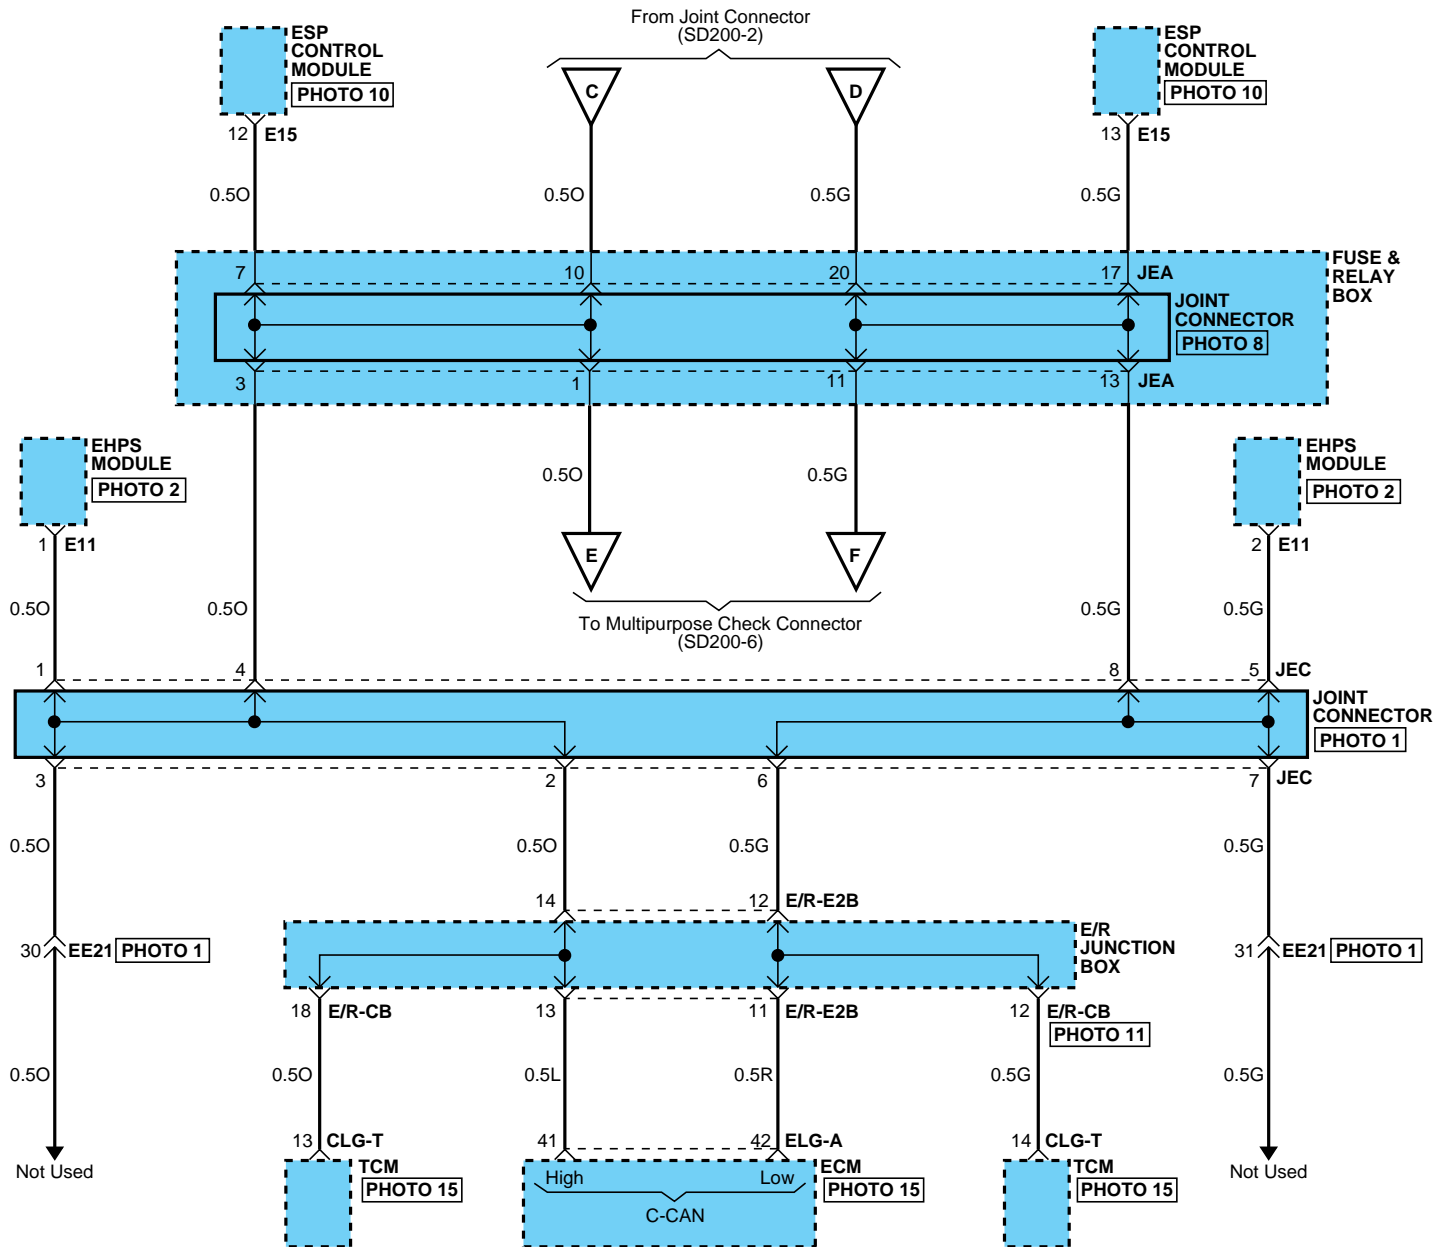

DATA LINK DETAILS

Data Link Details (4)


SD200-4

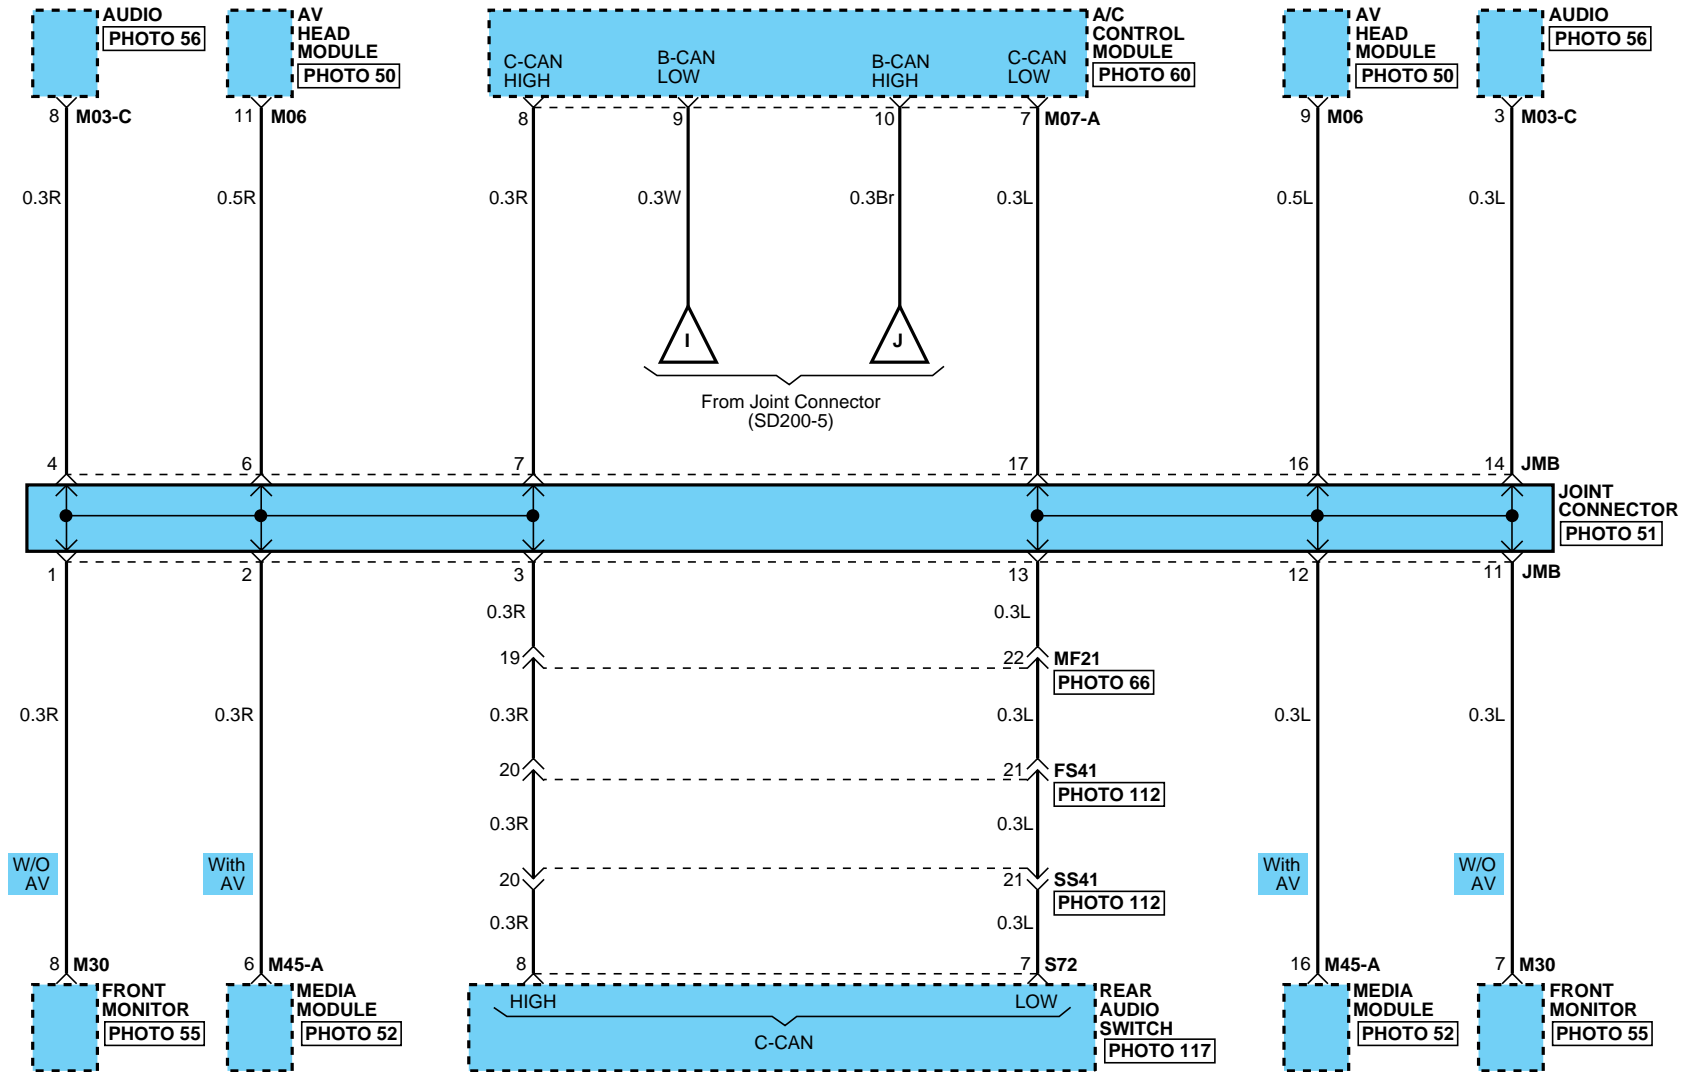

DATA LINK DETAILS

Data Link Details (5)


SD200-5

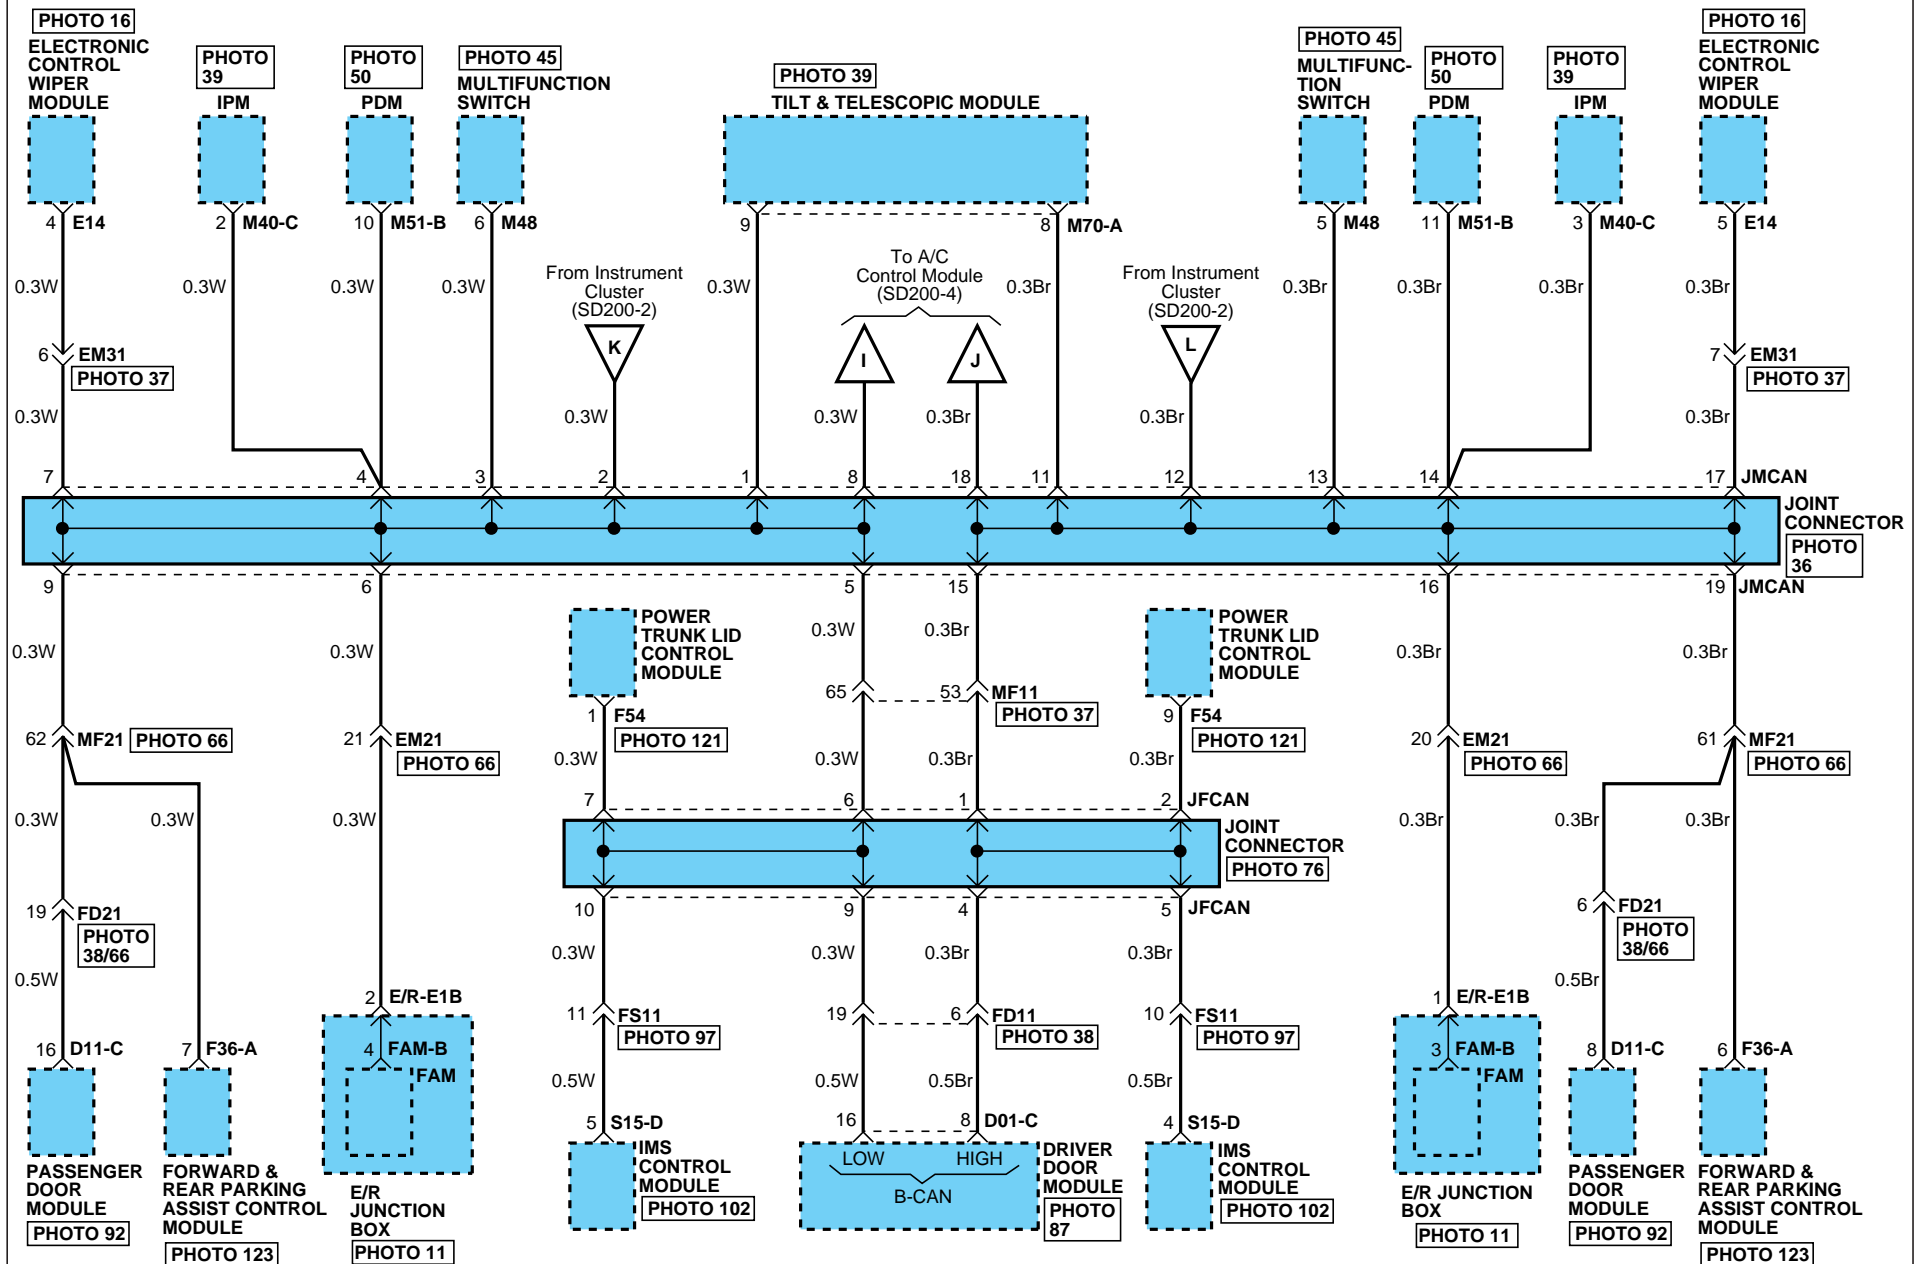

DATA LINK DETAILS

Data Link Details (6)

SD200-6

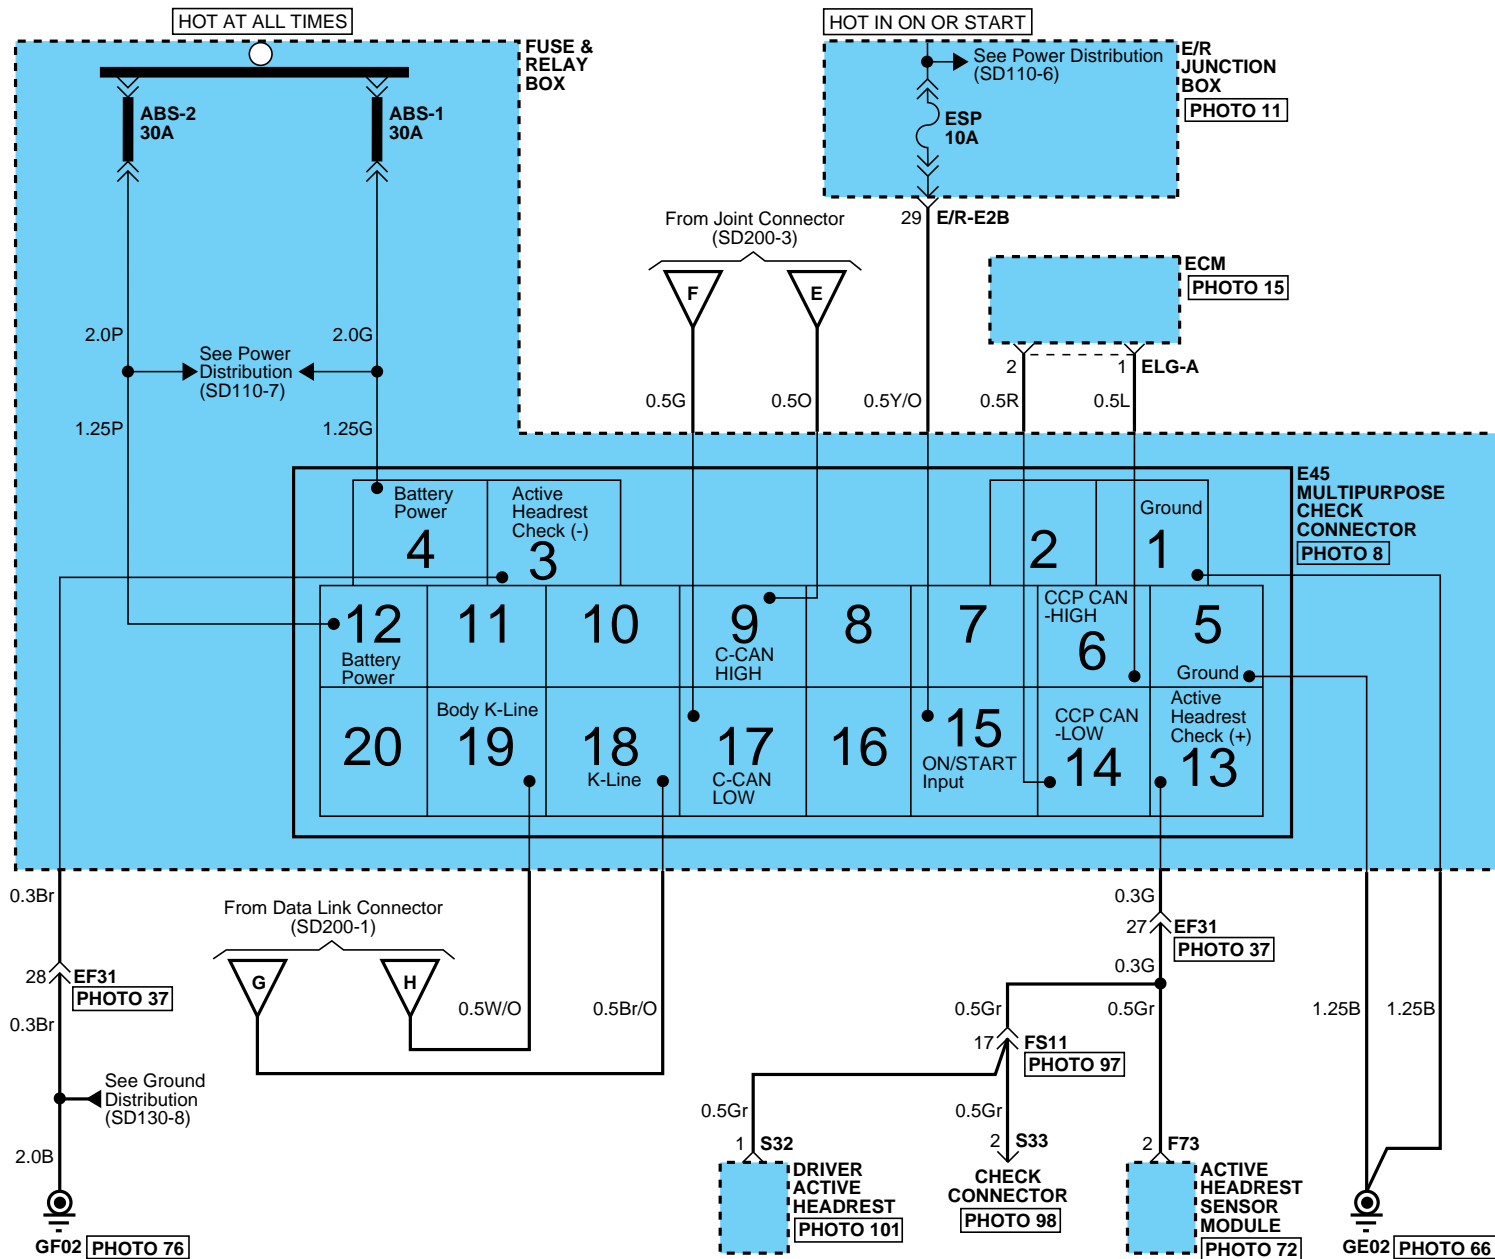


DATA LINK DETAILS

Data Link Details (7)

SD200-7


A01-A

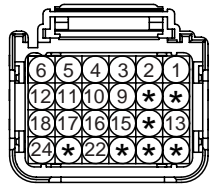

AMP_MQSWP_24F_B


BLANK

 D01-C




AMP_DLI_16F_B_DL

 D11-C



AMP_DLI_16F_B_DL

CLG-T

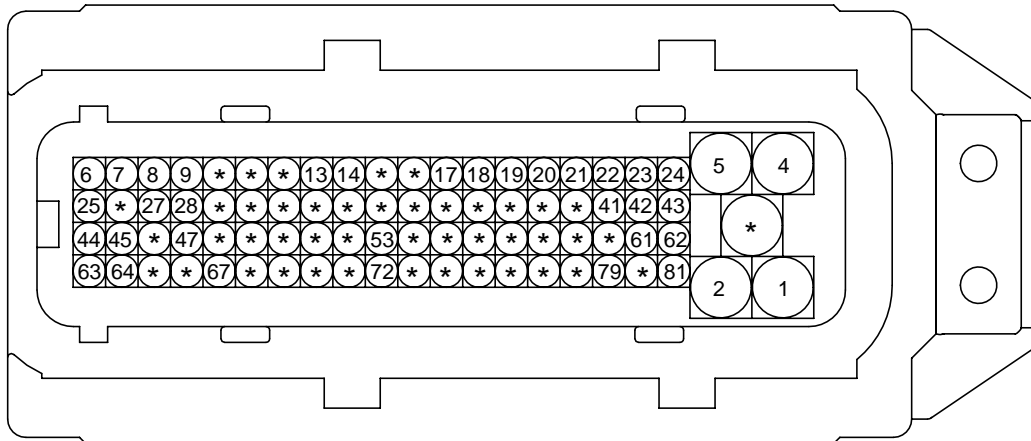


AMP_MQJWP_81F_B_1

BLANK


BLANK

ELG-A

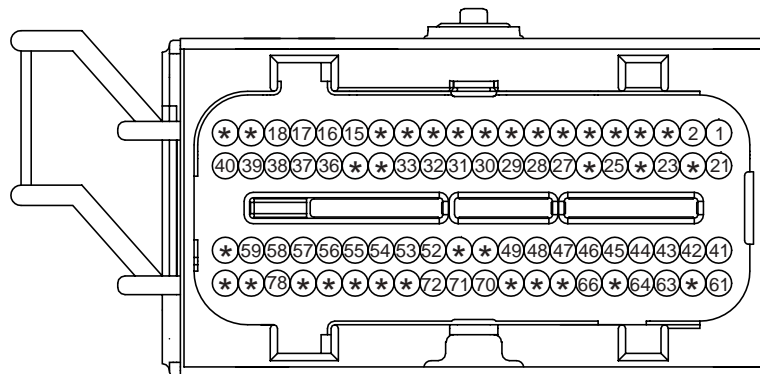


PKD_ECU_80F_Gr_1

E11

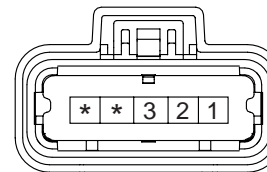


FCL_MINIWP_05F_B

E14

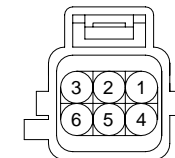

YAZ_110WP_06F_GR

E15

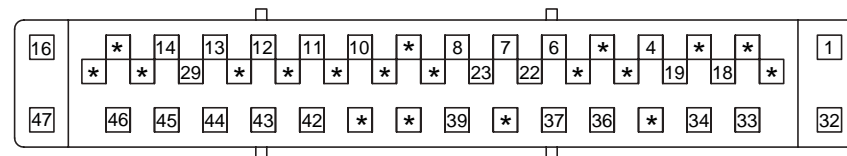


AMP_ESP_47F_L_UNIT

DATA LINK DETAILS


Data Link Details (8)

SD200-8

 E45




E90

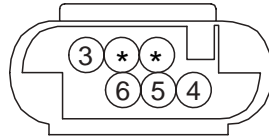


AMP_MQSWP_06F_GR_1

FAM-B

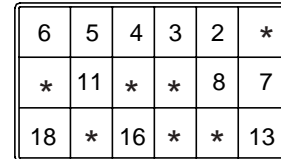


F03-A

 


AMP_0407MII_26F_GY

F01-A

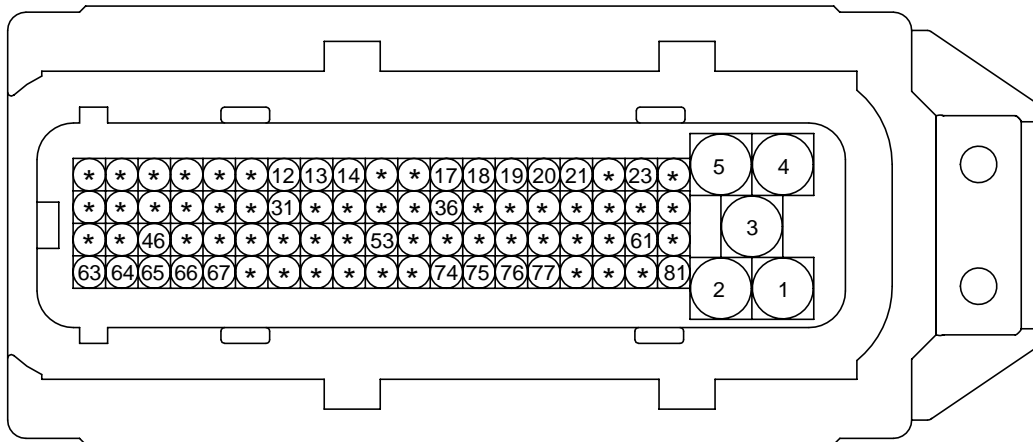


AMP_MQJWP_81F_B_1

F06

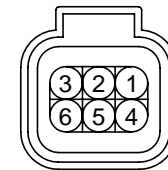


AMP_MCPE_06F_B

 F10




AMP_0401I_24F_B

F36-A

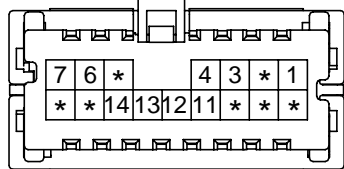


KET_0401I_16F_W

 F54




AMP_070_18F_W

 F59




AMP_070_14F_W

F73

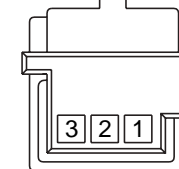


AMP_MQS_03F_V_D

F80

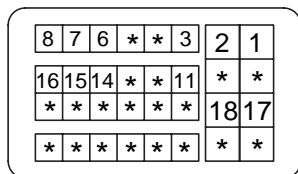


MLX_CMC_32F_Gr

 M02




AMP_MQS_18F_B_1

M03-C

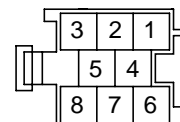

AMP_MTII_08F_L_C3

M07-A

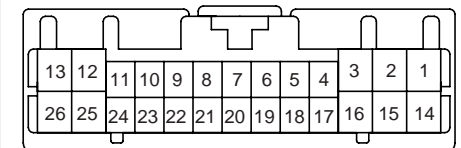


KET_0407_26F_W

DATA LINK DETAILS

Data Link Details (9)


SD200-9

M06

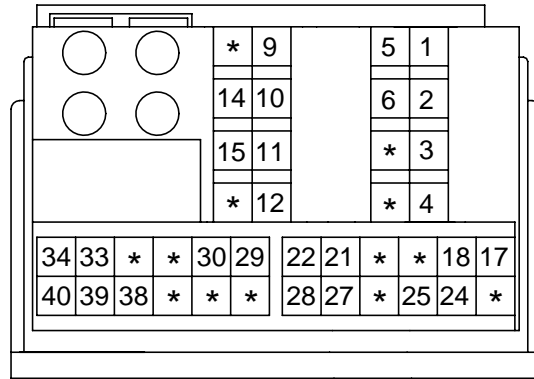


YAZ_OPT_40F_B

M11-B

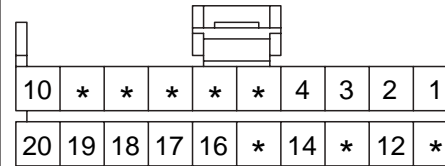


AMP_040M1_20F_B

M30

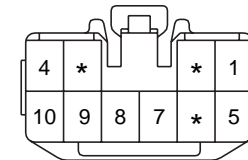


KET_090II_10F_W

M40-B

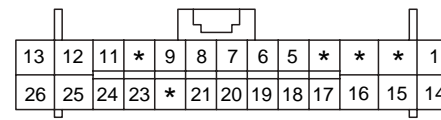


AMP_0407_26F_W_HD

M40-C

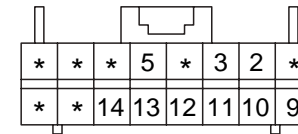


AMP_0407_16F_W_040

M45-A

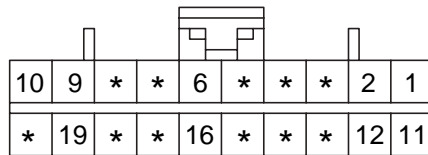


AMP_040M2_20F_B

M48

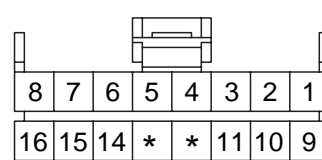


AMP_040M1_16F_B

M50

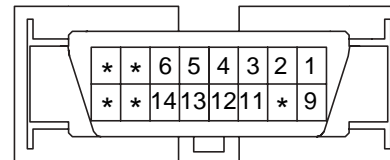


MLX_OBDII_16F_B

M51-B

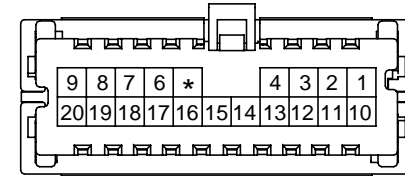


KET_040III_20F_W

M61

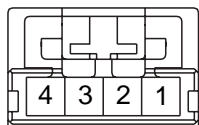


AMP_MQS_04F_B_040

M70-A

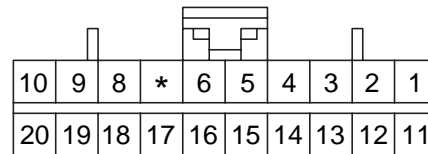


AMP_040M2_20F_B

 S15-D




AMP_040MK2_16F_B

S32

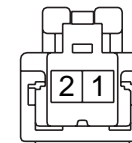


KET_040III_02F_W

 S33



KET_090II_02M_W

S72

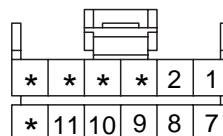

AMP_040MK1_12F_B

BLANK

BLANK

DATA LINK DETAILS


Data Link Details (10)

SD200-10

MEMO

Cooling System (1)

SD253-1

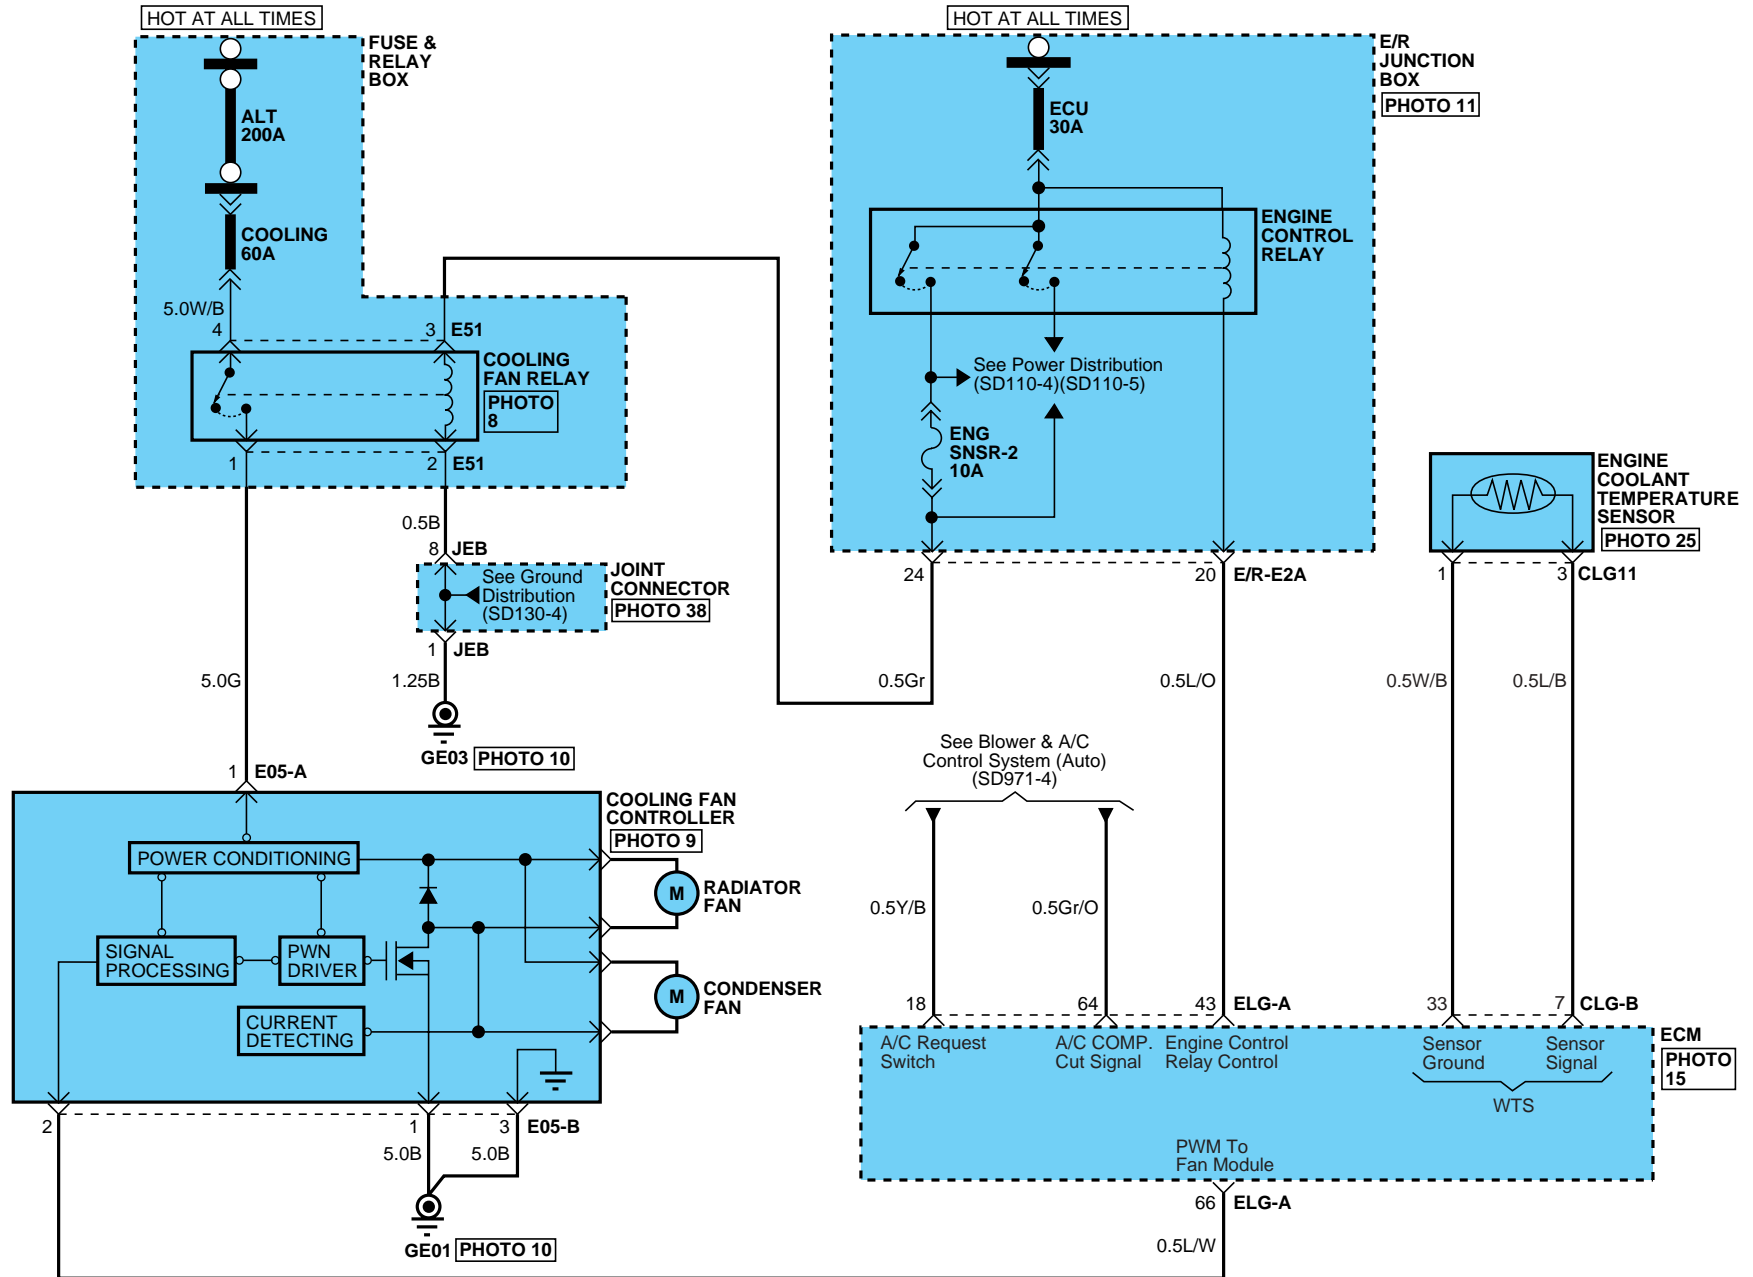


COOLING SYSTEM

Cooling System (2)


SD253-2

CLG-B

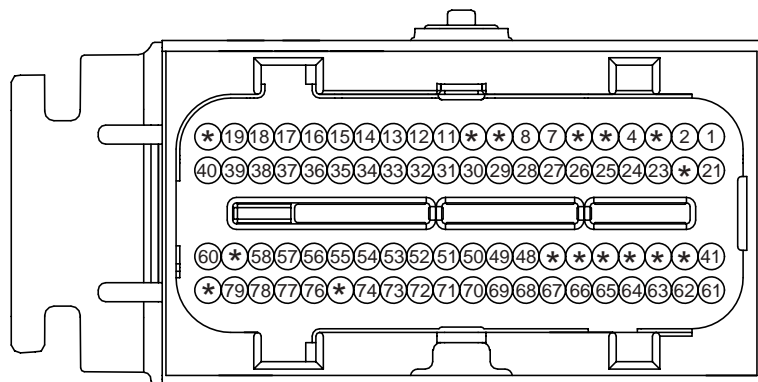


PKD_ECU_80F_B_2

ELG-A

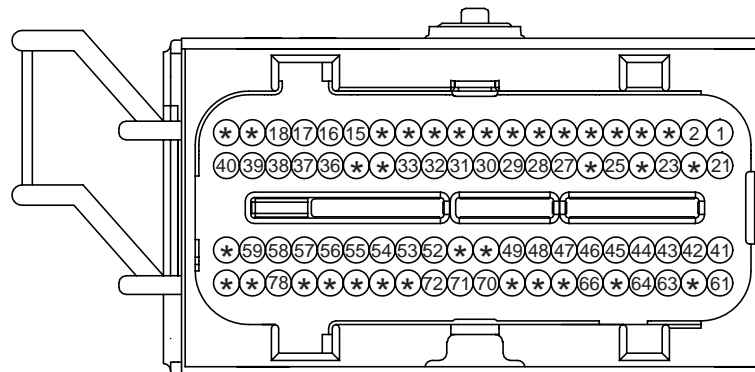

PKD_ECU_80F_Gr_1

CLG11

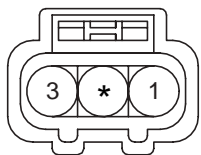


KUM_62Z_03F_B_WTS

E05-A




KET_312IWP_01F_B

E05-B

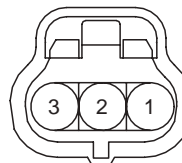

KET_3118_03F_B

 E51




CR04F040

MFI CONTROL SYSTEM

EB5FE703

MFI Control System (1)


SD313-1

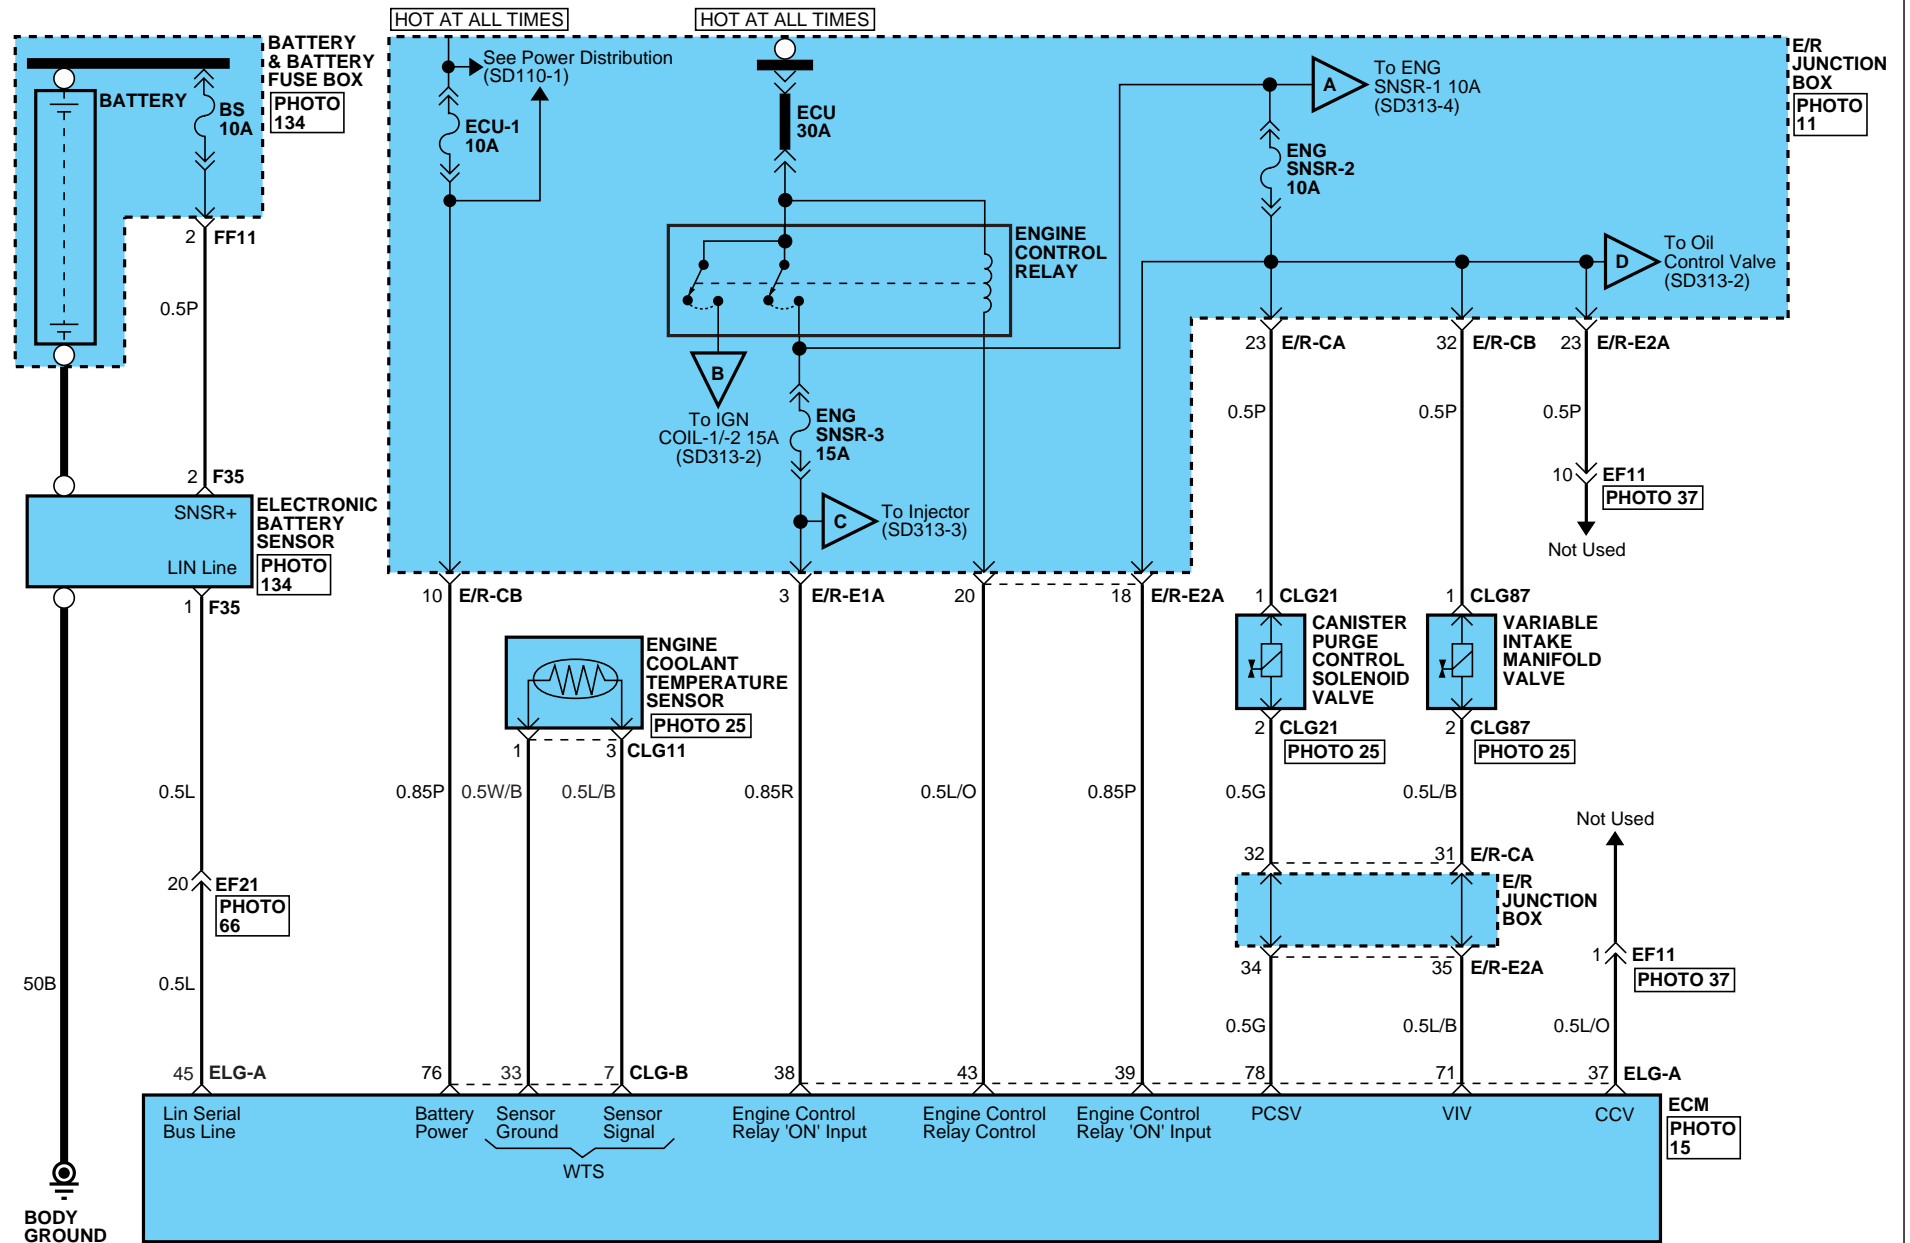

MFI CONTROL SYSTEM

MFI Control System (2)


SD313-2

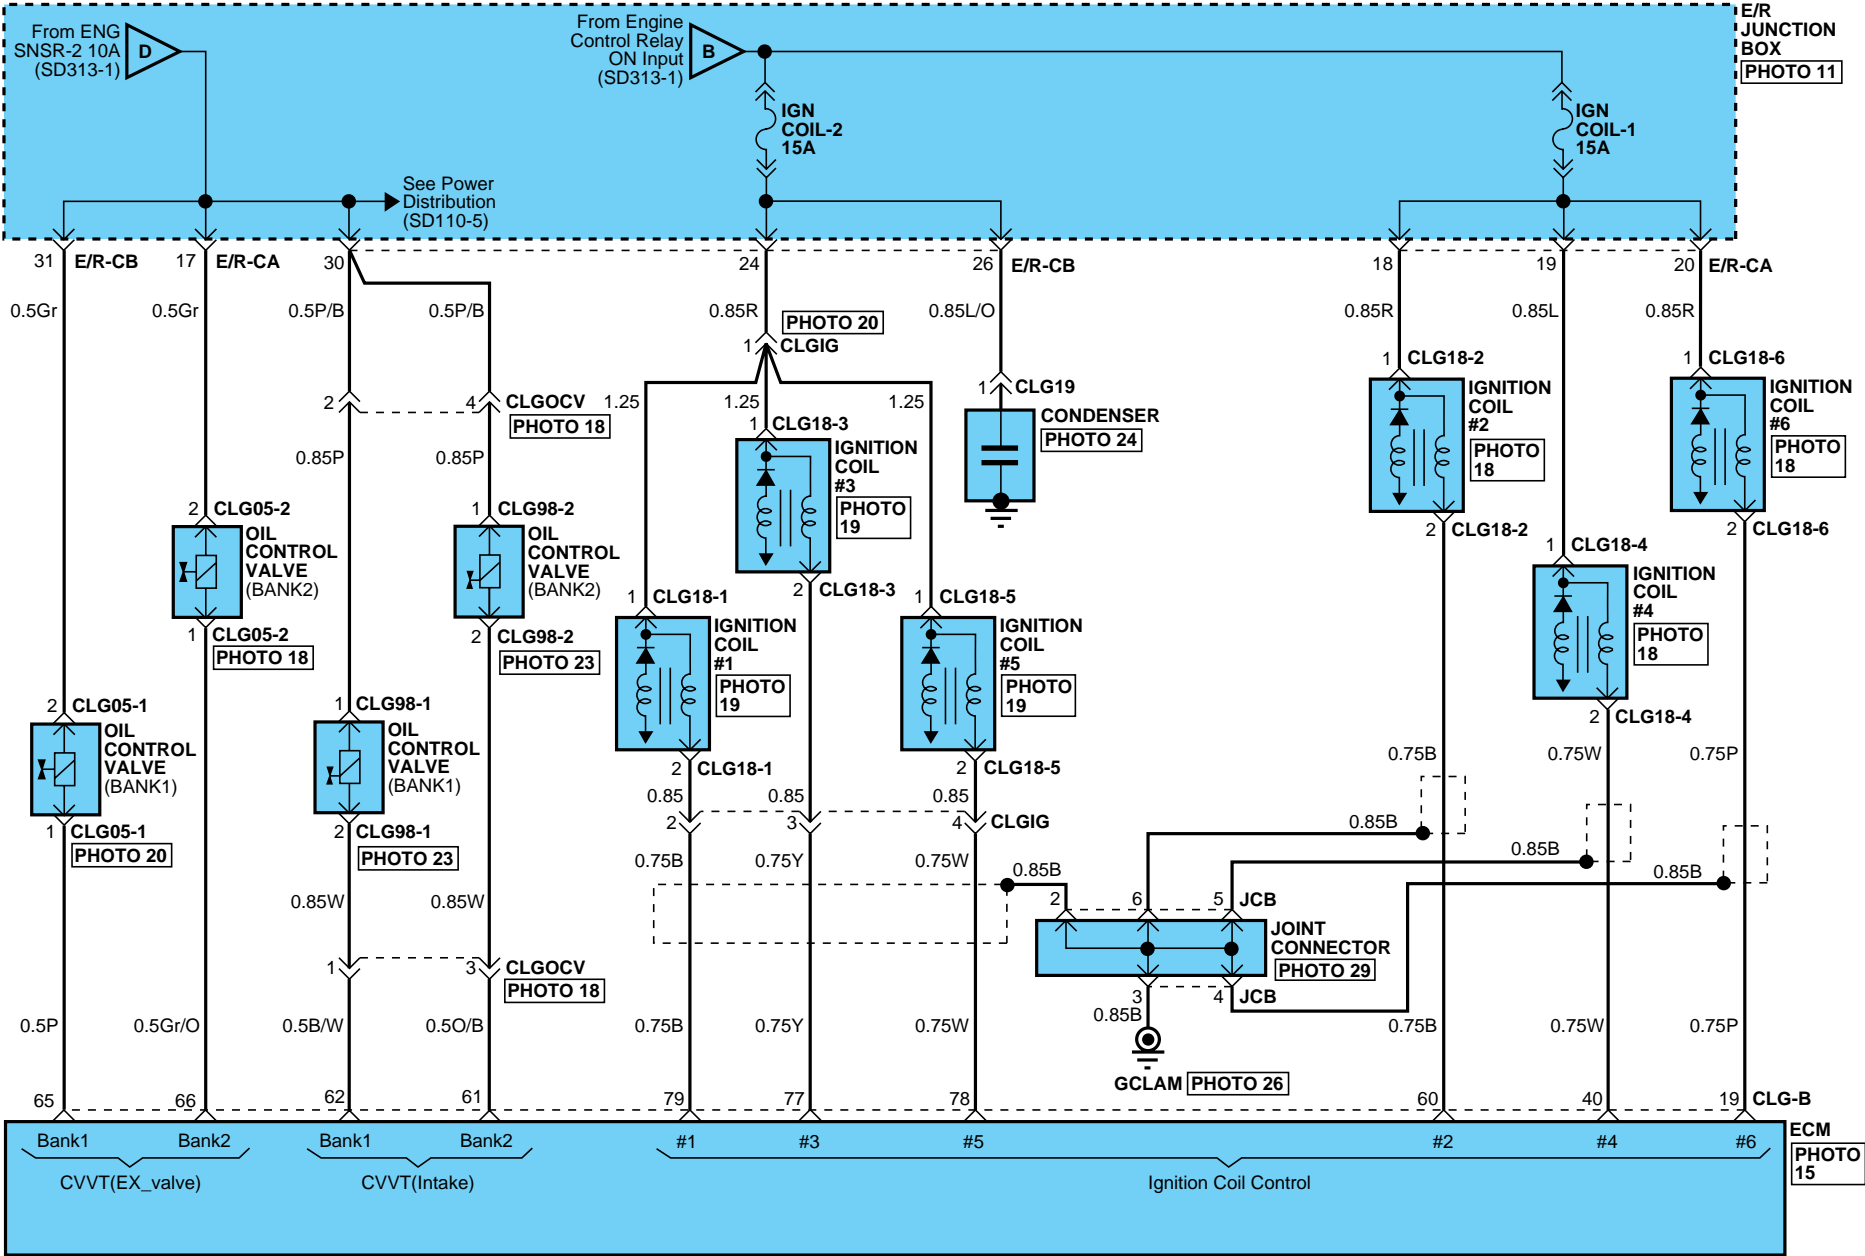

MFI CONTROL SYSTEM

MFI Control System (3)


SD313-3

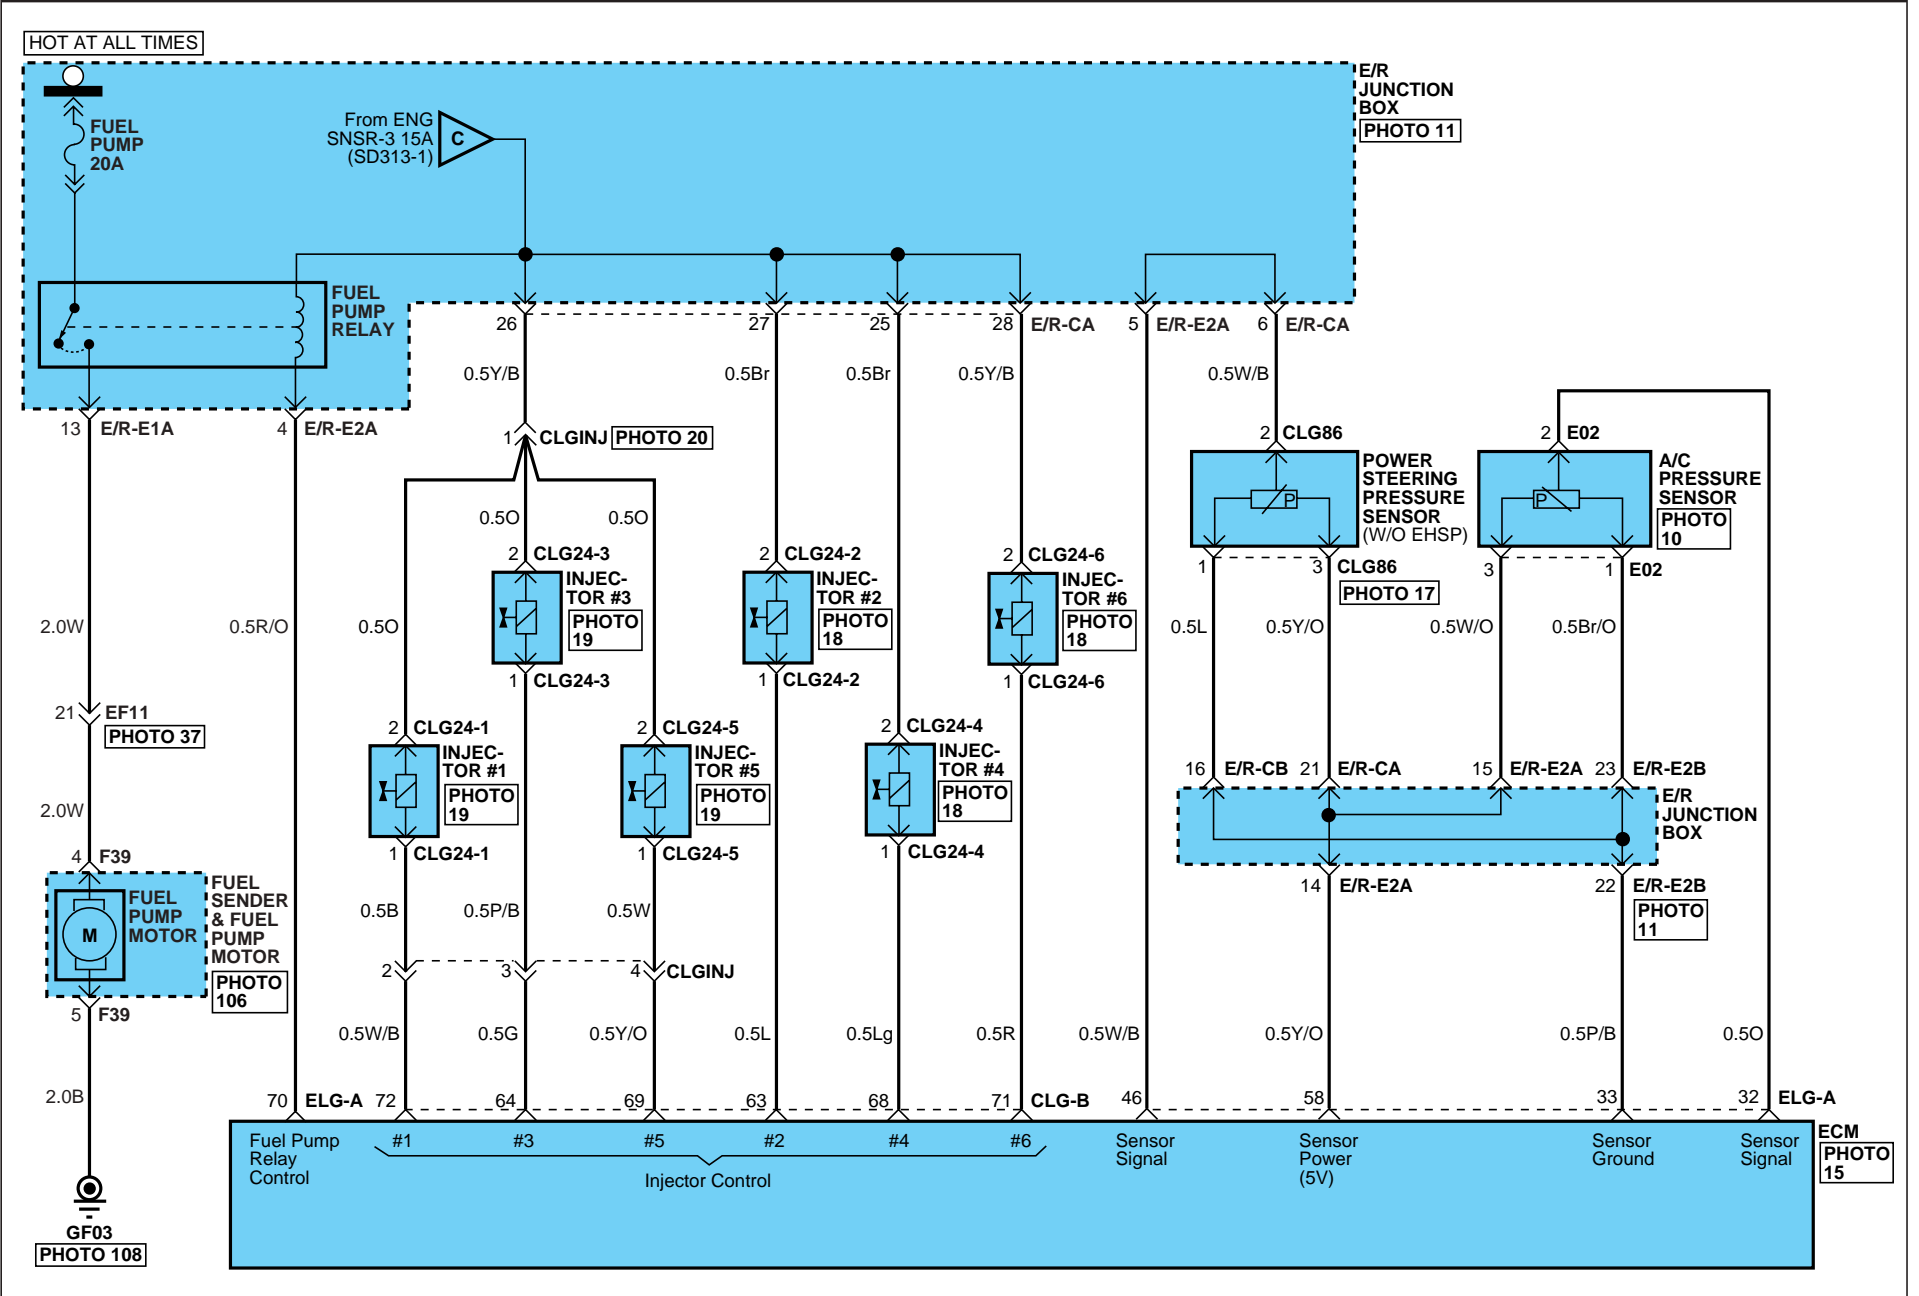

MFI CONTROL SYSTEM

MFI Control System (4)


SD313-4

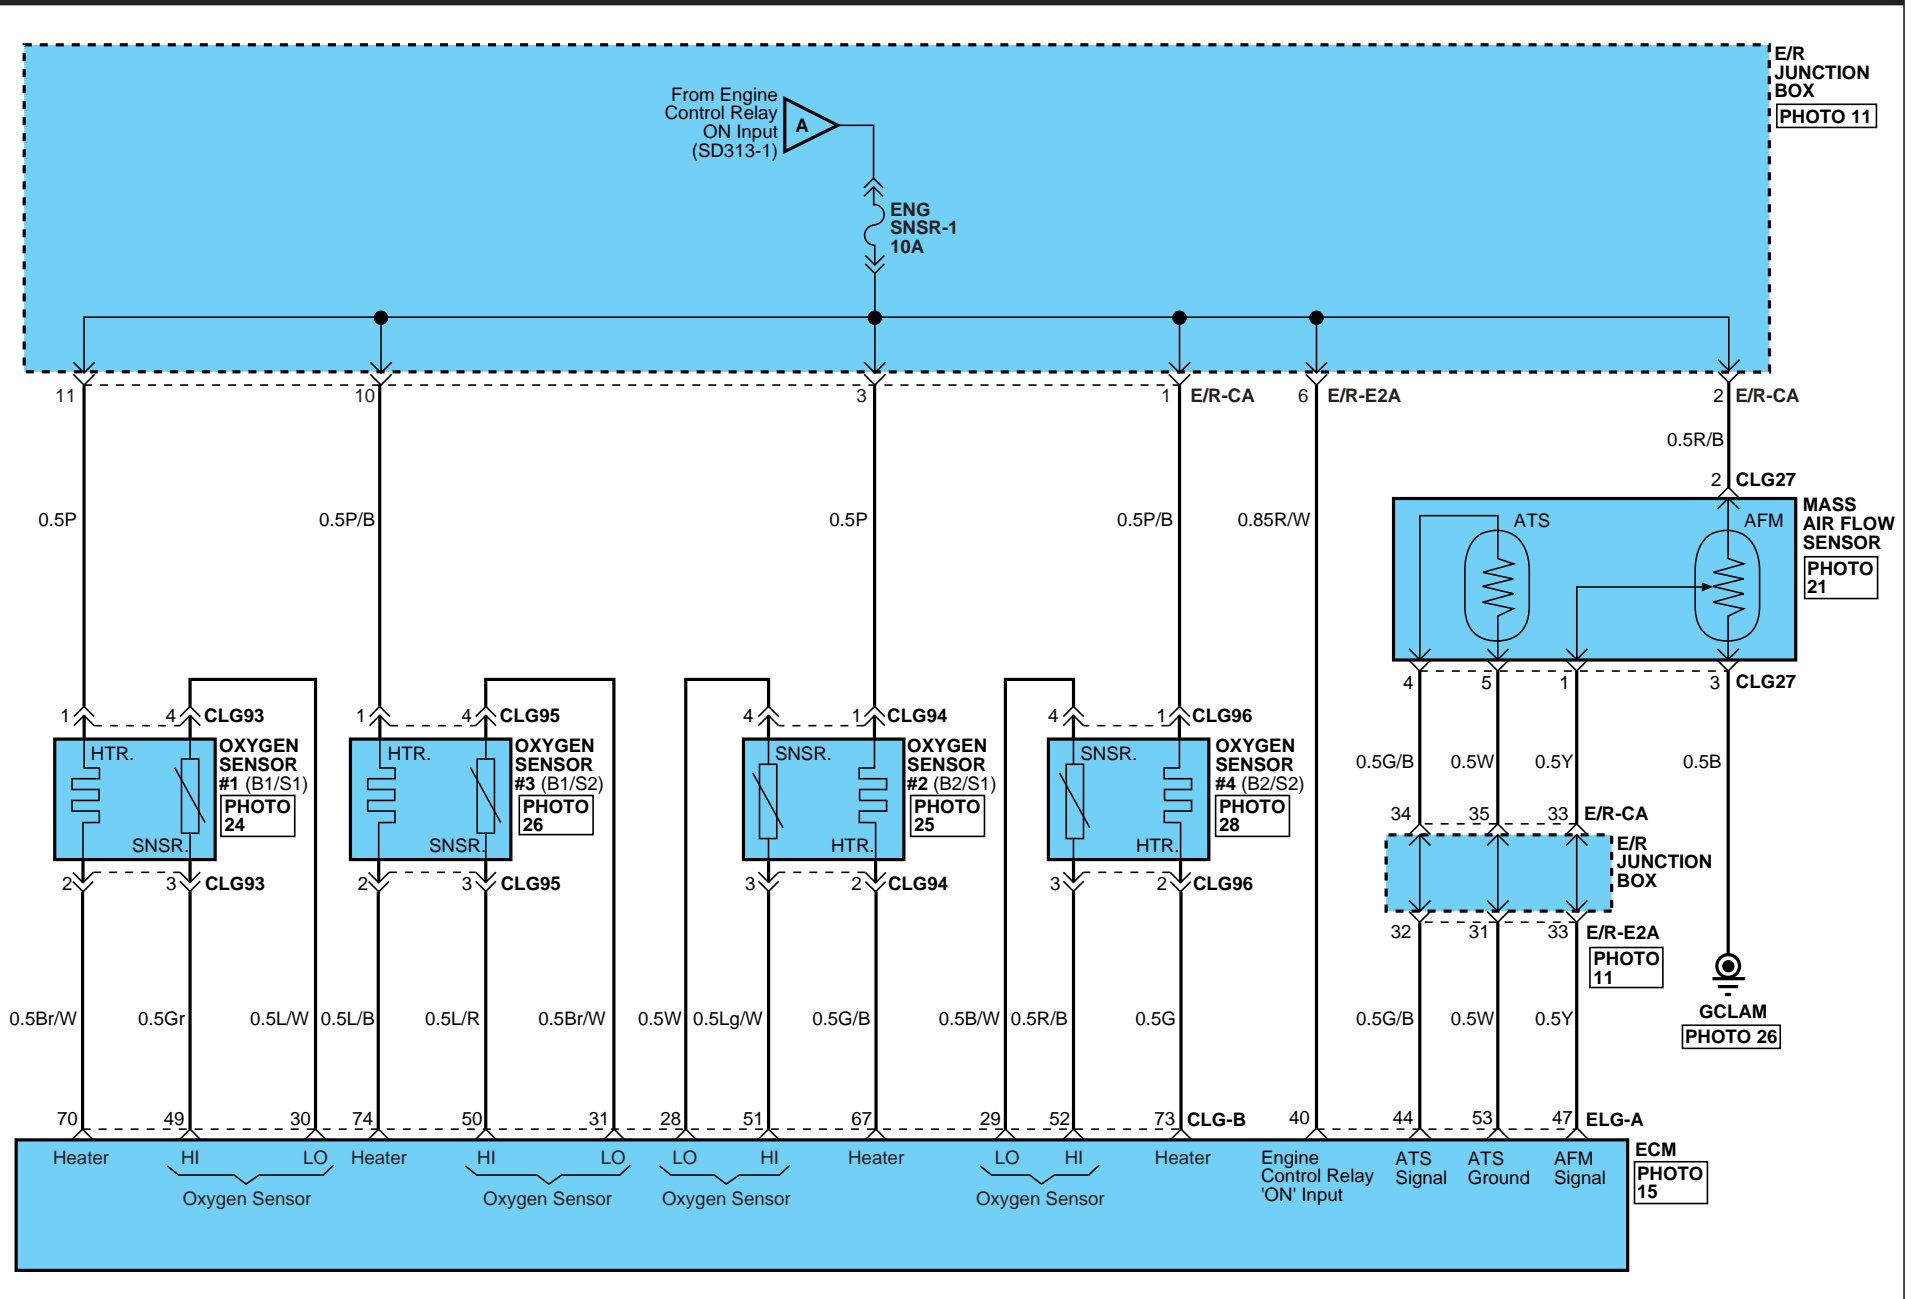


MFI CONTROL SYSTEM

MFI Control System (5)

SD313-5

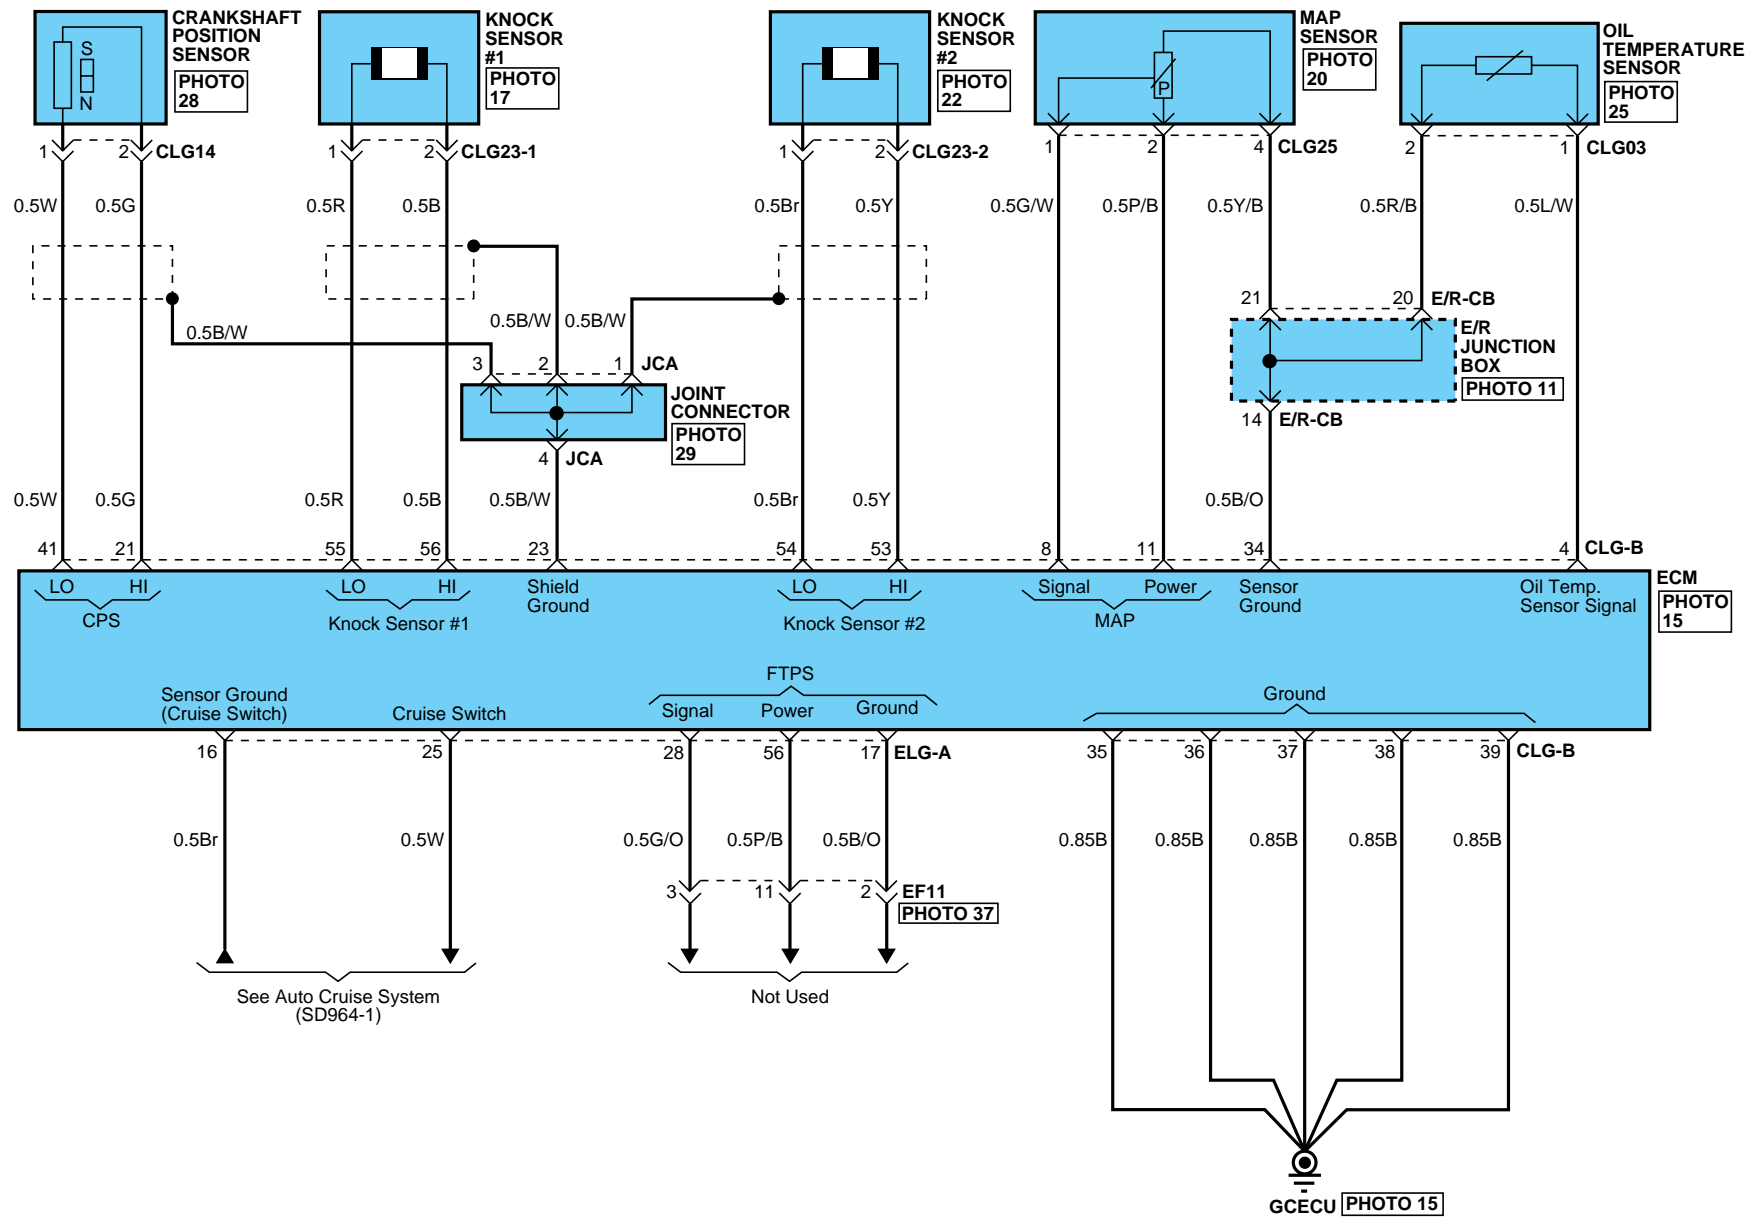


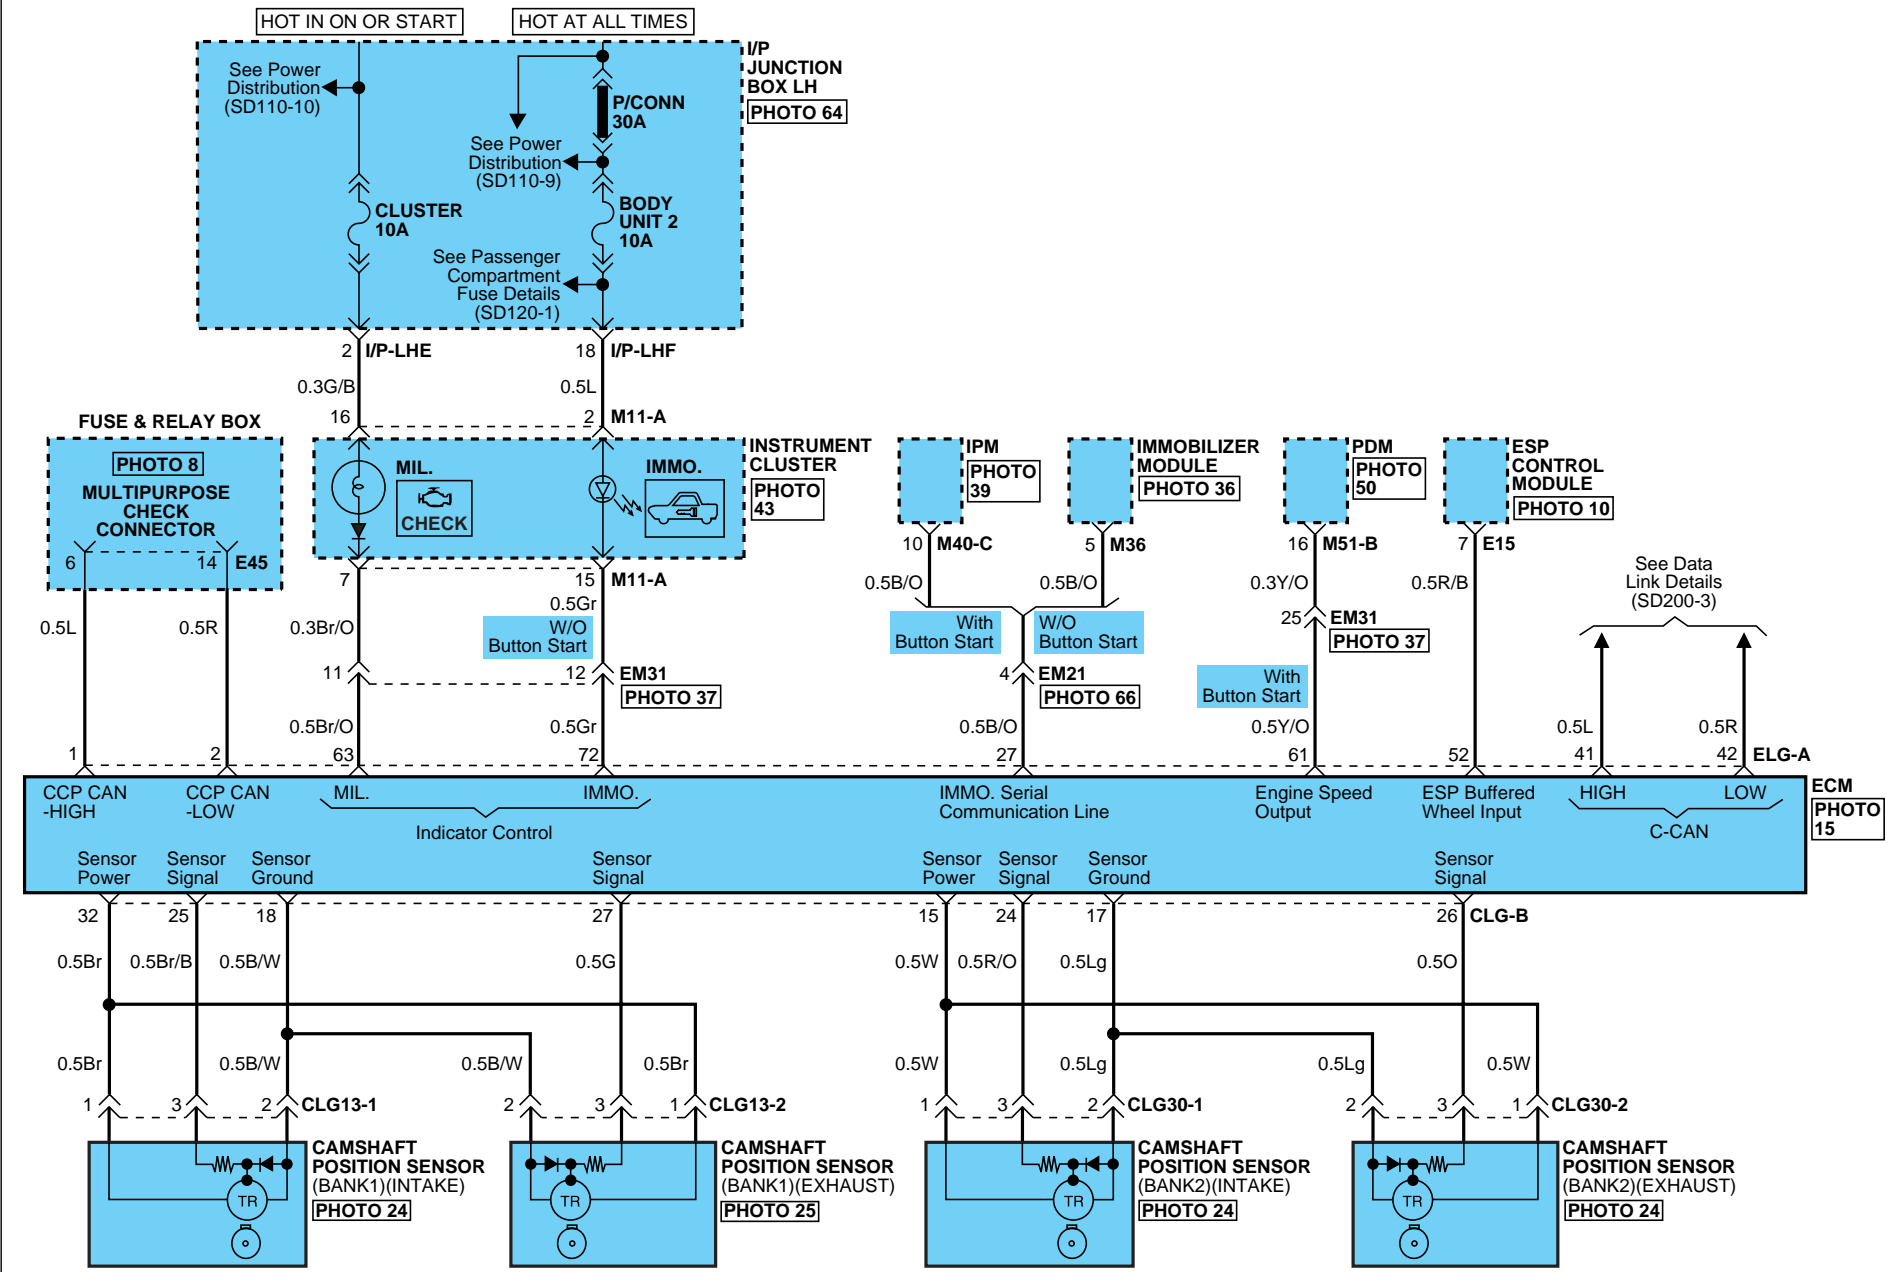

MFI CONTROL SYSTEM

MFI Control System (7)

SD313-7

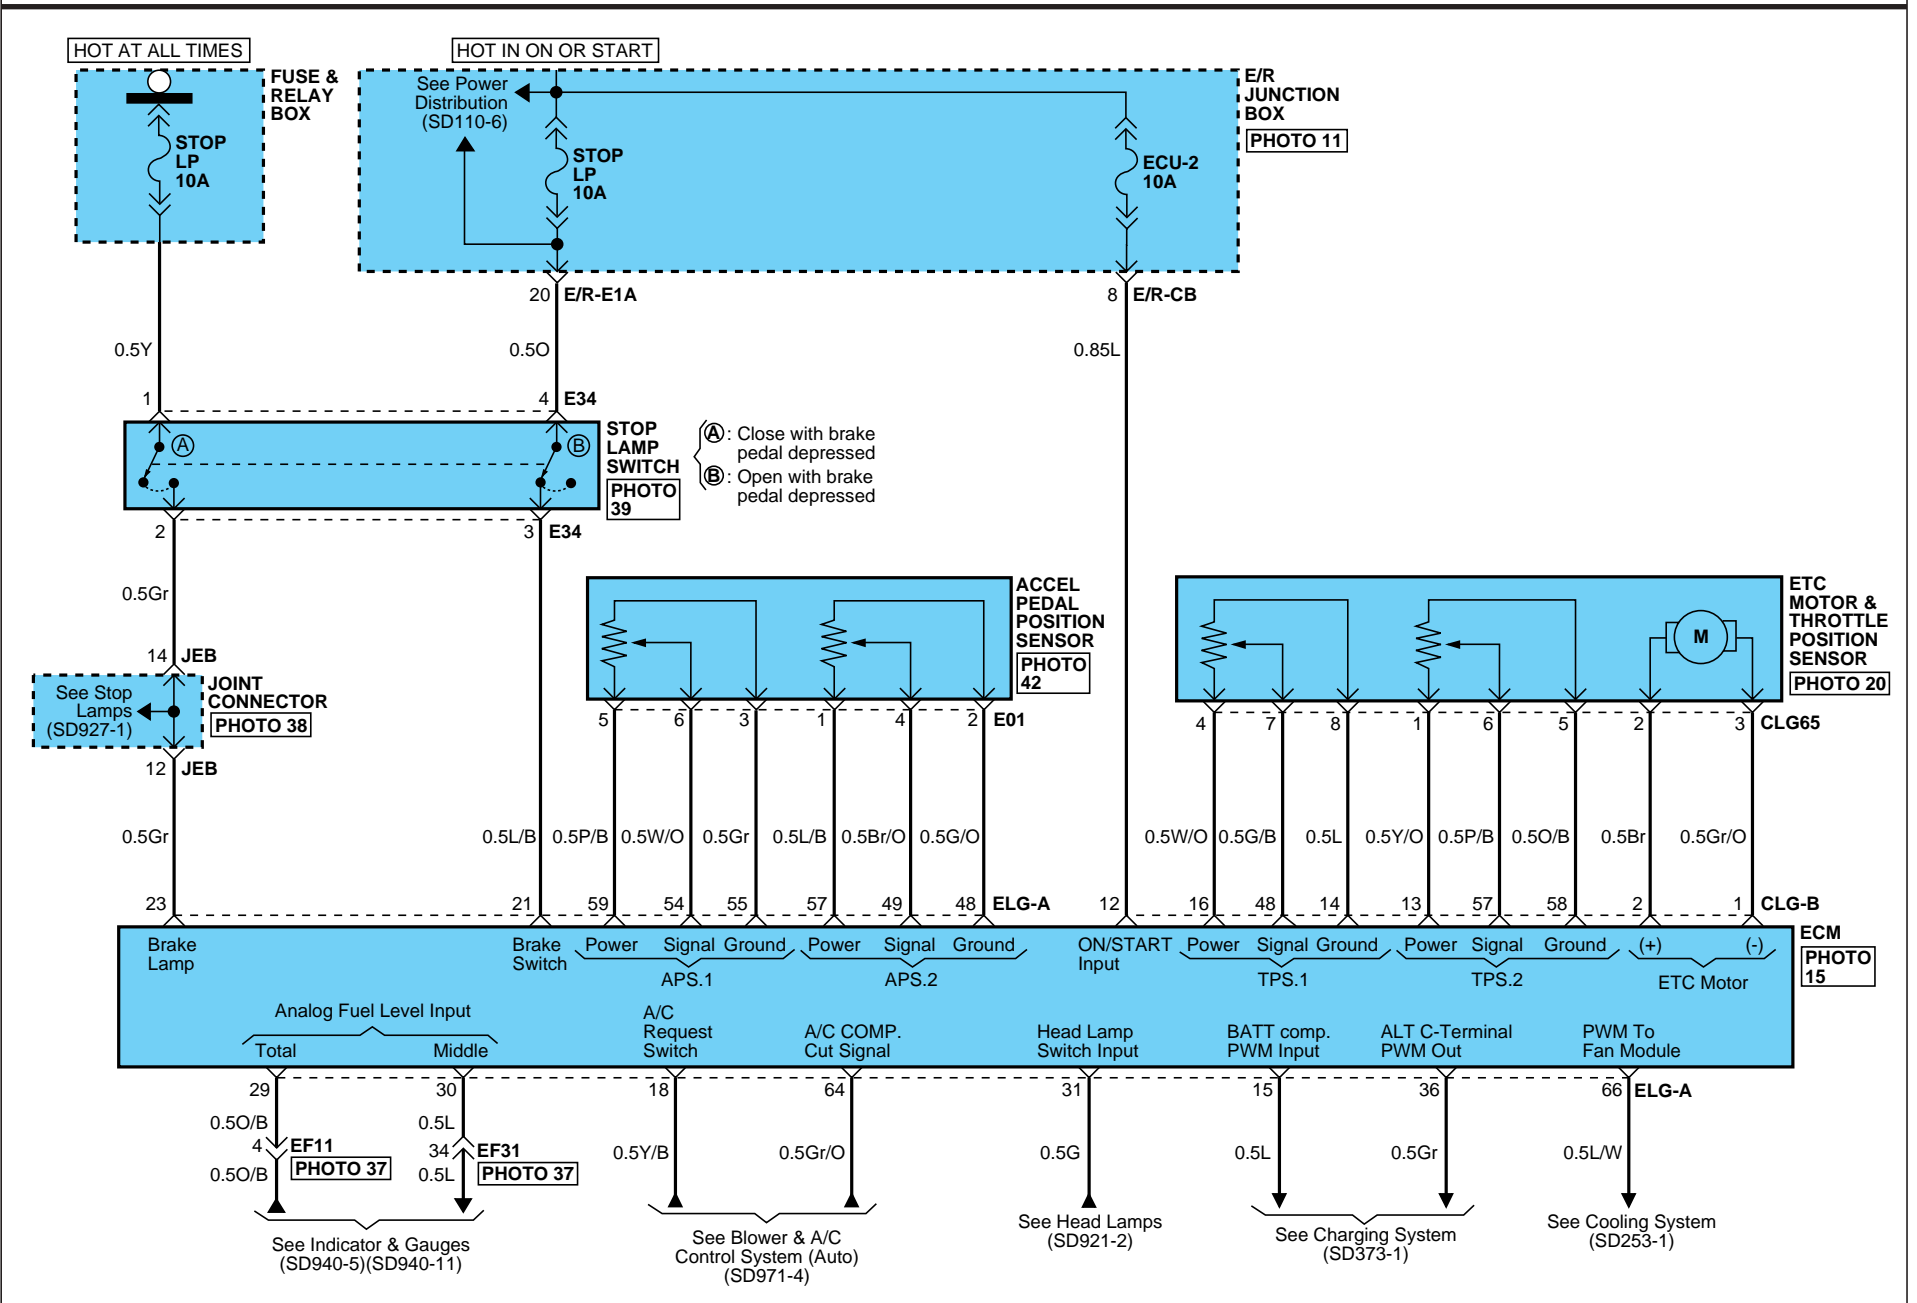


MFI CONTROL SYSTEM

MFI Control System (8)


SD313-8

CLG-B

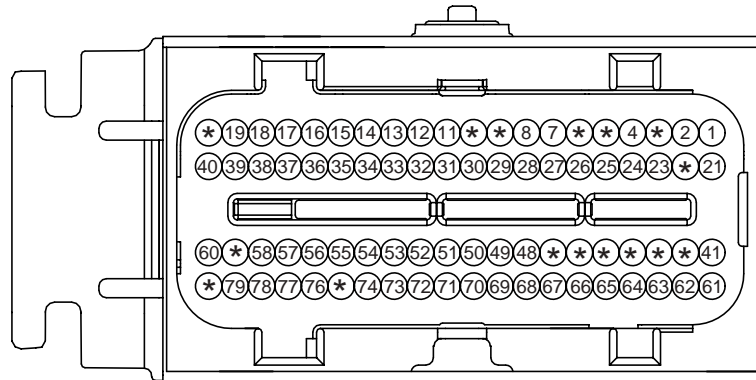


PKD_ECU_80F_B_2

ELG-A

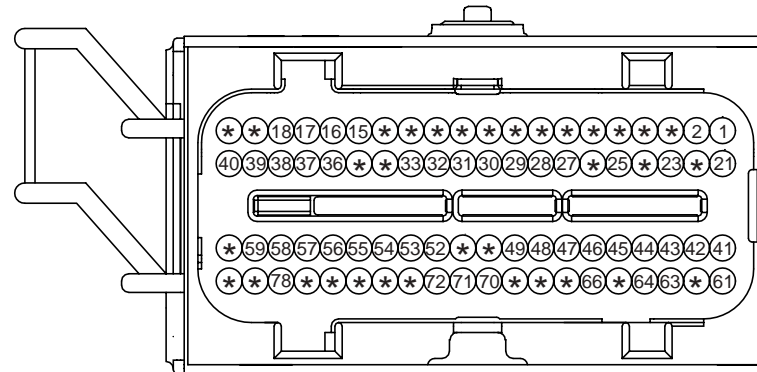


PKD_ECU_80F_Gr_1

CLG03

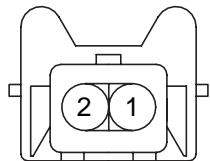


AMP_JPT_02F_B_CLIP

 CLG05-1,2




PKD_GT150_02F_B_3

CLG11

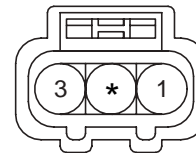


KUM_62Z_03F_B_WTS

 CLG13-1,2



PKD_150WP_03F_B_L

CLG14

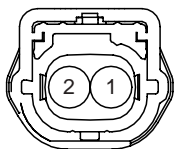

BSH_SENSOR_02F_B

CLG18-1,3,5




KET_090IWP_02F_B_VER

CLG18-2,4,6




KET_090IWP_02F_B_VER

 CLG19




KET_58X_01F_B

CLG21

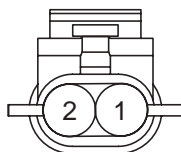

PKD_150WP_02F_B_1

CLG23-1,2

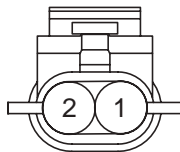

PKD_MP150_02F_GR

CLG24-1,3,5



PKD_GT150_02F_B

CLG24-2,4,6





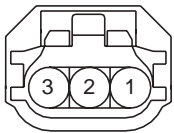
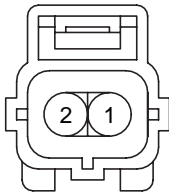
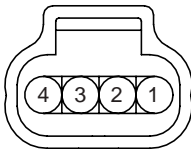
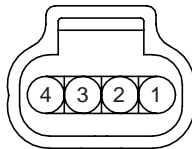
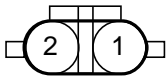
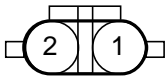
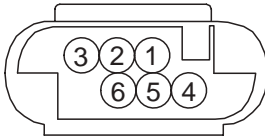
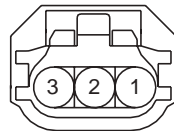
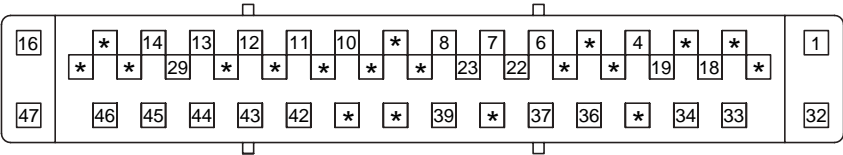
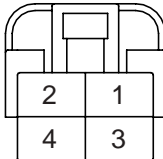
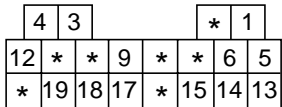
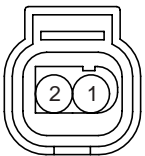

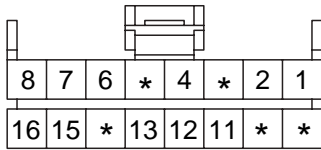
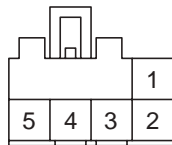


PKD_GT150_02F_B

MFI CONTROL SYSTEM

MFI Control System (9)

SD313-9

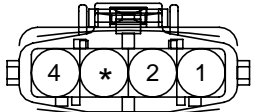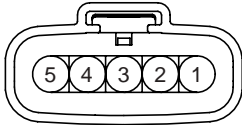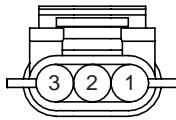
<p>CLG25</p>  <p>AMP_JPT_04F_B_BOSCH</p>	<p>CLG27</p>  <p>PKD_GT150_05F_B</p>	<p>CLG30-1,2</p>  <p>PKD_150WP_03F_B_L</p>	<p>CLG65</p>  <p>PKD_GT150_08F_B</p>
<p>CLG86</p>  <p>KET_040WP_03F_B</p>	<p>CLG87</p>  <p>AMP_EJWP_02F_B</p>	<p>CLG93,CLG96</p>  <p>PKD_GT150_04F_Gr</p>	<p>CLG94,CLG95</p>  <p>PKD_GT150_04F_B</p>
<p>CLG98-1</p>  <p>CR02F134</p>	<p>CLG98-2</p>  <p>CR02F134</p>	<p>E01</p>  <p>AMP_MQSWP_06F_B_1</p>	<p>E02</p>  <p>KET_040WP_03F_B</p>
<p>E15</p>  <p>AMP_ESP_47F_L_UNIT</p>		<p>E34</p>  <p>KET_250DL_04F_W</p>	<p>E45</p> 
<p>F35</p>  <p>HIR_MCP_02F_B</p>	<p>F39</p>  <p>KET_090IWP_05F_Gr_2</p>	<p>M11-A</p>  <p>AMP_040M1_16F_B</p>	<p>M36</p>  <p>KUM_CDR_05F_W</p>

MFI CONTROL SYSTEM

MFI Control System (10)


SD313-10

M40-C

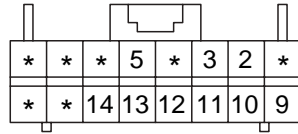

AMP_0407_16F_W_040

M51-B

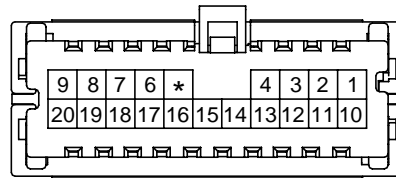

KET_040III_20F_W


BLANK

BLANK

Starting System (1)

SD360-1

W/O BUTTON START

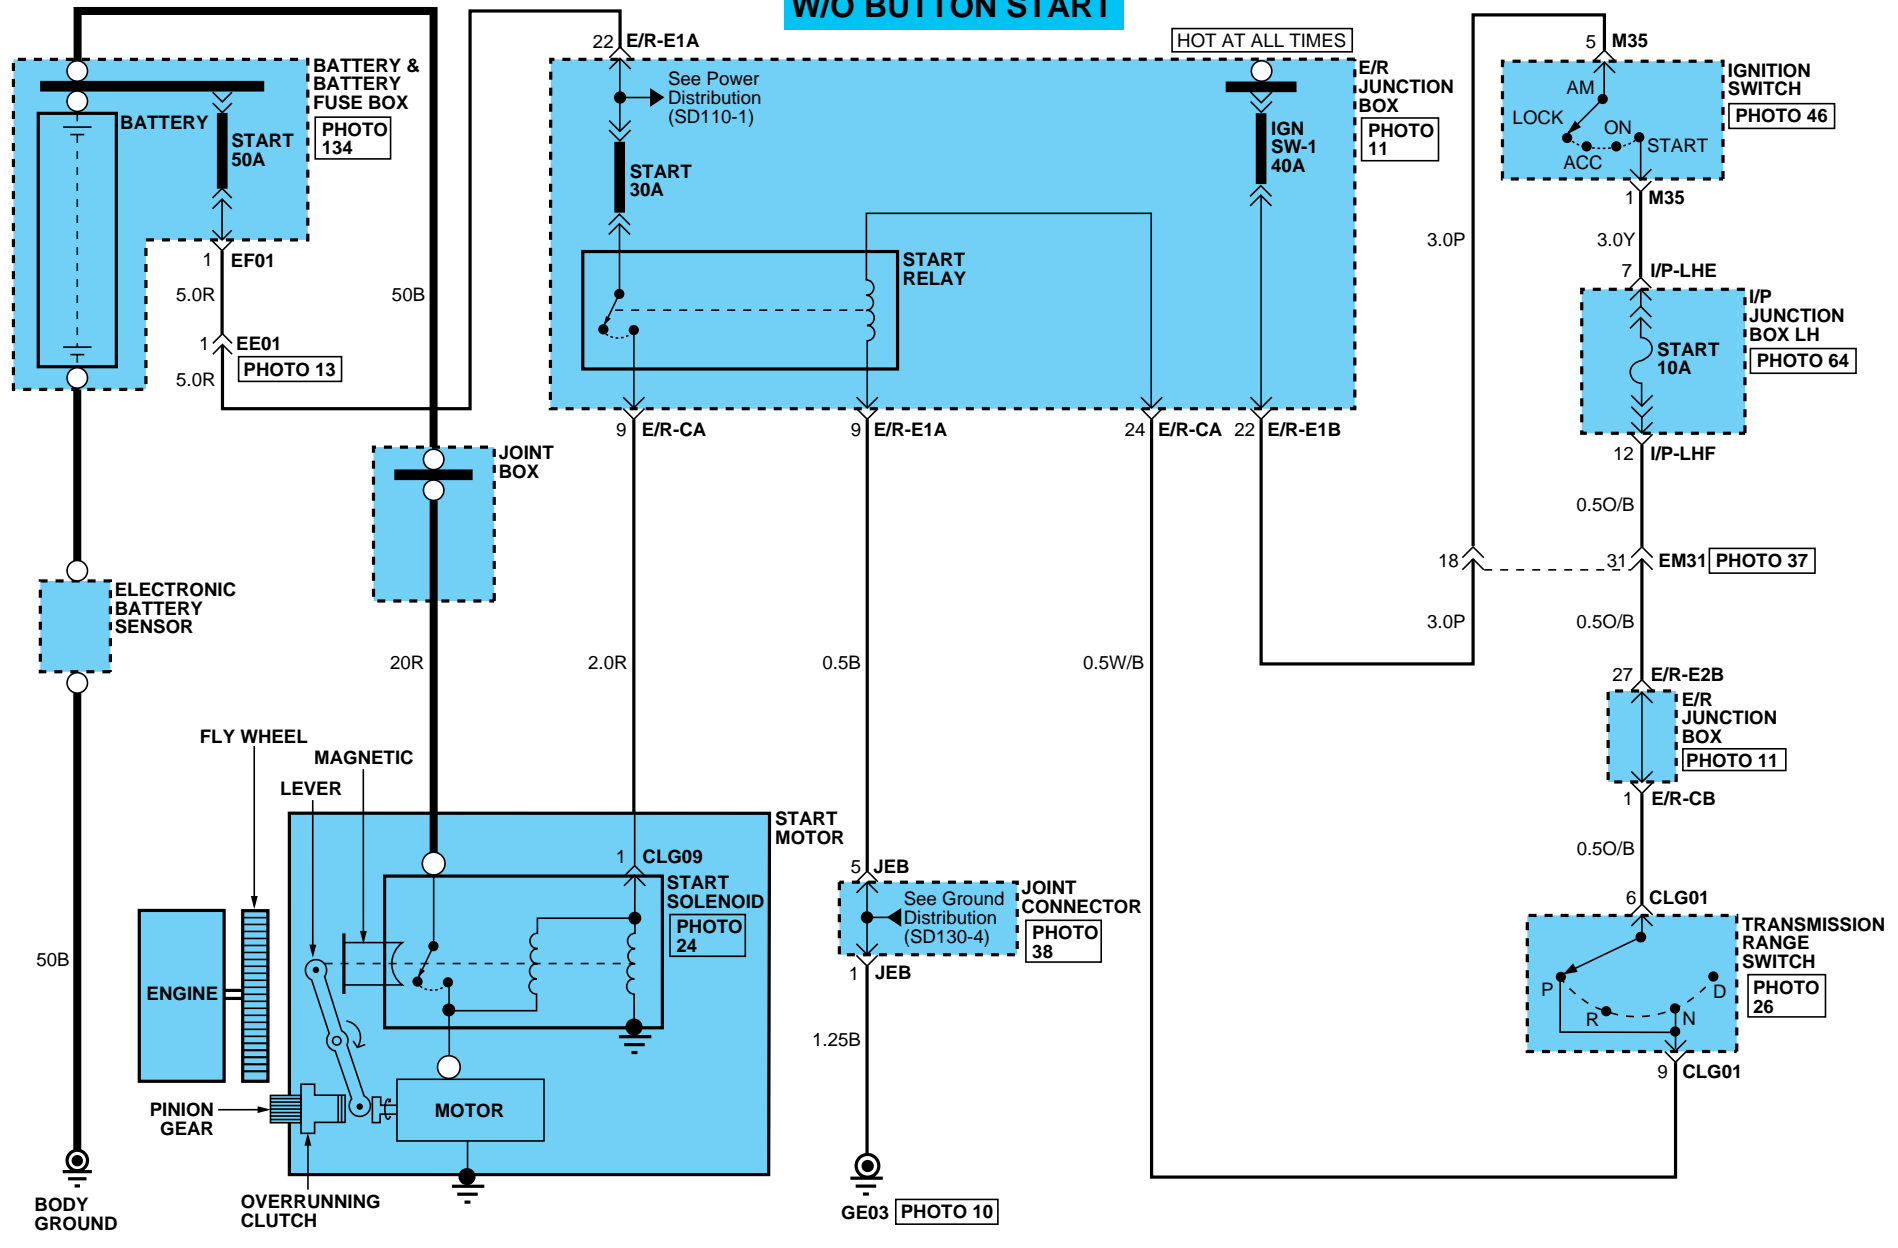


STARTING SYSTEM

Starting System (2)

SD360-2

With BUTTON START

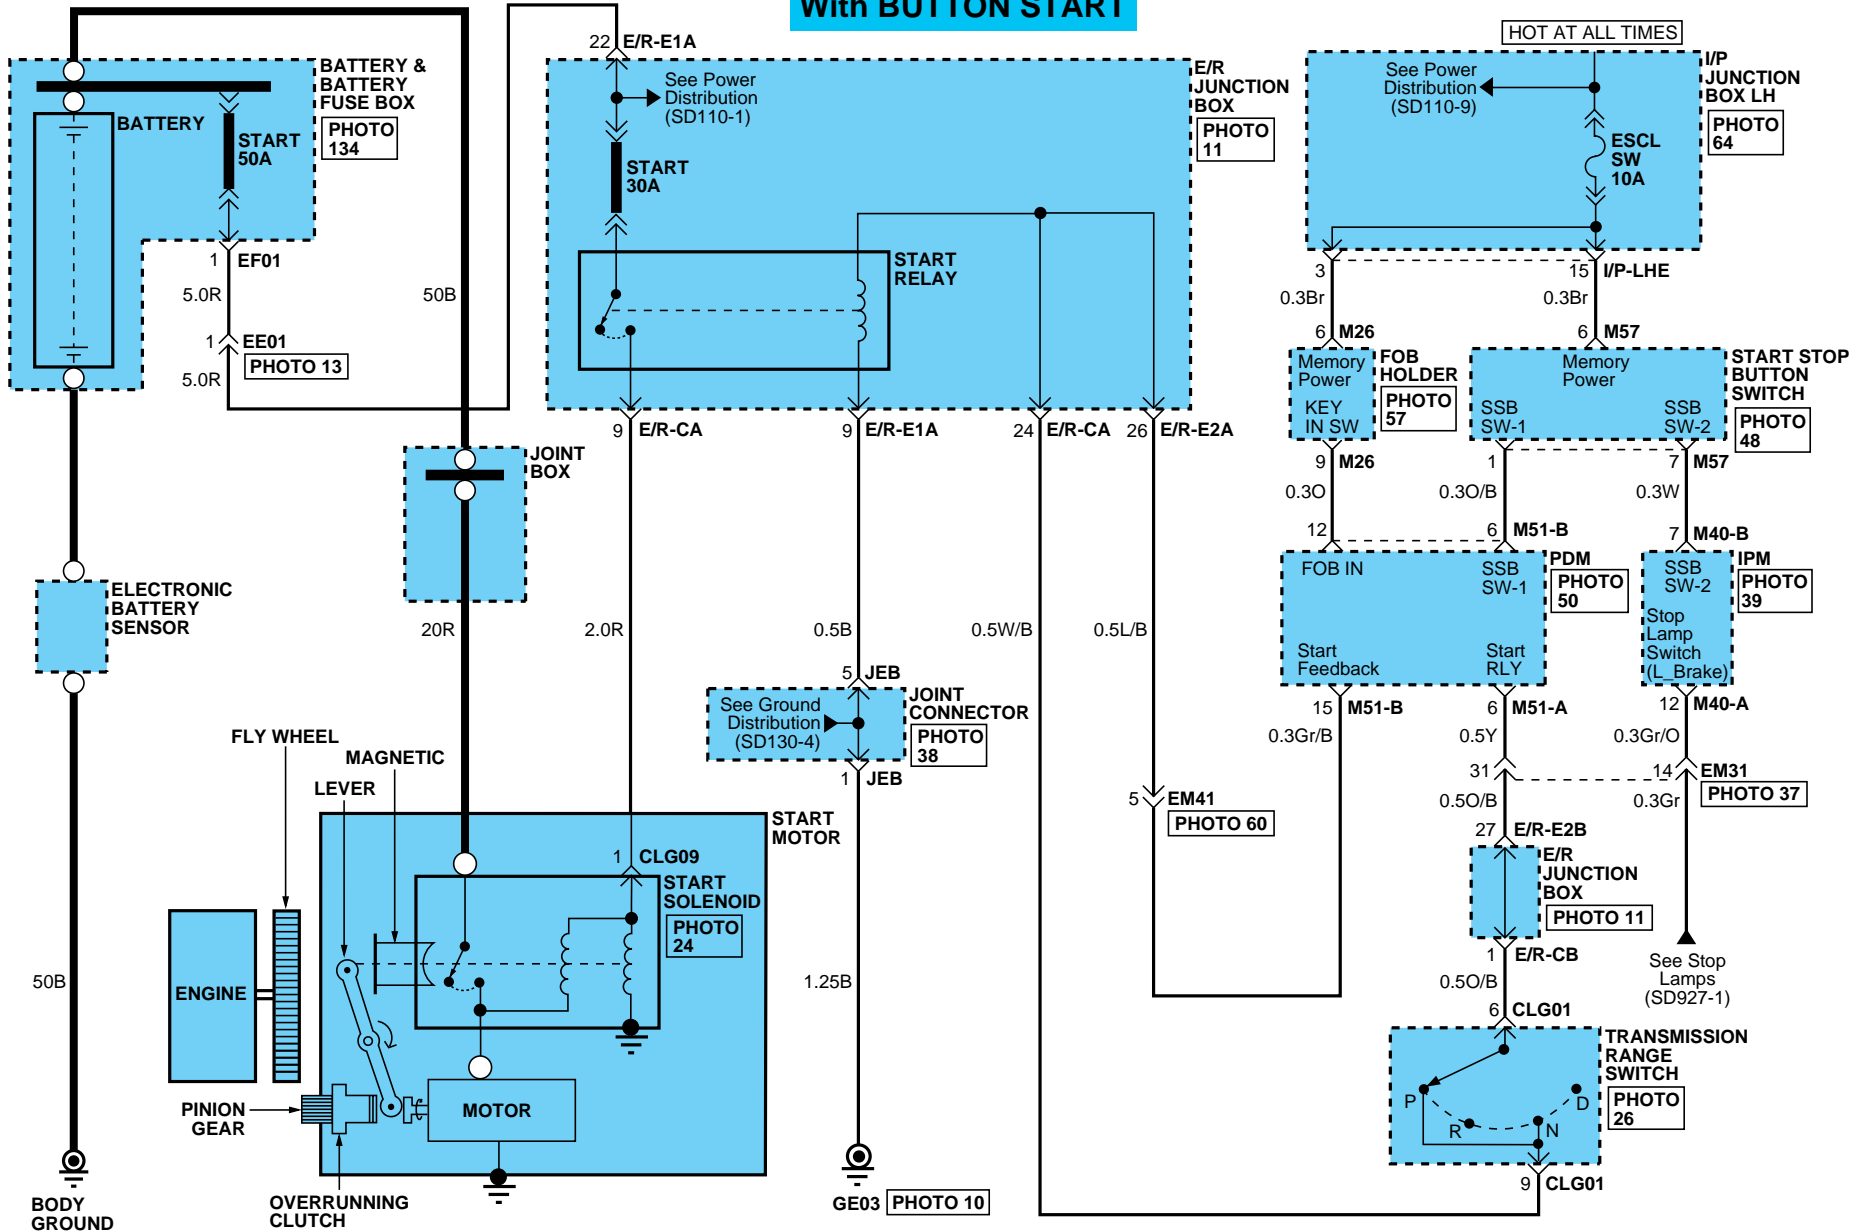


STARTING SYSTEM

Starting System (3)


SD360-3

CLG01

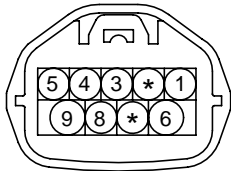


YAZ_0918WP_09F_GR

 CLG09




KET_58X_01F_Gr

M26

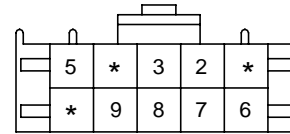


YAZ_SP_10F_W

M35

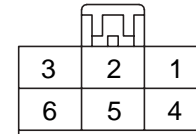


KUM_DSD_06F_W

M40-A

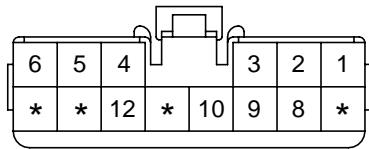


KET_090II_14F_W

 M40-B




AMP_0407_26F_W_HD

M51-A

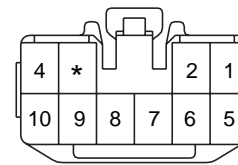


KET_090II_10F_B

M51-B

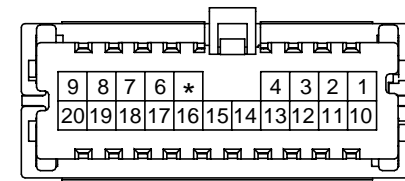

KET_040III_20F_W

M57

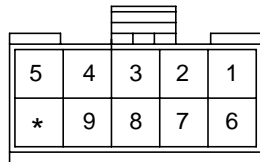

MLX_FIT_10F_B

BLANK

BLANK

BLANK


STARTING SYSTEM

Starting System (4)

SD360-4

MEMO

Charging System (1)

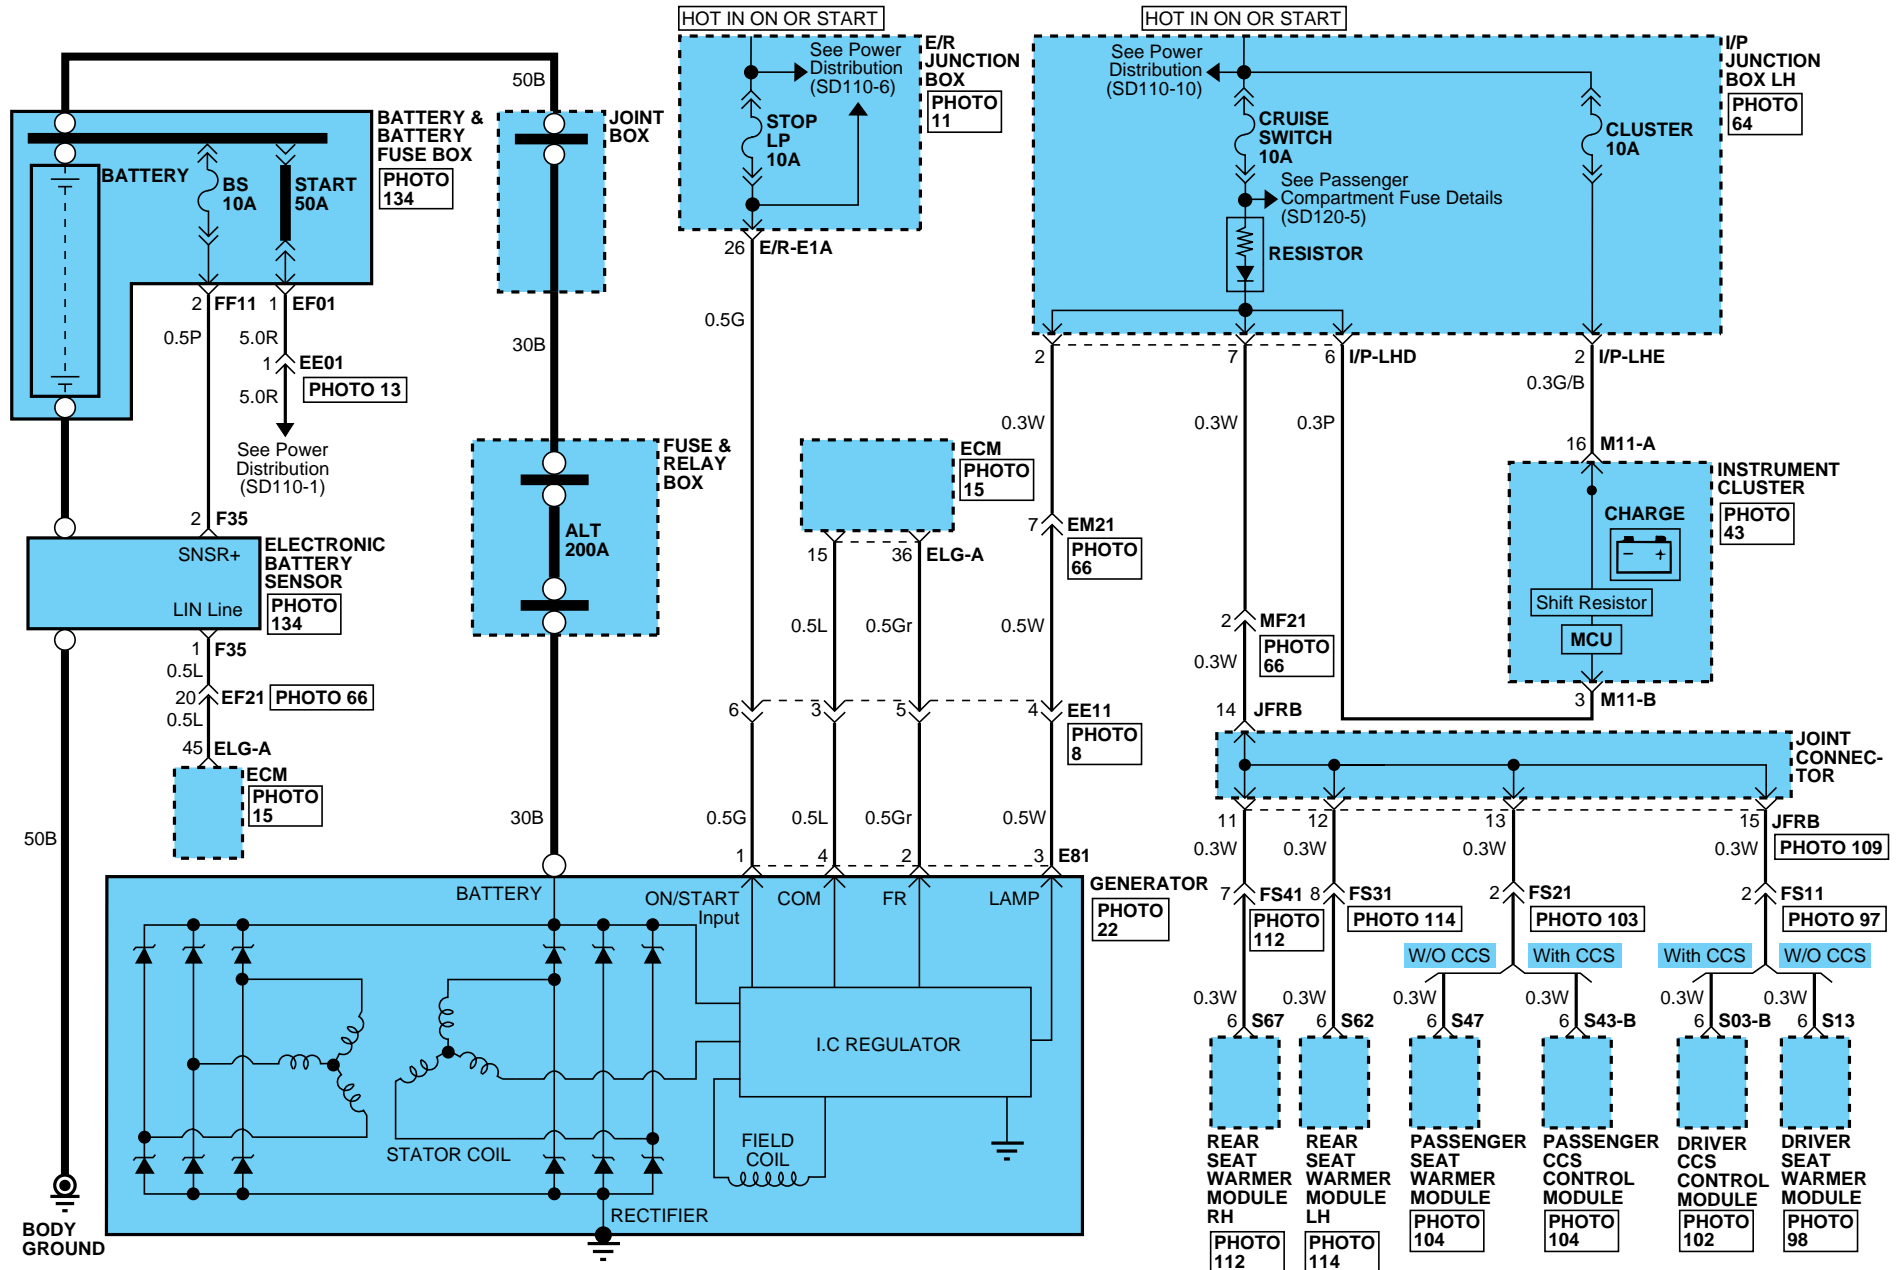


CHARGING SYSTEM

Charging System (2)


SD373-2

ELG-A

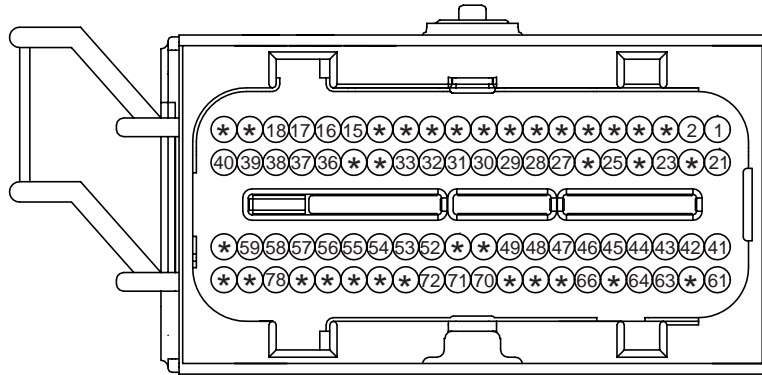


PKD_ECU_80F_Gr_1

E81

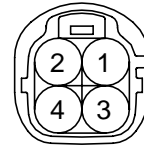


SUM_TSWP_04F_B

F35

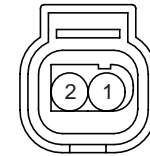


HIR_MCP_02F_B

M11-A

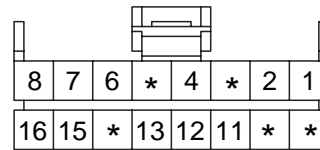


AMP_040M1_16F_B

M11-B

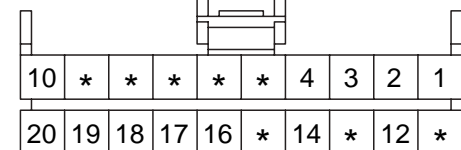


AMP_040M1_20F_B

S03-B

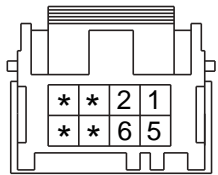


DEL_MICRO064_08F

S13

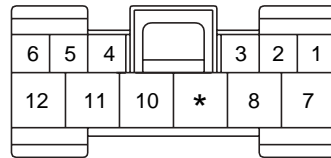


AMP_070JPT_12F_W

S43-B

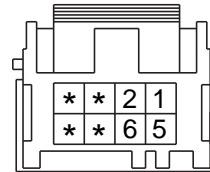


DEL_MICRO064_08F

S47

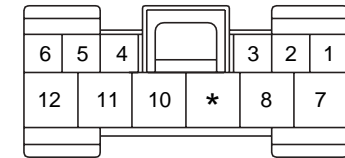


AMP_070JPT_12F_W

S62

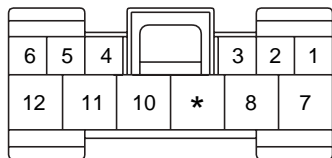

AMP_070JPT_12F_W

S67

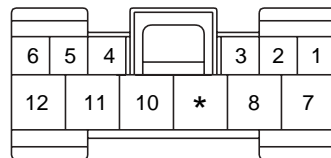


AMP_070JPT_12F_W

BLANK

BLANK

Automatic Transmission Control System (1)


SD450-1

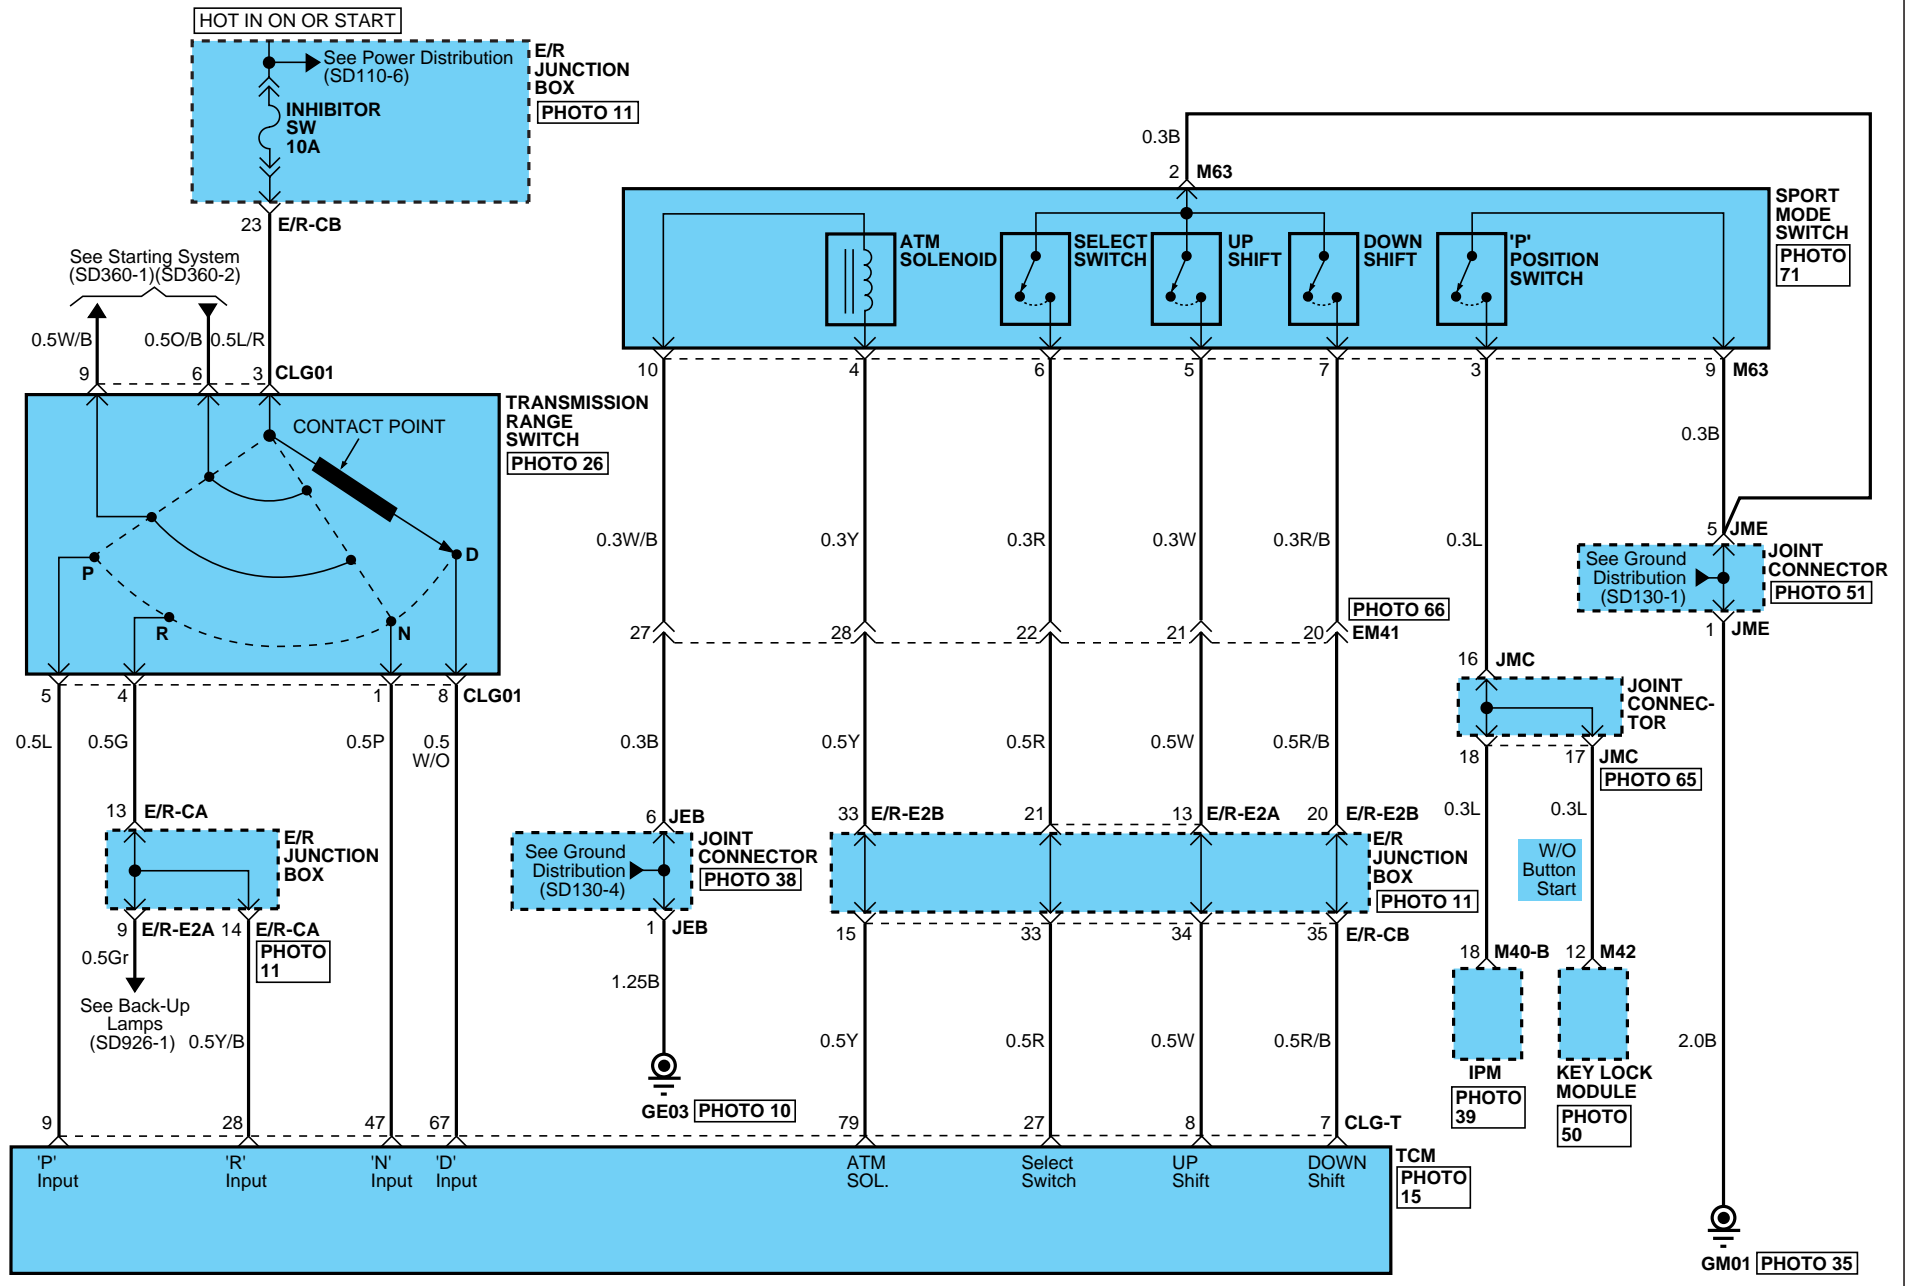

AUTOMATIC TRANSMISSION CONTROL SYSTEM

Automatic Transmission Control System (2)

SD450-2

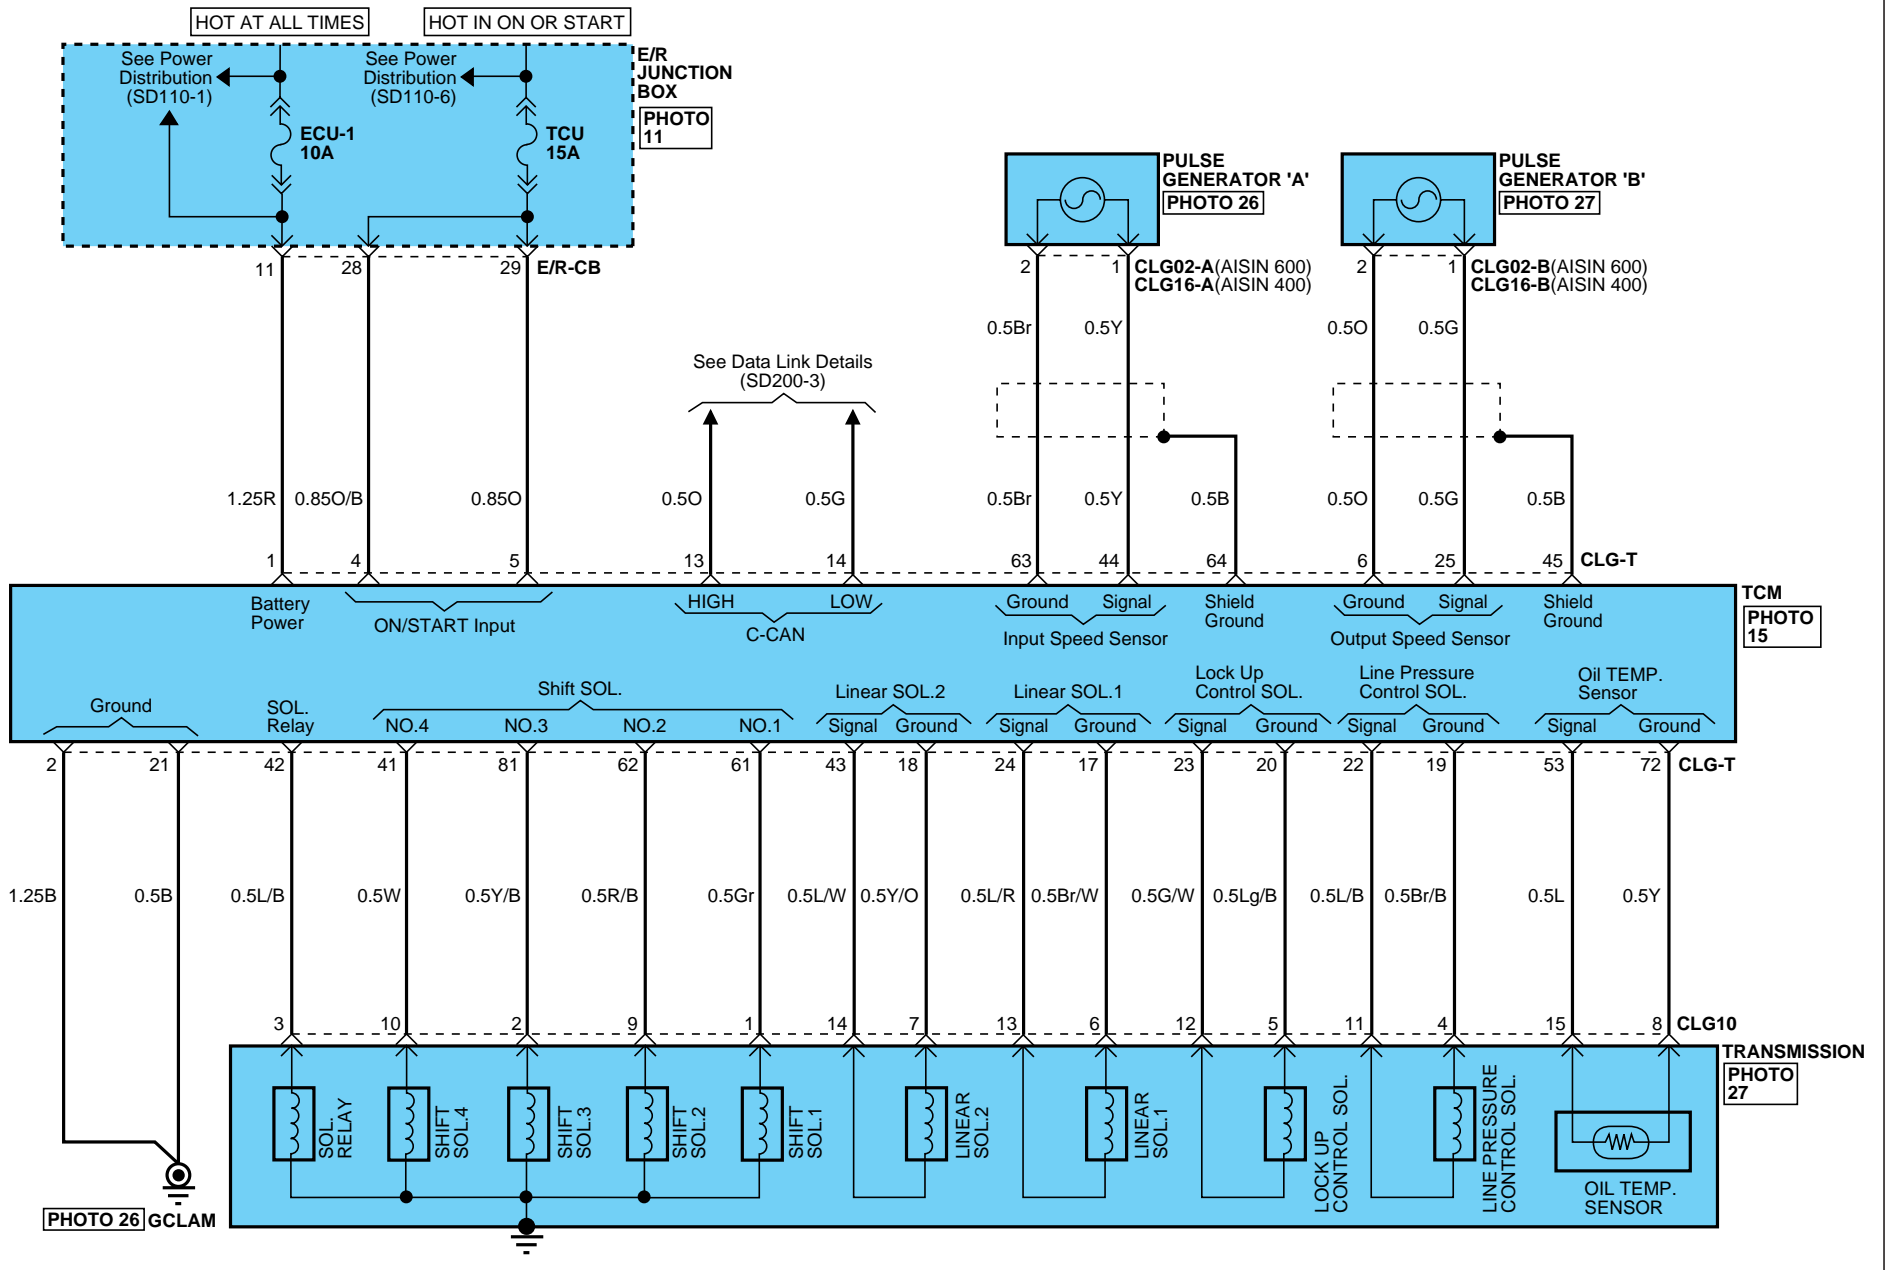


AUTOMATIC TRANSMISSION CONTROL SYSTEM

Automatic Transmission Control System (3)


SD450-3

CLG-T

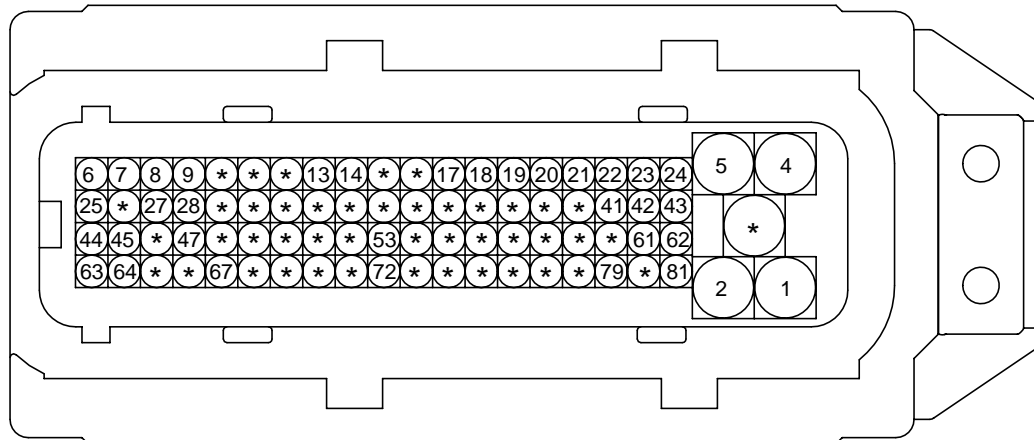


AMP_MQJWP_81F_B_1

CLG01

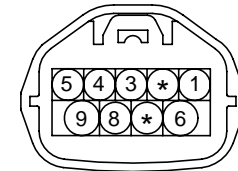


YAZ_0918WP_09F_GR

 CLG02-A,B




YAZ_0901IWP_02F_B_A

 CLG10




SUM_TSWP_15F_Gr

 CLG16-A,B




YAZ_0901IWP_02F_B_A

 M40-B




AMP_0407_26F_W_HD

 M42



AMP_070_14F_W

M63

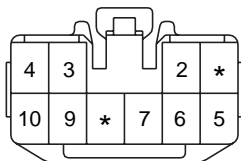

KET_0901I_10F_W

BLANK

BLANK

BLANK

AUTOMATIC TRANSMISSION CONTROL SYSTEM


Automatic Transmission Control System (4)

SD450-4

MEMO

Shift & Key Lock System (1)

SD452-1

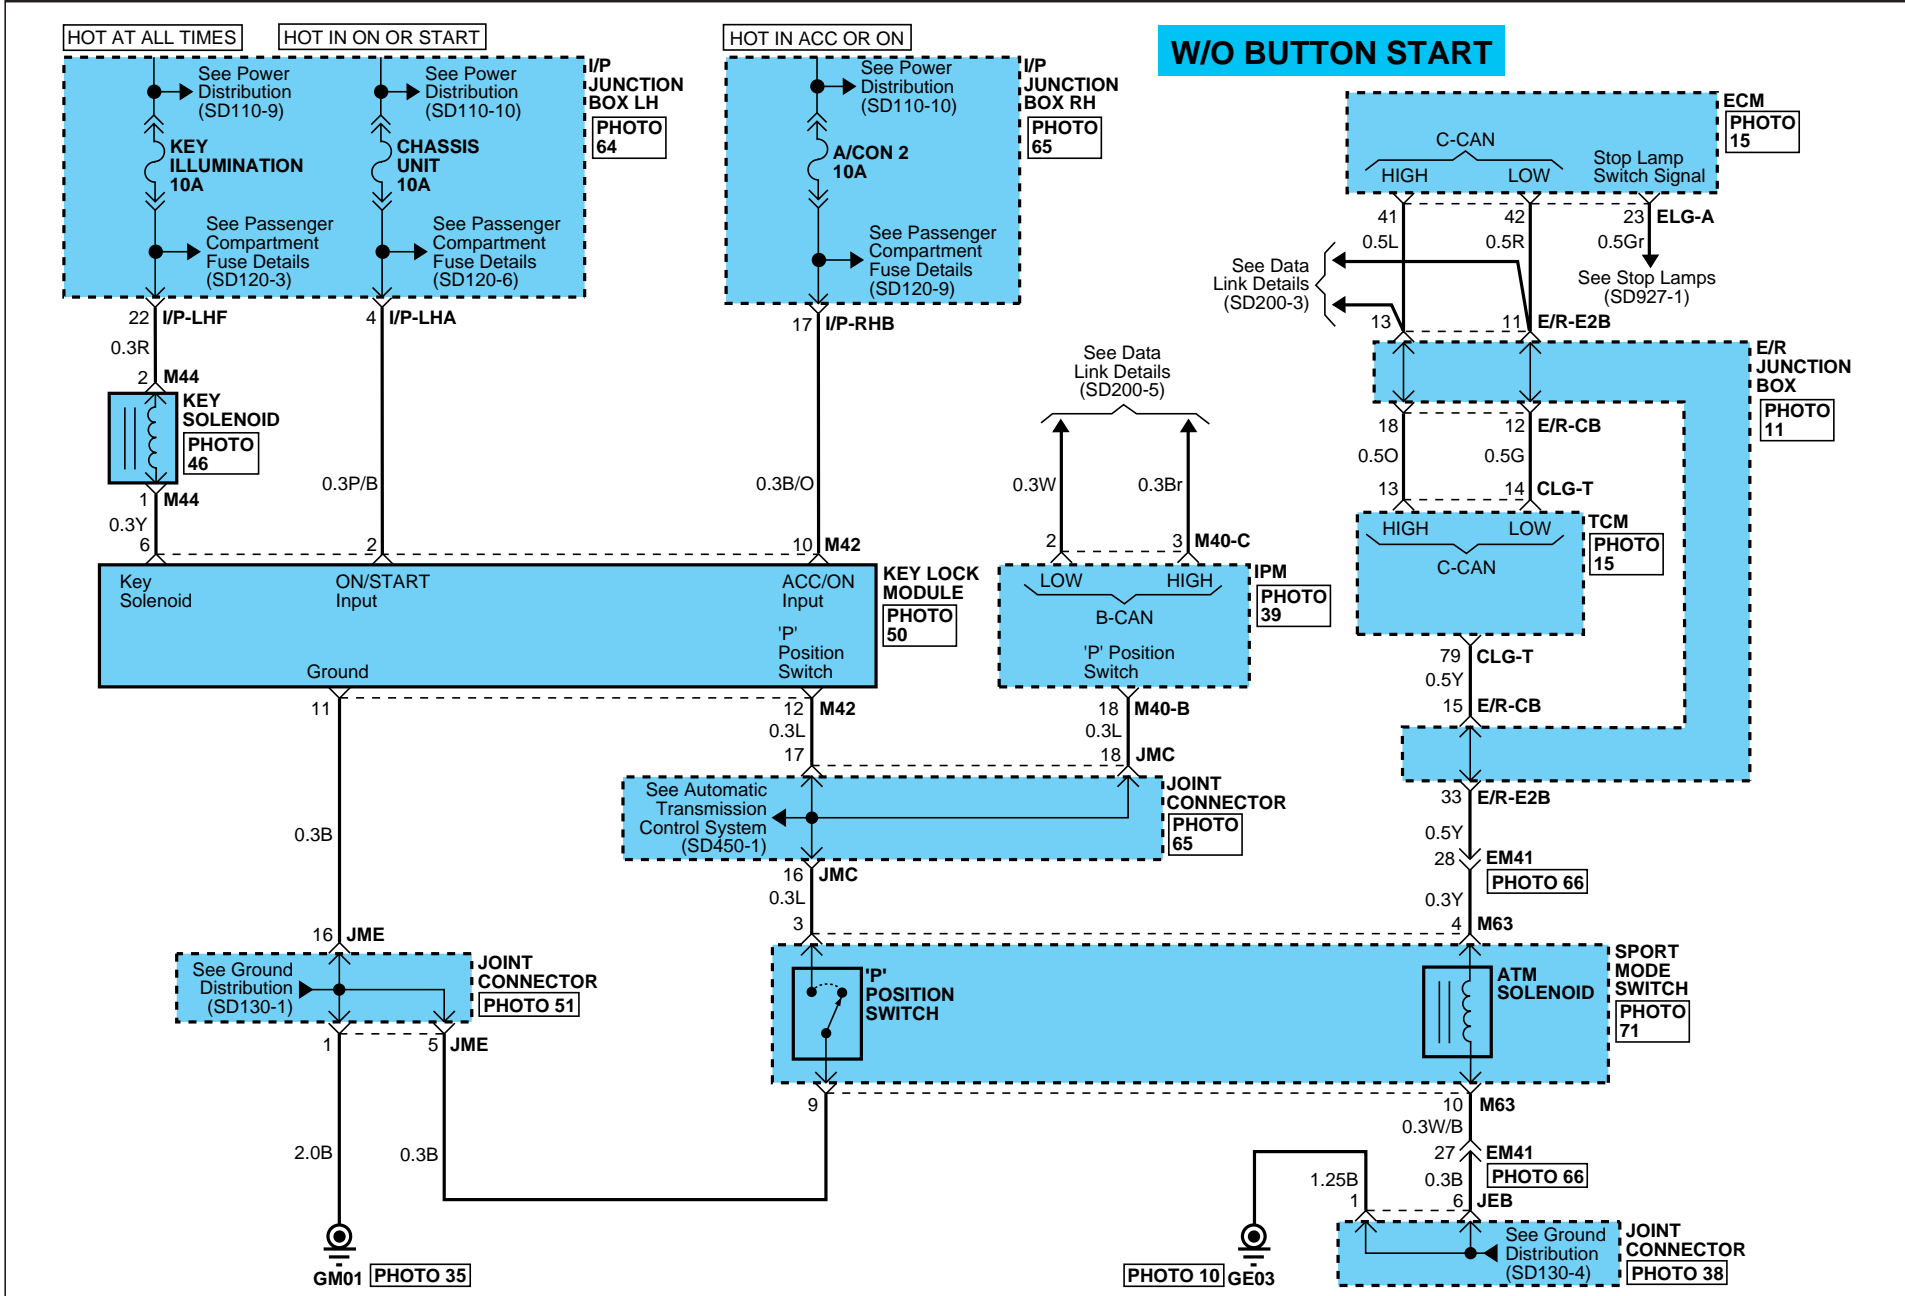


SHIFT & KEY LOCK SYSTEM

Shift & Key Lock System (2)


SD452-2

CLG-T

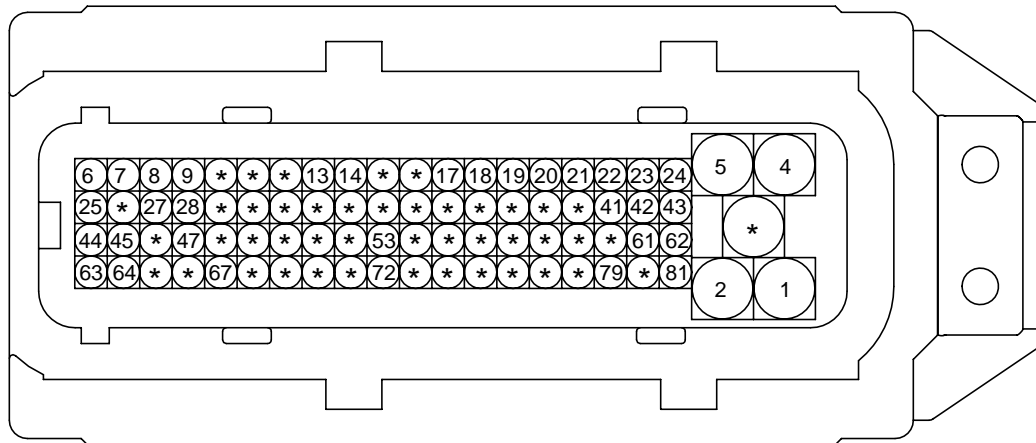


AMP_MQJWP_81F_B_1

 M40-B




AMP_0407_26F_W_HD

M40-C

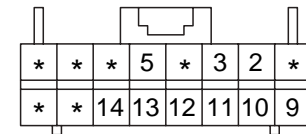


AMP_0407_16F_W_040

ELG-A

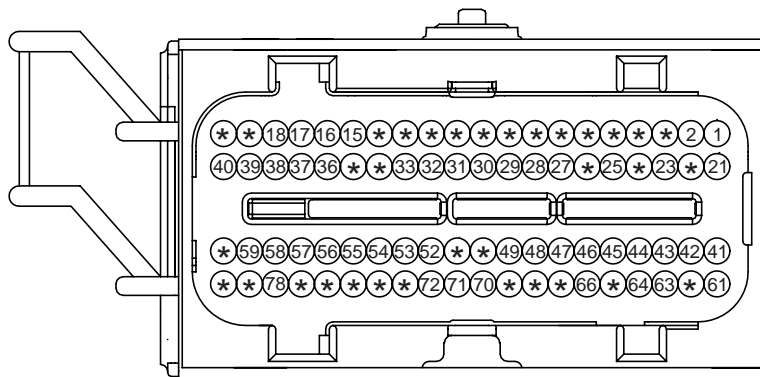


PKD_ECU_80F_Gr_1

 M42




AMP_070_14F_W

 M44



KET_090II_02F_B_R

M63

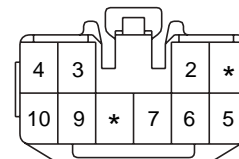


KET_090II_10F_W

BLANK

Electronic Air Suspension (EAS) System (1)


SD559-1

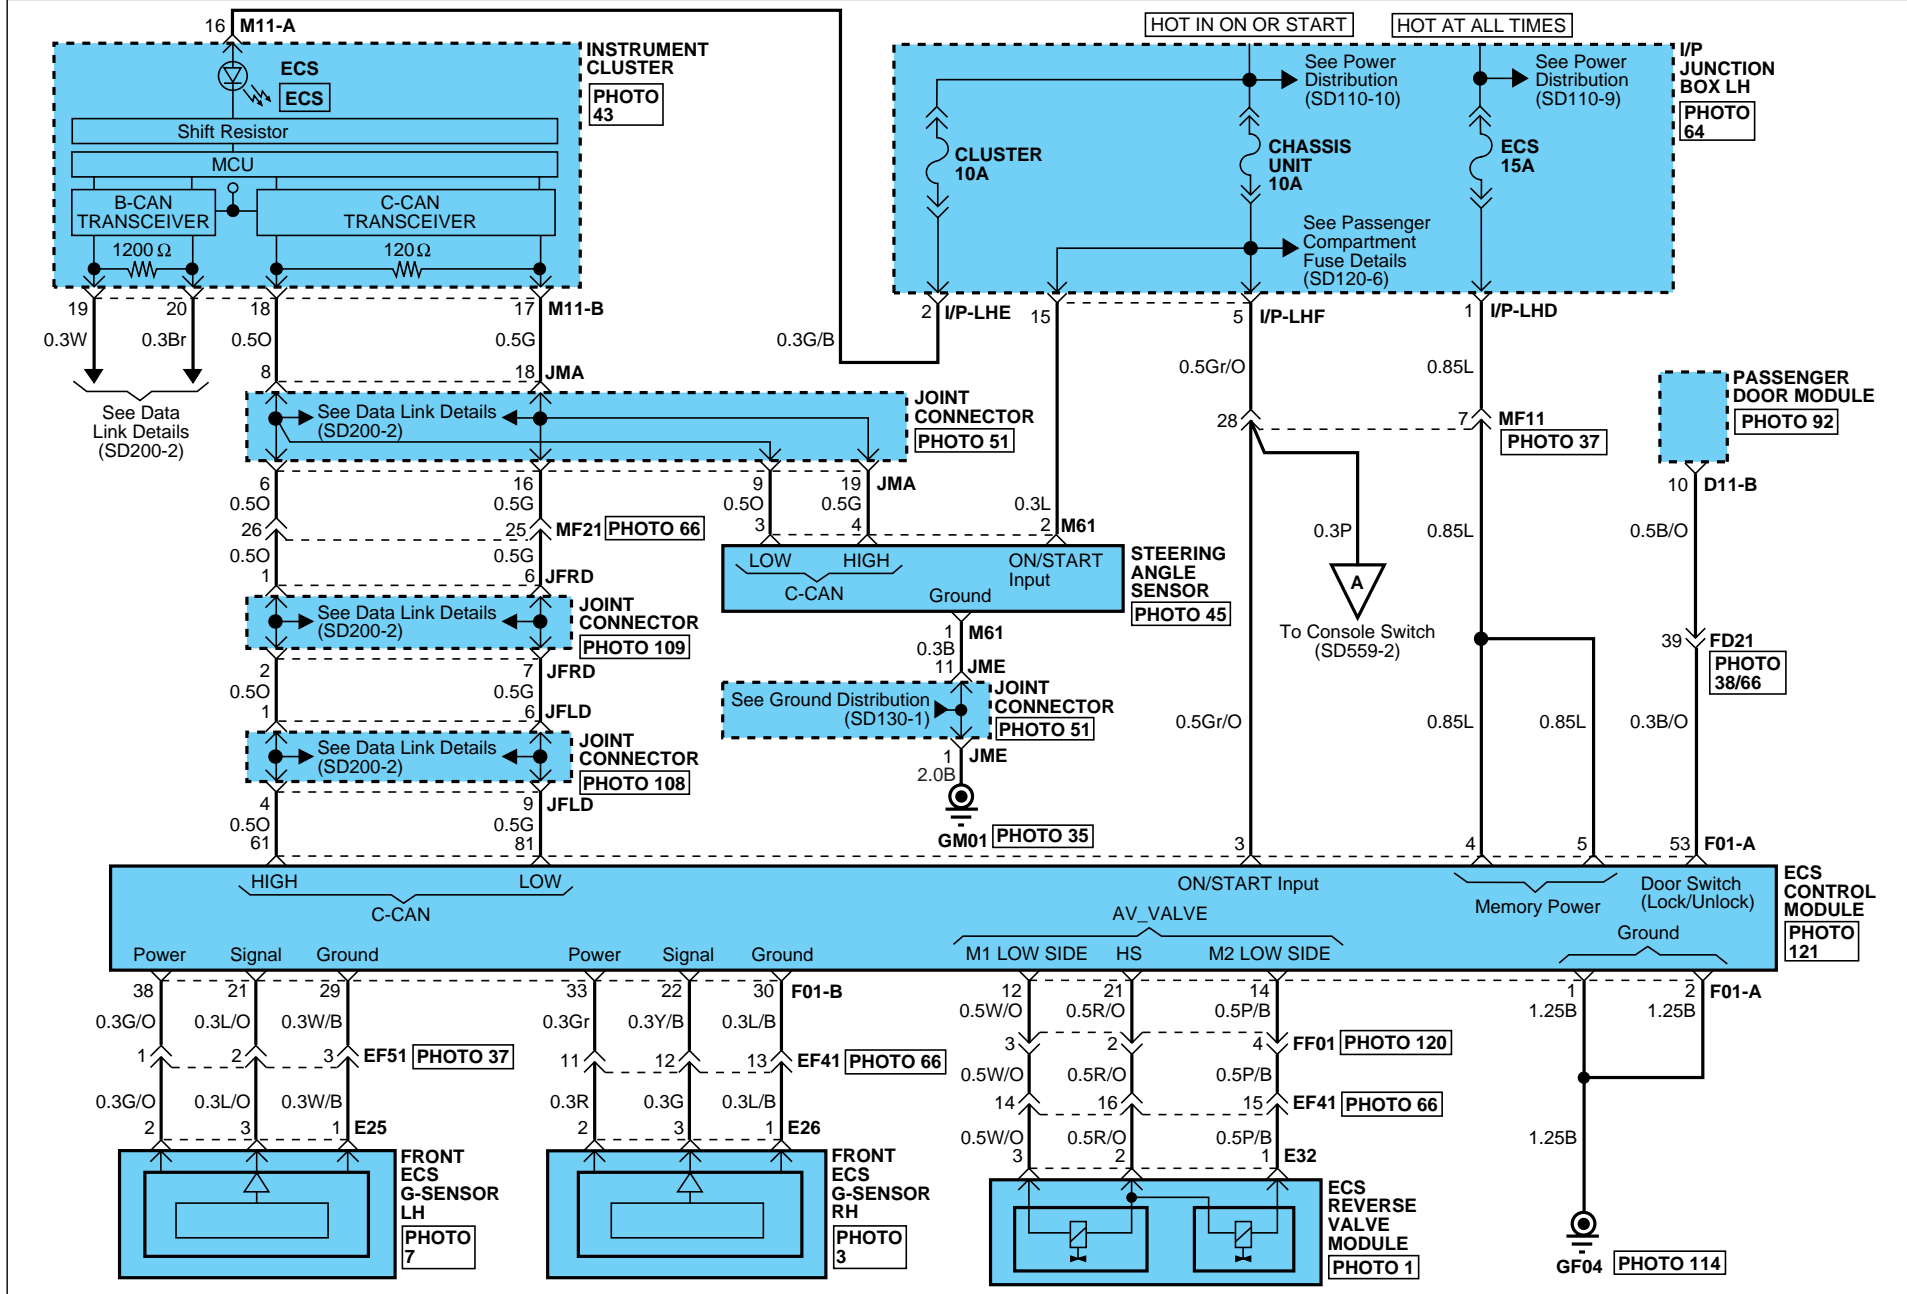

ELECTRONIC AIR SUSPENSION (EAS) SYSTEM

Electronic Air Suspension (EAS) System (2)


SD559-2

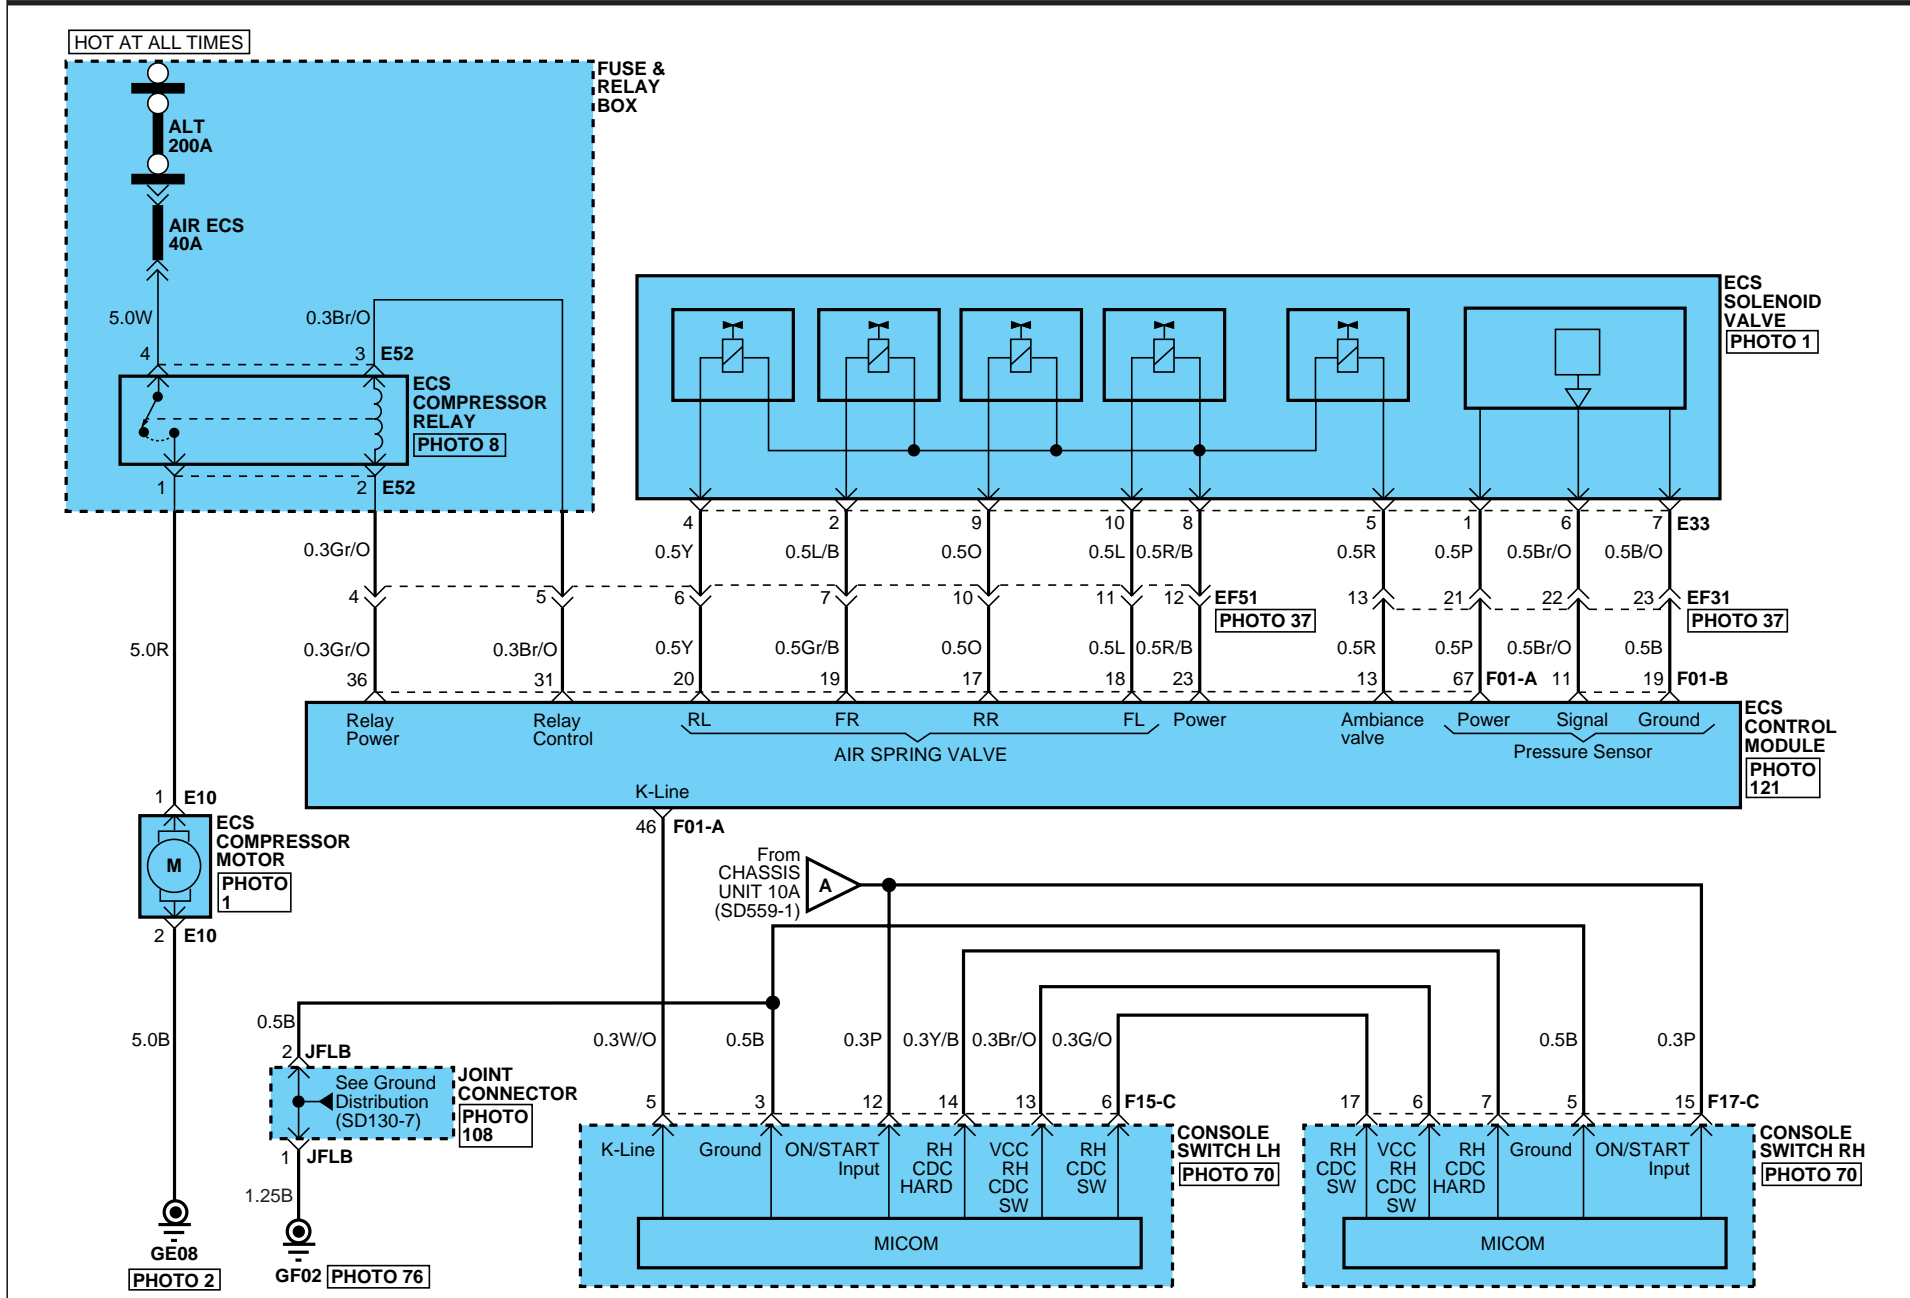

ELECTRONIC AIR SUSPENSION (EAS) SYSTEM

Electronic Air Suspension (EAS) System (3)

SD559-3

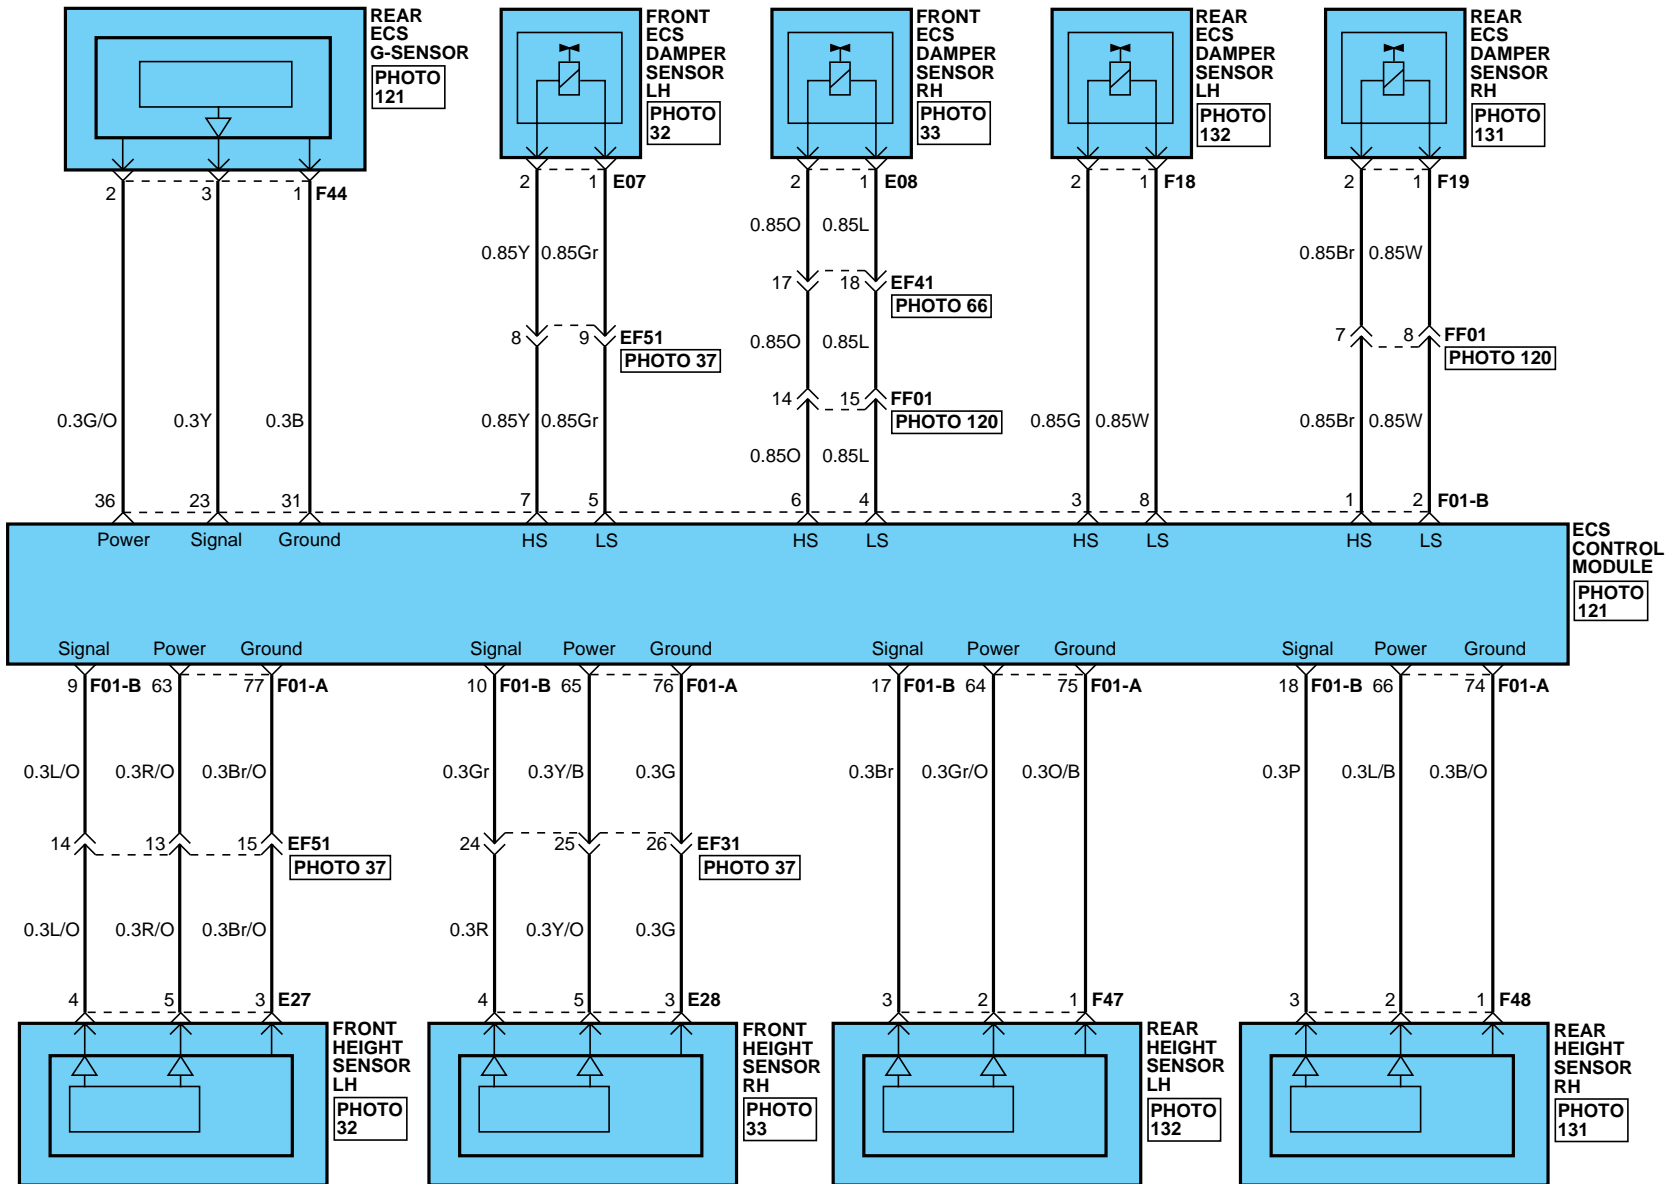


ELECTRONIC AIR SUSPENSION (EAS) SYSTEM

Electronic Air Suspension (EAS) System (4)


SD559-4

E07,E08

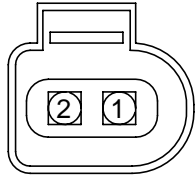


FEP_MTIWIP_02F_B

E10

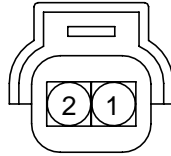


AMP_312WP_02F_GR

E25,E26

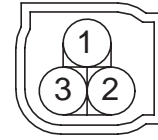


AMP_MQSWP_03F_B_1

E27,E28

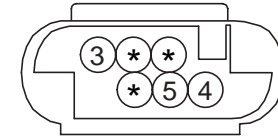


AMP_MQSWP_06F_B_1

F01-A

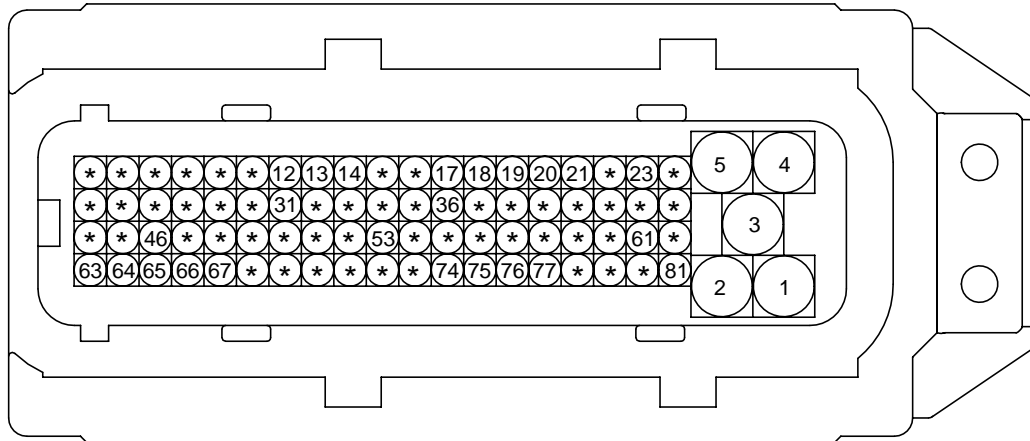


AMP_MQJWP_81F_B_1

 E32




AMP_1.5WP_03F_B

E33

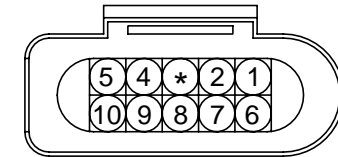


FEP_060WP_10F_B

F01-B

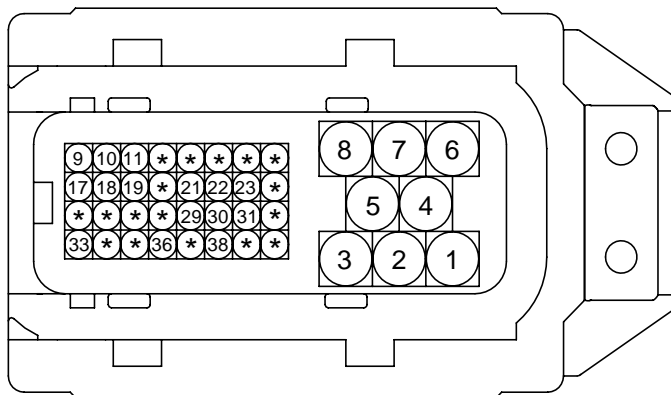


AMP_MQJWP_40F_B

 E52




CR04F040

F15-C

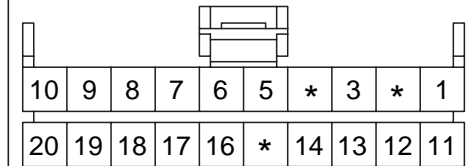


AMP_040M1_20F_B

F17-C

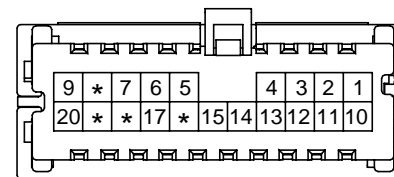

KET_040III_20F_W

F18

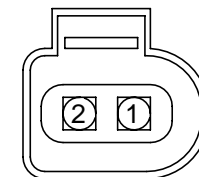


FEP_MTIWIP_02F_B

ELECTRONIC AIR SUSPENSION (EAS) SYSTEM

Electronic Air Suspension (EAS) System (5)


SD559-5

F19

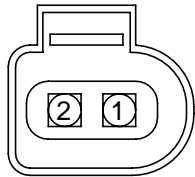


FEP_MTIWIP_02F_B

F44

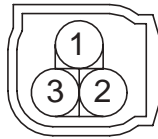


AMP_MQSWP_03F_B_1

F47,F48

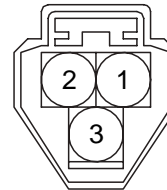


KUM_NMWP_03F_B

M11-A

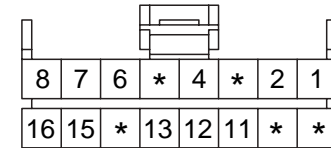


AMP_040M1_16F_B

M11-B

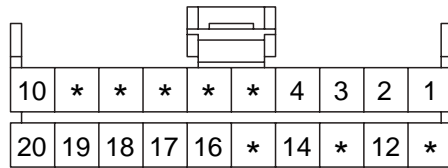

AMP_040M1_20F_B

M61

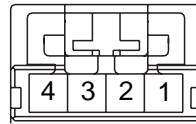

AMP_MQS_04F_B_040

BLANK

BLANK

ELECTRONIC AIR SUSPENSION (EAS) SYSTEM


Electronic Air Suspension (EAS) System (6)

SD559-6

MEMO

Electro Hydraulic Power Steering (EHPS) (1)

SD563-1

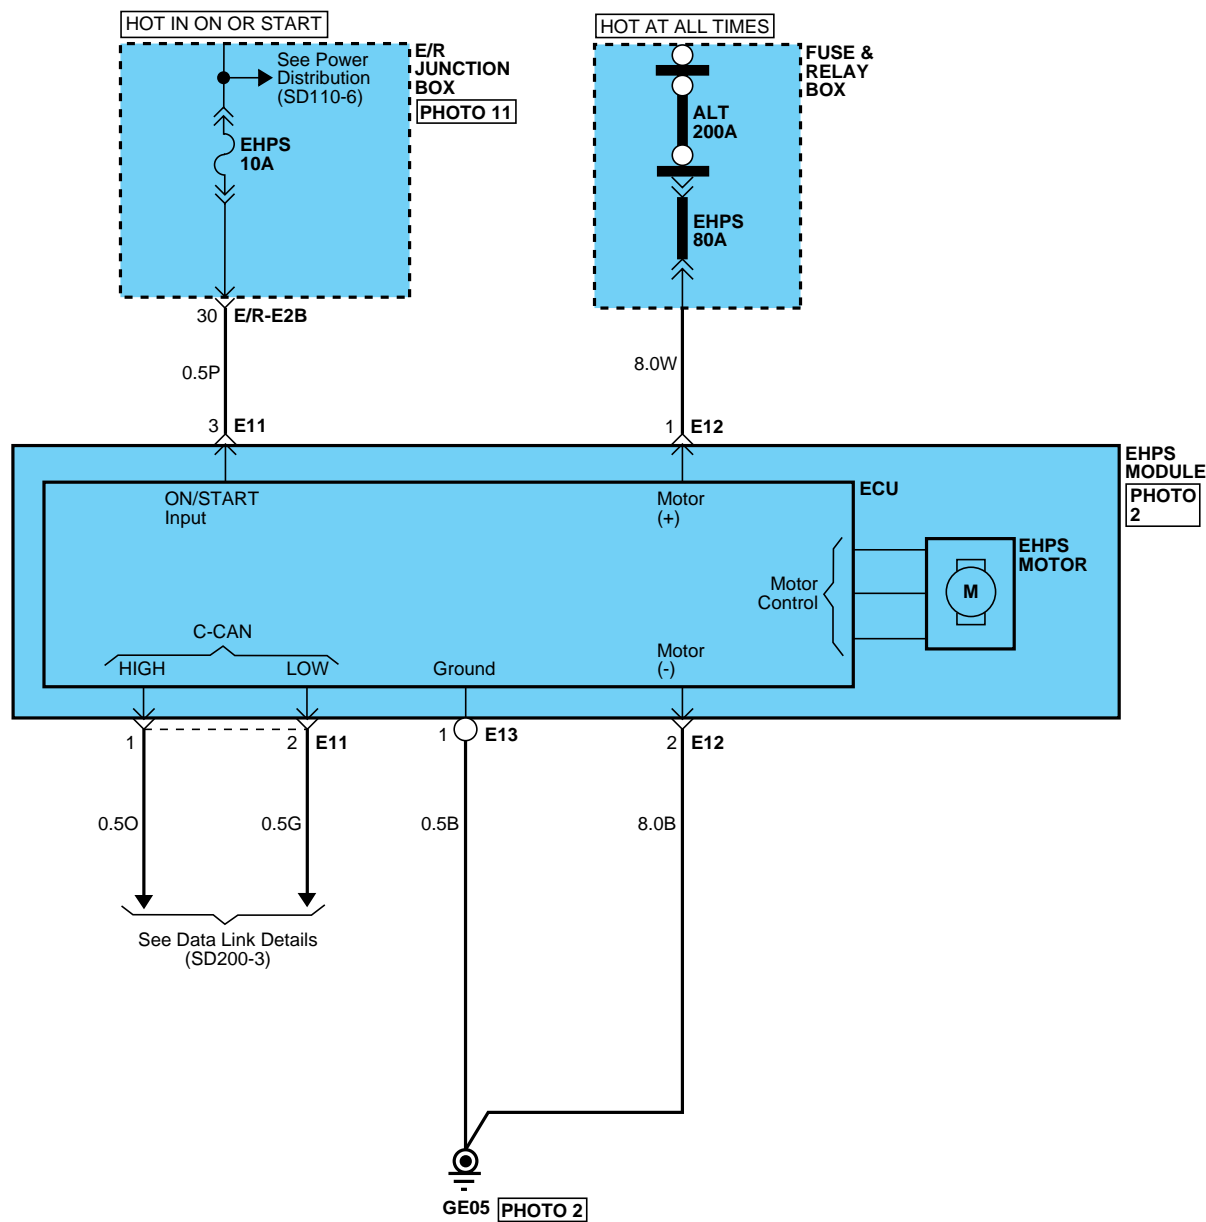


ELECTRO HYDRAULIC POWER STEERING (EHPS)

Electro Hydraulic Power Steering (EHPS) (2)


SD563-2

E11

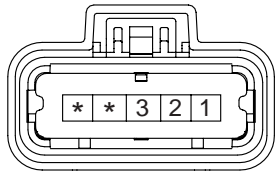


FCI_MINIWP_05F_B

E12

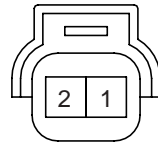

AMP_312WP_02F_B

 E13




KET_EARTH6.4_01F_S1_HTR1

BLANK

Steering Tilt & Telescopic System (1)


SD564-1

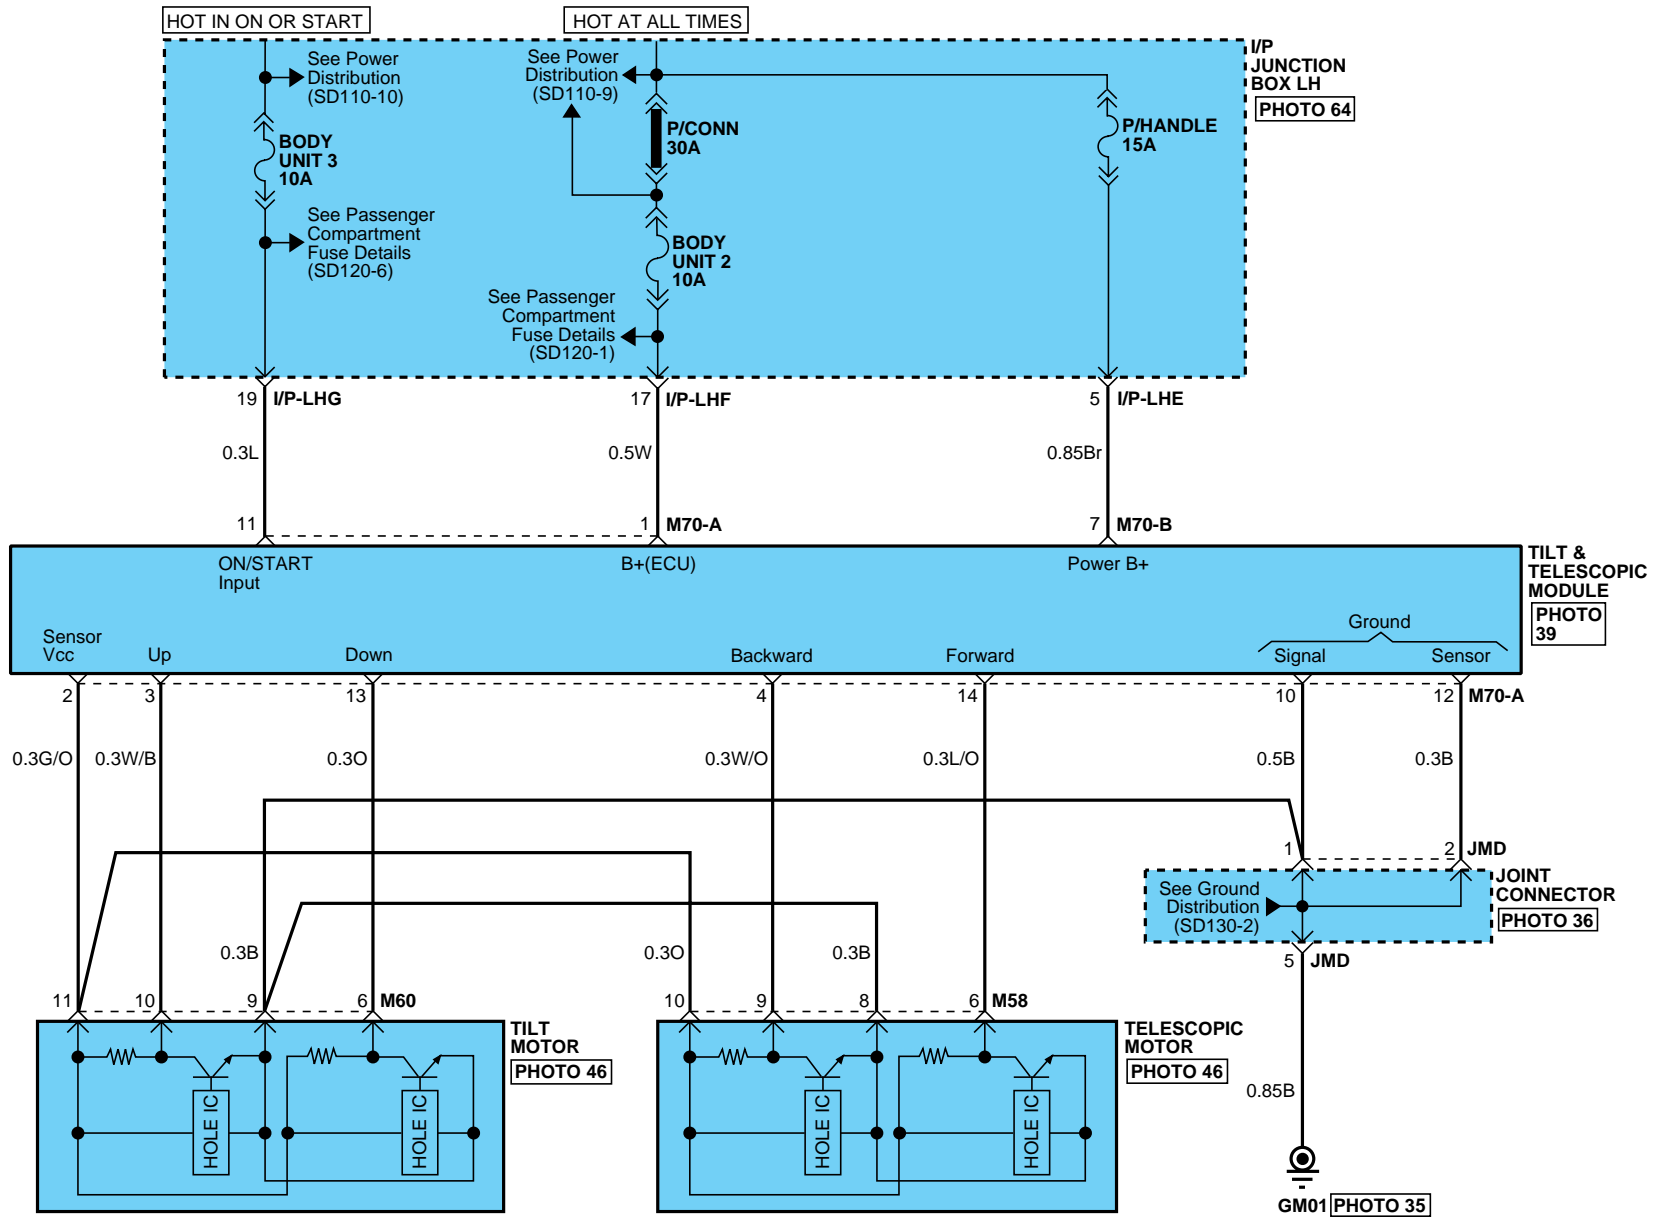

STEERING TILT & TELESCOPIC SYSTEM

Steering Tilt & Telescopic System (2)

SD564-2

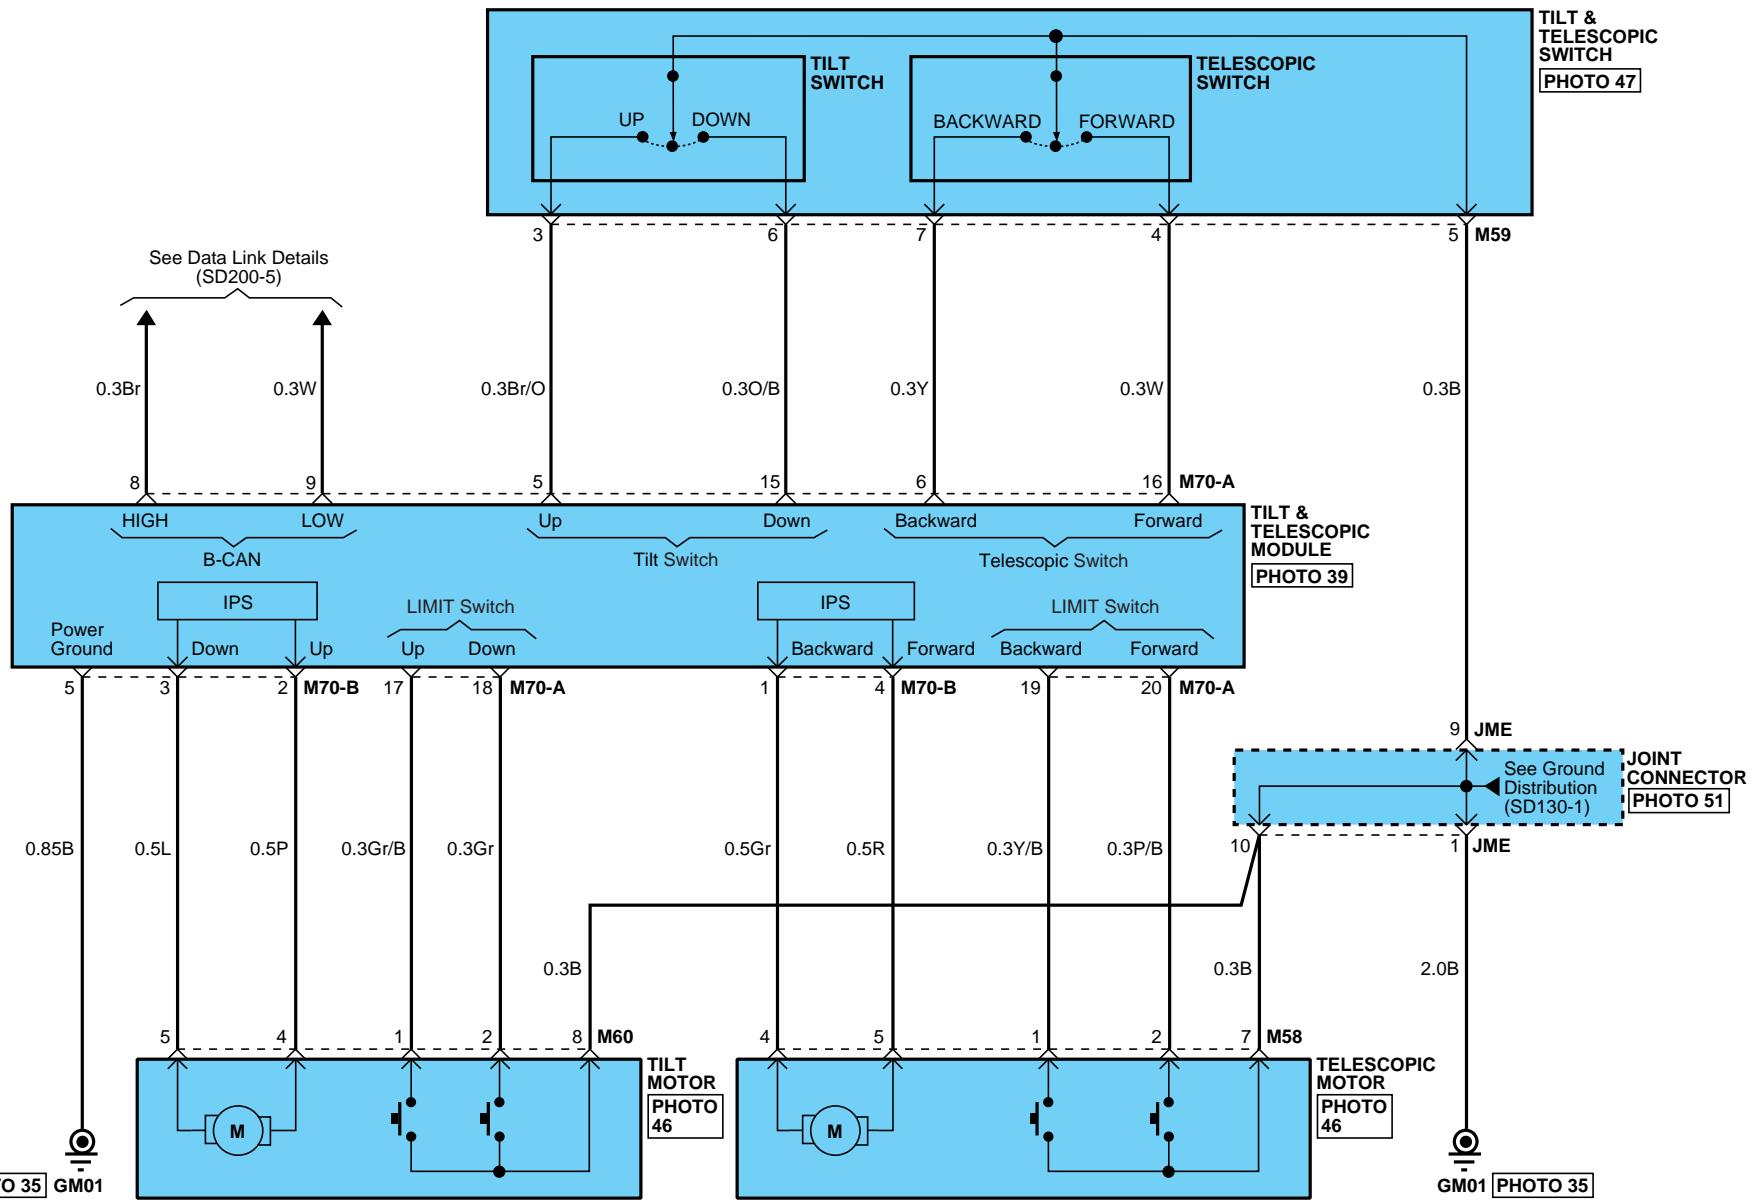


STEERING TILT & TELESCOPIC SYSTEM

Steering Tilt & Telescopic System (3)


SD564-3

M58

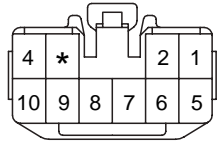


KET_090I1_10F_B

M59

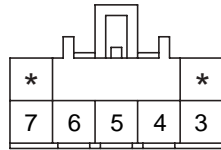


KUM_CDR_07F_W

M60

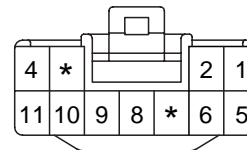


KET_090I1_11F_W

M70-A

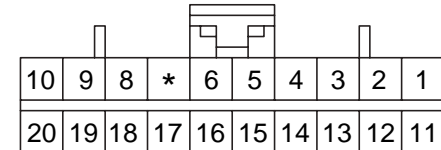

AMP_040M2_20F_B

M70-B

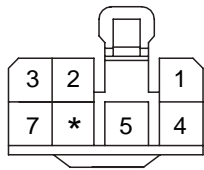

AMP_MIC_07F_W

BLANK

BLANK

BLANK

STEERING TILT & TELESCOPIC SYSTEM


Steering Tilt & Telescopic System (4)

SD564-4

MEMO

Supplemental Restraint System (SRS) (1)


SD569-1

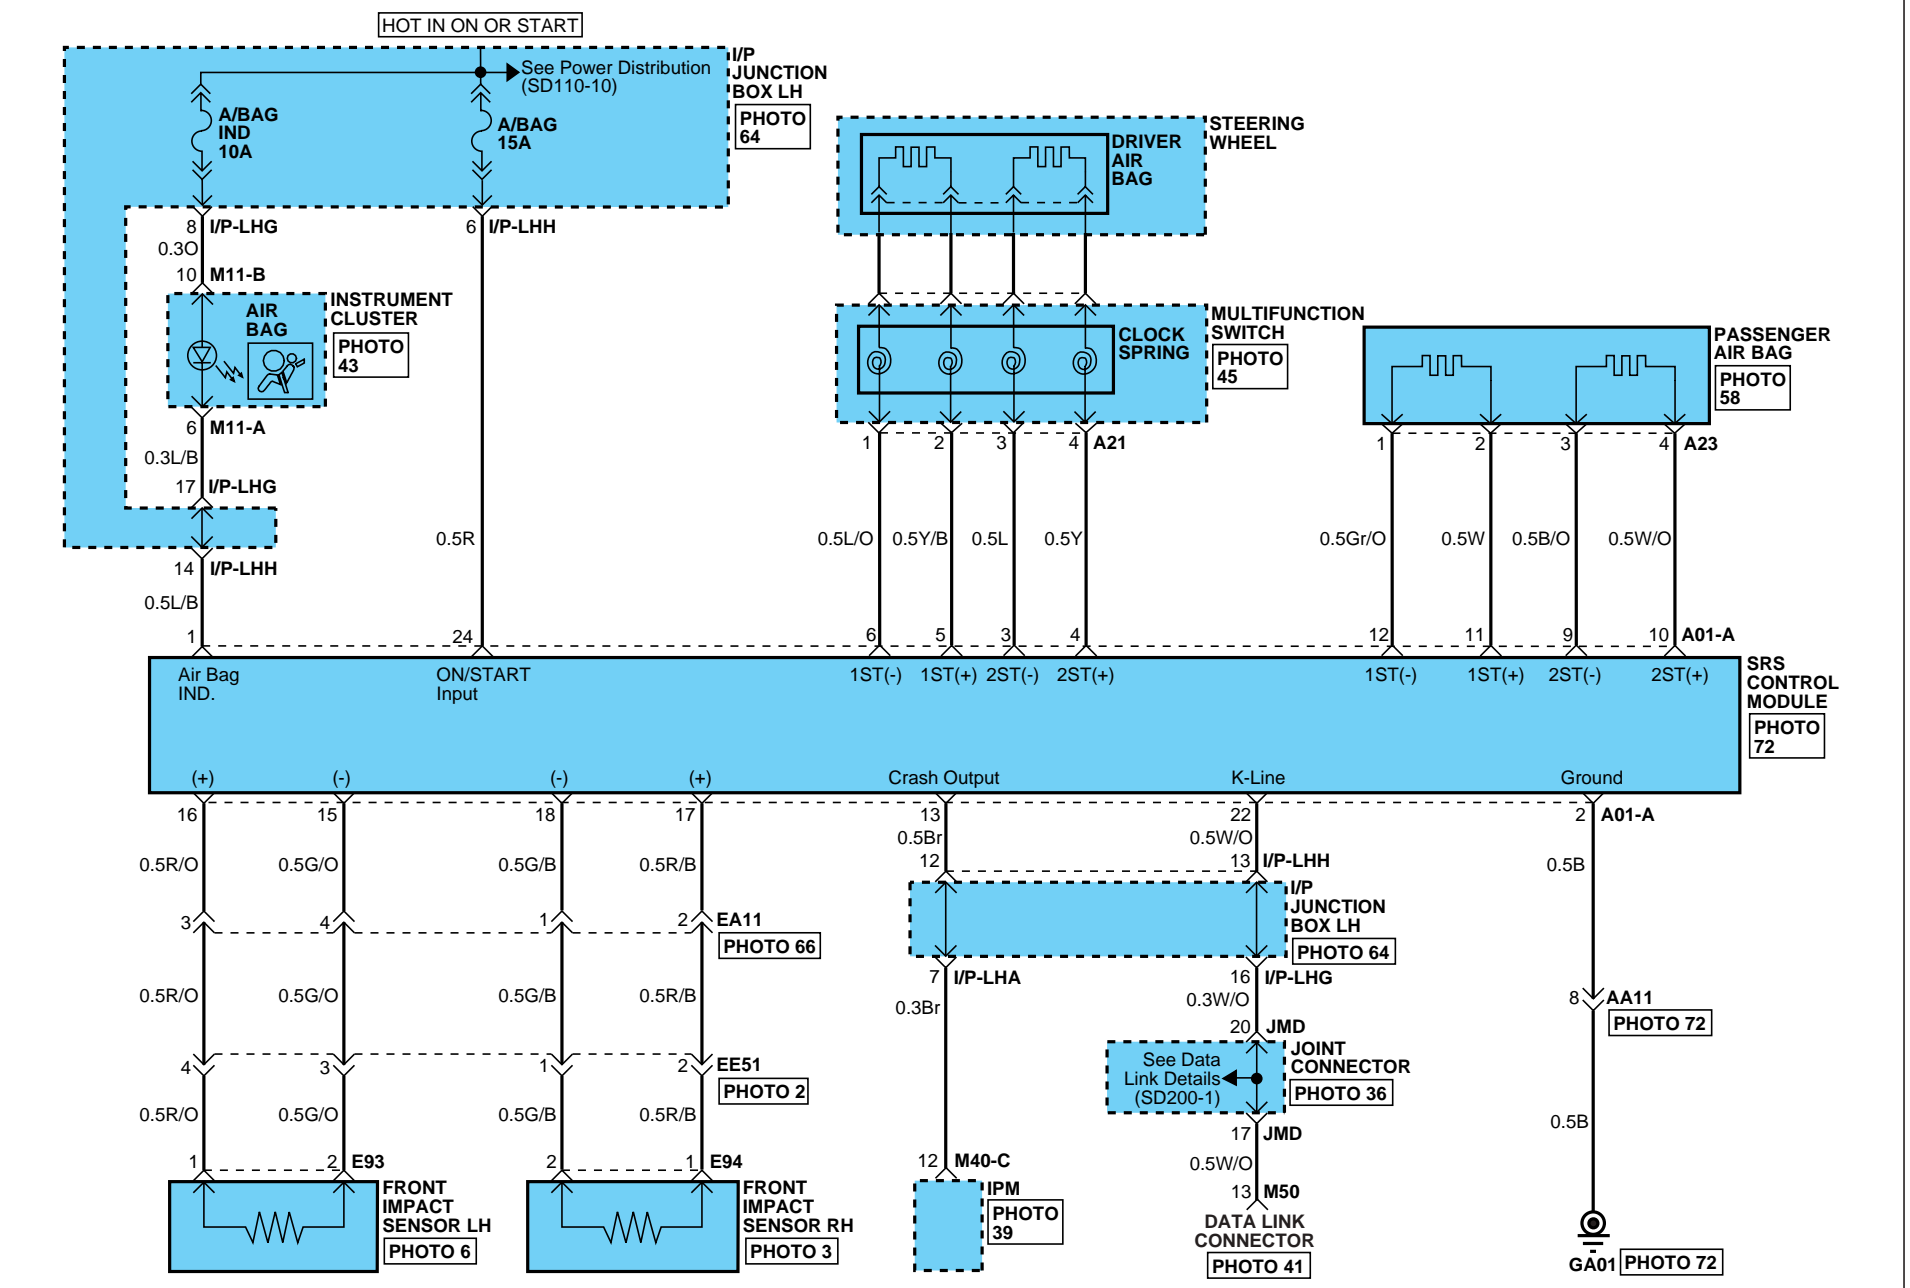

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

Supplemental Restraint System (SRS) (2)







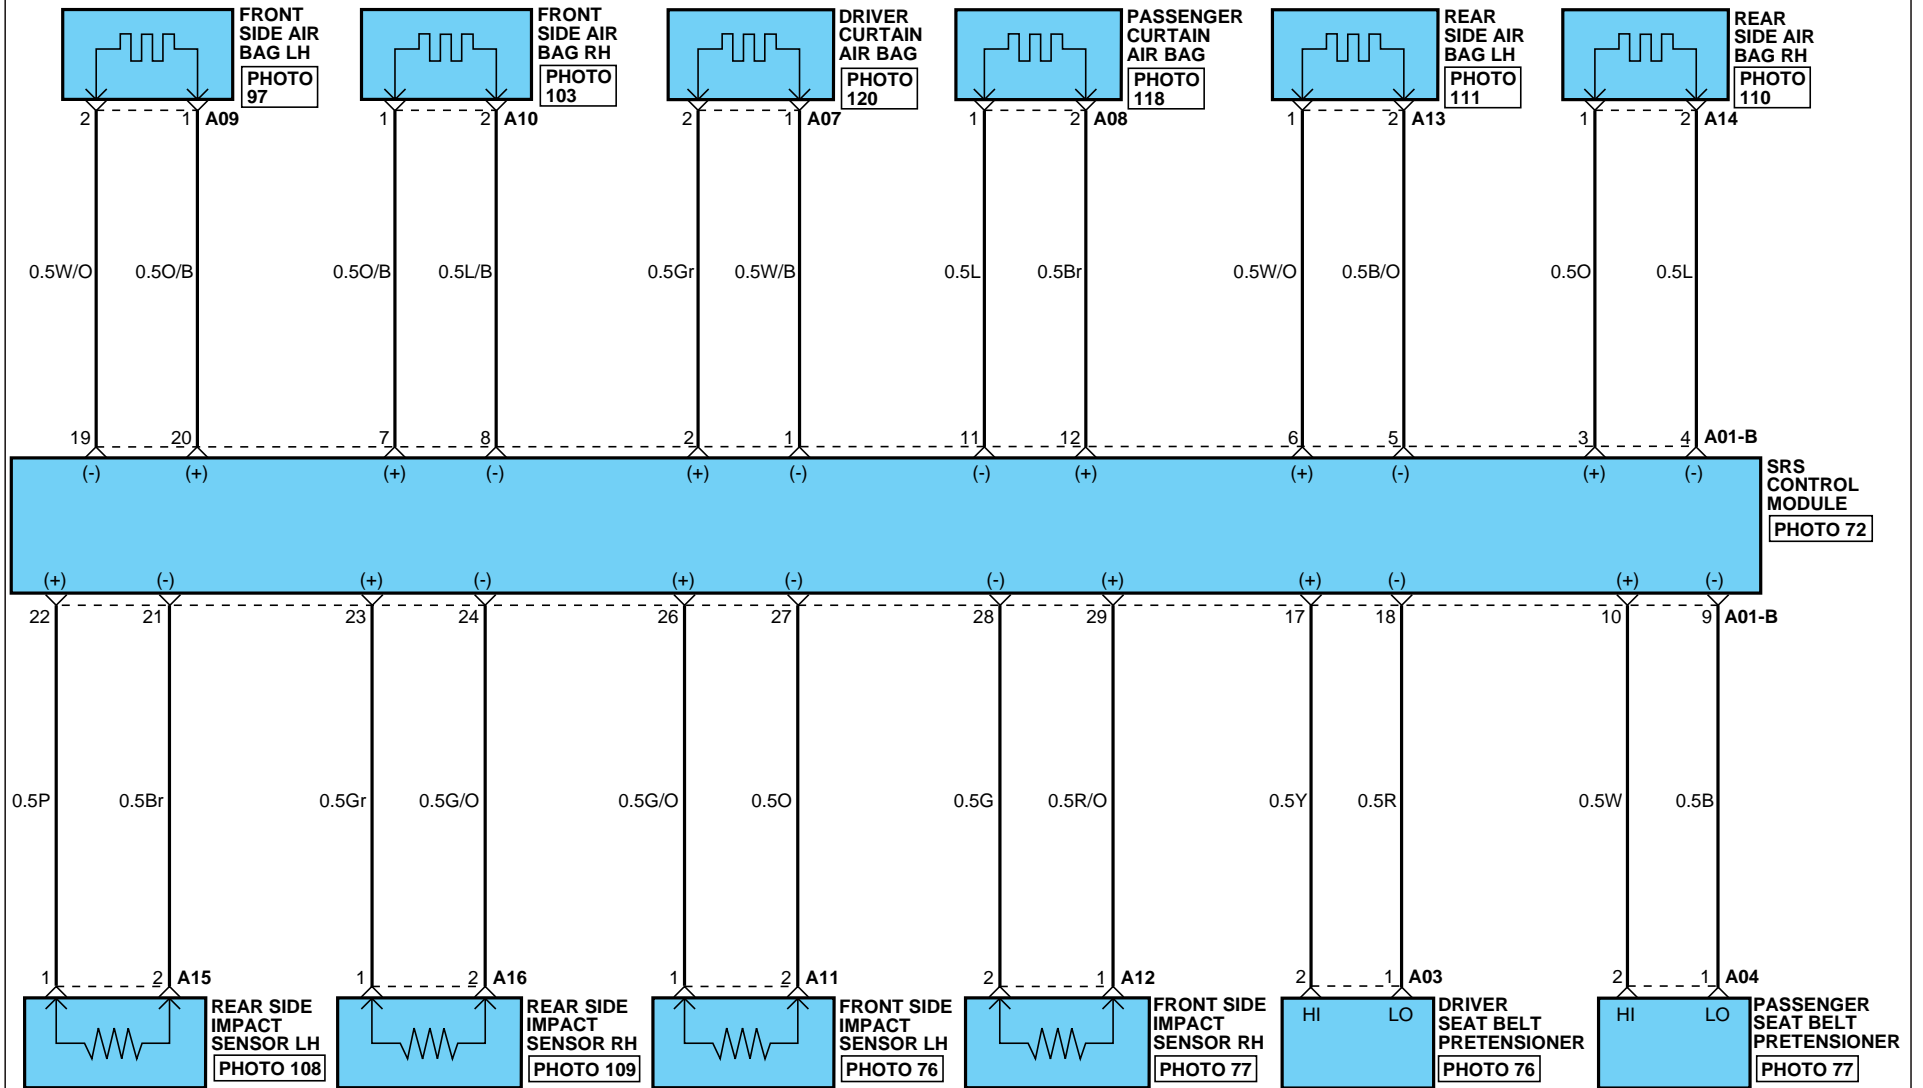



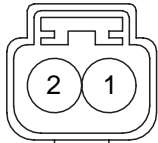
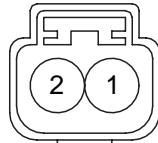




SD569-2



SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

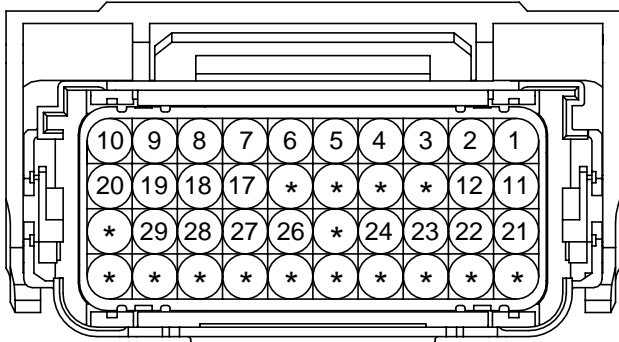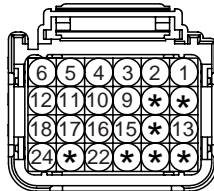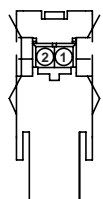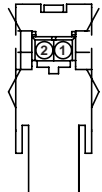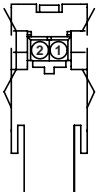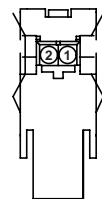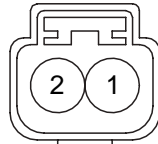Supplemental Restraint System (SRS) (3)

SD569-3
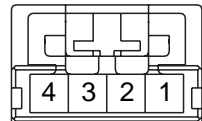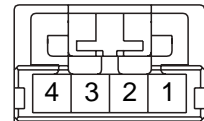
<p style="text-align: center;">A01-B</p>  <p style="text-align: right;">AMP_MQSWP_40F_B</p>		<p style="text-align: center;">A01-A</p>  <p style="text-align: right;">AMP_MQSWP_24F_B</p>	<p style="text-align: center;">BLANK</p>	
<p style="text-align: center;">A07</p>  <p style="text-align: right;">JST_SQS_02F_O</p>		<p style="text-align: center;">A03</p>  <p style="text-align: right;">JST_SQH_02F_B</p>	<p style="text-align: center;">A04</p>  <p style="text-align: right;">JST_SQH_02F_B</p>	
<p style="text-align: center;">A08</p>  <p style="text-align: right;">JST_SQS_02F_O</p>		<p style="text-align: center;">A09</p>  <p style="text-align: right;">YAZ_040WP_02F_Y</p>	<p style="text-align: center;">A10</p>  <p style="text-align: right;">YAZ_040WP_02F_Y</p>	
<p style="text-align: center;">A11</p>  <p style="text-align: right;">SUM_060WP_02F_Gr</p>	<p style="text-align: center;">A12</p>  <p style="text-align: right;">SUM_060WP_02F_Gr</p>	<p style="text-align: center;">A13</p>  <p style="text-align: right;">YAZ_040WP_02F_Y</p>	<p style="text-align: center;">A14</p>  <p style="text-align: right;">YAZ_040WP_02F_Y</p>	
<p style="text-align: center;">A15</p>  <p style="text-align: right;">SUM_060WP_02F_Gr</p>	<p style="text-align: center;">A16</p>  <p style="text-align: right;">SUM_060WP_02F_Gr</p>	<p style="text-align: center;">A21</p>  <p style="text-align: right;">YAZ_040_04F_Y</p>	<p style="text-align: center;">A23</p>  <p style="text-align: right;">YAZ_040_04F_Y</p>	

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

Supplemental Restraint System (SRS) (4)

SD569-4

E93




SUM_060WP_02F_B

E94




SUM_060WP_02F_B

M11-A

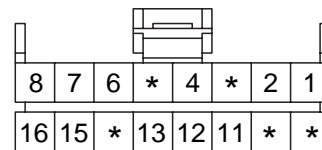


AMP_040M1_16F_B

M11-B

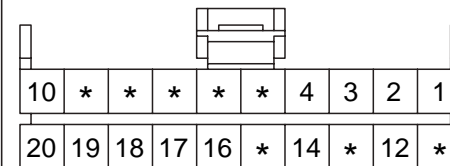


AMP_040M1_20F_B

M40-C

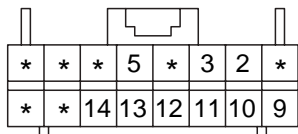

AMP_0407_16F_W_040

M50

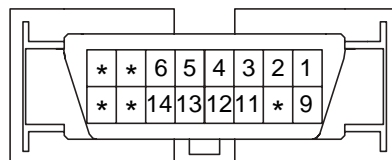


MLX_OBDII_16F_B

BLANK

BLANK

Electronic Stability Program (ESP) System (1)


SD588-1

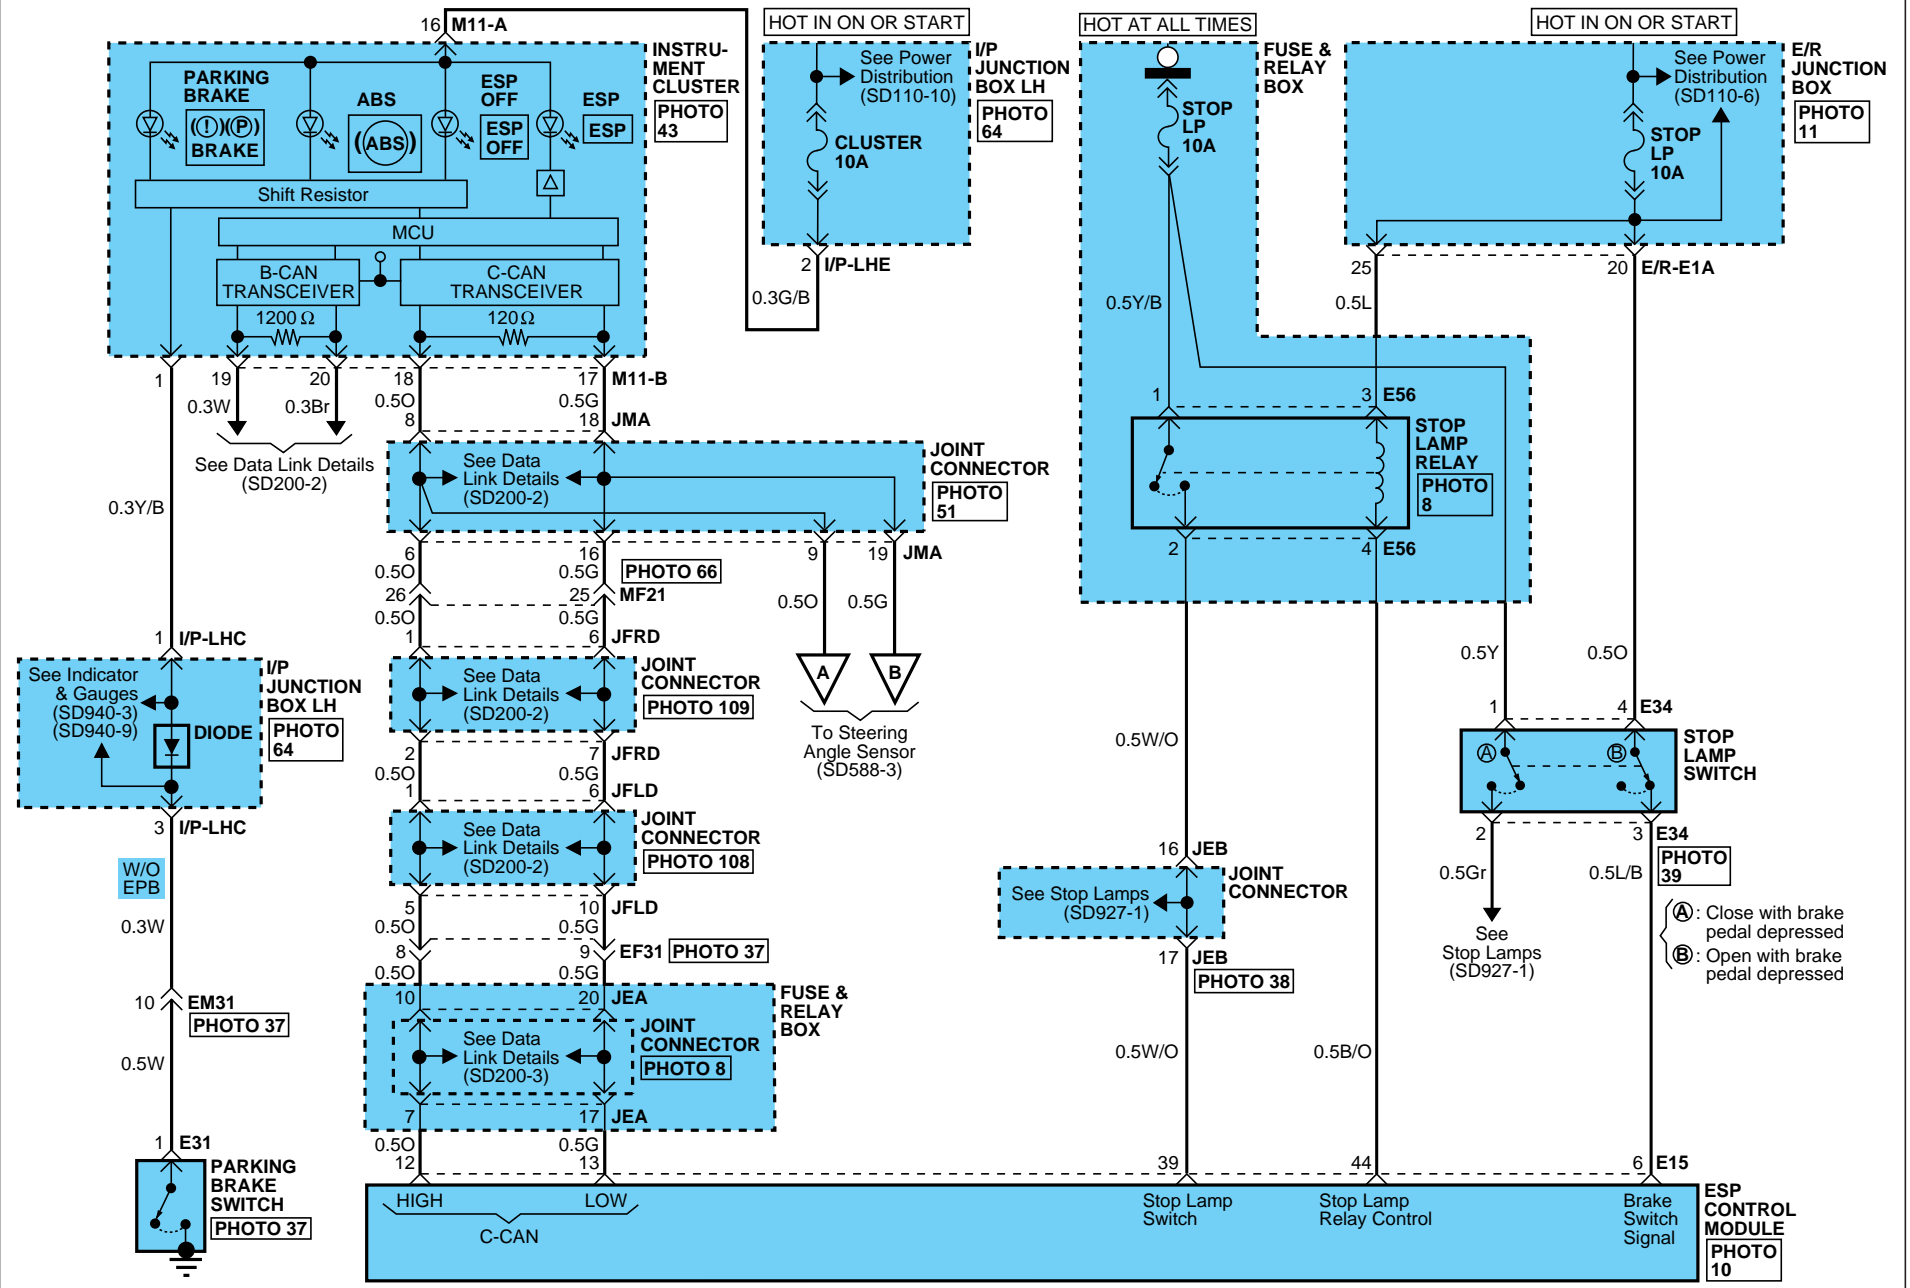

ELECTRONIC STABILITY PROGRAM (ESP) SYSTEM

Electronic Stability Program (ESP) System (2)


SD588-2

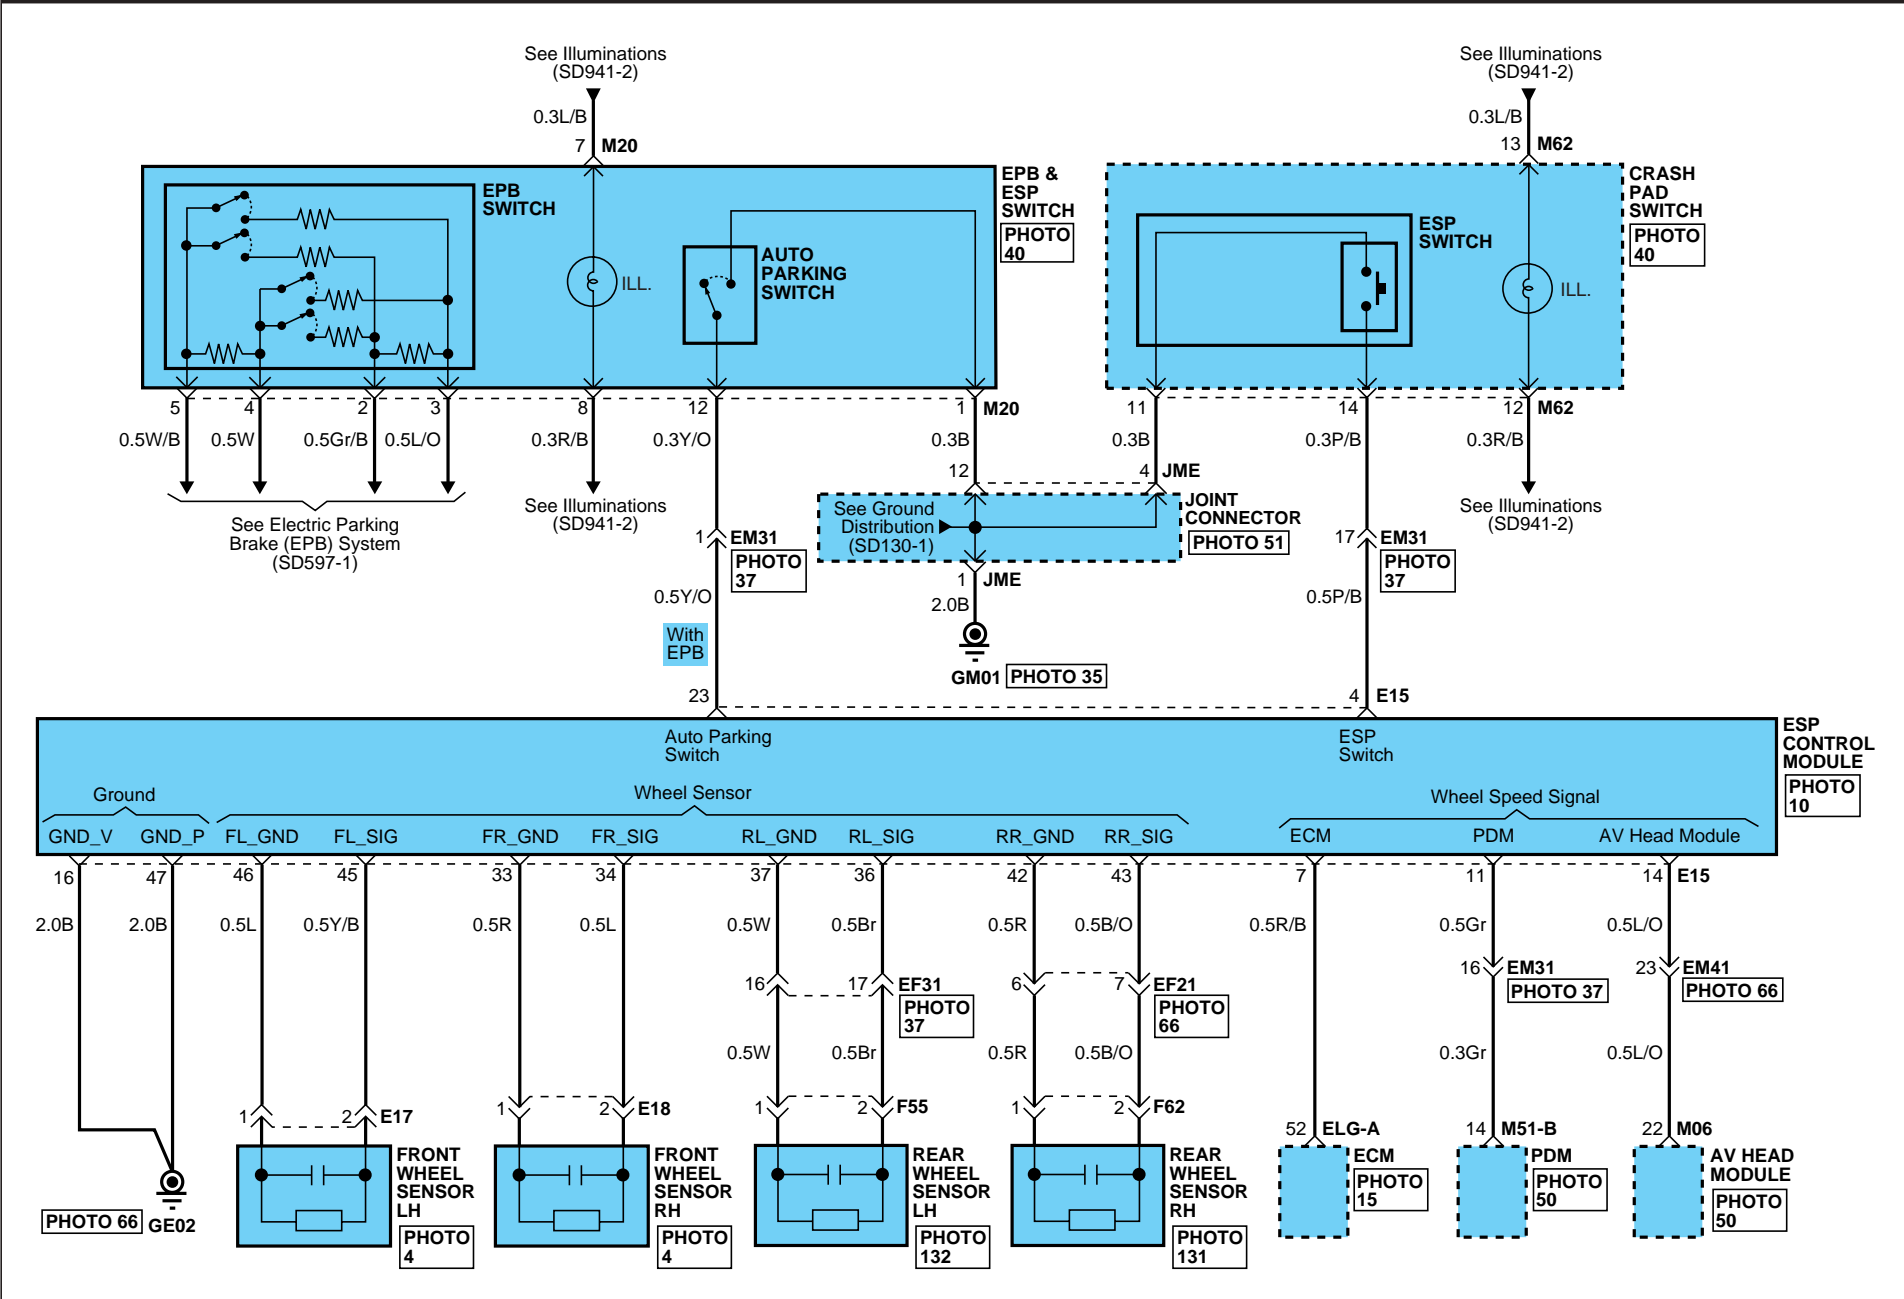

ELECTRONIC STABILITY PROGRAM (ESP) SYSTEM

Electronic Stability Program (ESP) System (3)

SD588-3

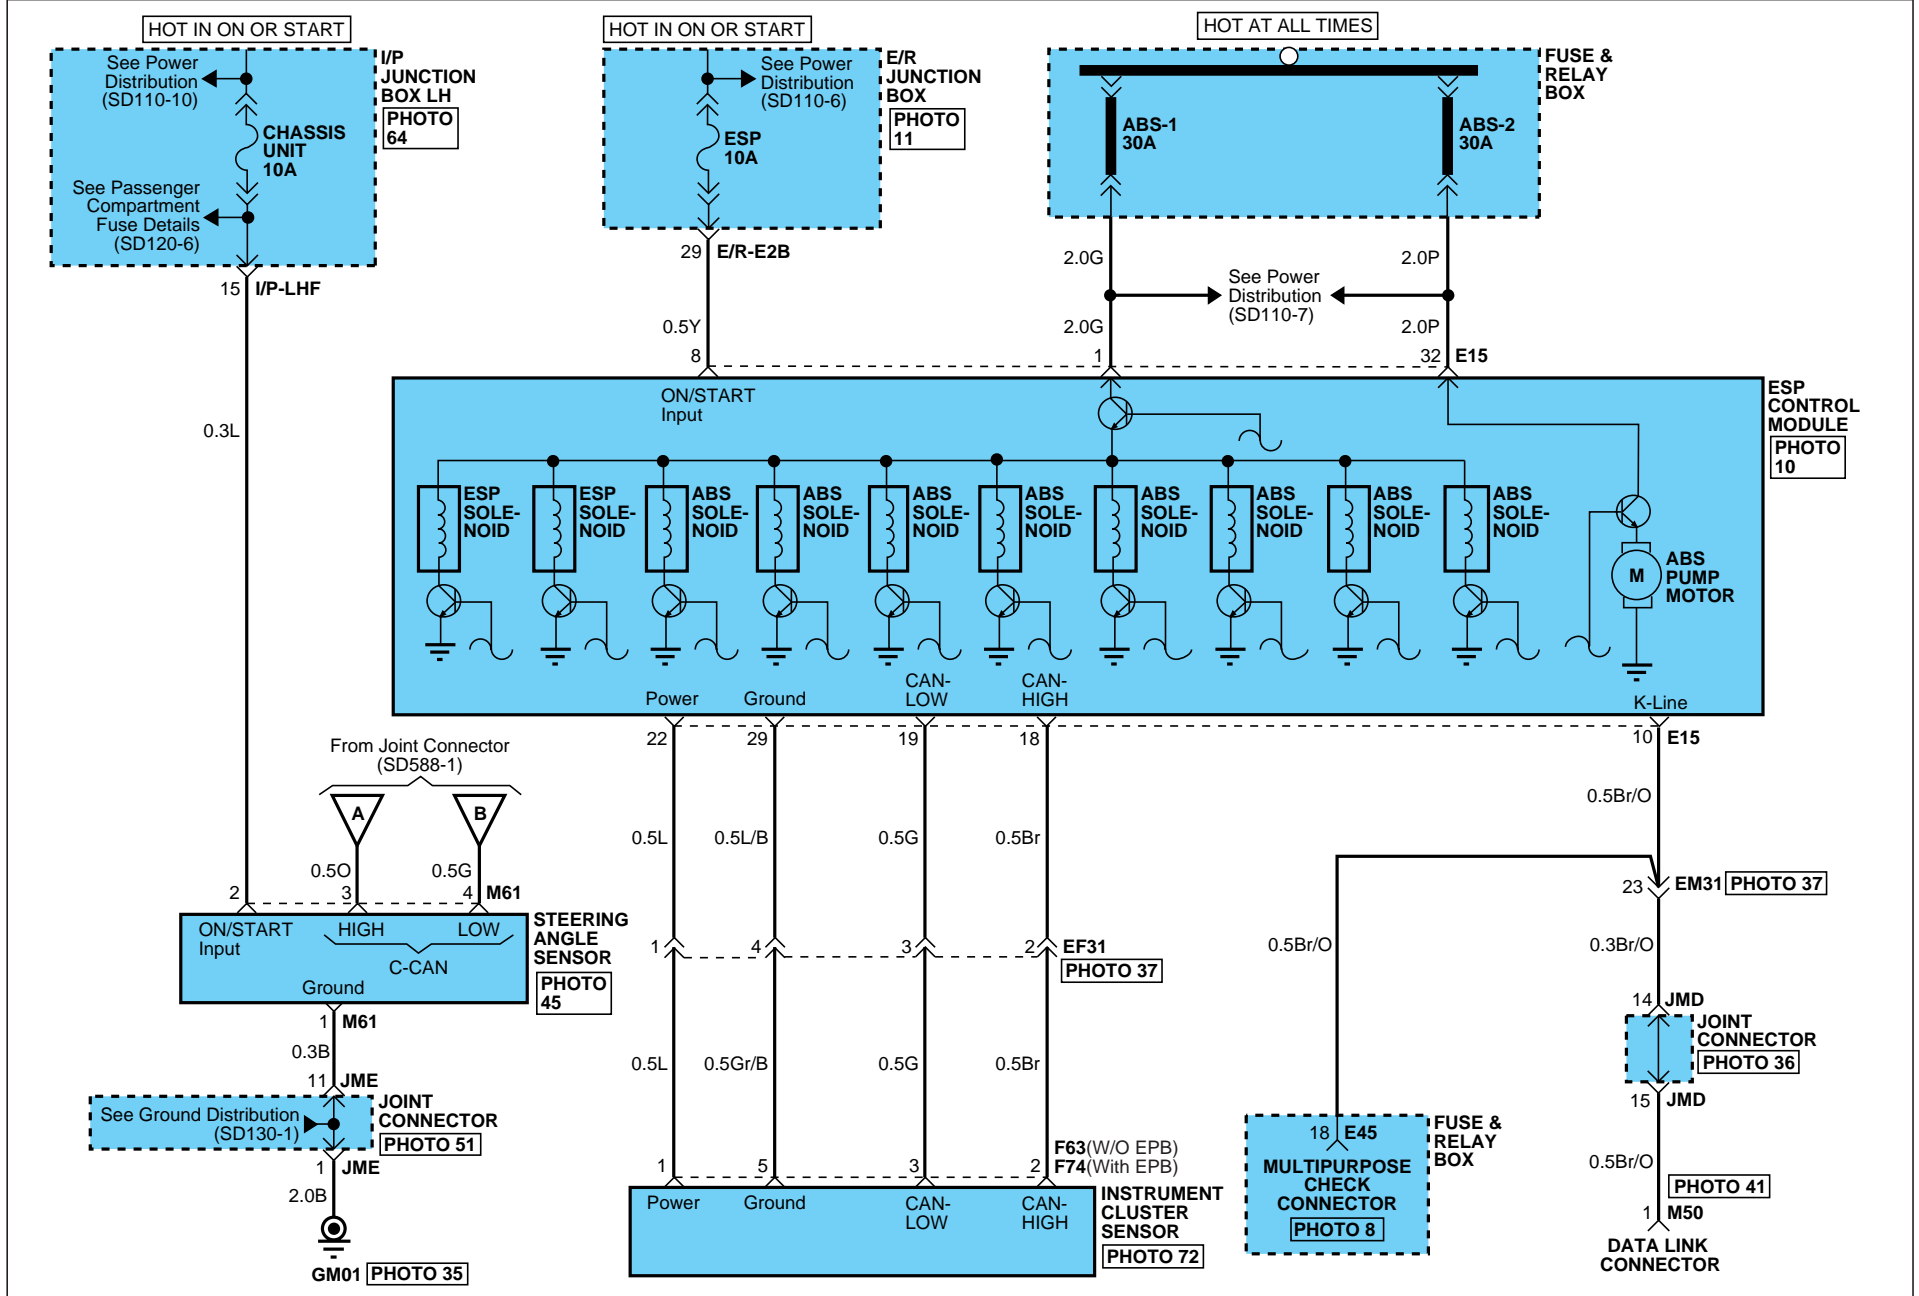


ELECTRONIC STABILITY PROGRAM (ESP) SYSTEM

Electronic Stability Program (ESP) System (4)


SD588-4

ELG-A

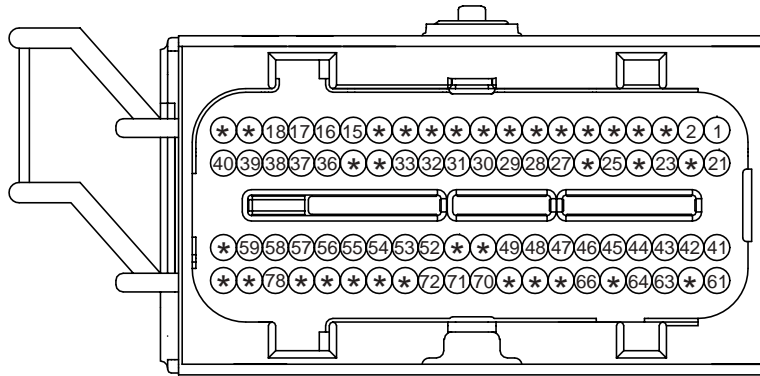


PKD_ECU_80F_Gr_1

E15

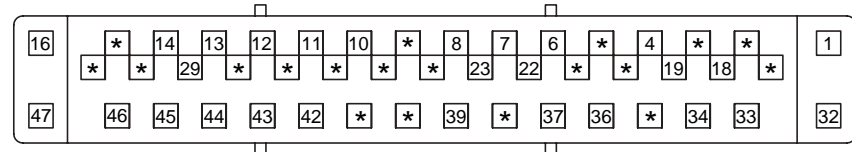


AMP_ESP_47F_L_UNIT

E17

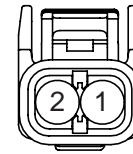


KET_090IWP_02F_B_ASM

 E31




AMP_250DL_01F_B

E34

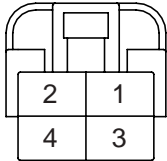


KET_250DL_04F_W

 
E45



E56

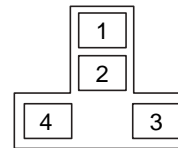


E18,F55,F62

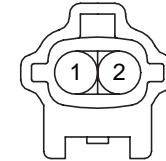


KET_090IWP_02M_B

F63

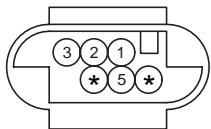


AMP_MQSWP_06F_GR_1

F74

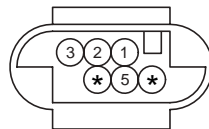


AMP_MQSWP_06F_B_1

M06

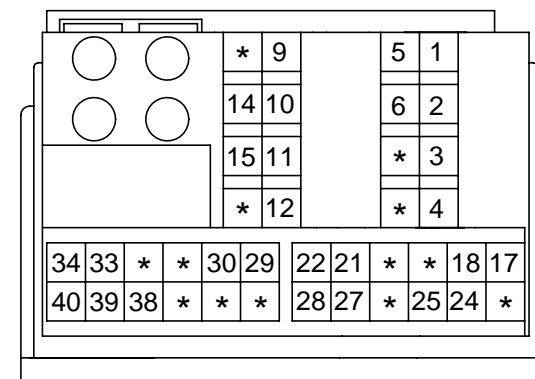


YAZ_OPT_40F_B

M11-A

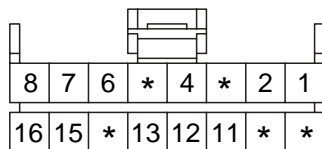

AMP_040M1_16F_B

M11-B

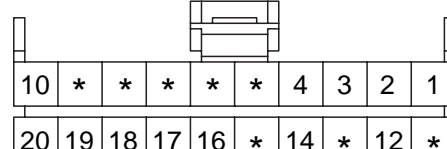


AMP_040M1_20F_B

ELECTRONIC STABILITY PROGRAM (ESP) SYSTEM

Electronic Stability Program (ESP) System (5)


SD588-5

M20

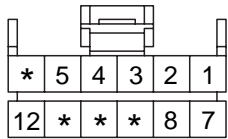


AMP_040M1_12F_B

M50

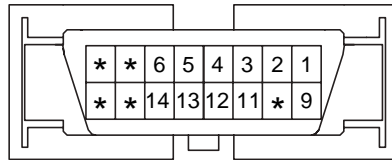


MLX_OBDII_16F_B

M51-B

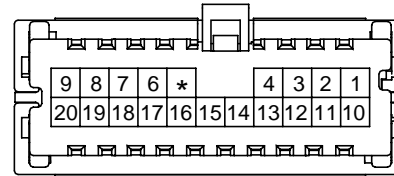


KET_040III_20F_W

M61

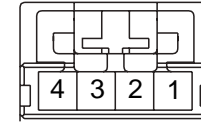

AMP_MQS_04F_B_040

M62

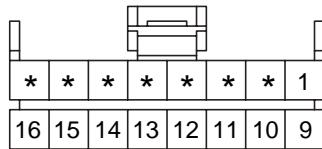

AMP_040M1_16F_B

BLANK

BLANK

BLANK

ELECTRONIC STABILITY PROGRAM (ESP) SYSTEM


Electronic Stability Program (ESP) System (6)

SD588-6

MEMO

Electric Parking Brake (EPB) System (1)

SD597-1

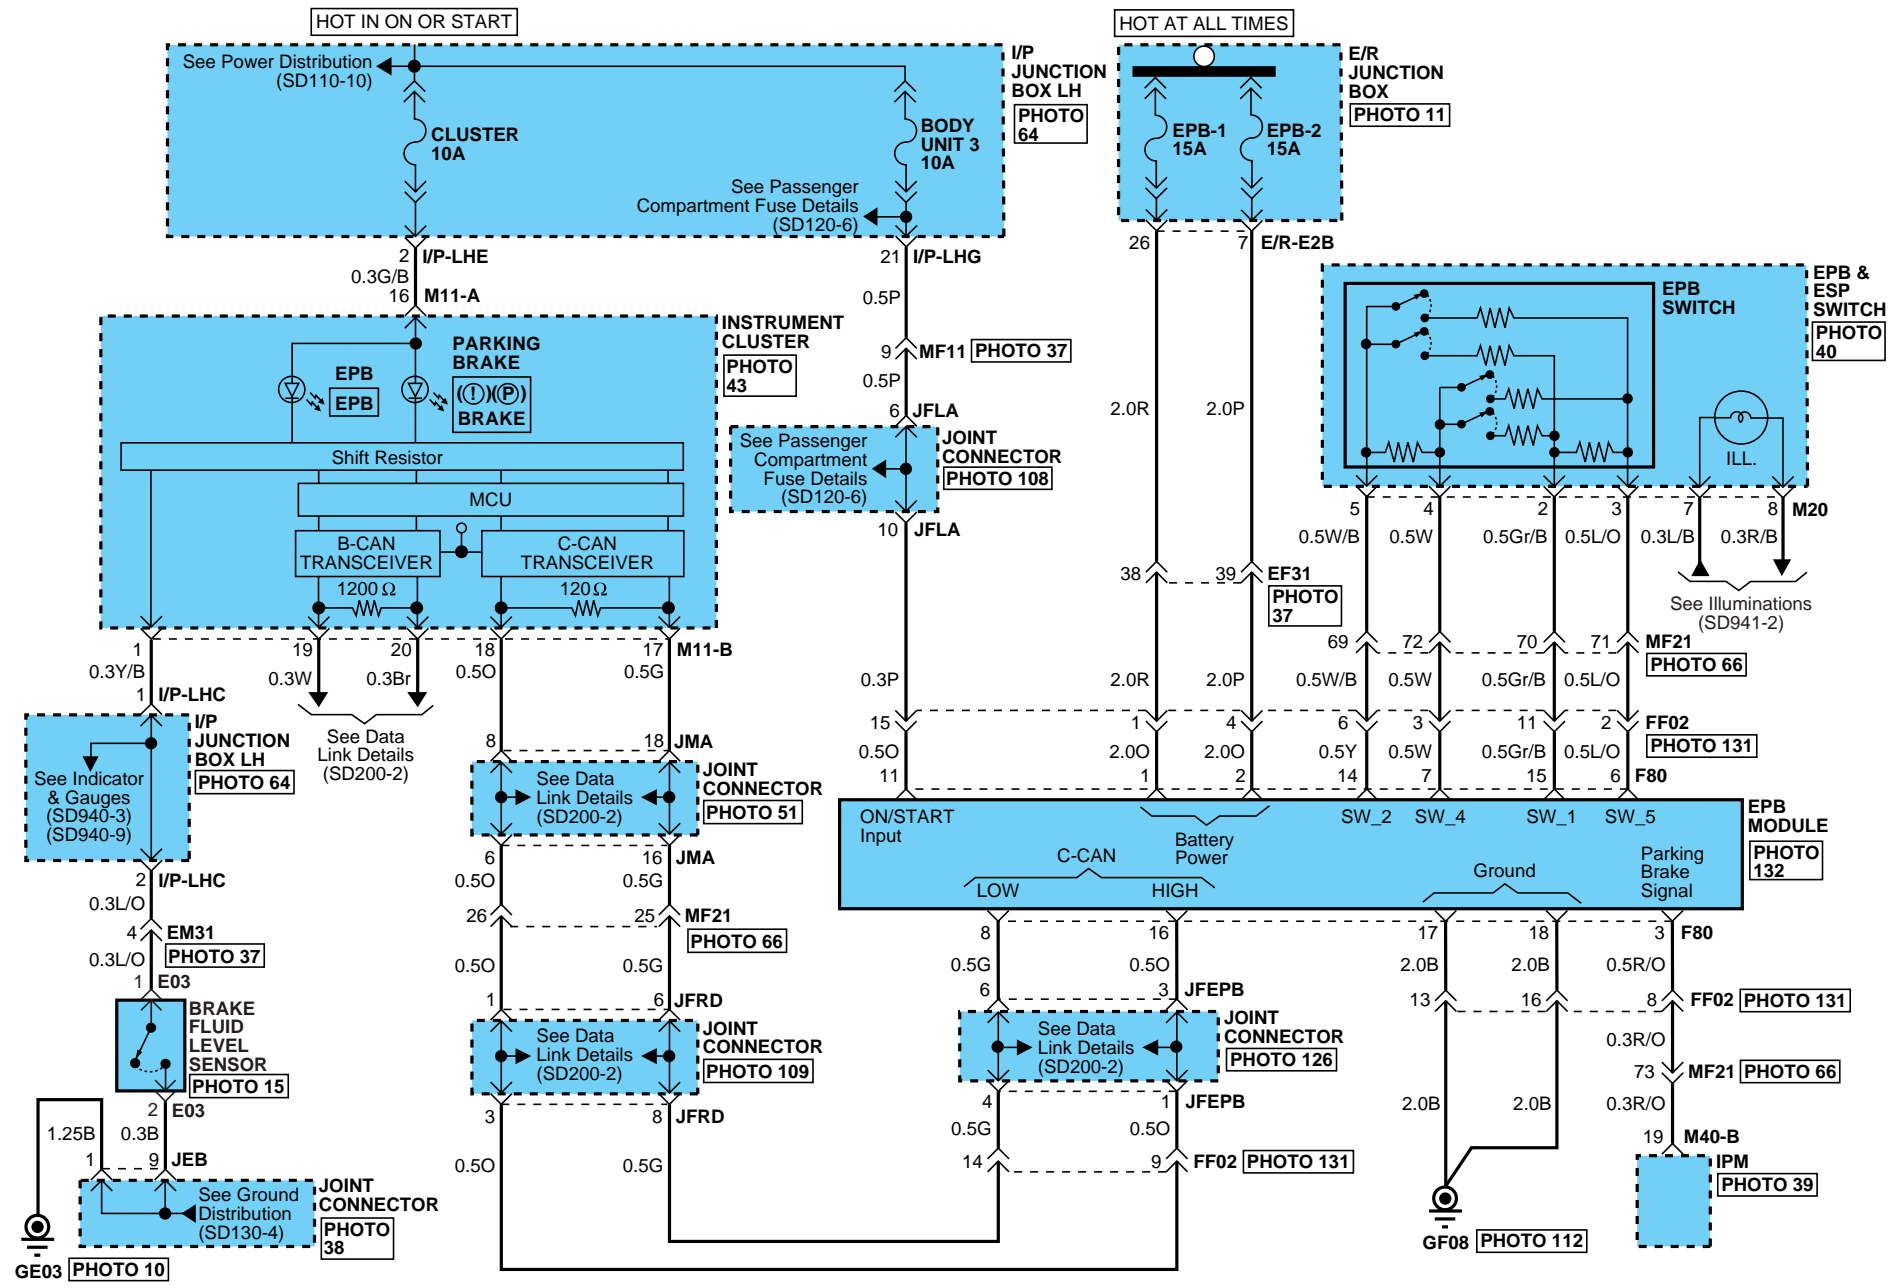


ELECTRIC PARKING BRAKE (EPB) SYSTEM

Electric Parking Brake (EPB) System (2)


SD597-2

E03

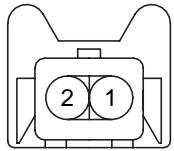


AMP_JPT_02F_B_S1

F80

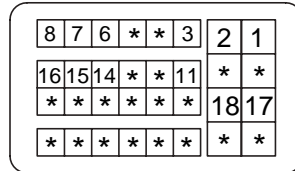


MLX_CMC_32F_GR

M11-A

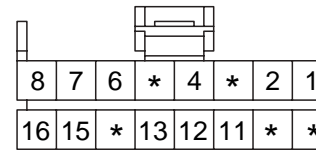


AMP_040M1_16F_B

M11-B

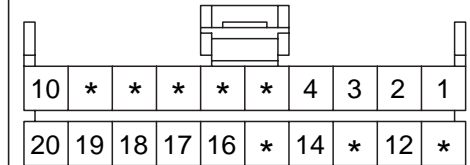


AMP_040M1_20F_B

M20

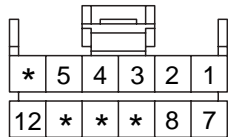

AMP_040M1_12F_B

 M40-B




AMP_0407_26F_W_HD

BLANK

BLANK

Fuel Filler Door & Trunk Lid Opener (1)

SD812-1

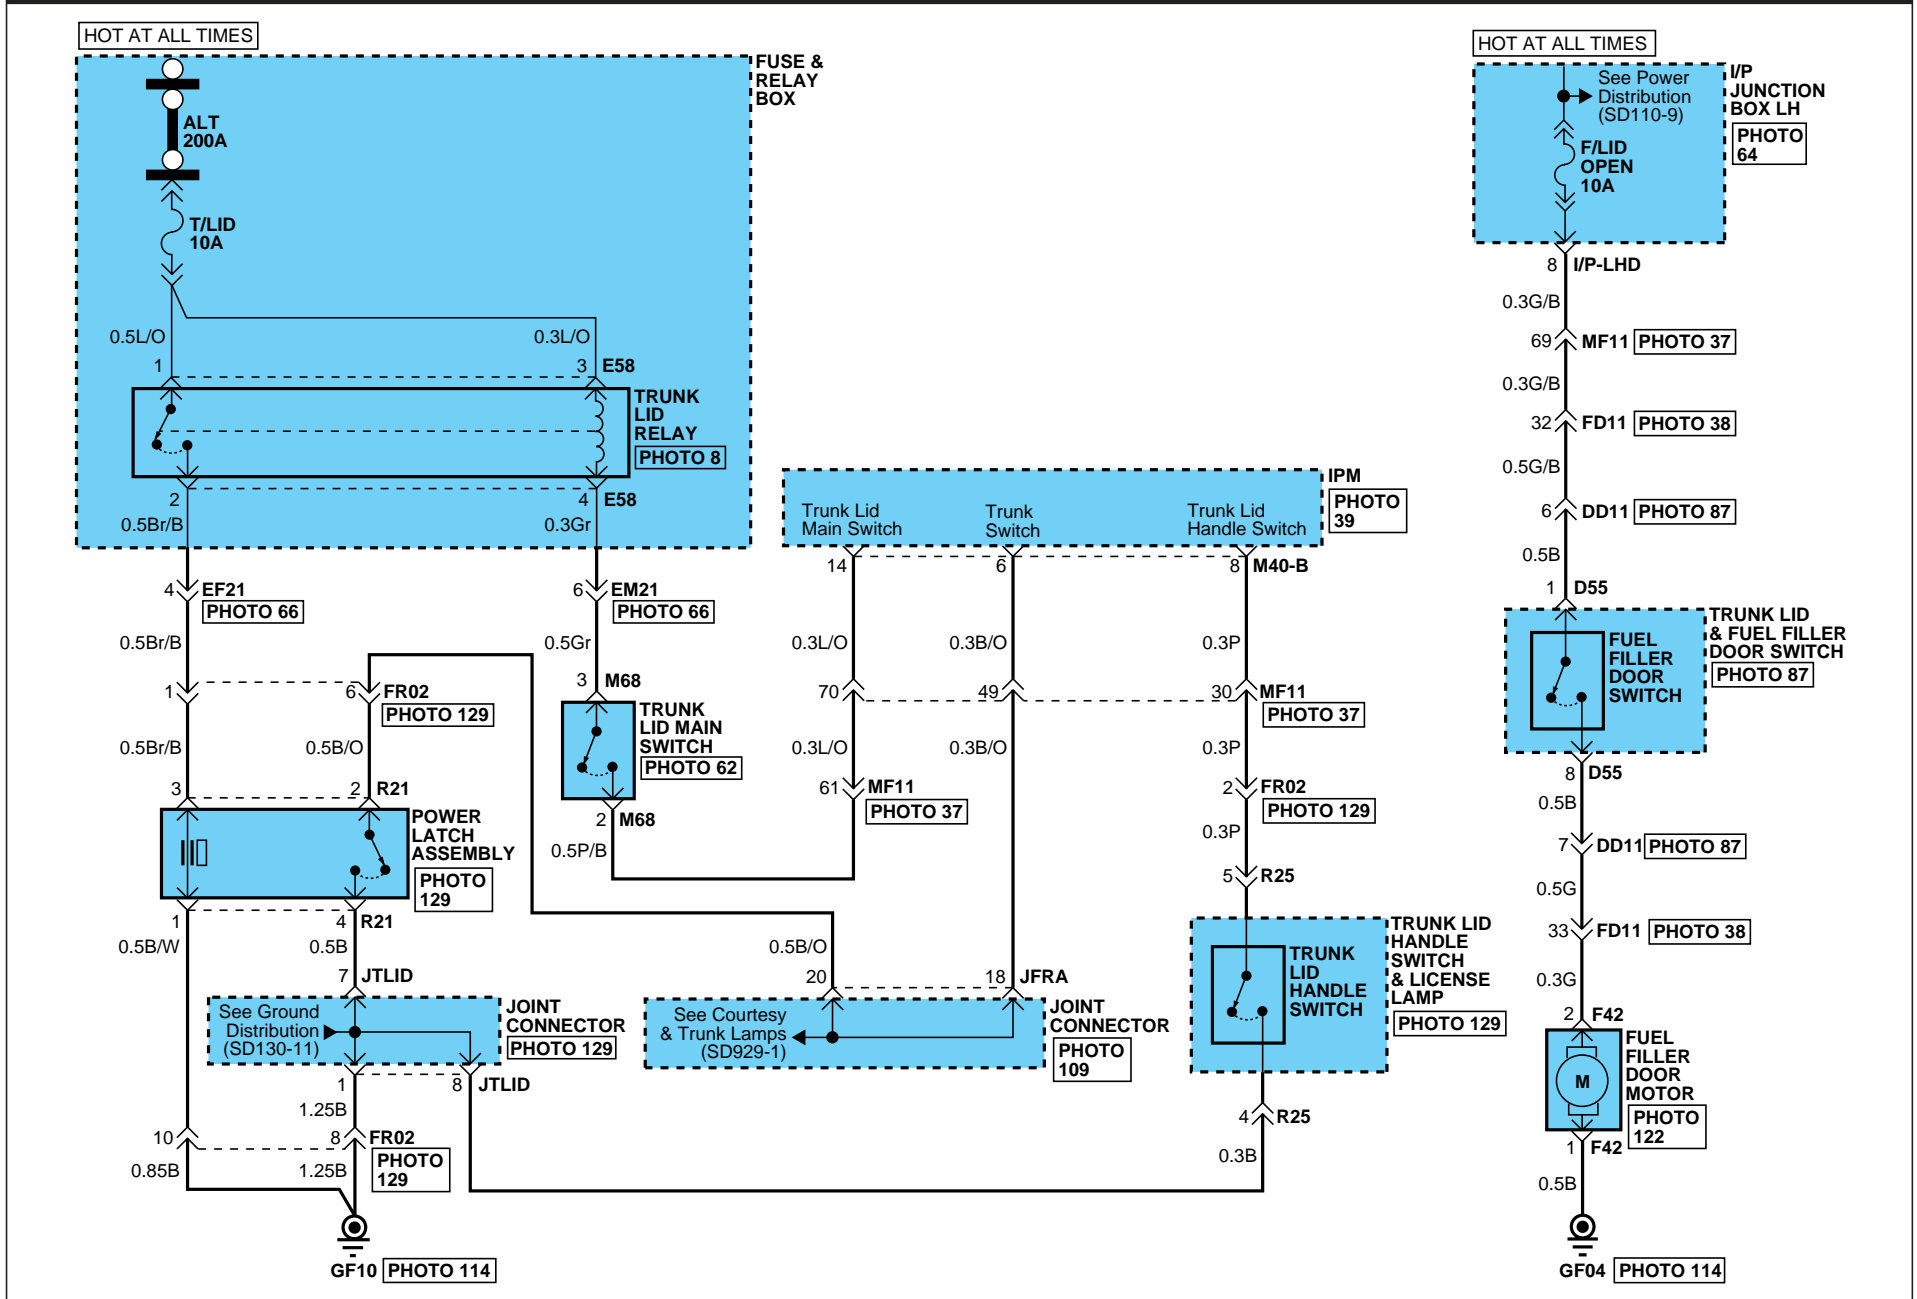


FUEL FILLER DOOR & TRUNK LID OPENER


Fuel Filler Door & Trunk Lid Opener (2)

SD812-2

E58

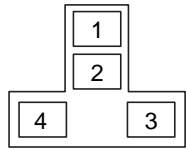


D55

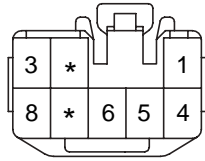


KET_090II_08F_W

 F42




KET_090III_02F_W_L

 M40-B




AMP_0407_26F_W_HD

 M68




KET_250_03F_W

R21

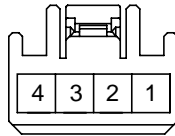

AMP_090III_04F_W

R25

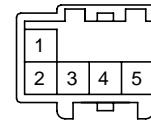

KUM_CDR_05M_W


BLANK

POWER DOOR LOCKS

E0435F4B

Power Door Locks (1)


SD813-1

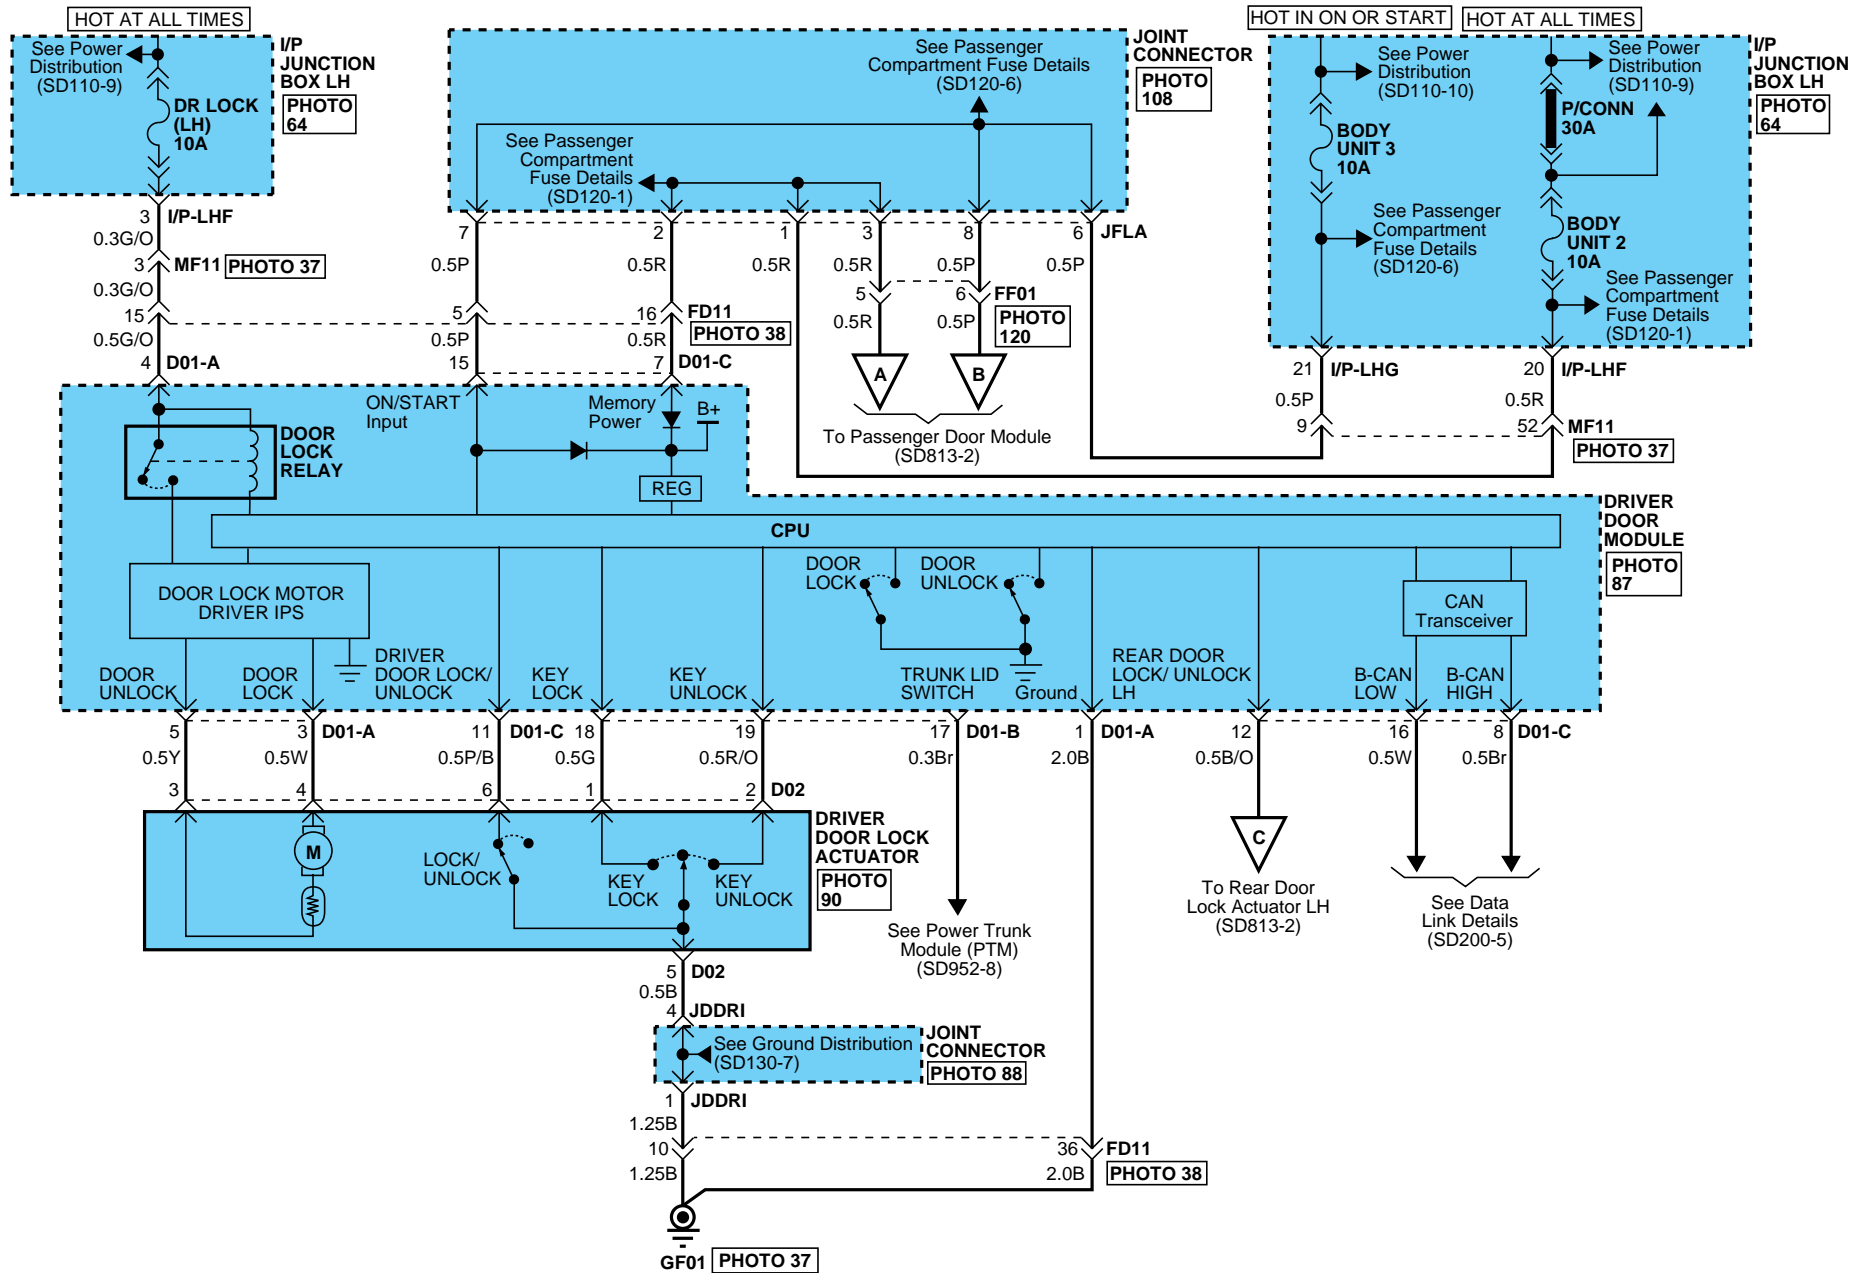

POWER DOOR LOCKS

Power Door Locks (2)

SD813-2

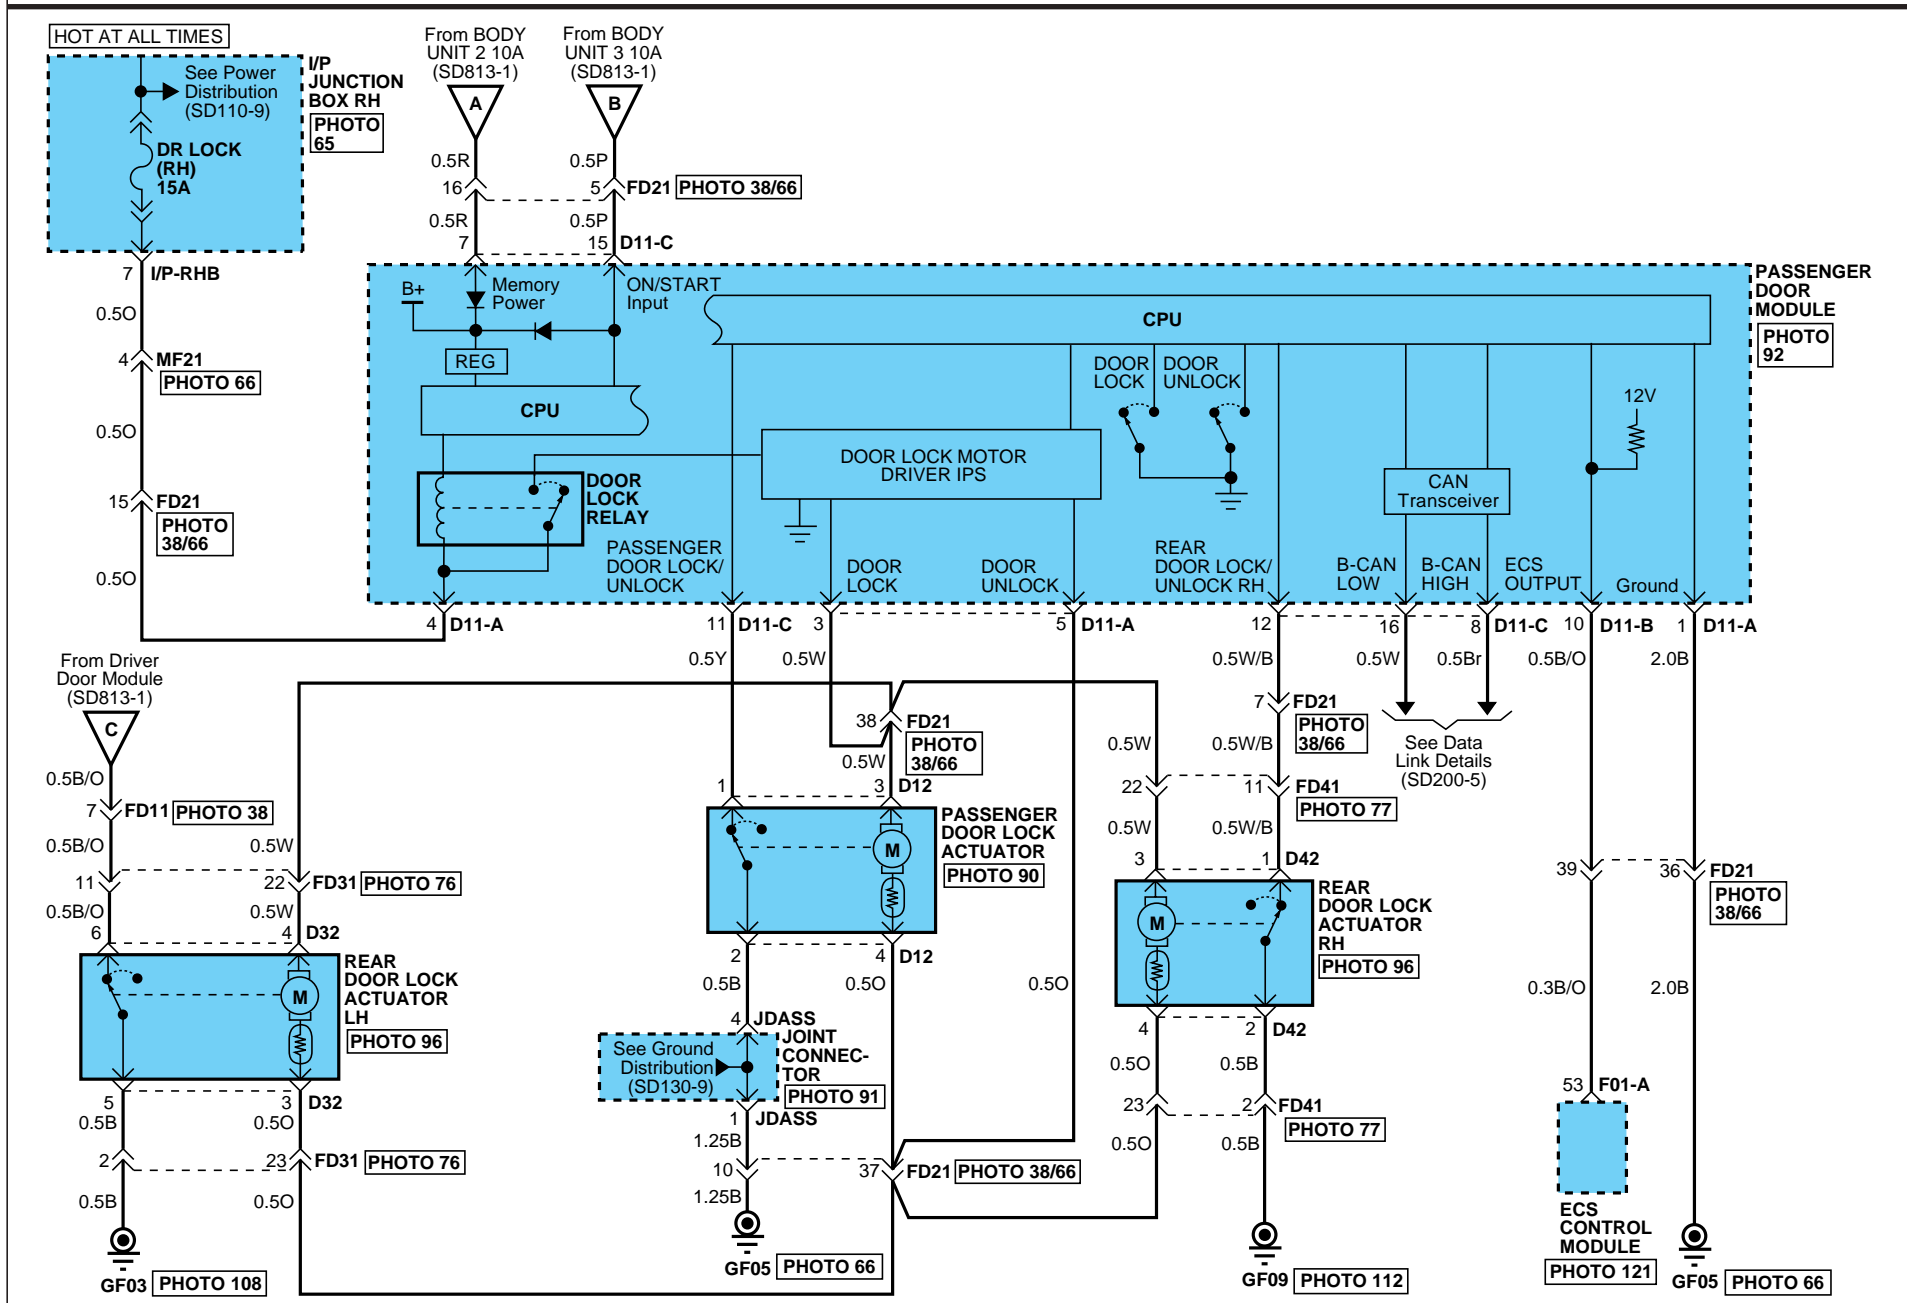


POWER DOOR LOCKS

Power Door Locks (3)


SD813-3

D01-A

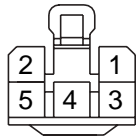


AMP_MIC_05F_W

 D01-B




AMP_DLI_20F_B_DL

 D01-C




AMP_DLI_16F_B_DL

D02

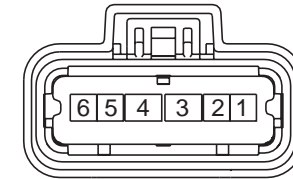


FCI_MINIWP_06F_B

D11-A

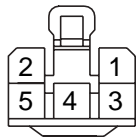


AMP_MIC_05F_W

D11-B

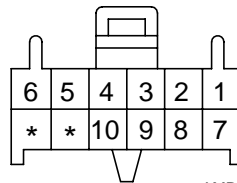


AMP_DLI_12F_B_DL

 D11-C




AMP_DLI_16F_B_DL

D12

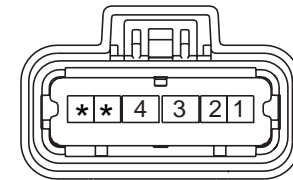


FCI_MINIWP_06F_B

D32

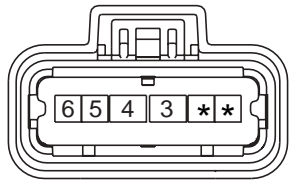


FCI_MINIWP_06F_B

D42

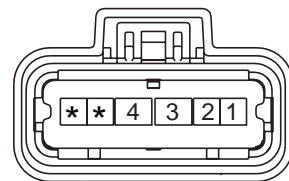

FCI_MINIWP_06F_B

F01-A

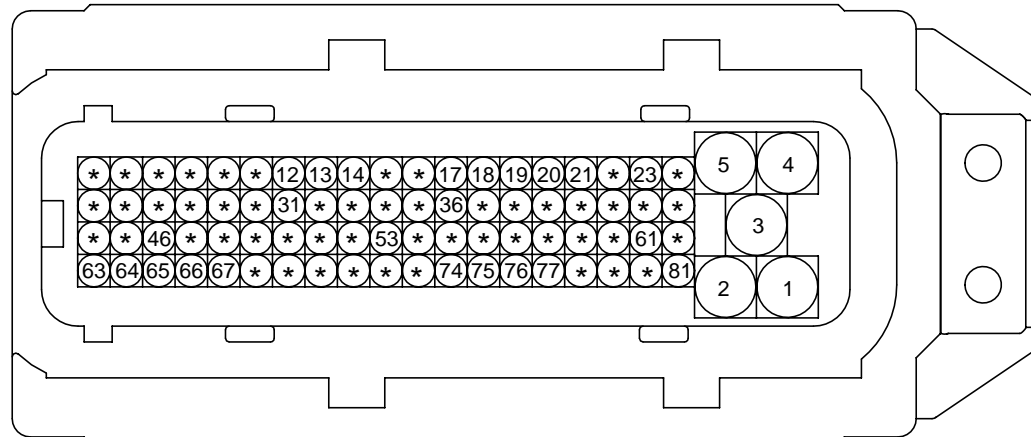

AMP_MQJWP_81F_B_1

POWER DOOR LOCKS

Power Door Locks (4)

SD813-4


MEMO

Sunroof (1)

SD816-1

See Illuminations (SD941-3)

0.3L/B

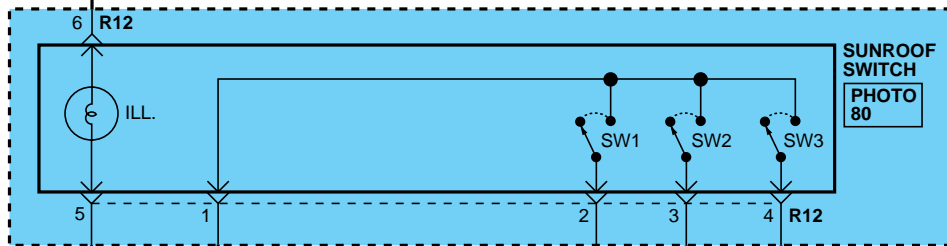

OVERHEAD CONSOLE LAMP

See Illuminations (SD941-3)

0.3R/B

See Ground Distribution (SD130-7)




1.25B


FR11 PHOTO 34

1.25B

GF01 PHOTO 37

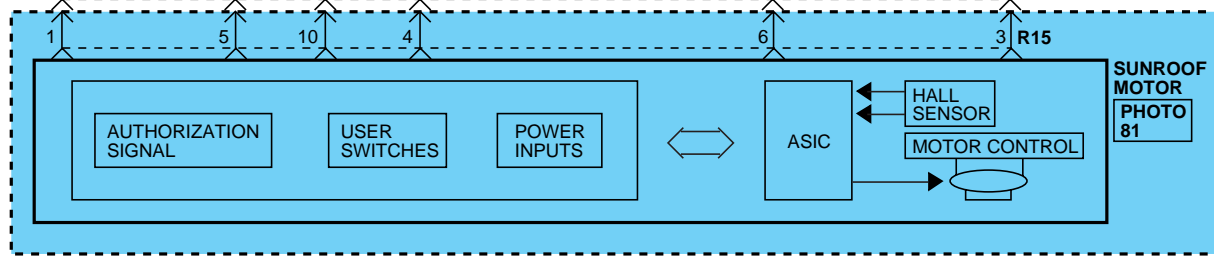

OVERHEAD CONSOLE LAMP PHOTO 80

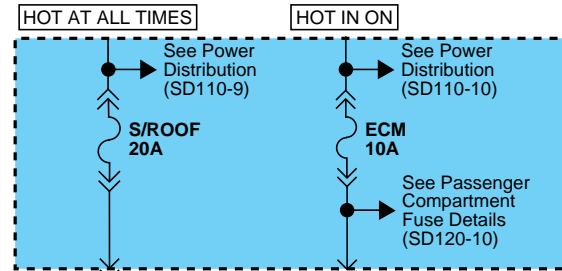

11 I/P-RHB

6 I/P-RHA

0.85Y/O

0.3R/B

6

35 MF21 PHOTO 66

0.85Y/O

 
0.3R/B

8

6 FR21 PHOTO 68

0.3R/B

19 JROOF



17 JROOF

0.85Y/O

0.3R/B

3 R13


3 R15

SUNROOF

Sunroof (2)


SD816-2

 R12




AMP_MQS_06F_B

R13

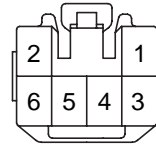

KET_090II_06F_W

 R15




CR10F035

BLANK

Power Windows (1)


SD824-1

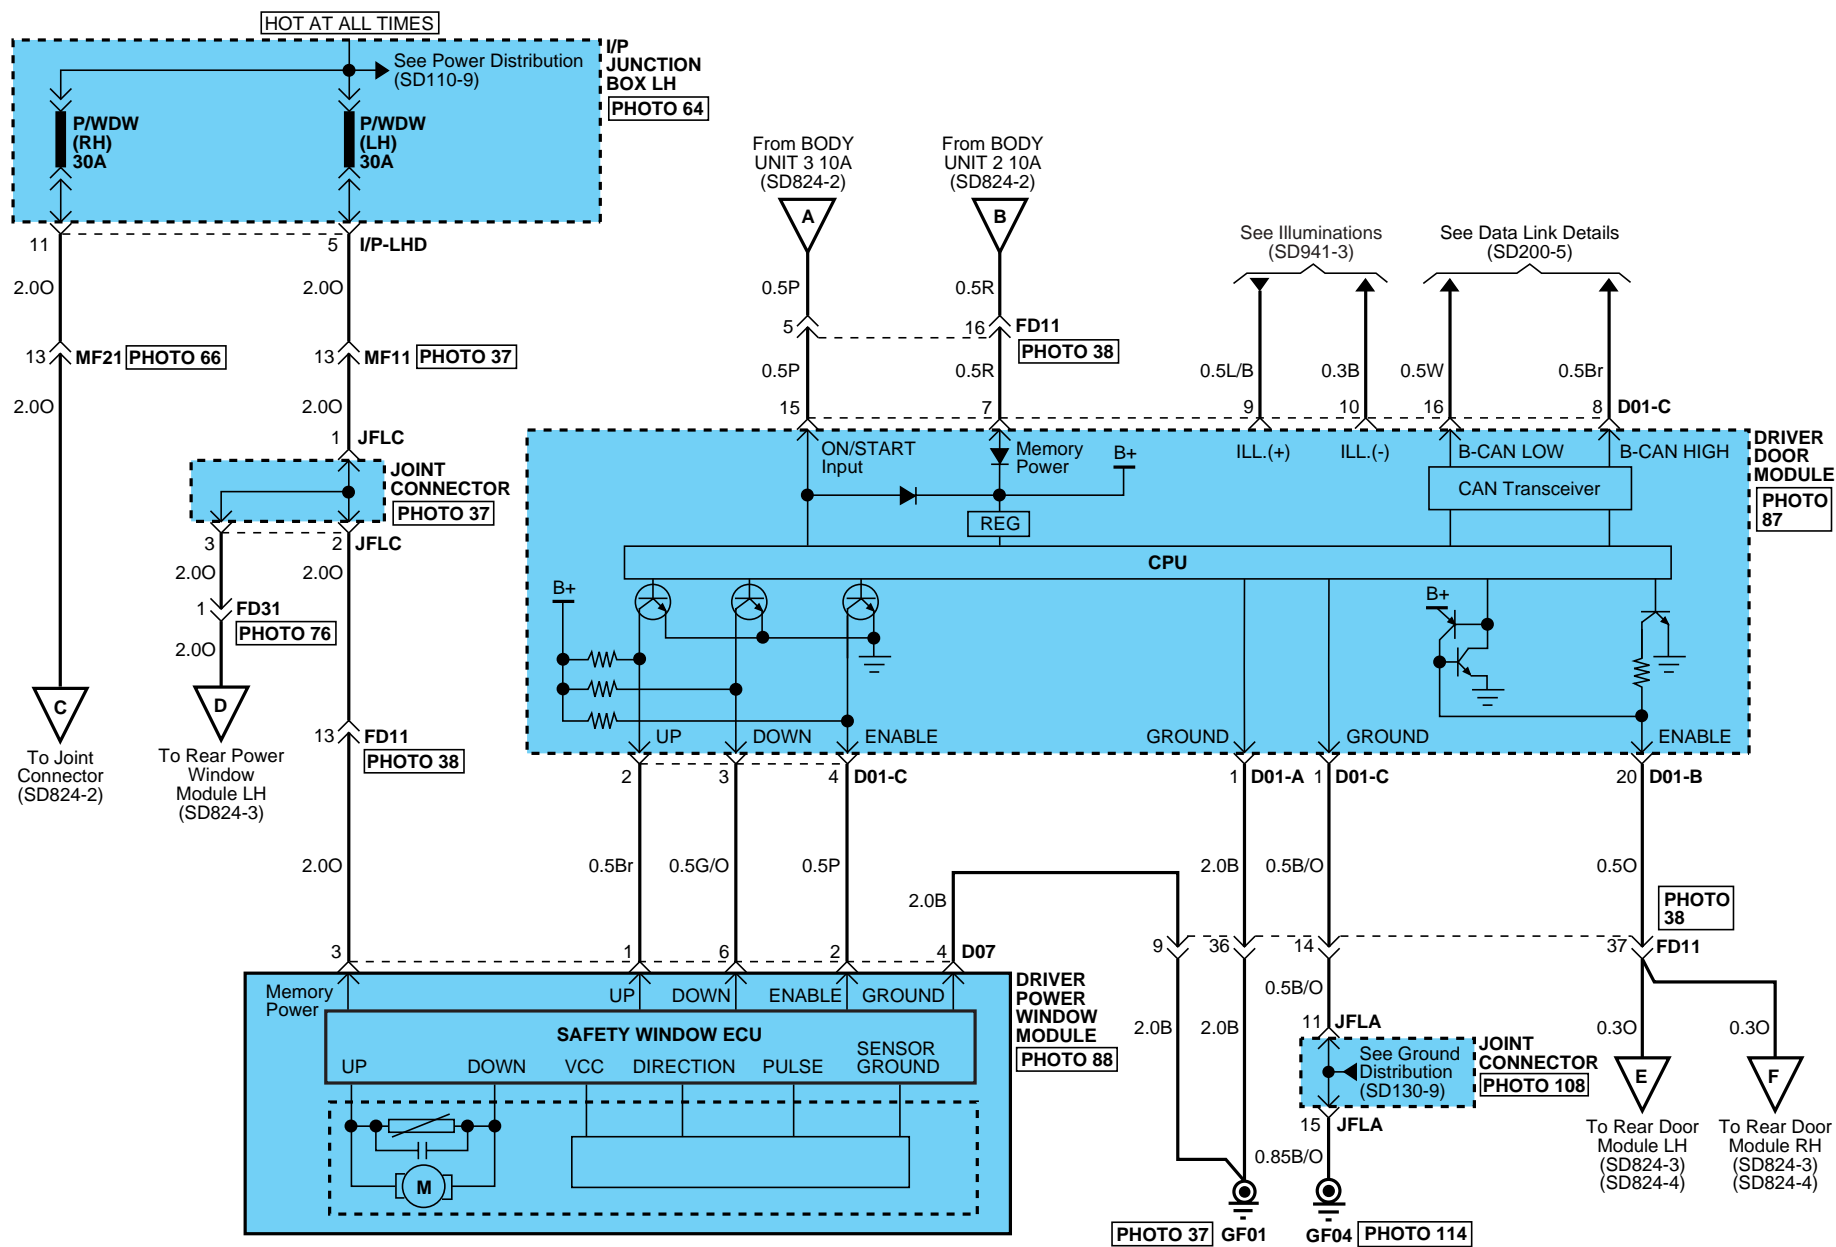

POWER WINDOWS

Power Windows (2)


SD824-2

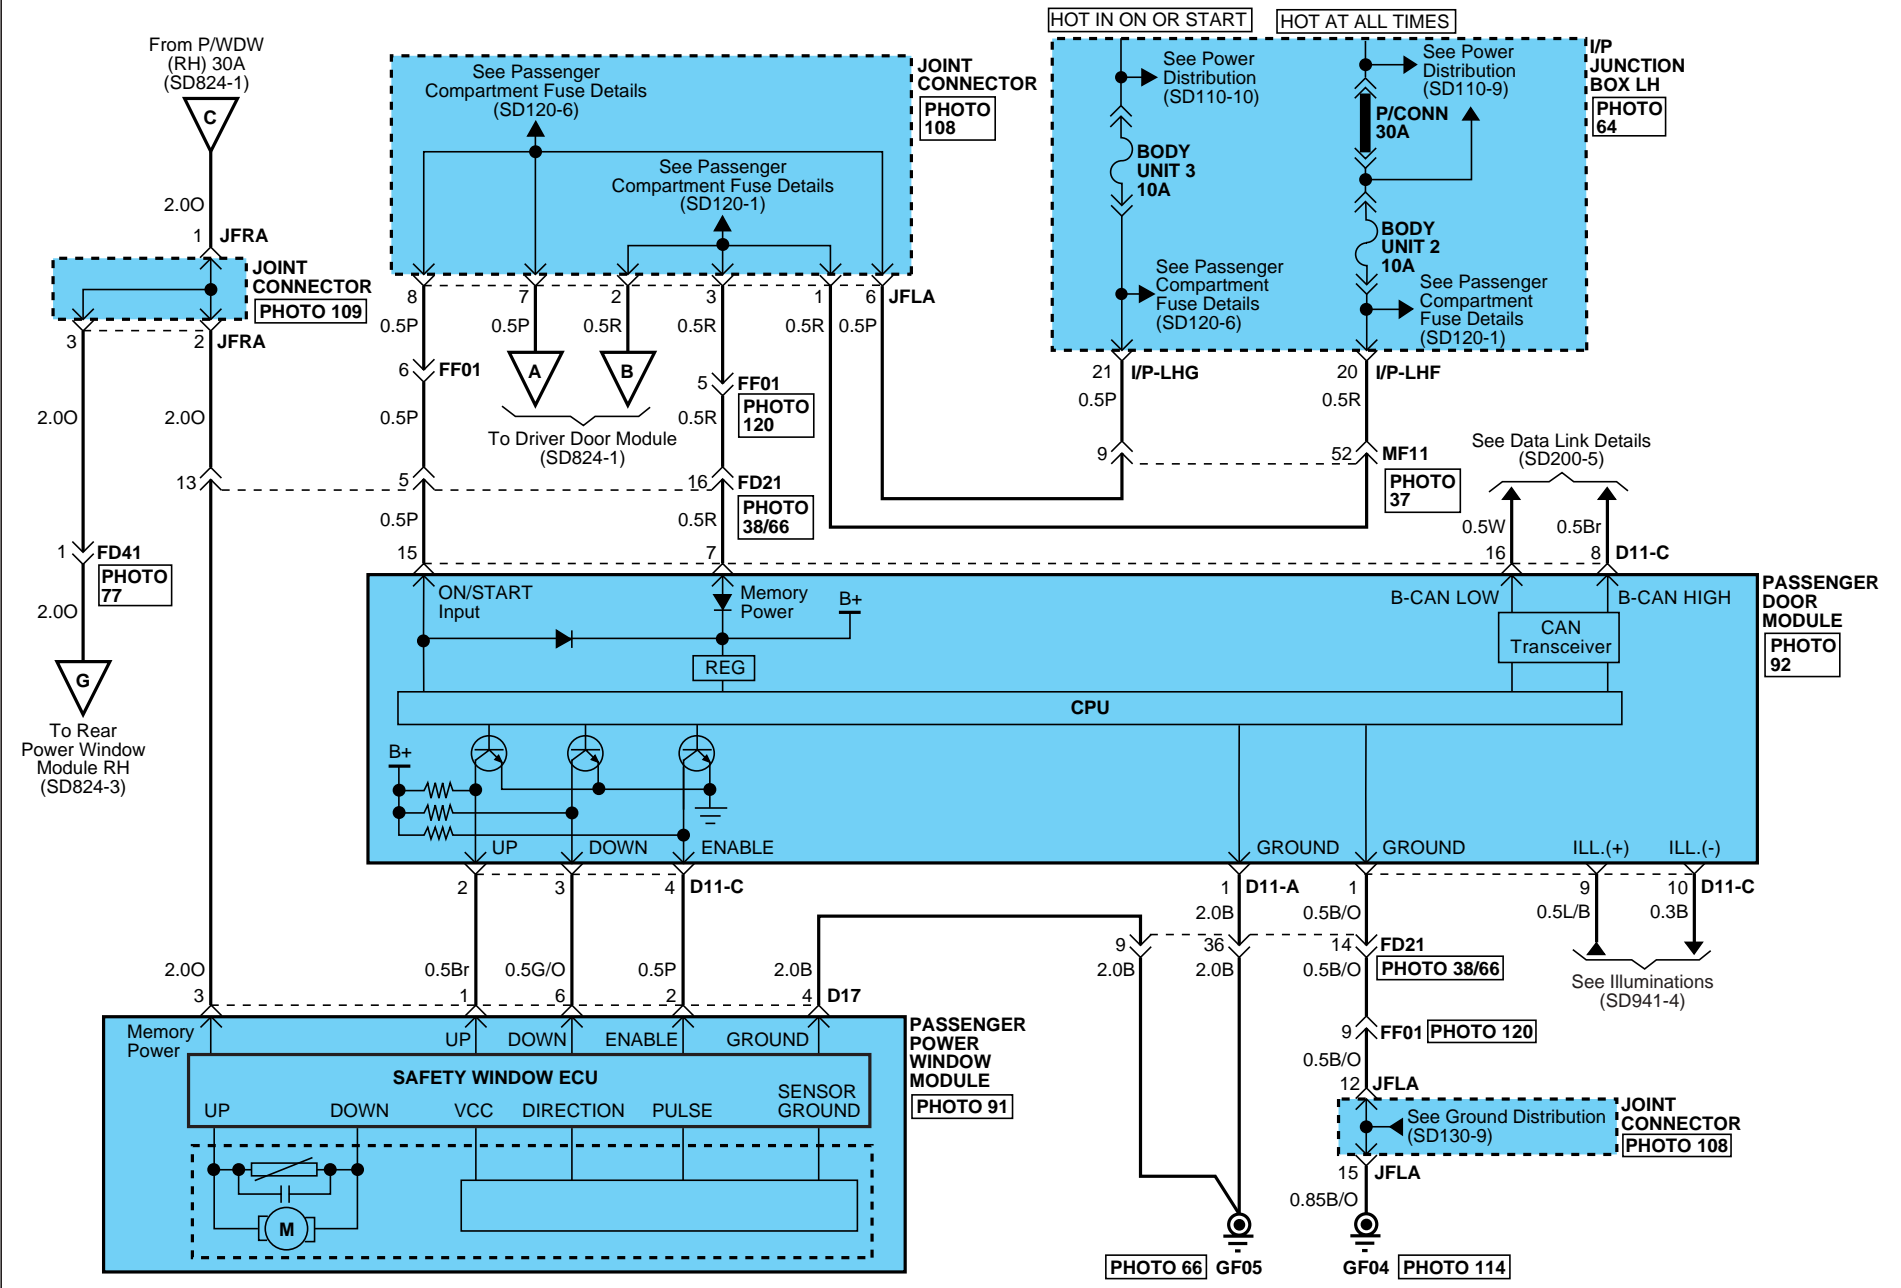

POWER WINDOWS

Power Windows (3)


SD824-3

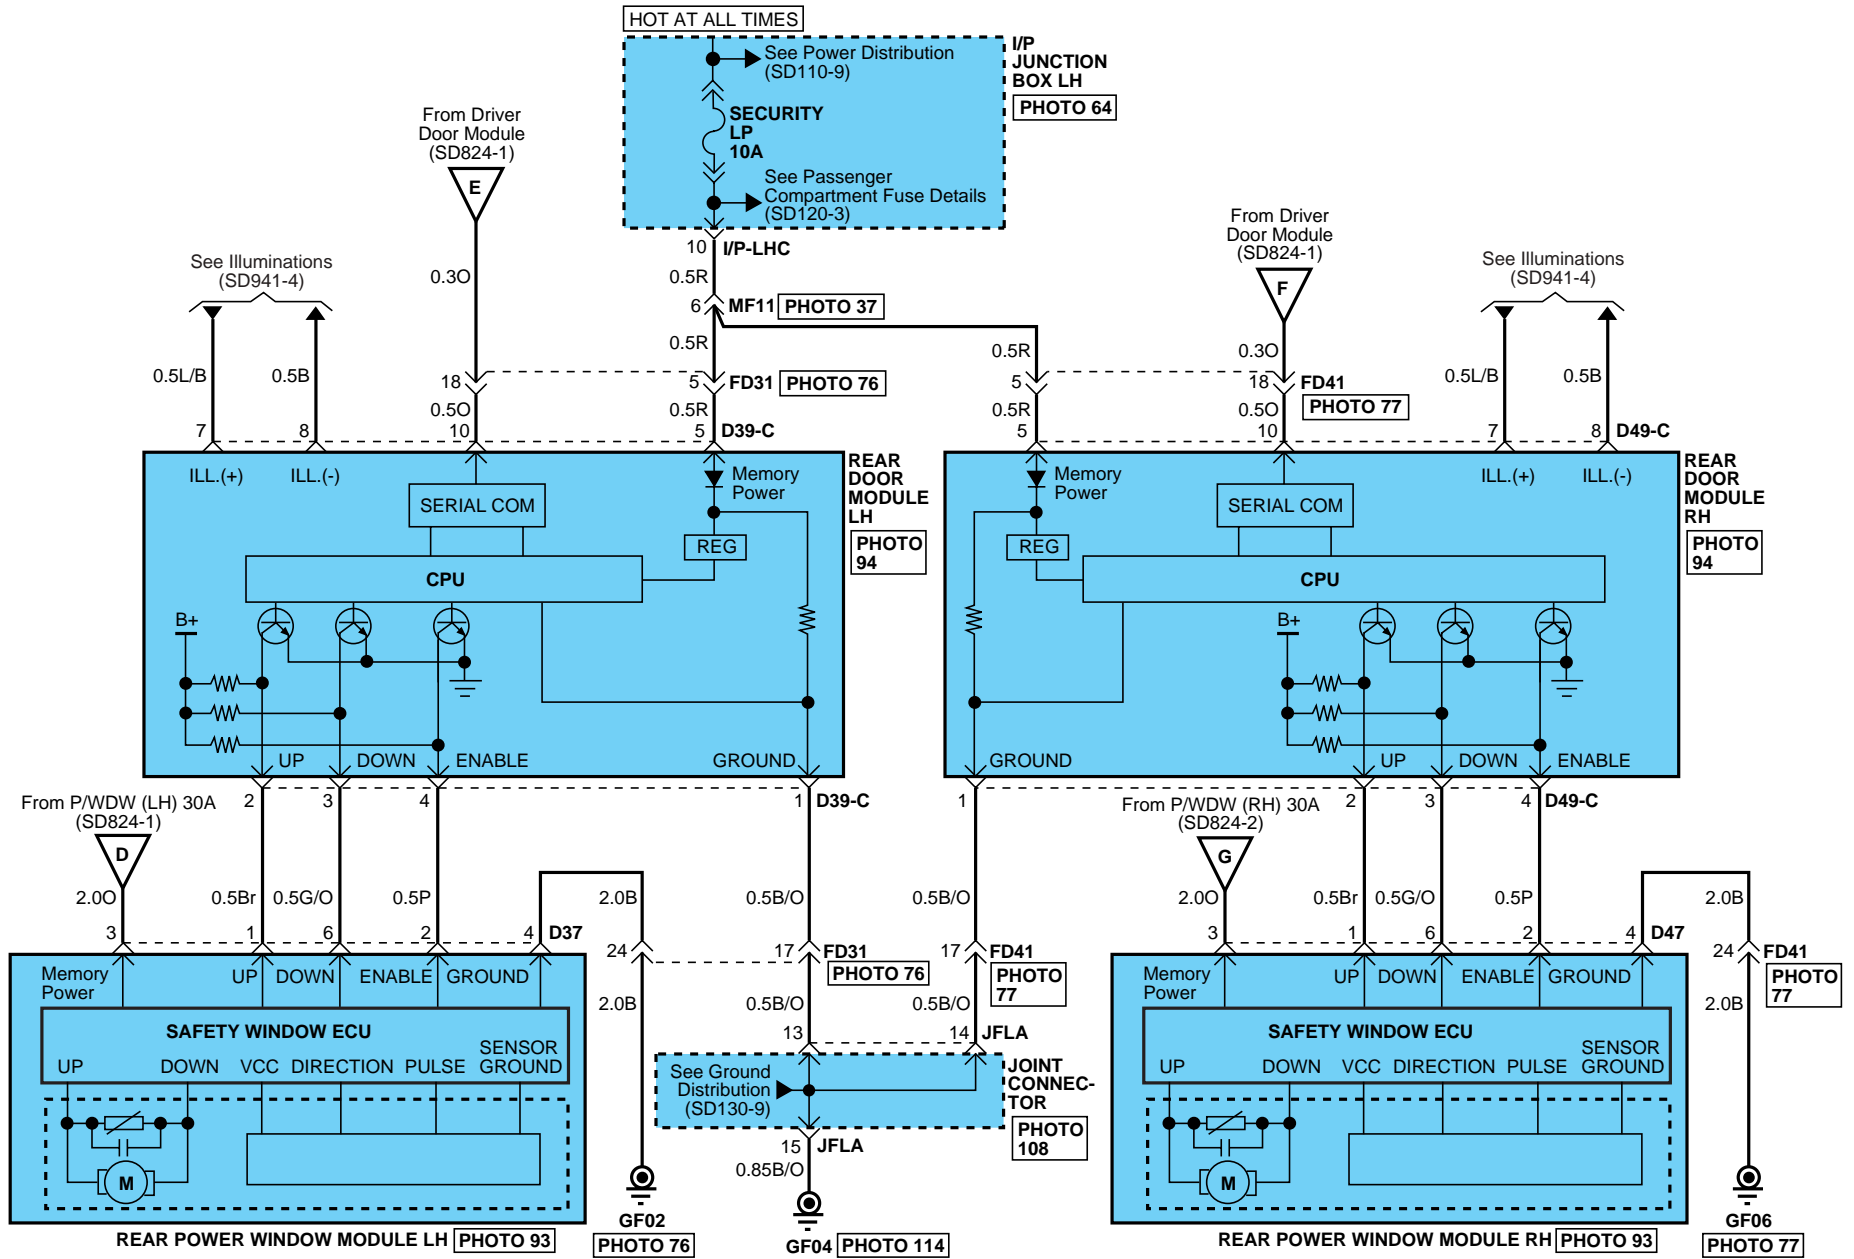

POWER WINDOWS

Power Windows (4)

SD824-4

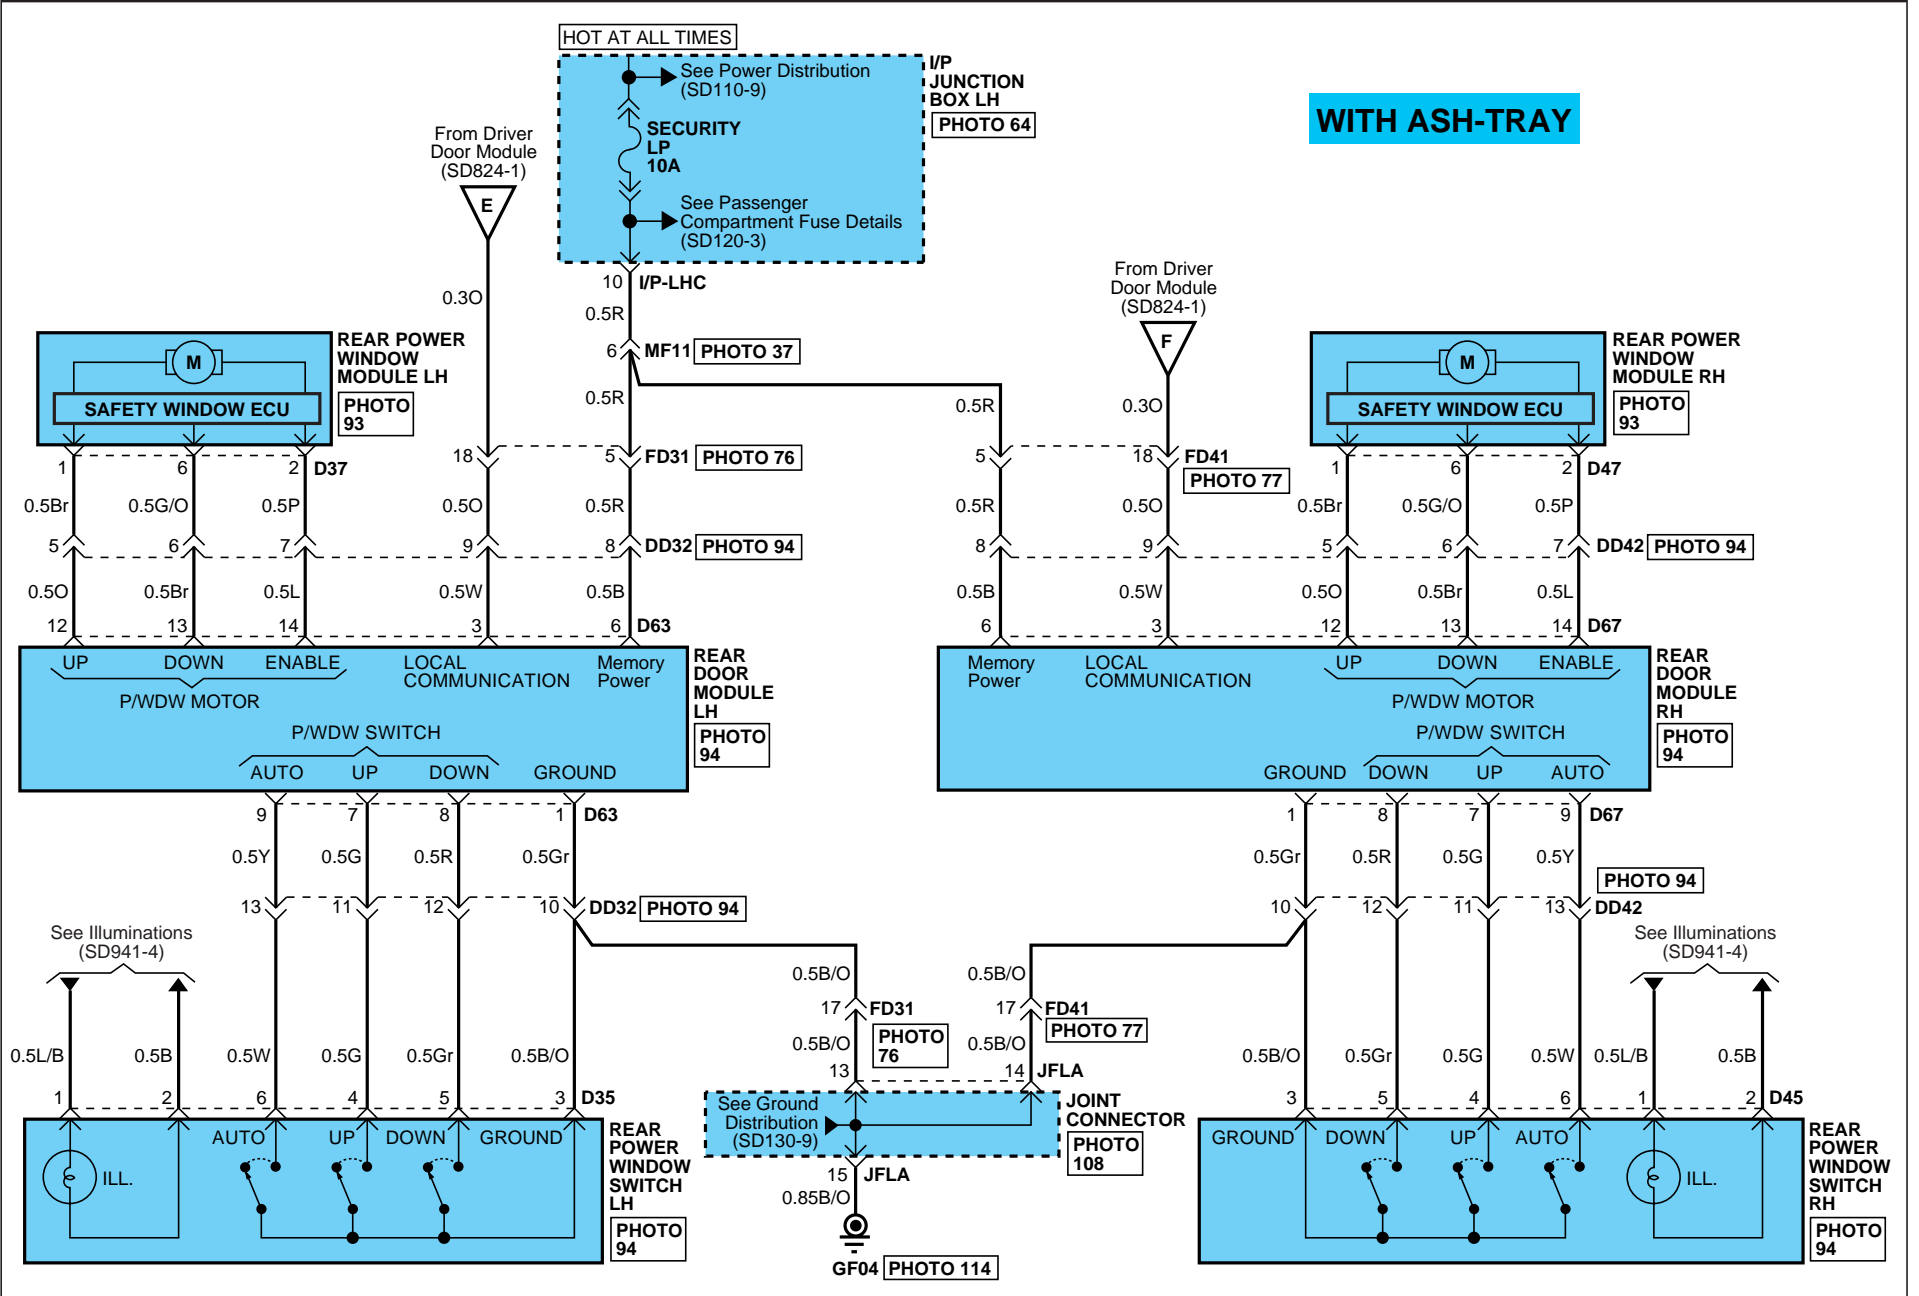


POWER WINDOWS

Power Windows (5)


SD824-5

D01-A

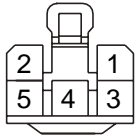


AMP_MIC_05F_W

 D01-B




AMP_DLI_20F_B_DL

 D01-C




AMP_DLI_16F_B_DL

D07

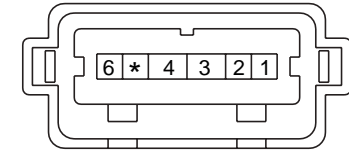


FCI_MINIWP_06F_B_SL

D11-A

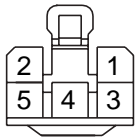


AMP_MIC_05F_W

 D11-C




AMP_DLI_16F_B_DL

D17

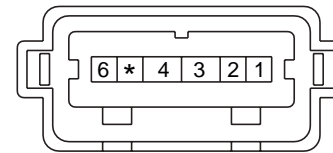


FCI_MINIWP_06F_B_SL

D35

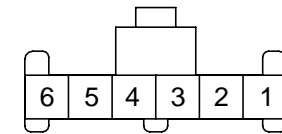


KET_91A_06F_W

D37

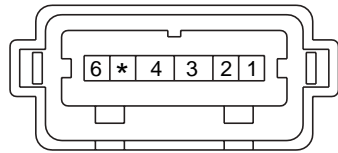


FCI_MINIWP_06F_B_SL

D39-C

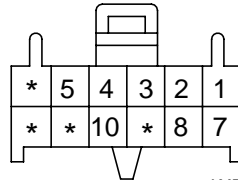


AMP_DLI_12F_B_DL

D45

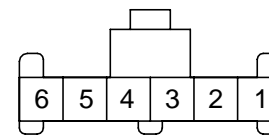


KET_91A_06F_W

D47

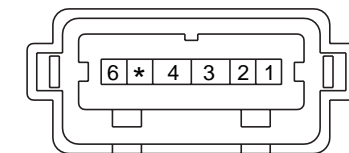


FCI_MINIWP_06F_B_SL

D49-C

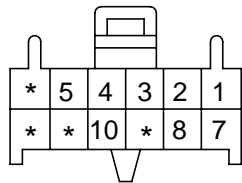


AMP_DLI_12F_B_DL

D63

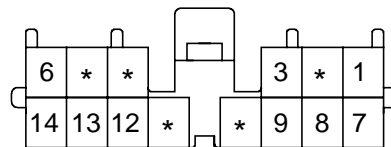

KET_070_14F_W

D67

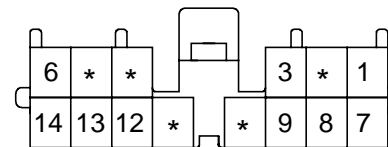

KET_070_14F_W

BLANK

POWER WINDOWS

Power Windows (6)

SD824-6


MEMO

ELECTRO CHROMIC MIRROR

EBCF7FB5

Electro Chromic Mirror (1)

SD851-1

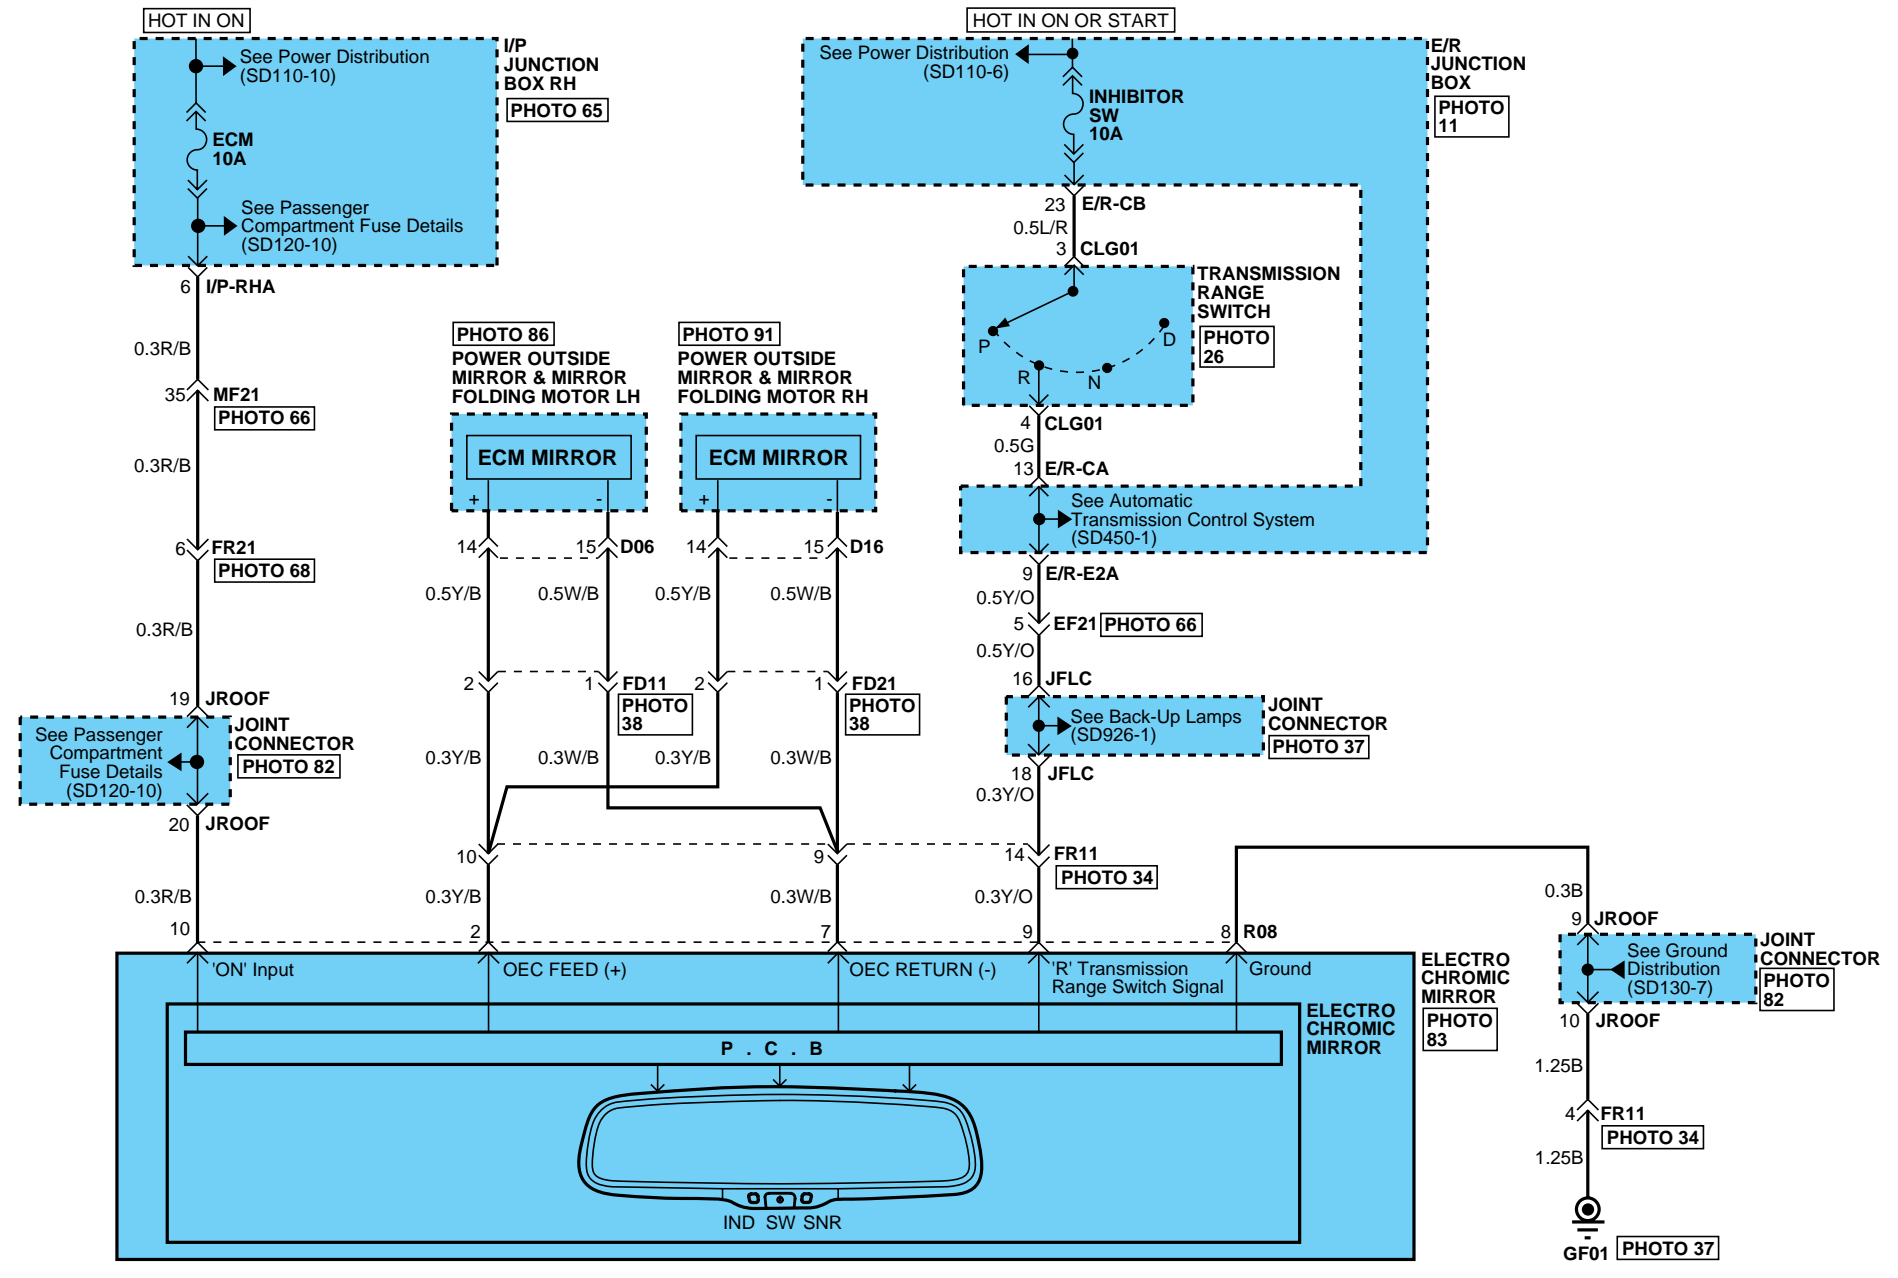

ELECTRO CHROMIC MIRROR

Electro Chromic Mirror (2)


SD851-2

CLG01




YAZ_0918WP_09F_GR

D06

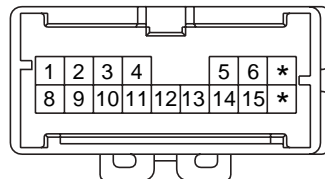


AMP_040III_16M_W

D16

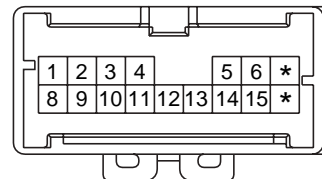

AMP_040III_16M_W


R08

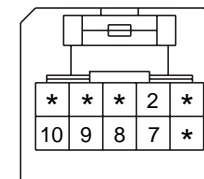

SUM_025_10F_B

Rear Curtain (1)

SD856-1

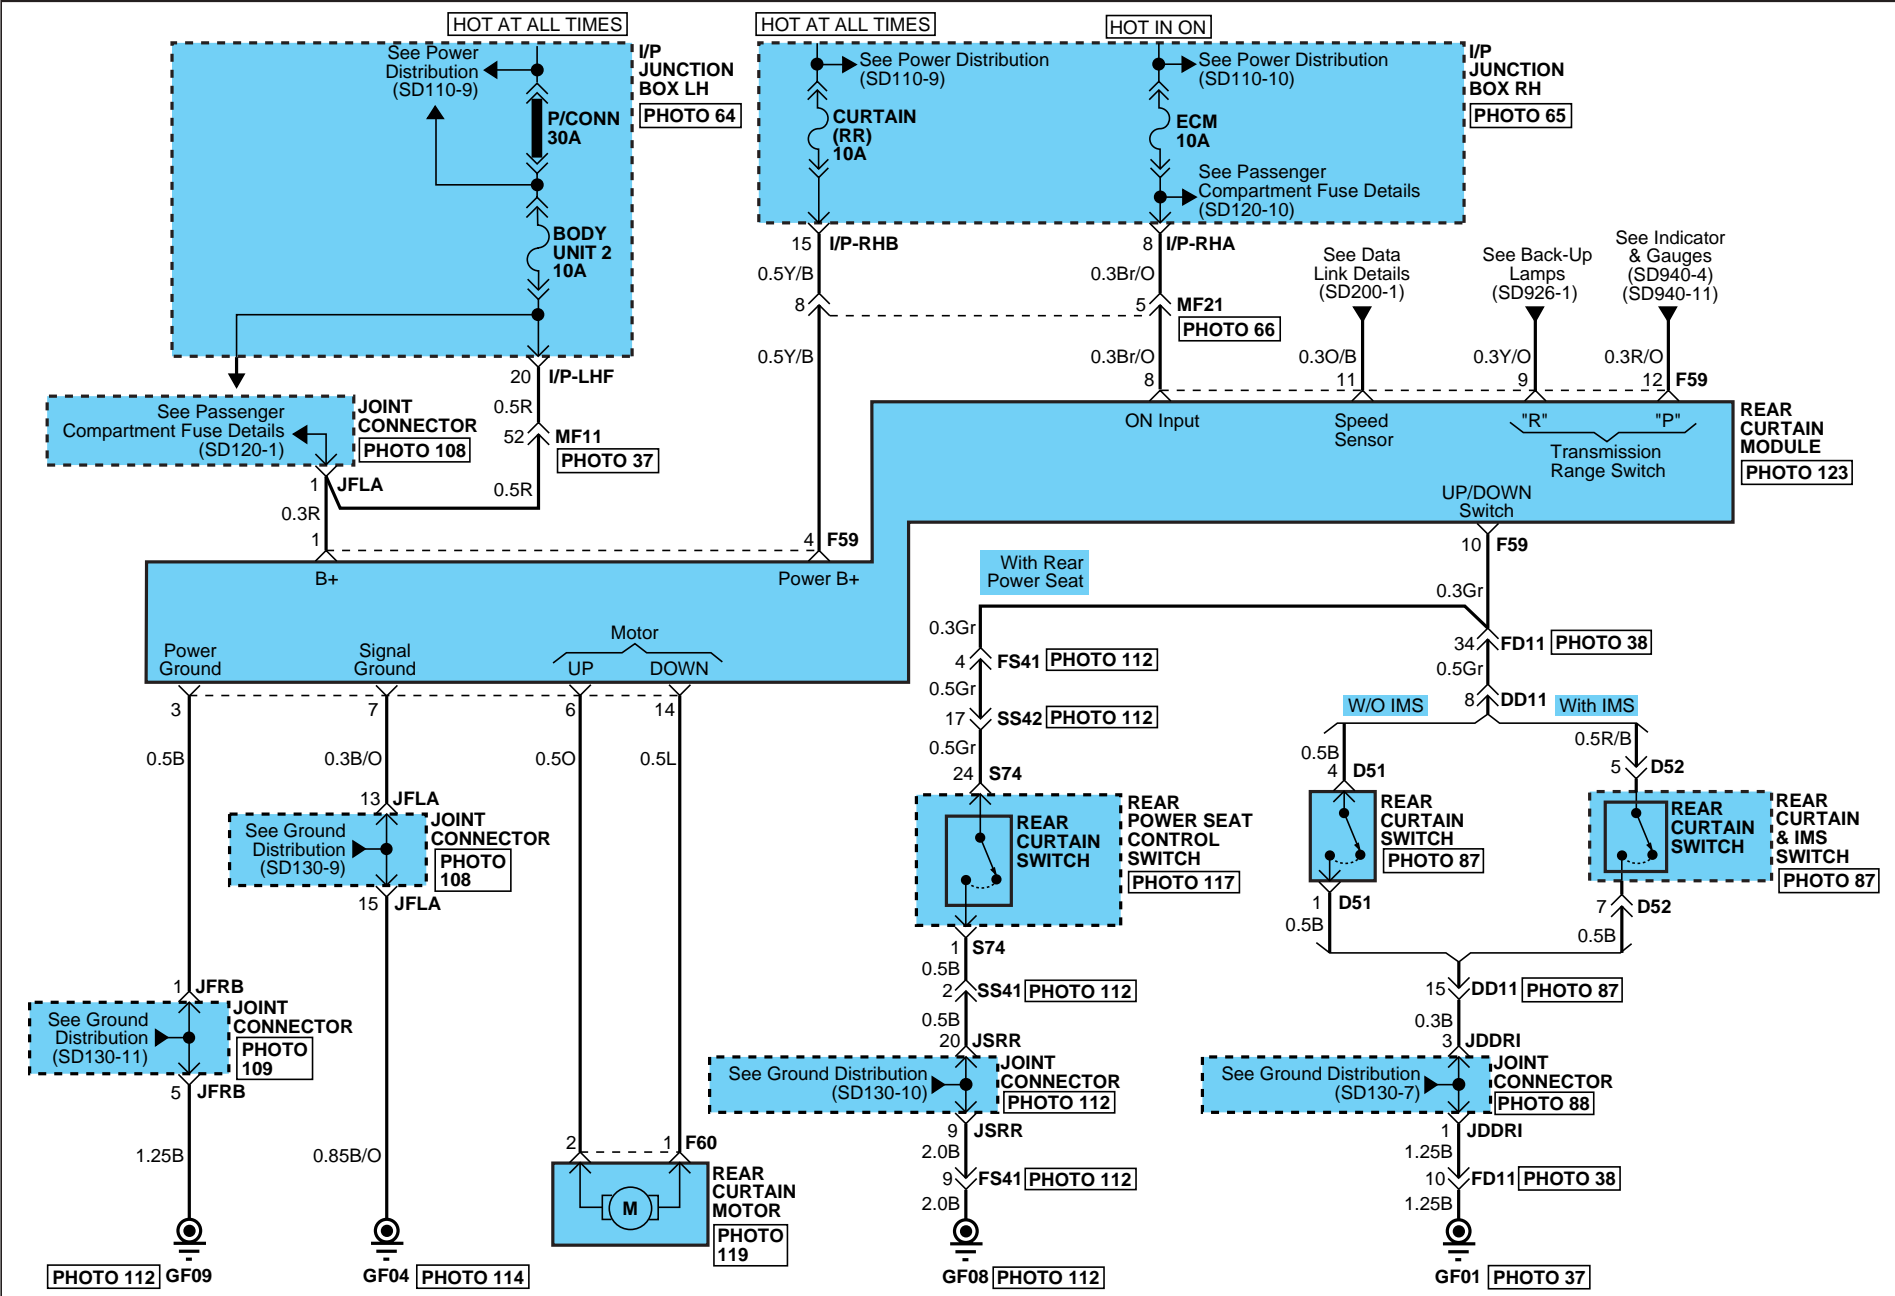


REAR CURTAIN

Rear Curtain (2)


SD856-2

D51

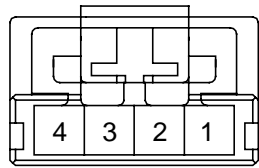


AMP_MQS_04F

D52

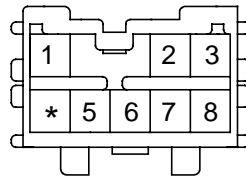


KET_070_08_M_W

 F59




AMP_070_14F_W

 F60



KUM_DSD_02F_W

S74

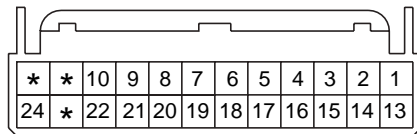

AMP_025_24F_W


BLANK

BLANK

BLANK

Power Outside Mirror & Mirror Folding System (1)


SD876-1

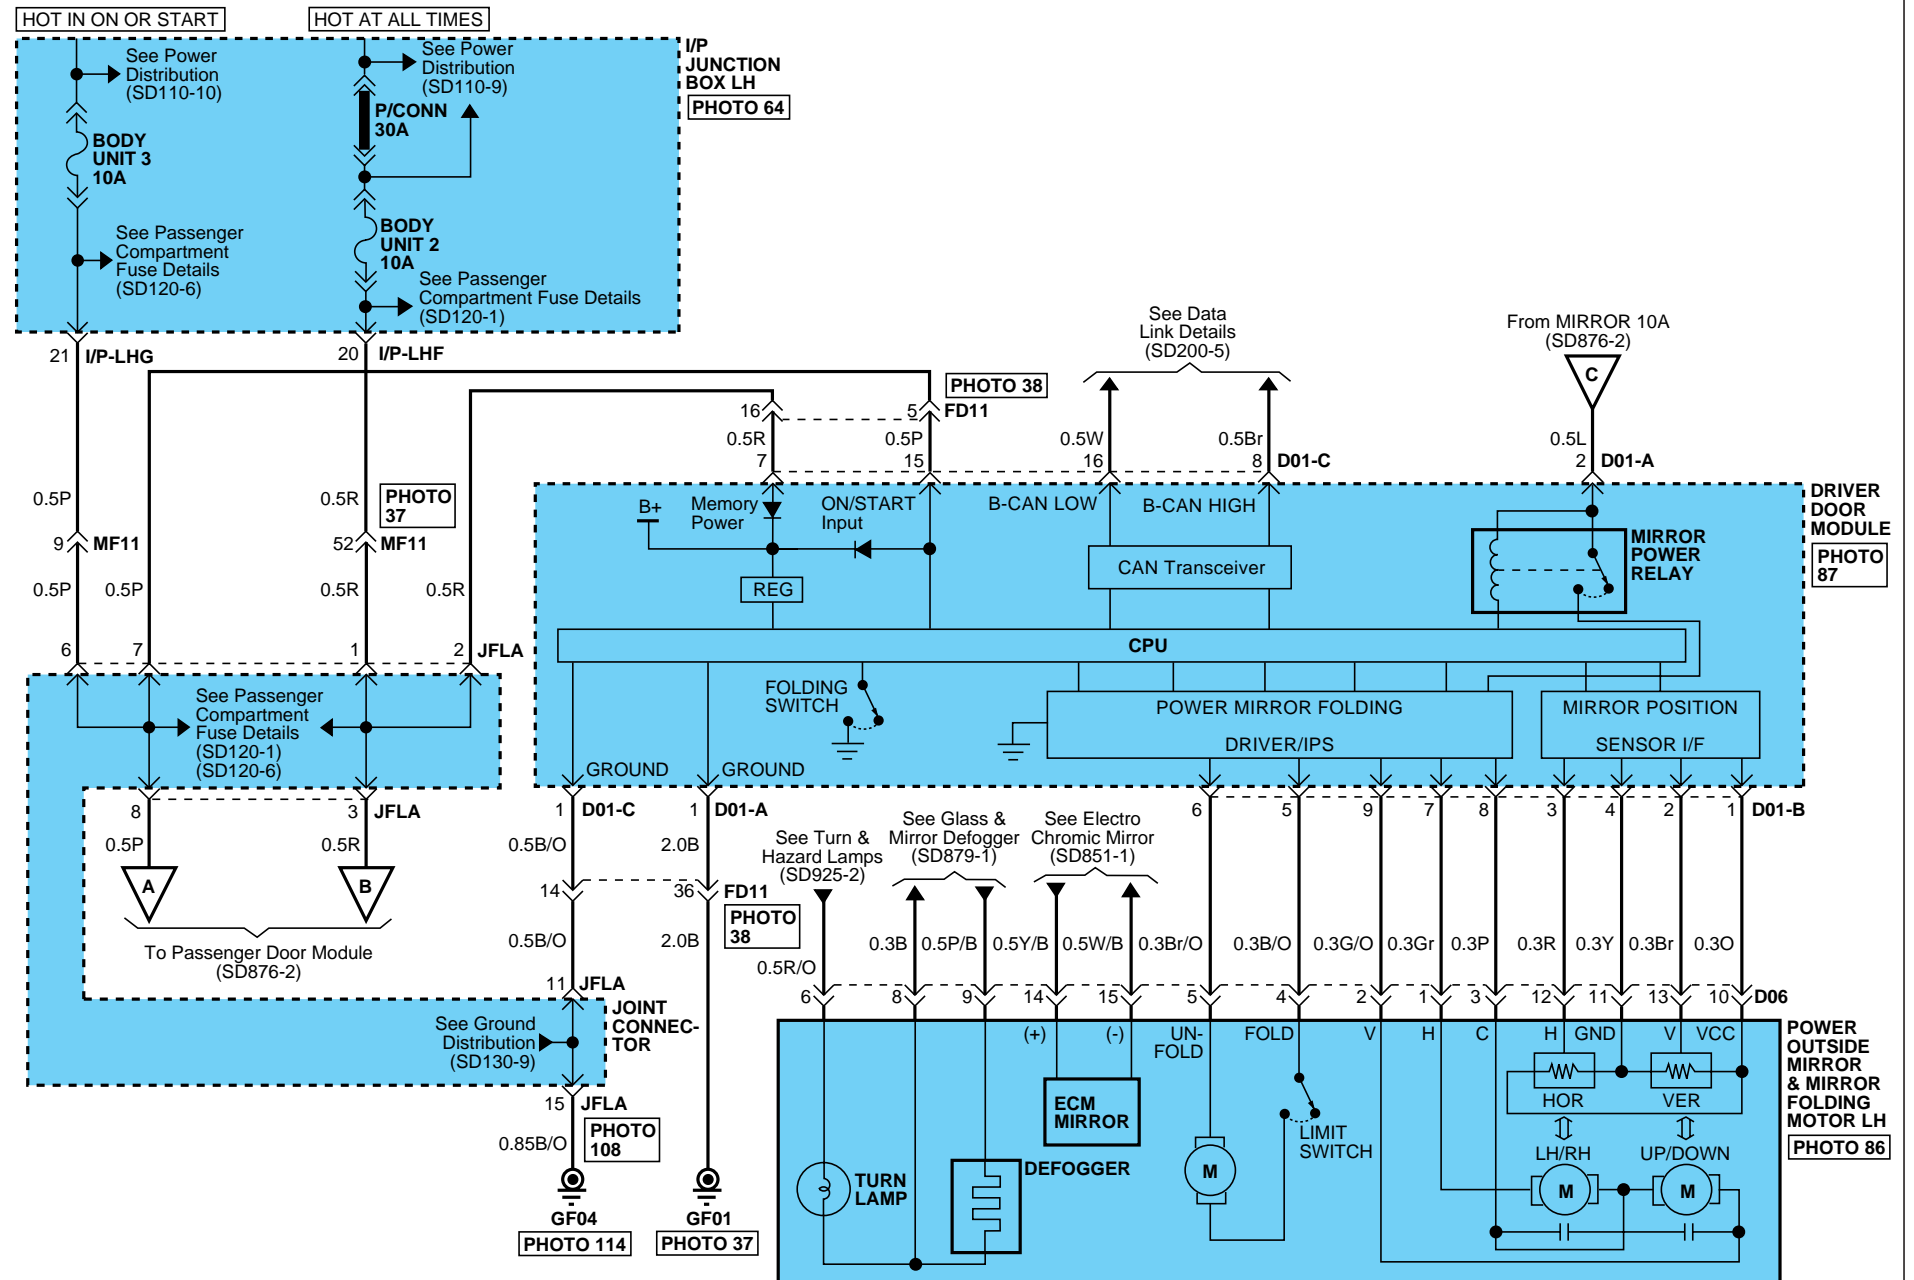

POWER OUTSIDE MIRROR & MIRROR FOLDING SYSTEM

Power Outside Mirror & Mirror Folding System (2)

SD876-2

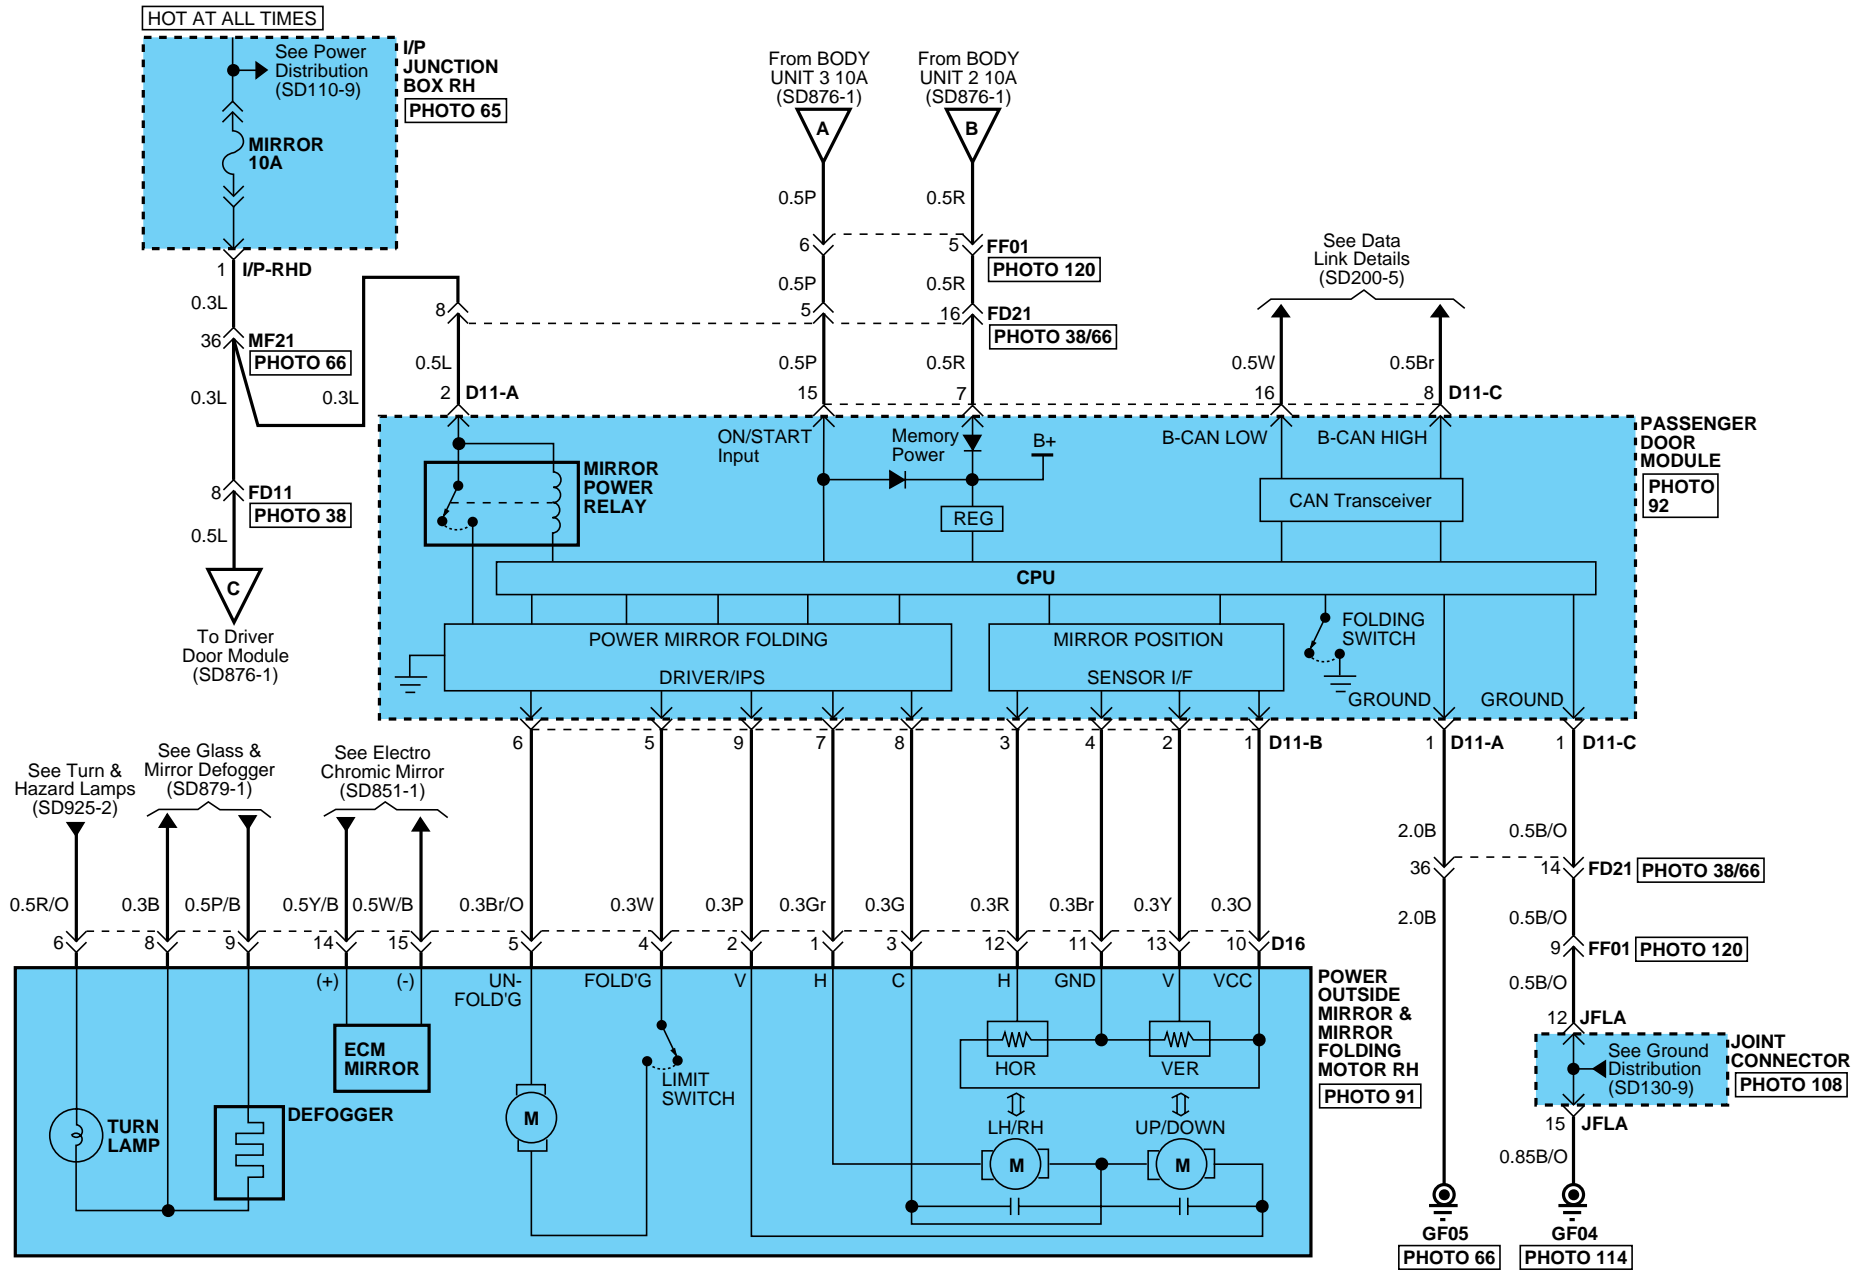


POWER OUTSIDE MIRROR & MIRROR FOLDING SYSTEM

Power Outside Mirror & Mirror Folding System (3)


SD876-3

D01-A

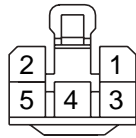


AMP_MIC_05F_W

 D01-B




AMP_DLI_20F_B_DL

 D01-C




AMP_DLI_16F_B_DL

D06

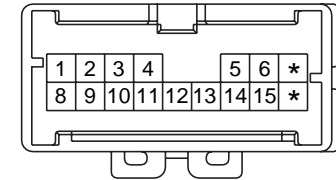


AMP_040III_16M_W

D11-A

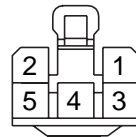


AMP_MIC_05F_W

D11-B

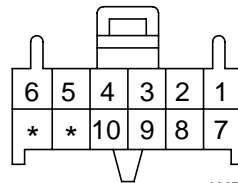


AMP_DLI_12F_B_DL

 D11-C



AMP_DLI_16F_B_DL

D16

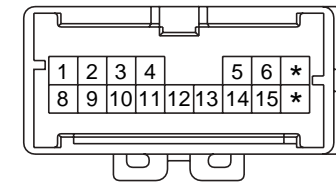

AMP_040III_16M_W

POWER OUTSIDE MIRROR & MIRROR FOLDING SYSTEM


Power Outside Mirror & Mirror Folding System (4)

SD876-4

MEMO

Intergrated Memory System (IMS) (1)


SD877-1

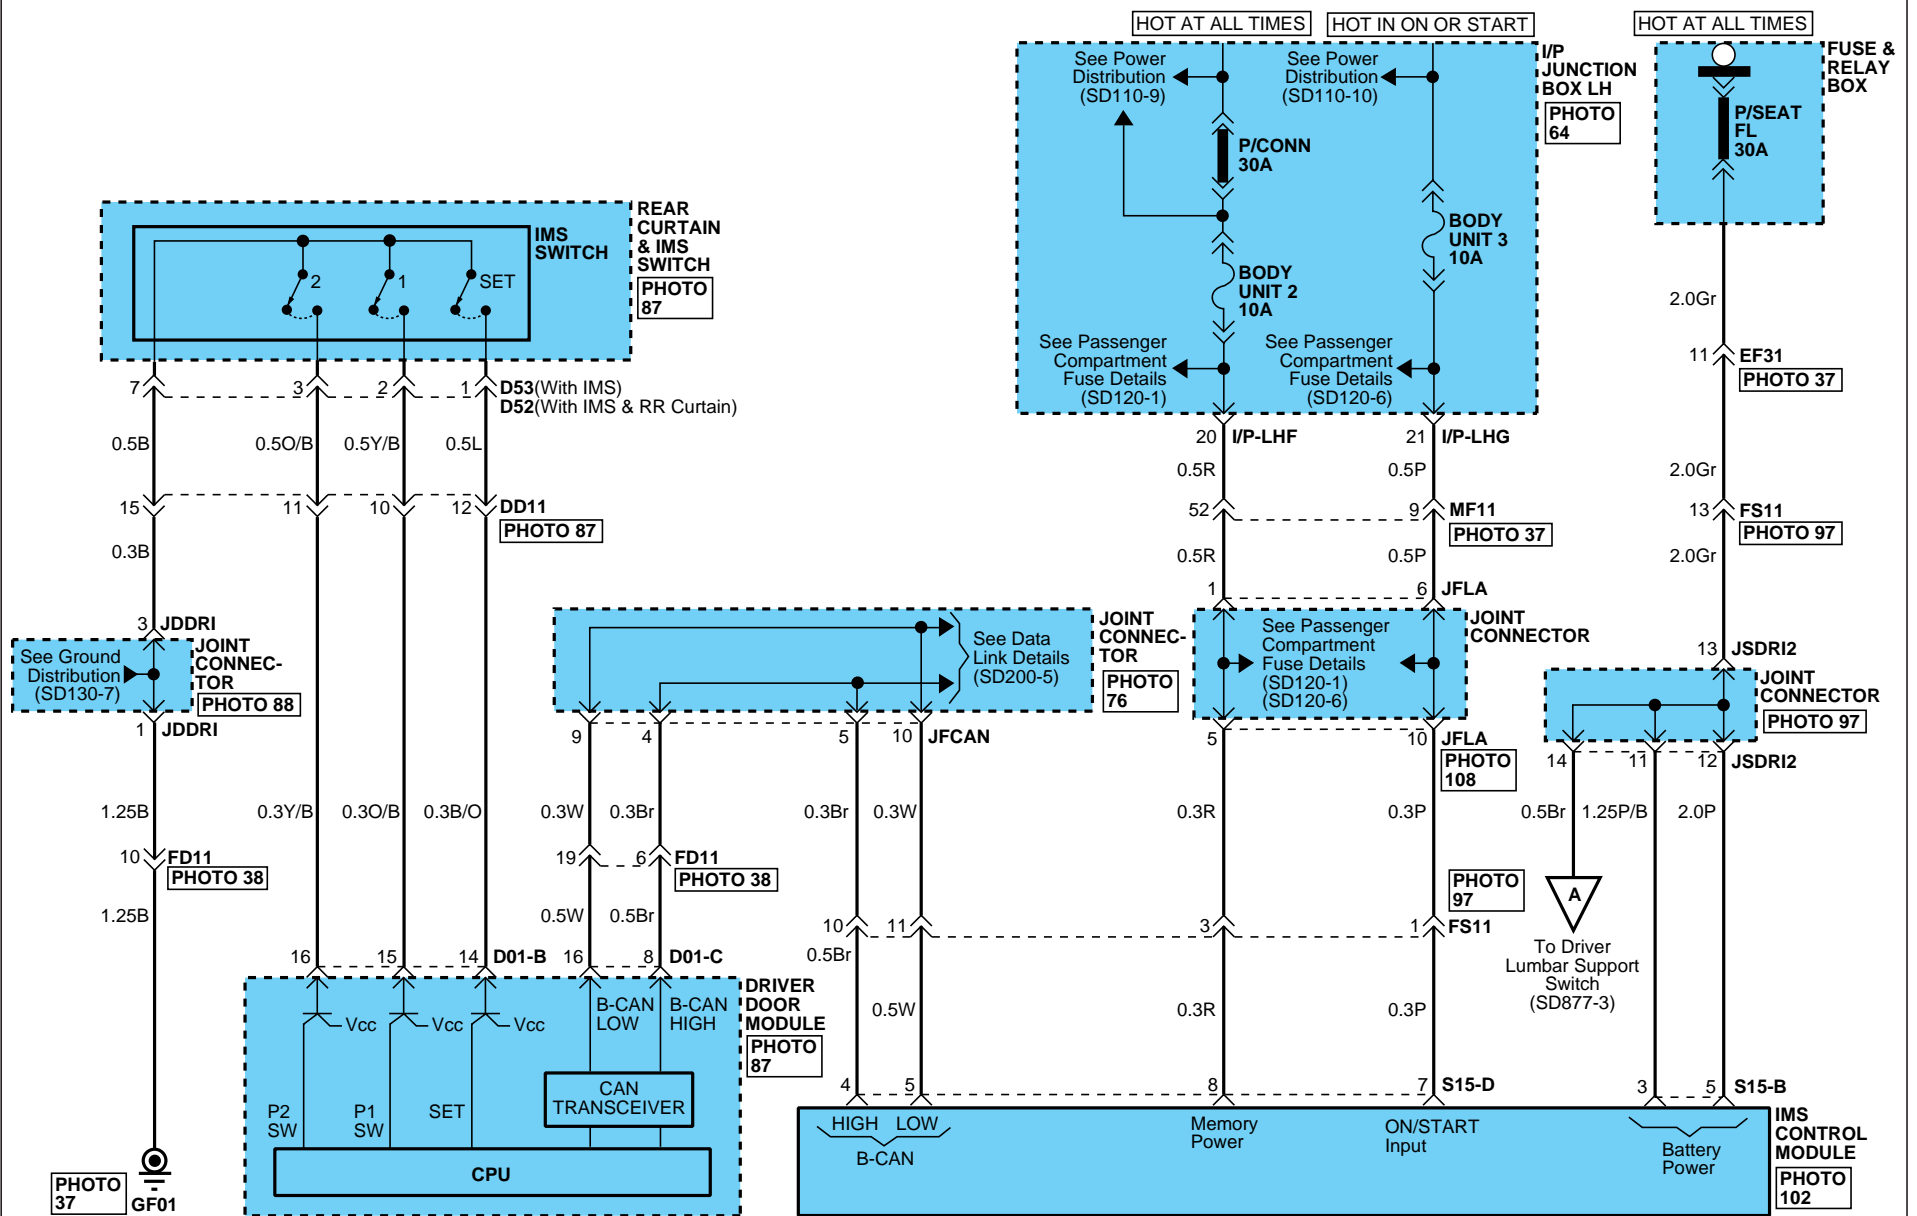

INTERGRATED MEMORY SYSTEM (IMS)

Intergrated Memory System (IMS) (2)


SD877-2

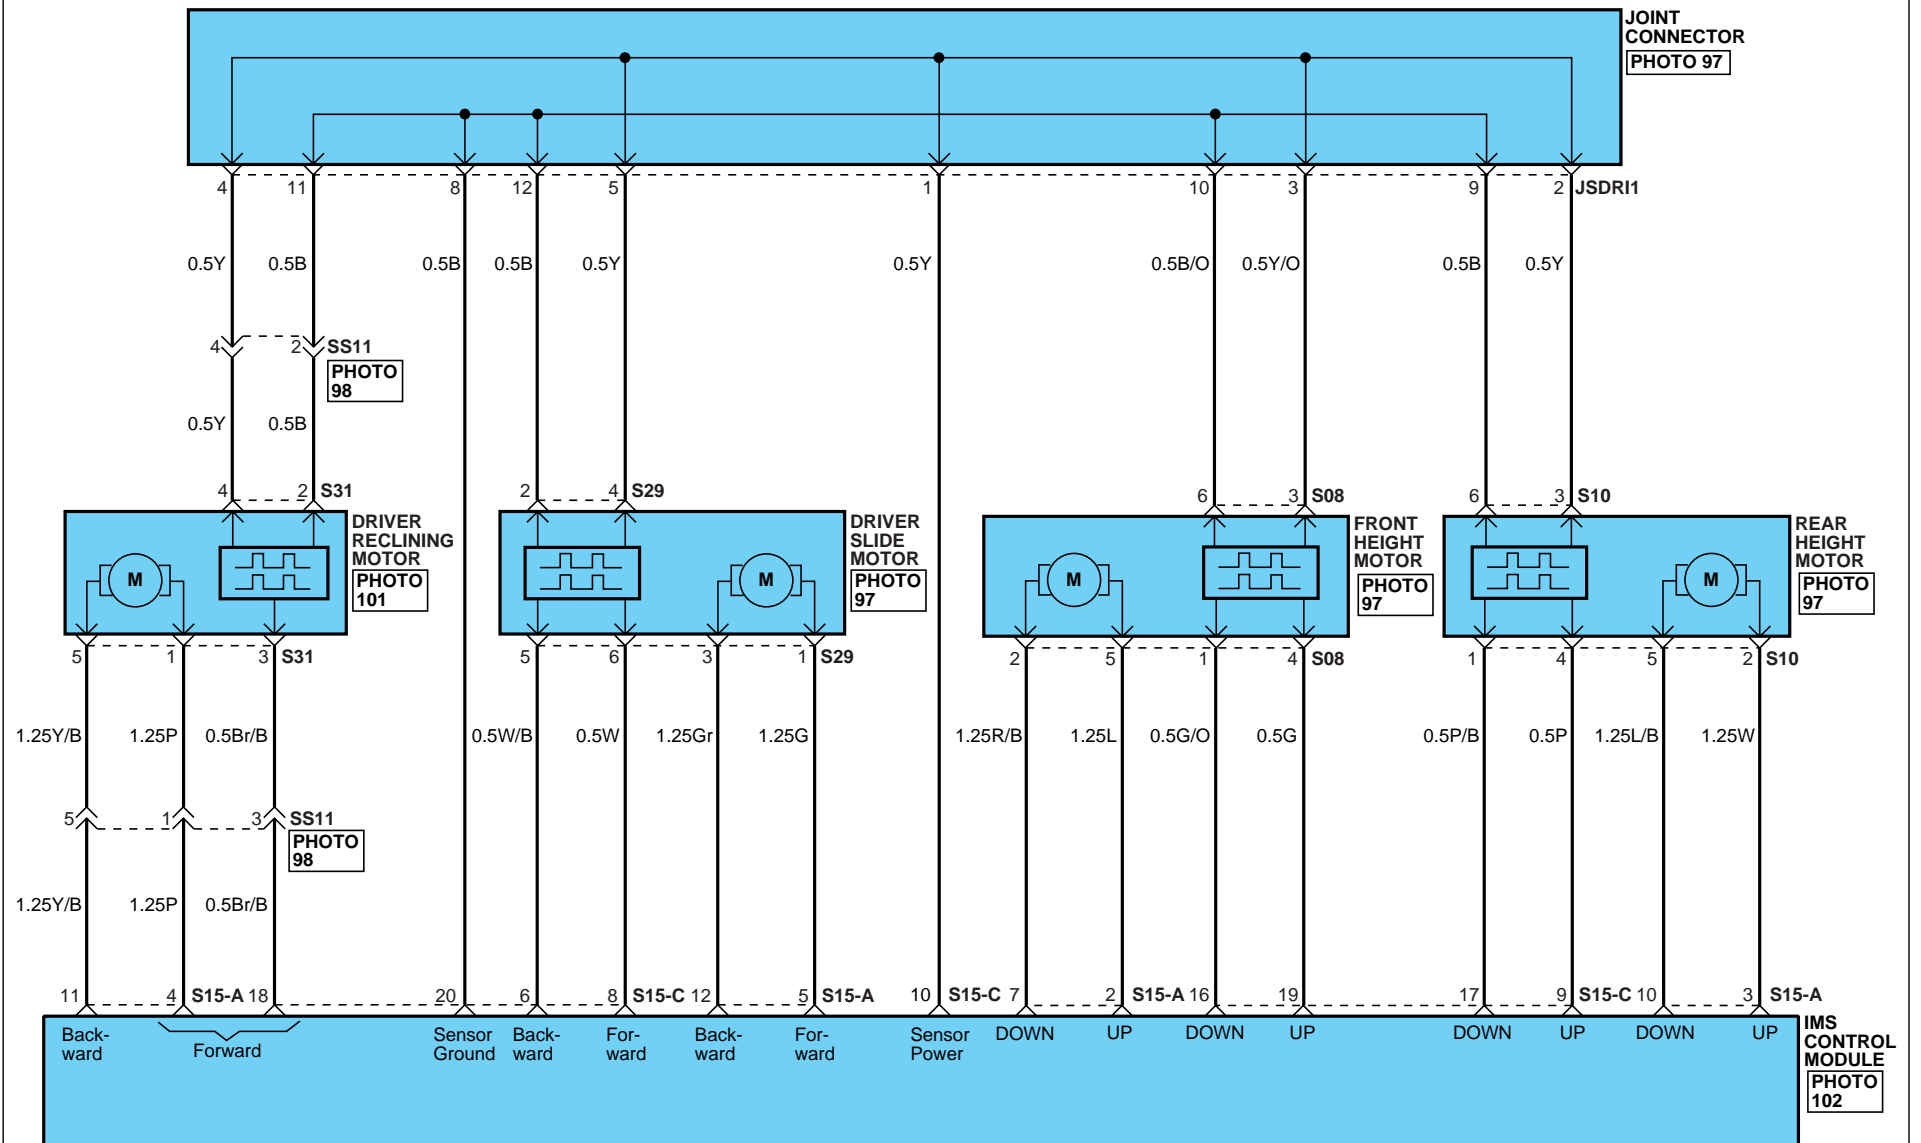

INTERGRATED MEMORY SYSTEM (IMS)

Intergrated Memory System (IMS) (3)

SD877-3

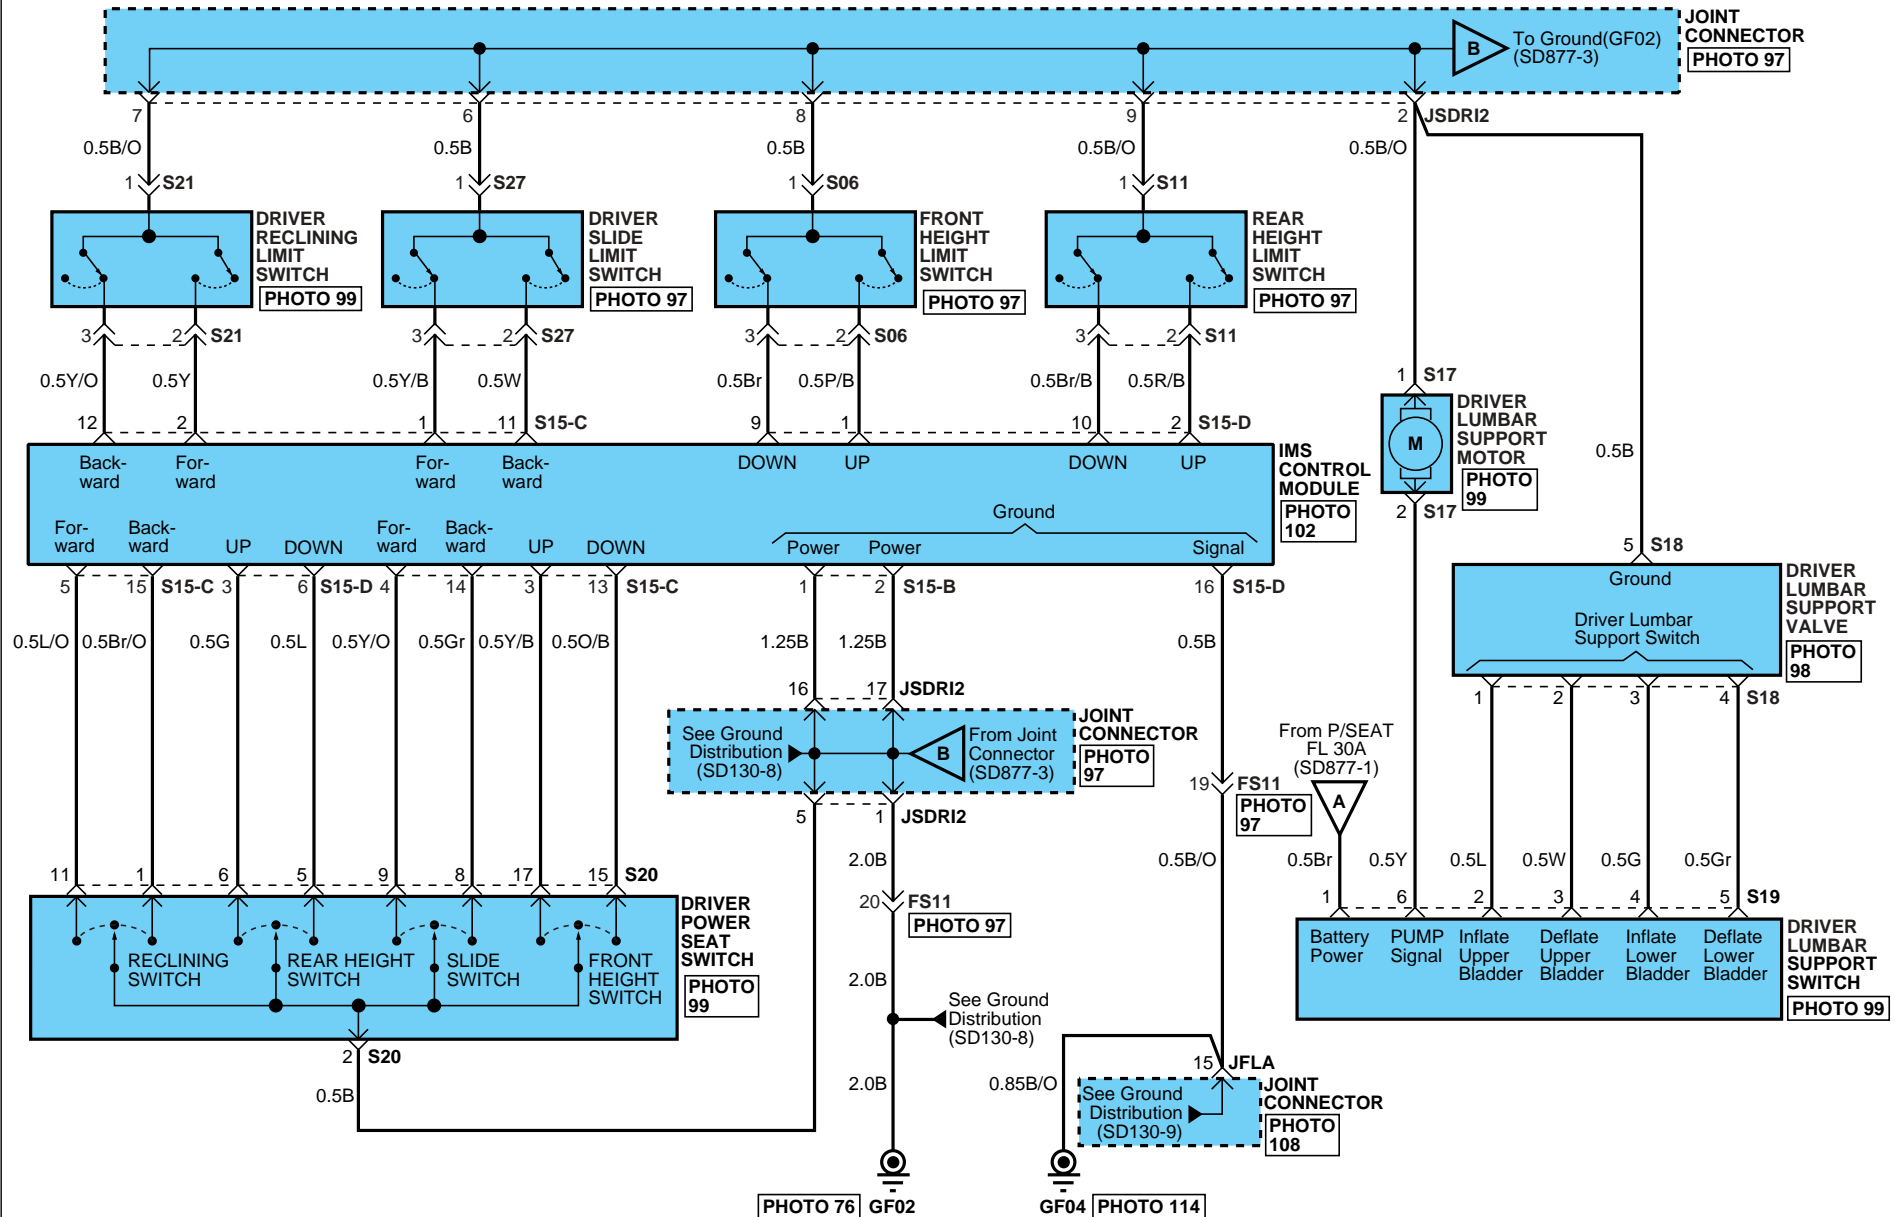


INTERGRATED MEMORY SYSTEM (IMS)

Intergrated Memory System (IMS) (4)


SD877-4

 D01-B




AMP_DLI_20F_B_DL

 D01-C




AMP_DLI_16F_B_DL

D52

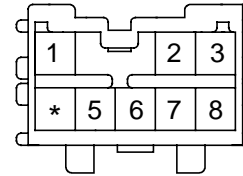


KET_070_08_M_W

D53

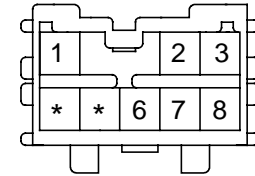

KET_070_08_M_W

S06

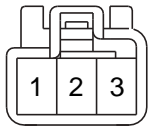

KET_090II_03M_B

S08




KET_090IIWP_06F_B

S10




KET_090IIWP_06F_B

S11

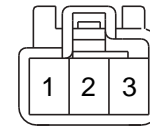


KET_090II_03M_B

S15-A

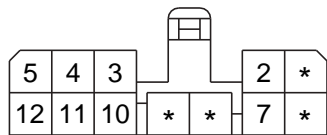


AMP_070MLC_12F

 S15-B




AMP_250_05F_B

S15-C

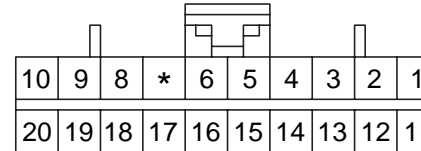


AMP_040M2_20F_B

 S15-D




AMP_040MK2_16F_B

 S17




AMP_MKI_02F_B

 S18




AMP_MQS_06F_B

S19

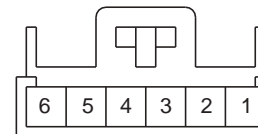


AMP_070_06F_W

S20

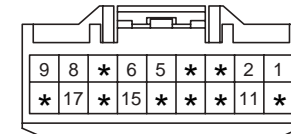


AMP_090III_18F_W

S21

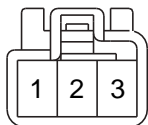

KET_090II_03M_B

S27

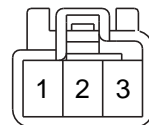


KET_090II_03M_W

S29



KET_090IIWP_06F_B


S31

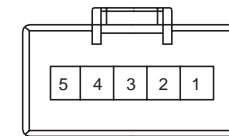

AMP_MQS_05F_B

Glass & Mirror Defogger (1)

SD879-1

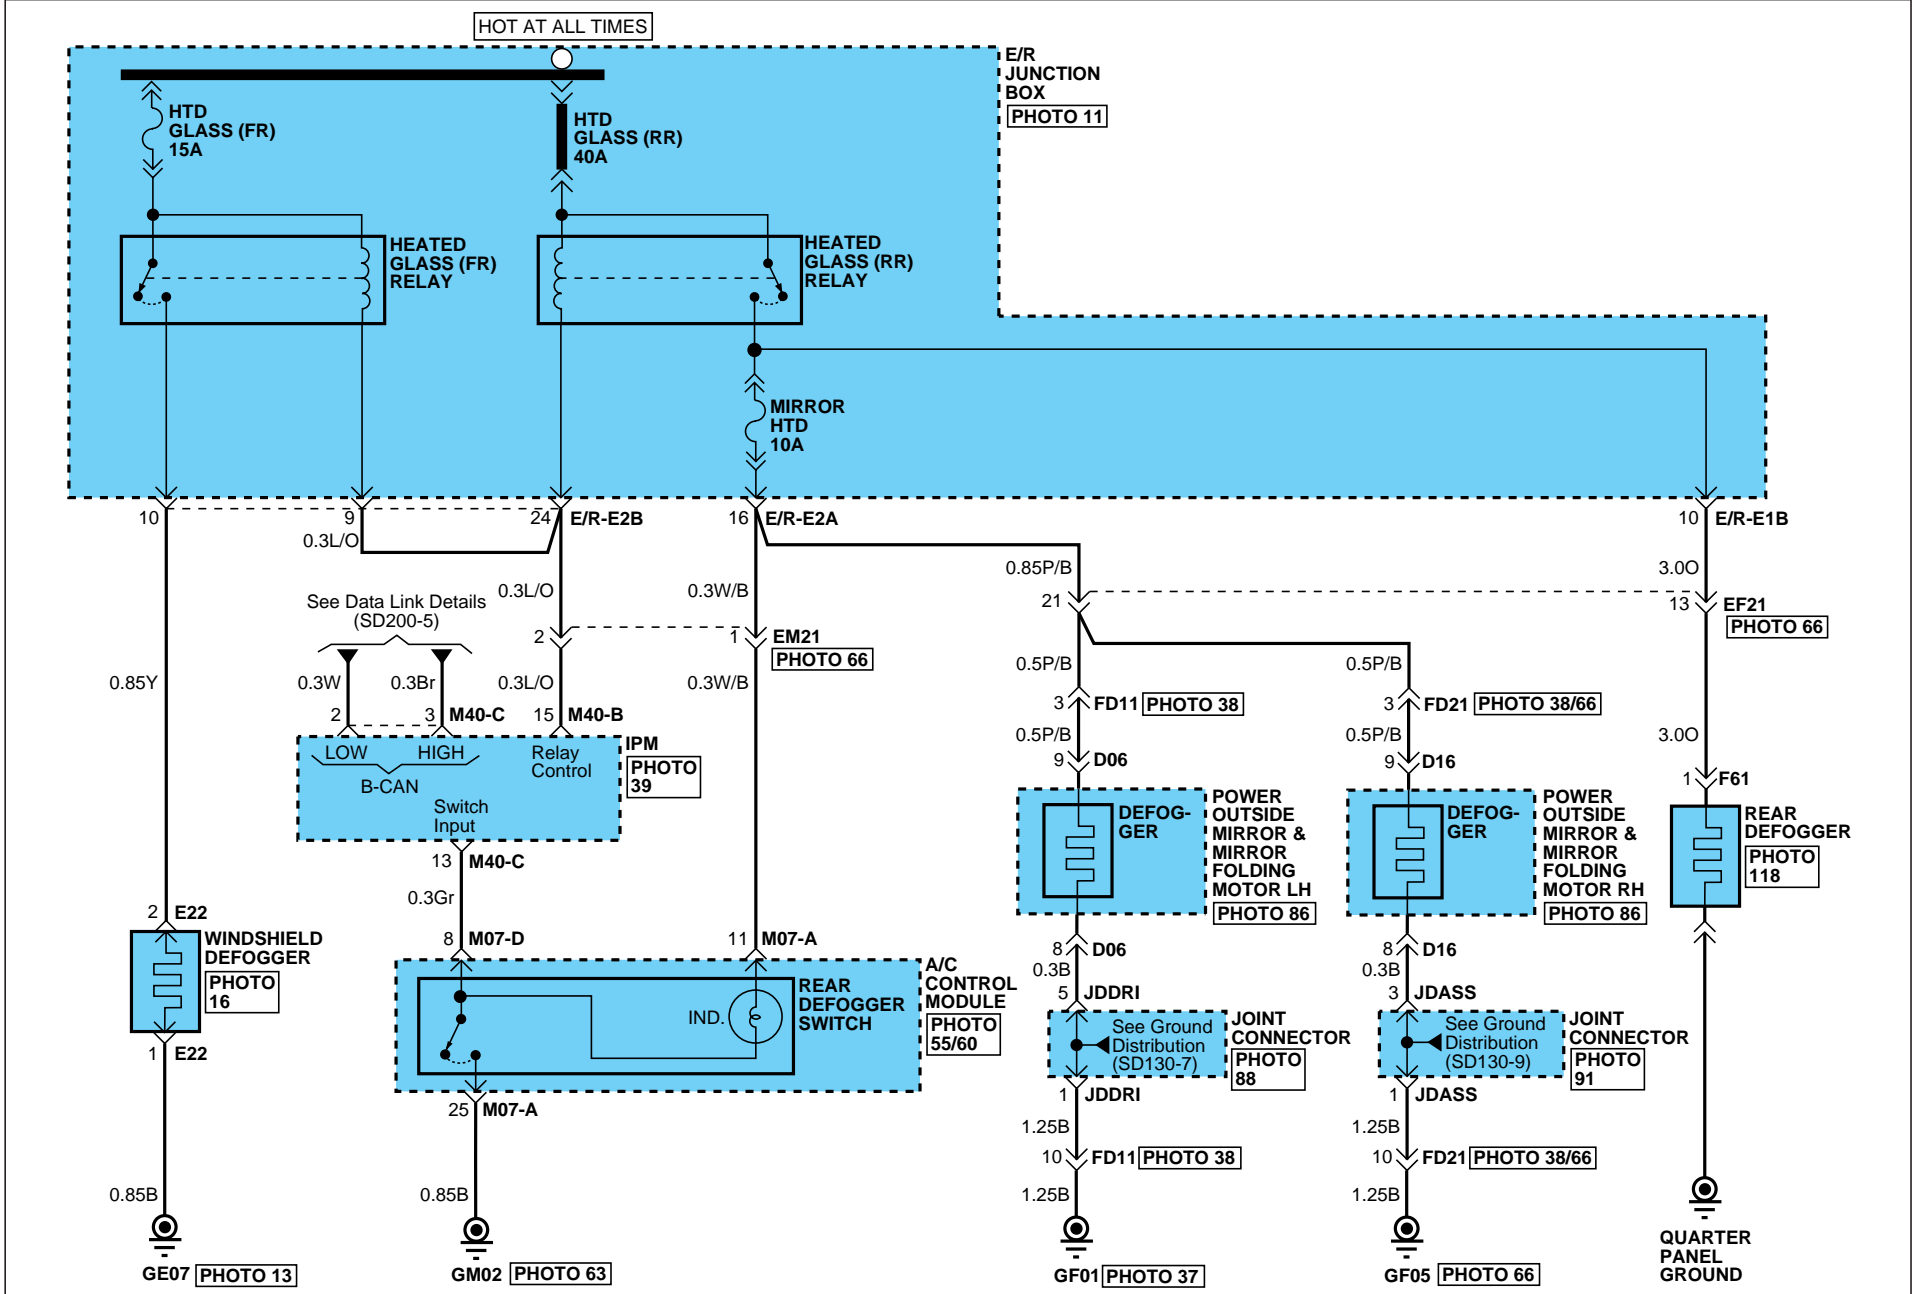


GLASS & MIRROR DEFOGGER

Glass & Mirror Defogger (2)


SD879-2

D06

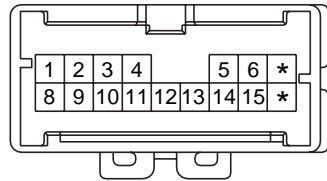


AMP_040III_16M_W

D16

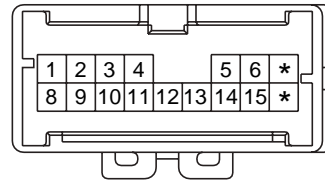


AMP_040III_16M_W

E22

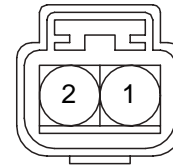


KUM_NMWP_02F_B

 F61




KET_250_01M_W

M07-A

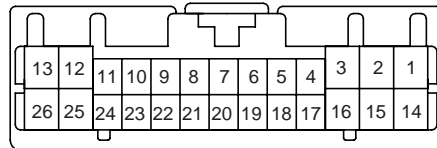


KET_0407_26F_W

 M07-D




AMP_MQS_18F_B_3

 M40-B



AMP_0407_26F_W_HD

M40-C



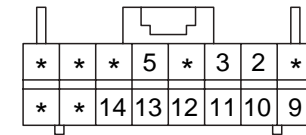


AMP_0407_16F_W_040

Driver Power Seat (1)

SD880-1

W/O IMS

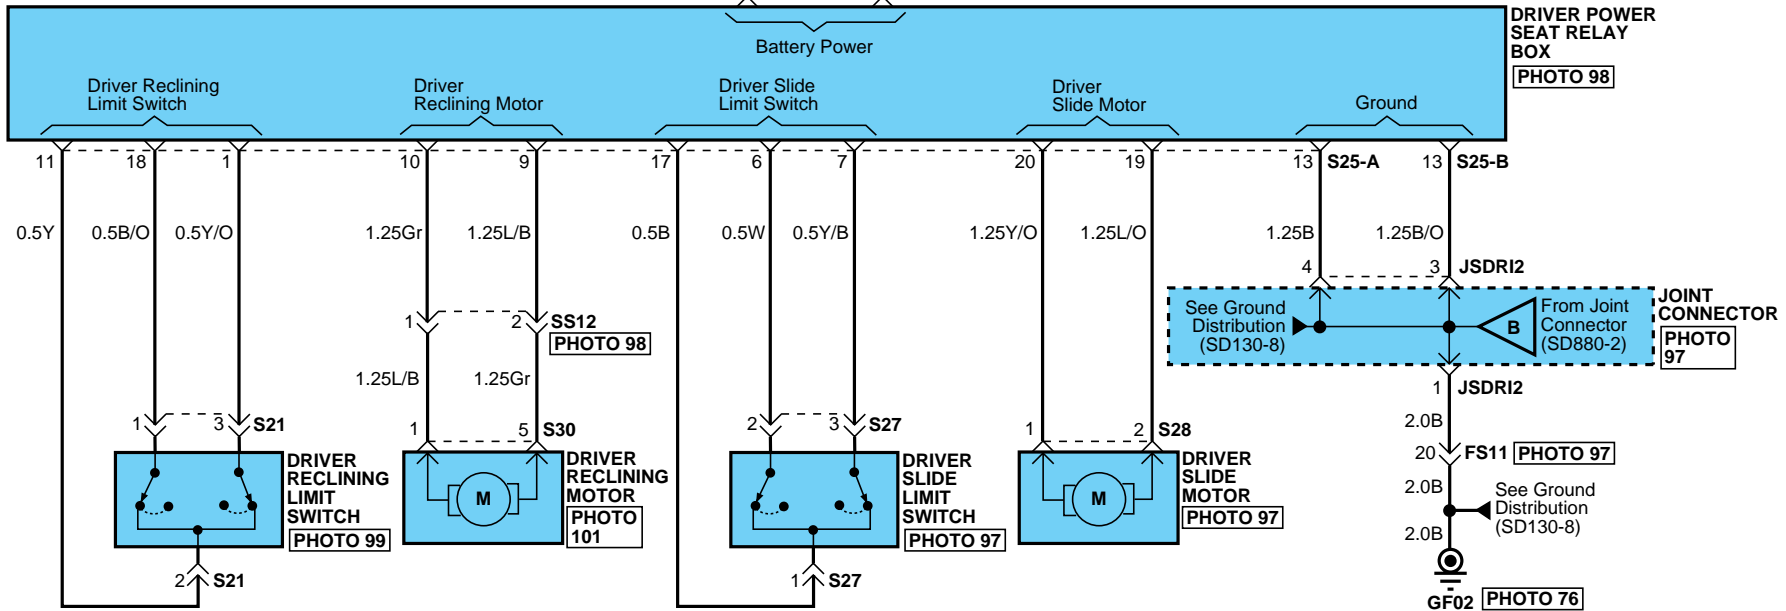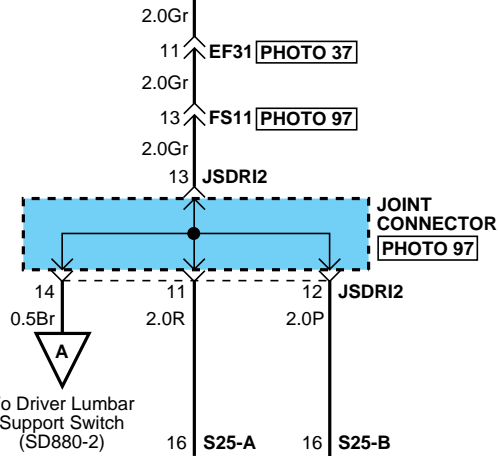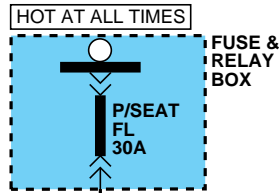


DRIVER POWER SEAT














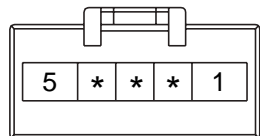
Driver Power Seat (2)

SD880-2

W/O IMS

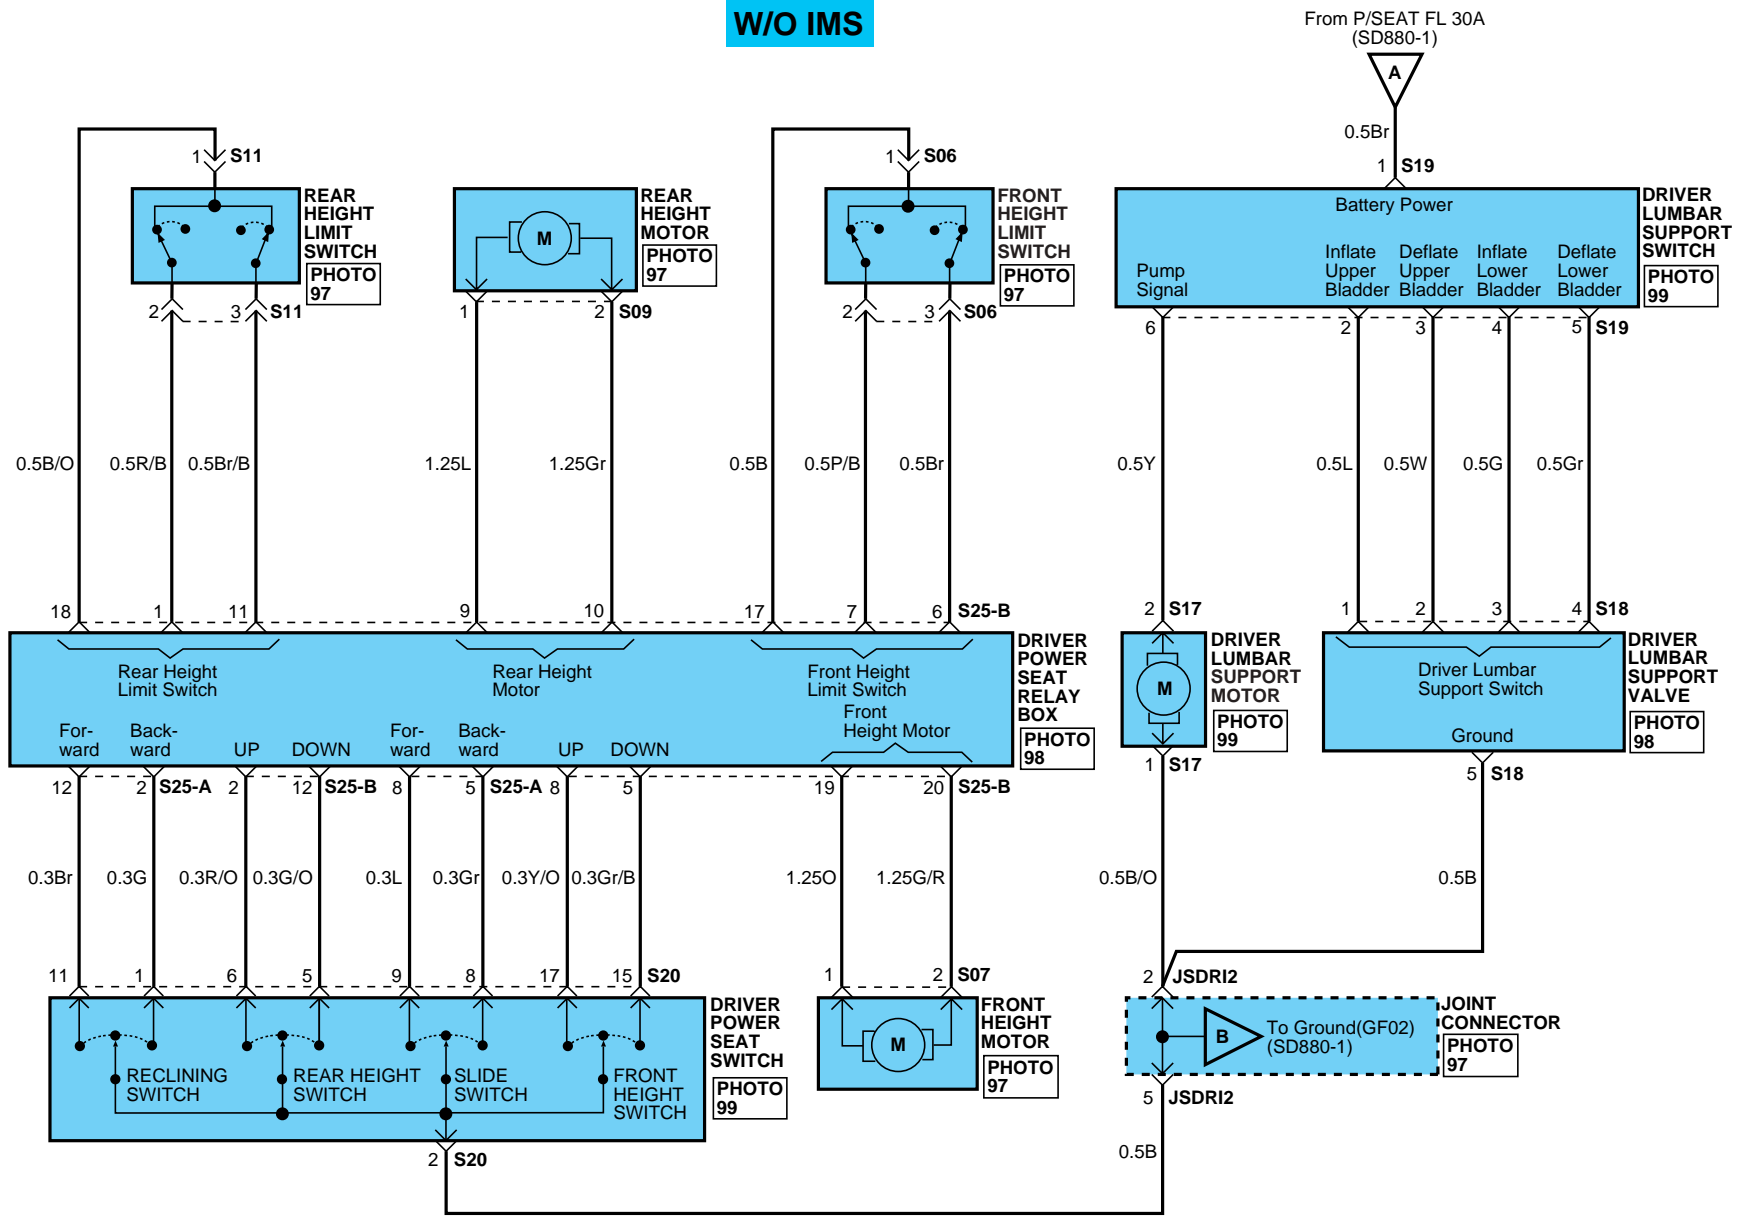

DRIVER POWER SEAT

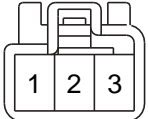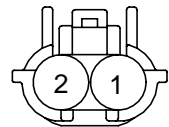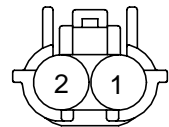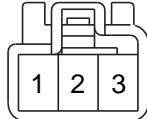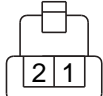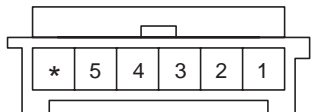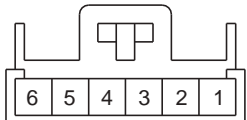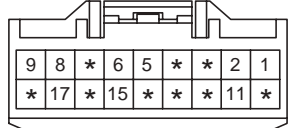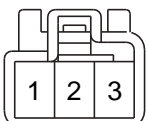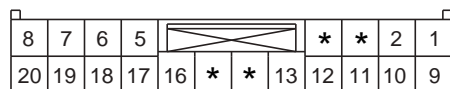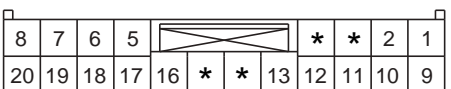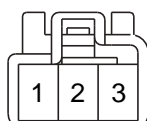Driver Power Seat (3)			SD880-3
<p>S06</p>  <p>KET_090II_03M_B</p>	<p>S07</p>  <p>KET_SWP_02F_B</p>	<p>S09</p>  <p>KET_SWP_02F_B</p>	<p>S11</p>  <p>KET_090II_03M_B</p>
<p>S17</p>  <p>AMP_MKI_02F_B</p>	<p>S18</p>  <p>AMP_MQS_06F_B</p>	<p>S19</p>  <p>AMP_070_06F_W</p>	<p>S20</p>  <p>AMP_090III_18F_W</p>
<p>S21</p>  <p>KET_090II_03M_B</p>	<p>S25-A</p>  <p>AMP_09250_20F_BR</p>	<p>S25-B</p>  <p>AMP_09250_20F_W</p>	<p>S27</p>  <p>KET_090II_03M_W</p>
<p>S28</p>  <p>KET_260D/L_02F</p>	<p>S30</p>  <p>AMP_MQS_05F_B</p>	<p>BLANK</p>	<p>BLANK</p>

DRIVER POWER SEAT

Driver Power Seat (4)


SD880-4

MEMO


Passenger Power Seat (1)

SD881-1

WITH WALK IN DEVICE

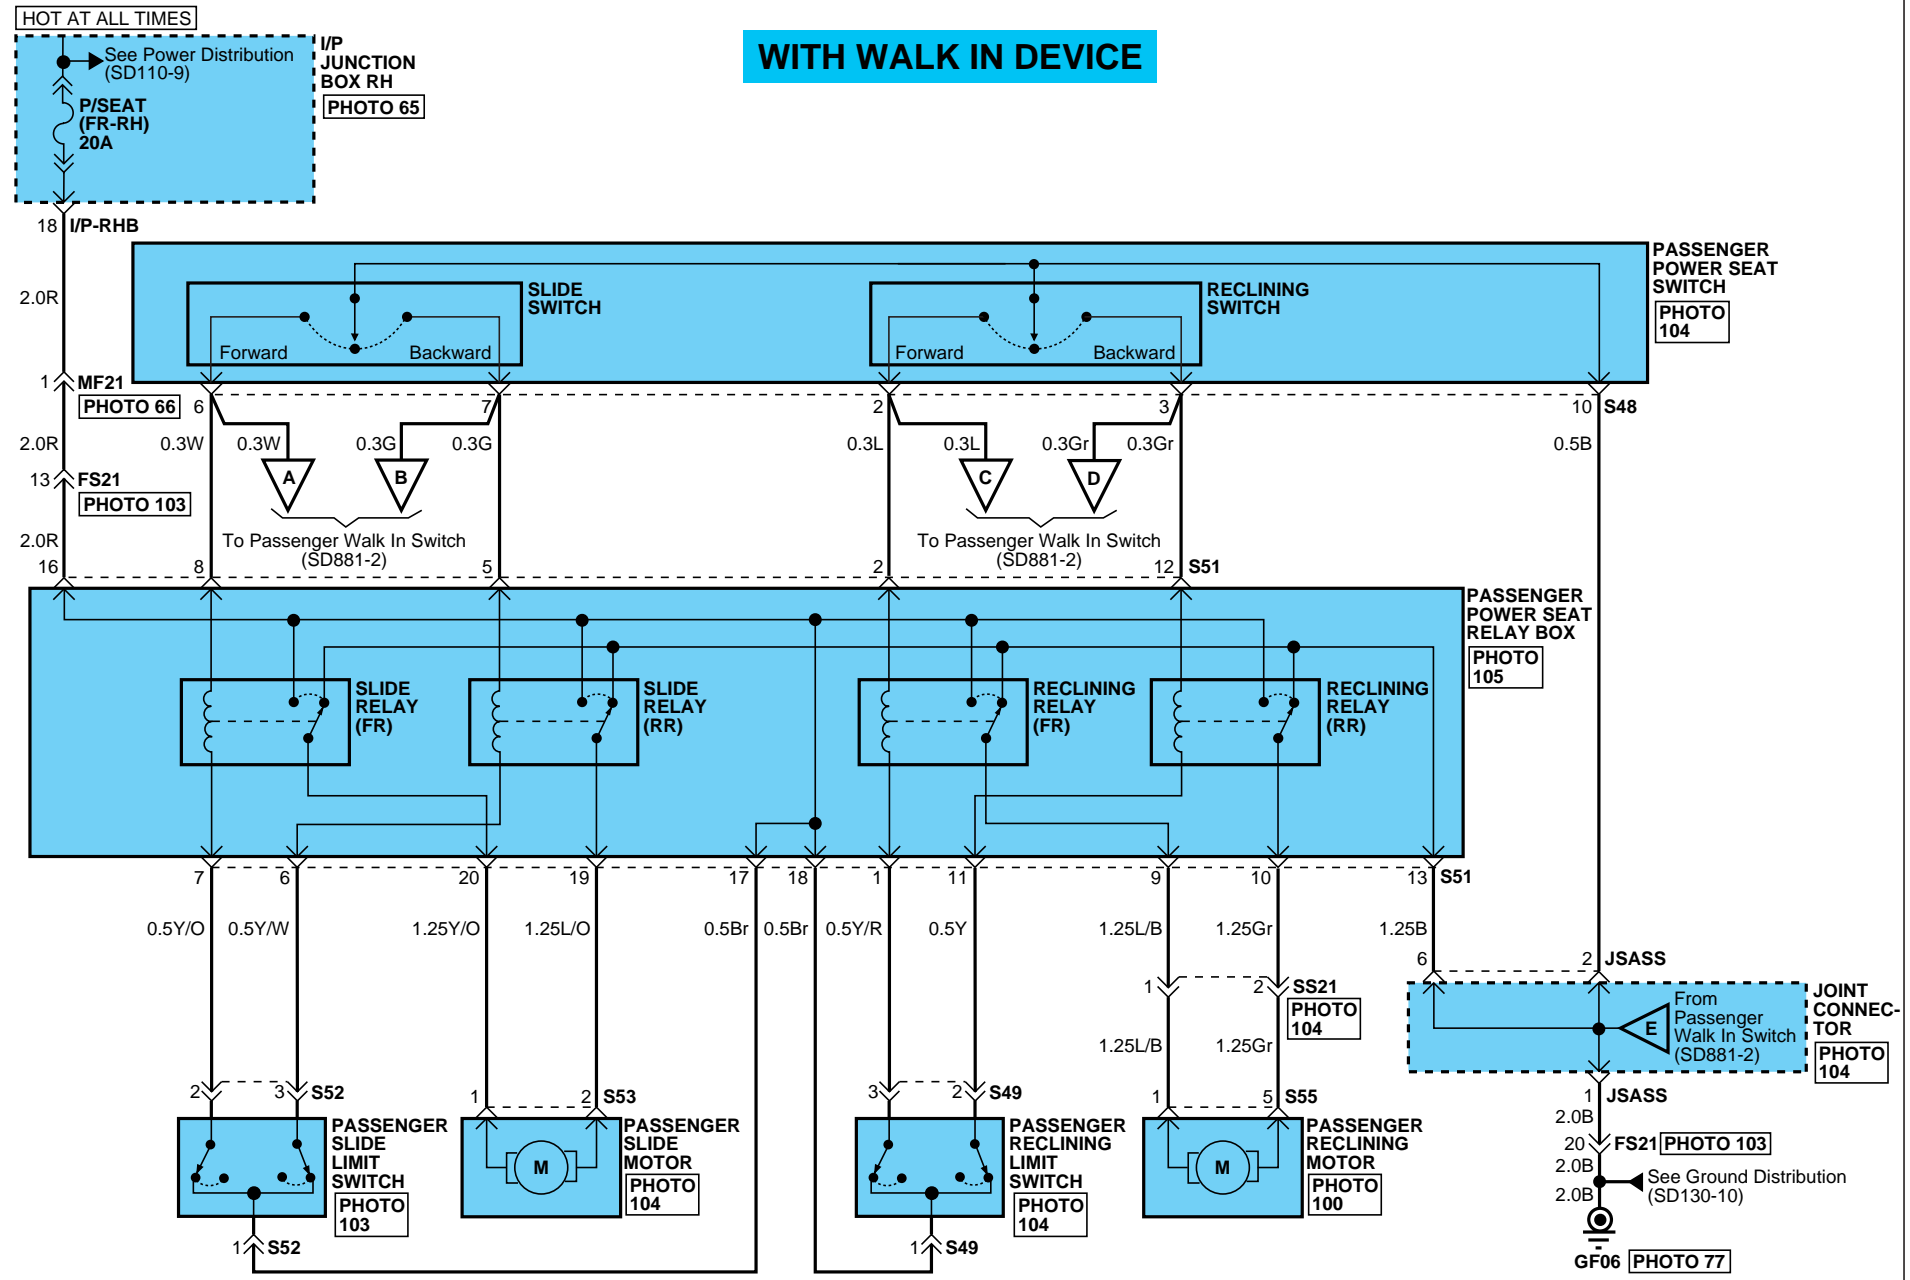

WITH WALK IN DEVICE

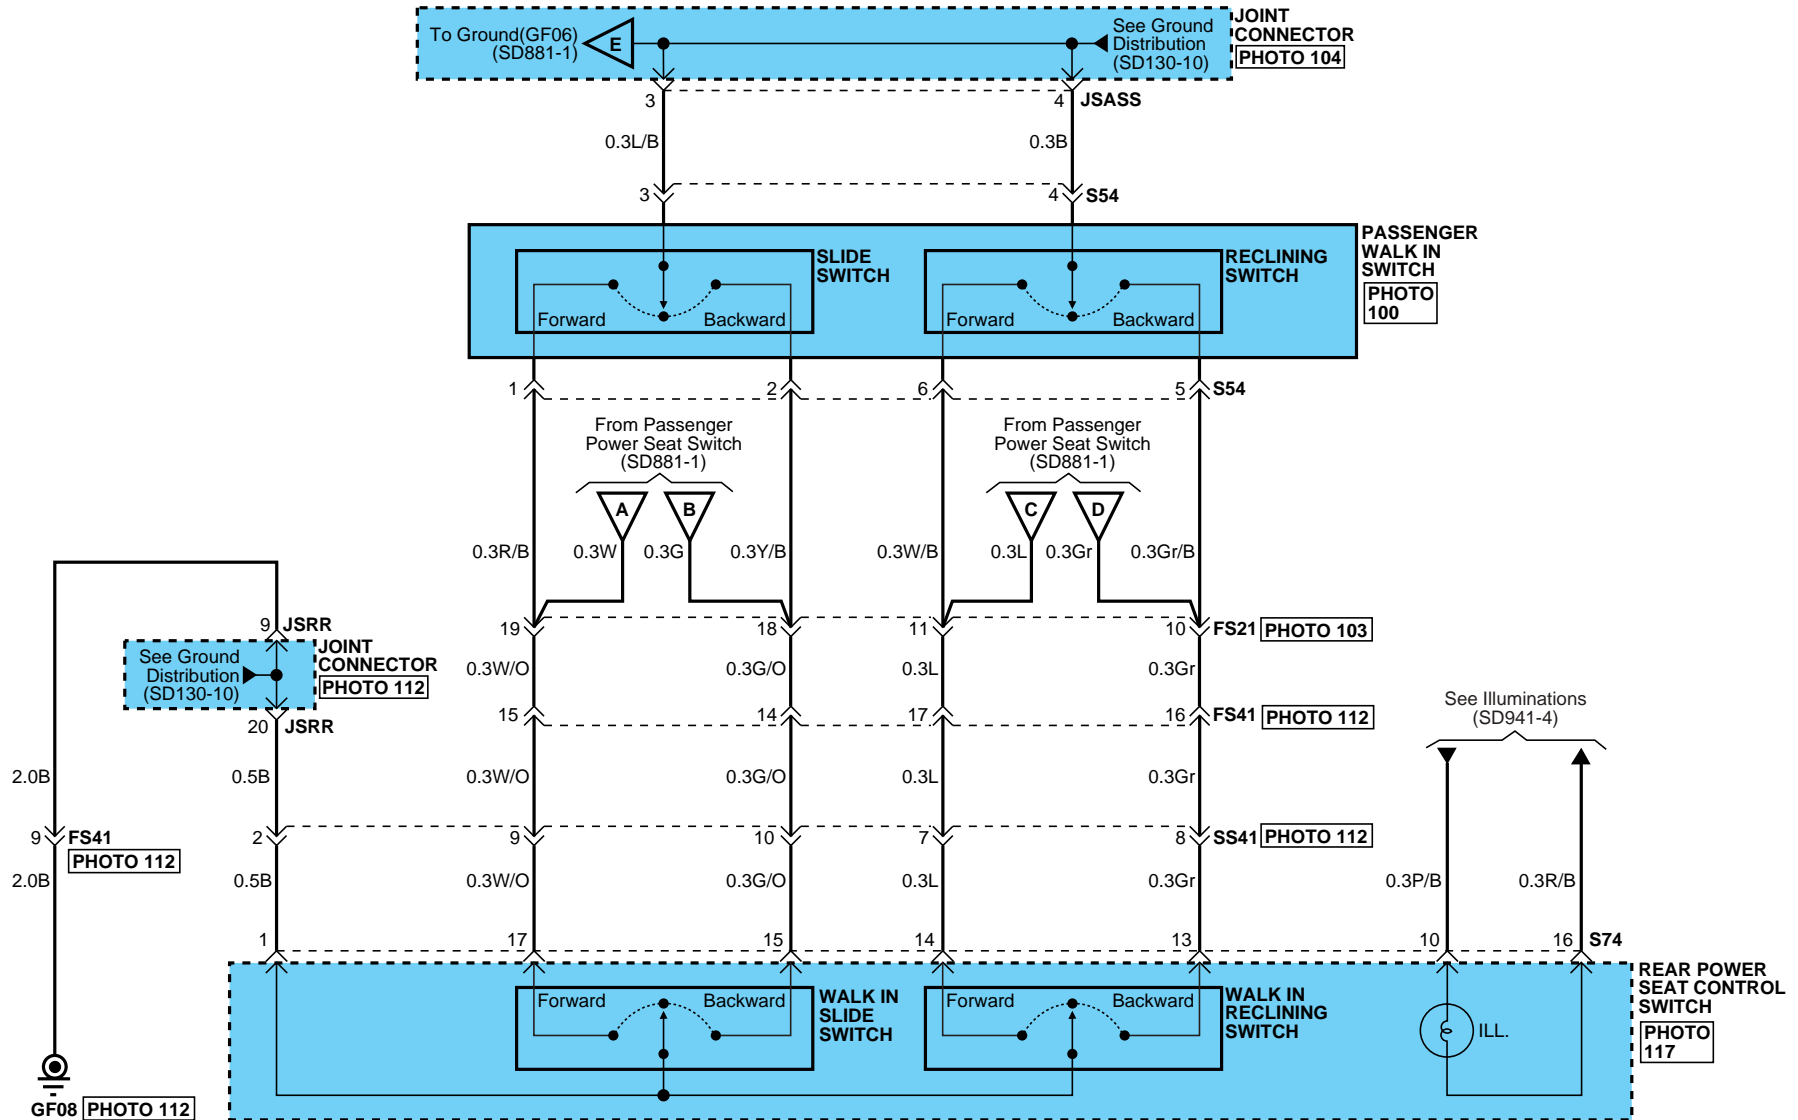


PASSENGER POWER SEAT

Passenger Power Seat (3)

SD881-3

W/O WALK IN DEVICE

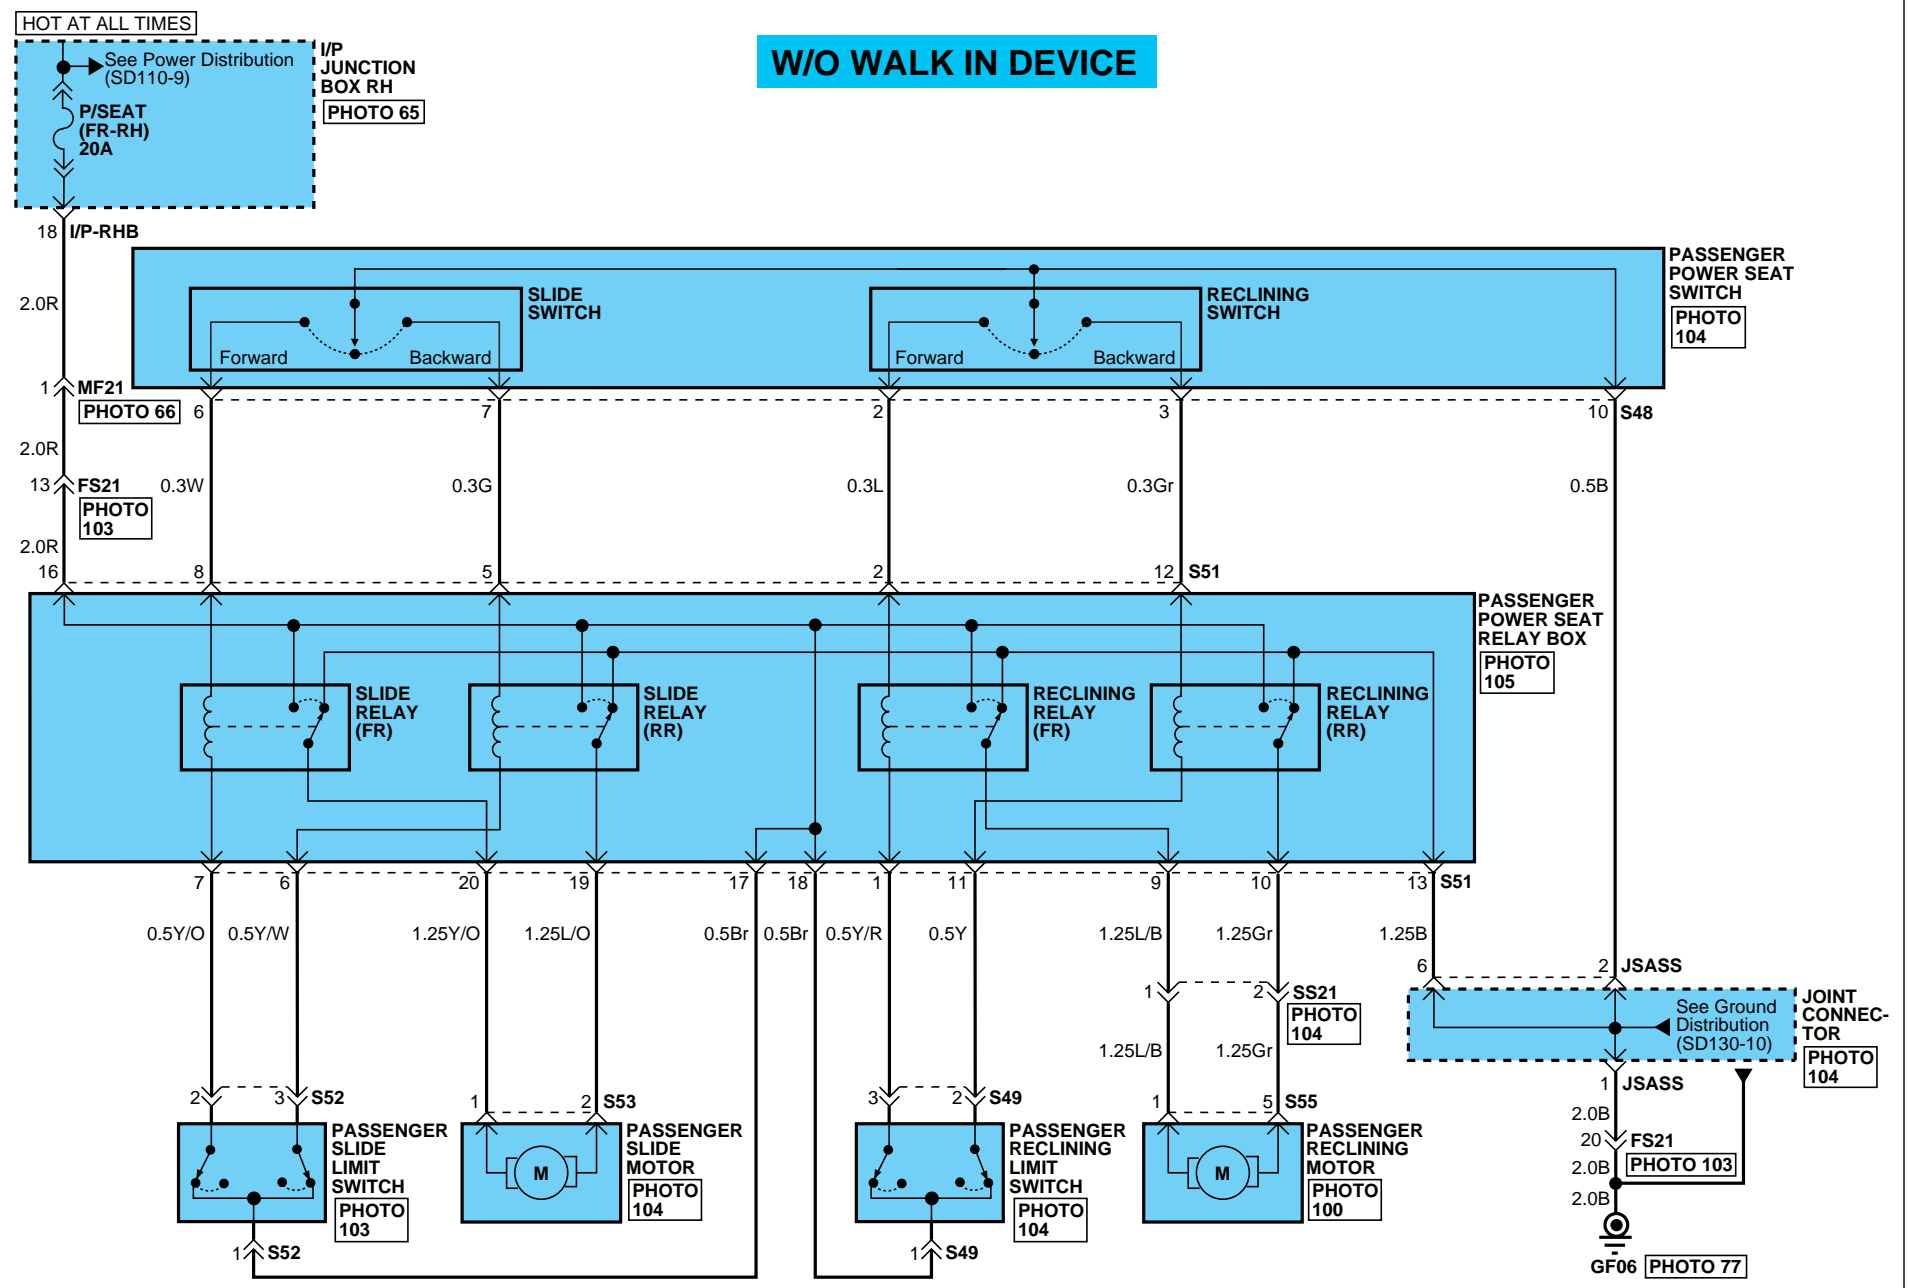


PASSENGER POWER SEAT

Passenger Power Seat (4)


SD881-4

S48

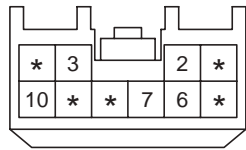


AMP_090III_10F_W

S49

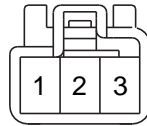


KET_090II_03M_B

 S51




AMP_09250_20F_W

S52

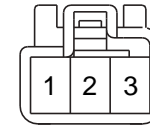


KET_090II_03M_B

 S53




KET_250D/L_02F_W

S54

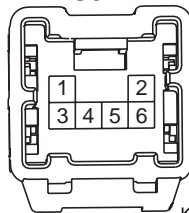


KET_040III_06M_W

S55

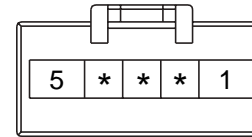

AMP_MQS_05F_B

S74

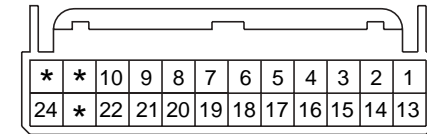


AMP_025_24F_W

REAR POWER SEAT

Rear Power Seat (2)


SD882-2

F31

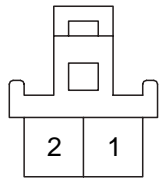


KET_070_02F_W

F32

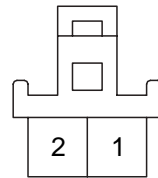


KET_070_02F_W

S63

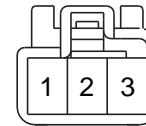


KET_090II_03M_B

 S64




KET_090II_2F_SP_W

 S68



AMP_09250_20F_W

S69

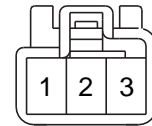


KET_090II_03M_W

S70



KET_090II_2F_SP_W

S74

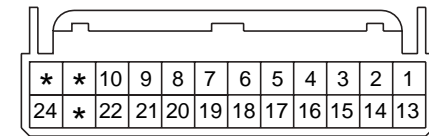

AMP_025_24F_W


ADJUSTABLE SEAT WARMER SYSTEM

ECCD7FB9

Adjustable Seat Warmer System (1)

SD885-1


F15-B, F17-B : W/O ECS
F15-C, F17-C : With ECS

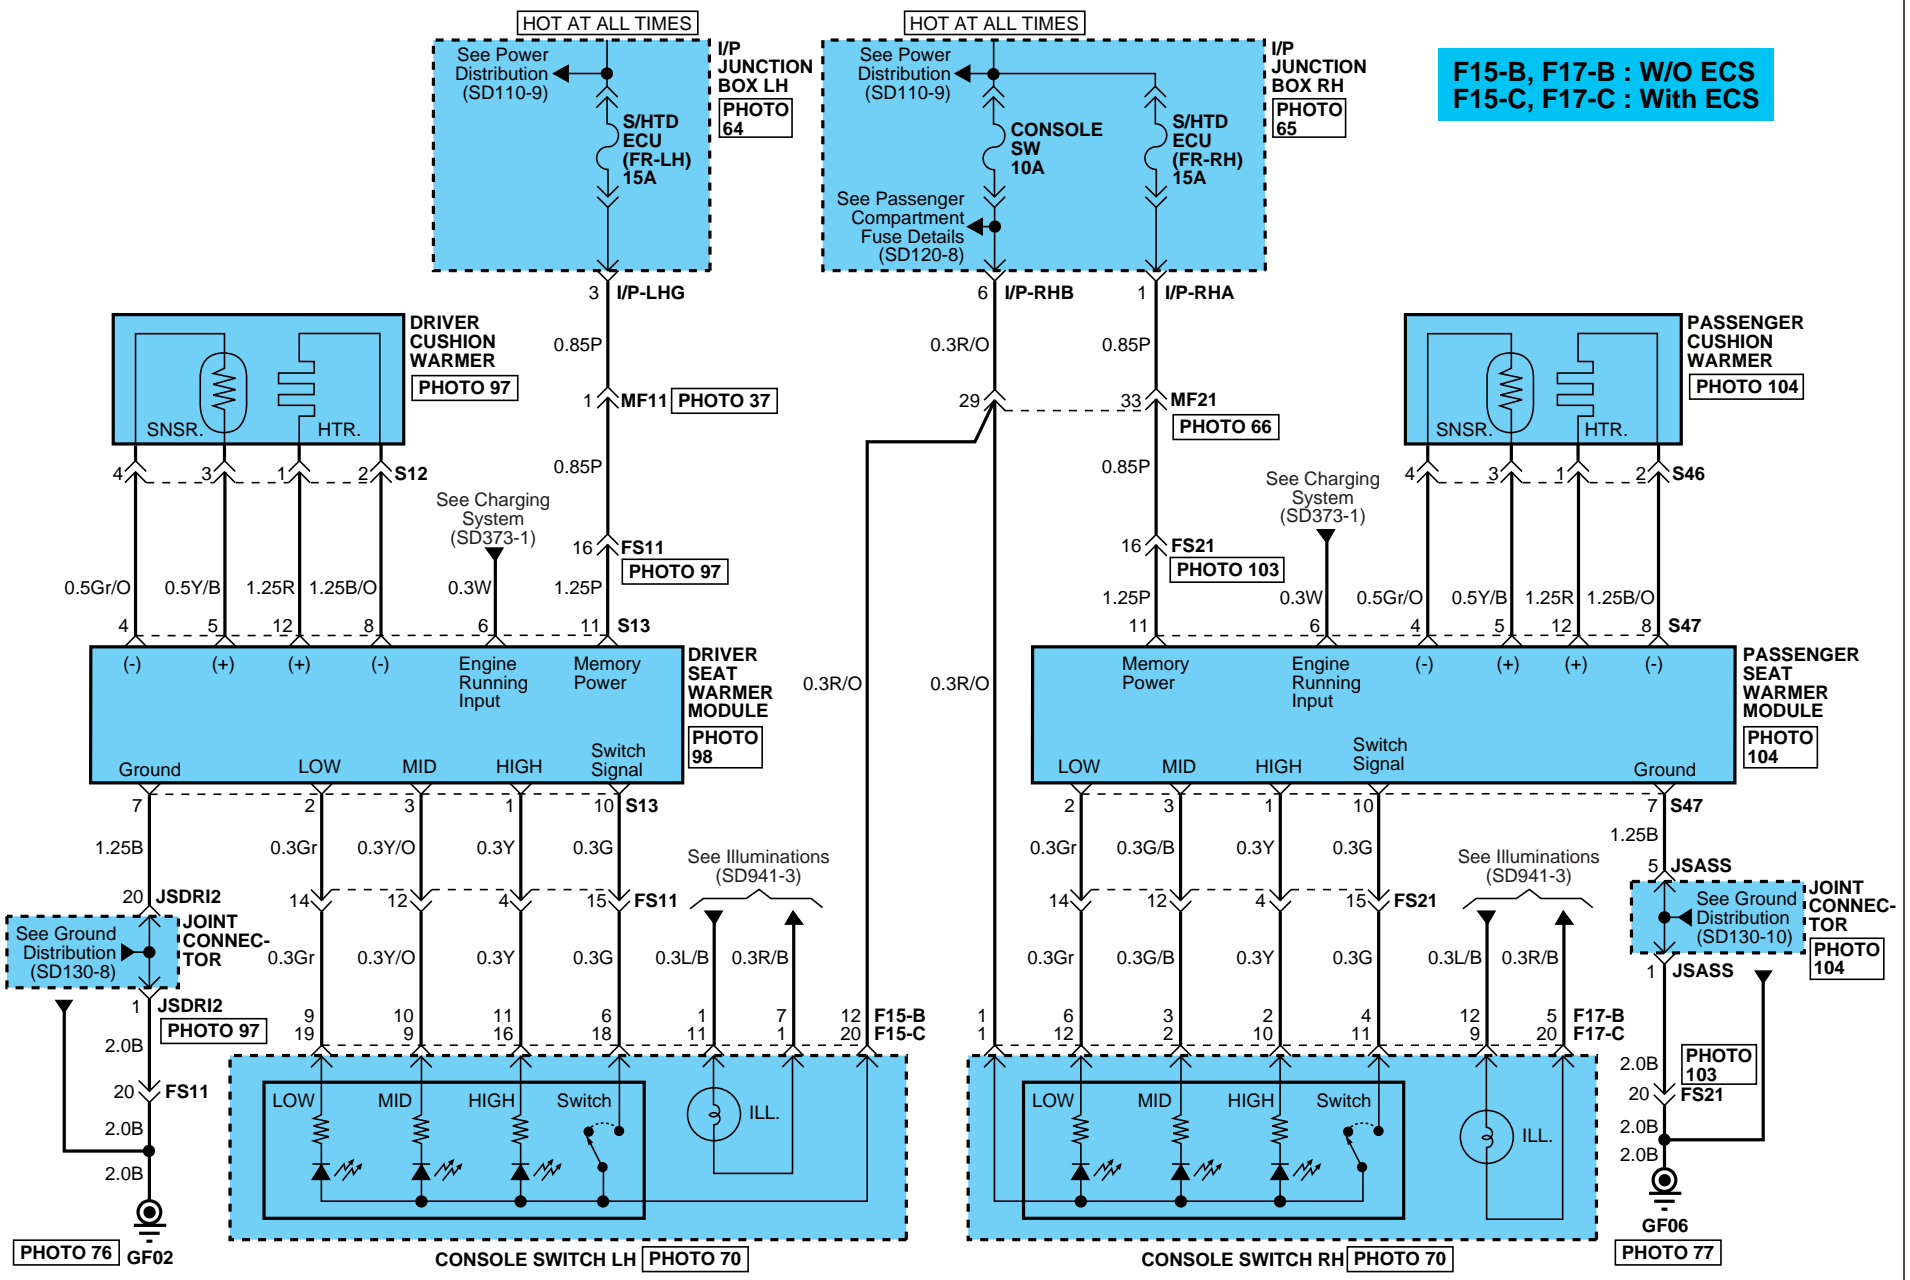

ADJUSTABLE SEAT WARMER SYSTEM

Adjustable Seat Warmer System (2)

SD885-2

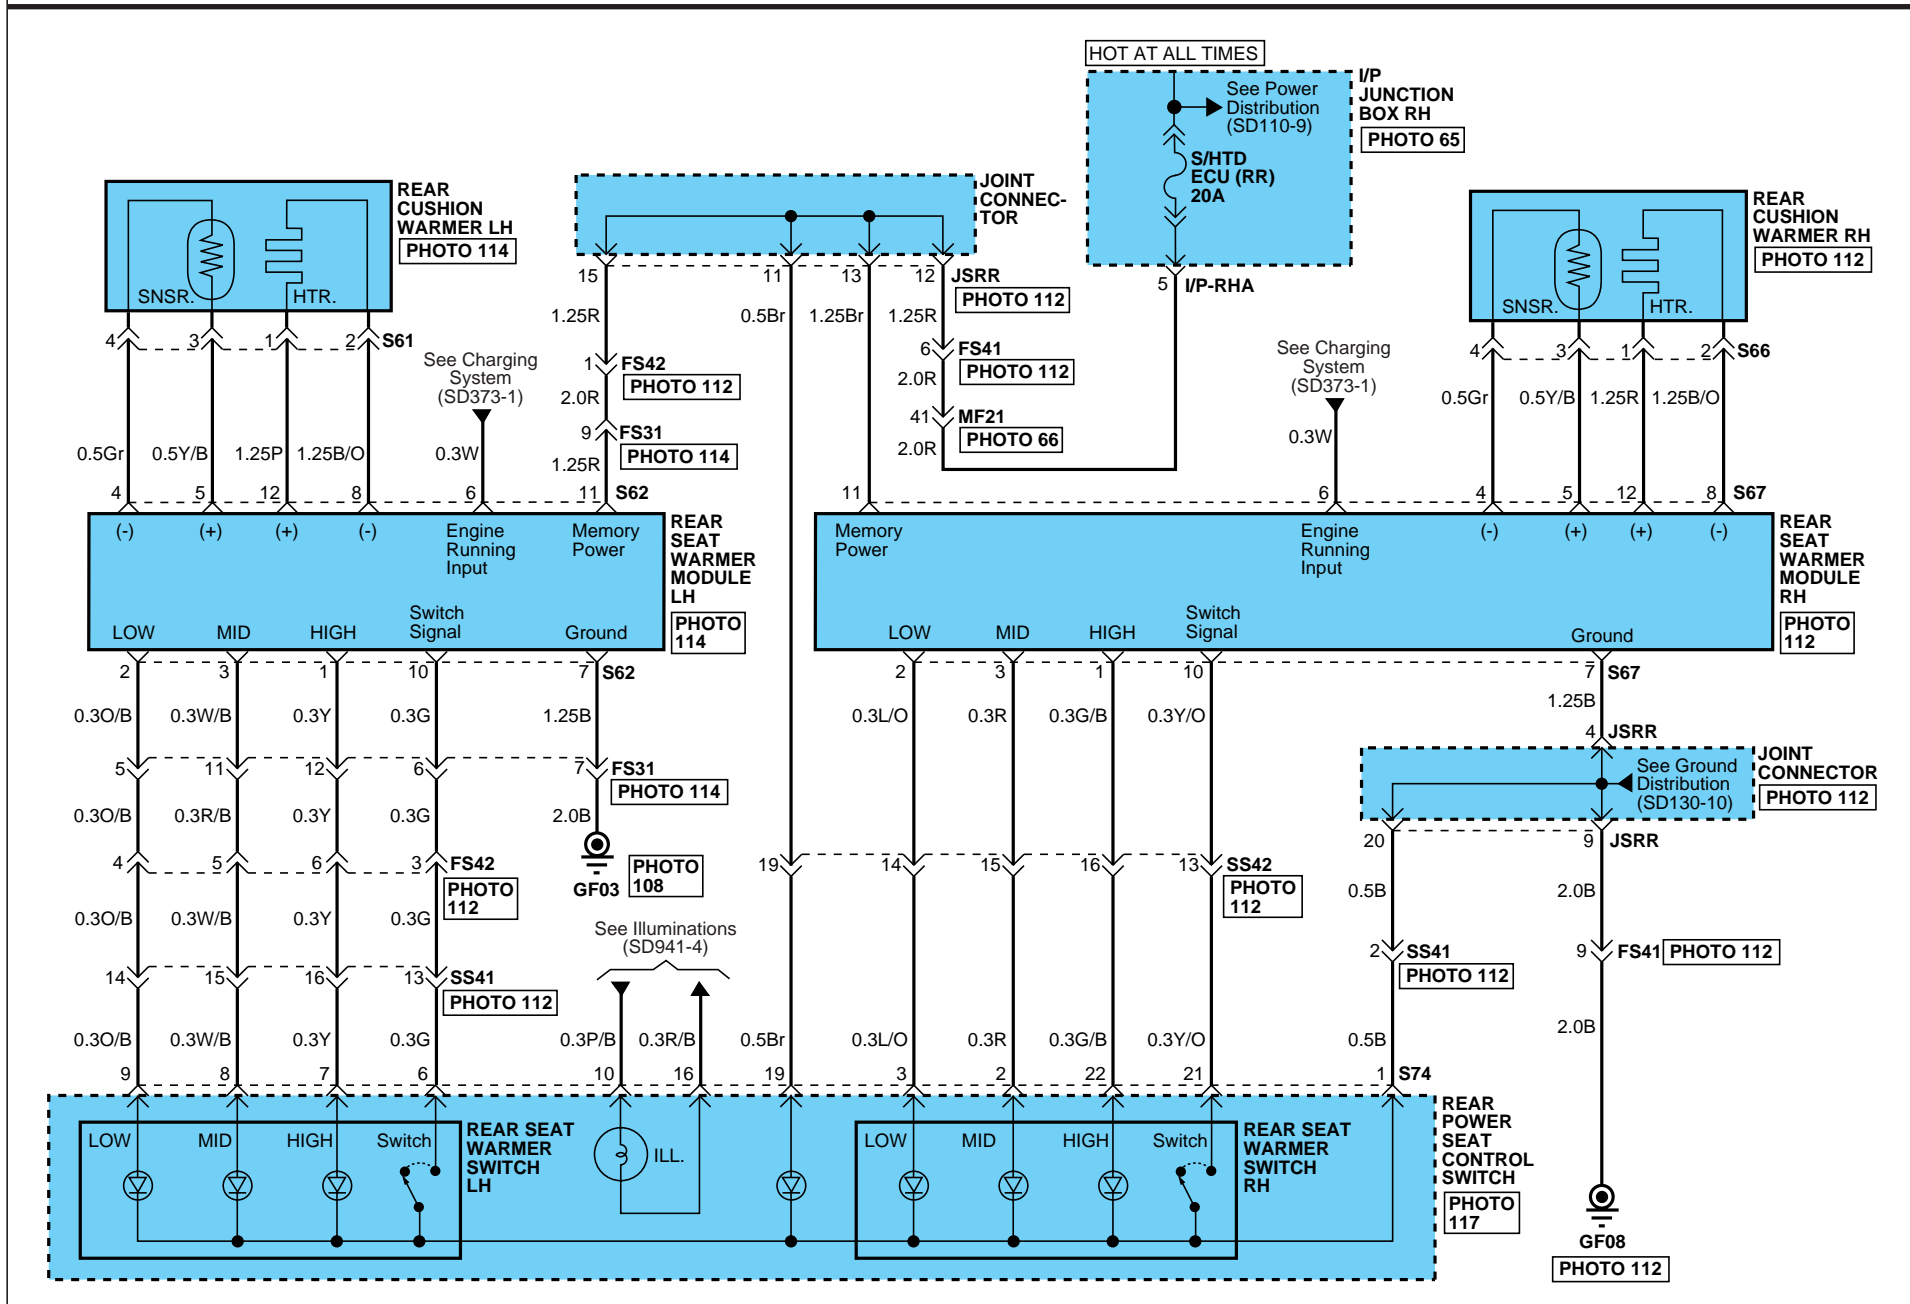

ADJUSTABLE SEAT WARMER SYSTEM

Adjustable Seat Warmer System (3)

SD885-3

<p>F15-B</p> <p>AMP_040M1_12F_B</p>	<p>F15-C</p> <p>AMP_040M1_20F_B</p>	<p>F17-B</p> <p>AMP_070_12F_W</p>	<p>F17-C</p> <p>KET_040III_20F_W</p>
<p>S12</p> <p>KET_090II_04M_W</p>	<p>S13</p> <p>AMP_070JPT_12F_W</p>	<p>S46</p> <p>KET_090II_04M_W</p>	<p>S47</p> <p>AMP_070JPT_12F_W</p>
<p>S61</p> <p>KET_090II_04M_W</p>	<p>S62</p> <p>AMP_070JPT_12F_W</p>	<p>S66</p> <p>KET_090II_04M_W</p>	<p>S67</p> <p>AMP_070JPT_12F_W</p>
<p>S74</p> <p>AMP_025_24F_W</p>	<p>BLANK</p>	<p>BLANK</p>	<p>BLANK</p>

ADJUSTABLE SEAT WARMER SYSTEM


Adjustable Seat Warmer System (4)

SD885-4

MEMO

Electronic Active Headrest System (1)

SD886-1

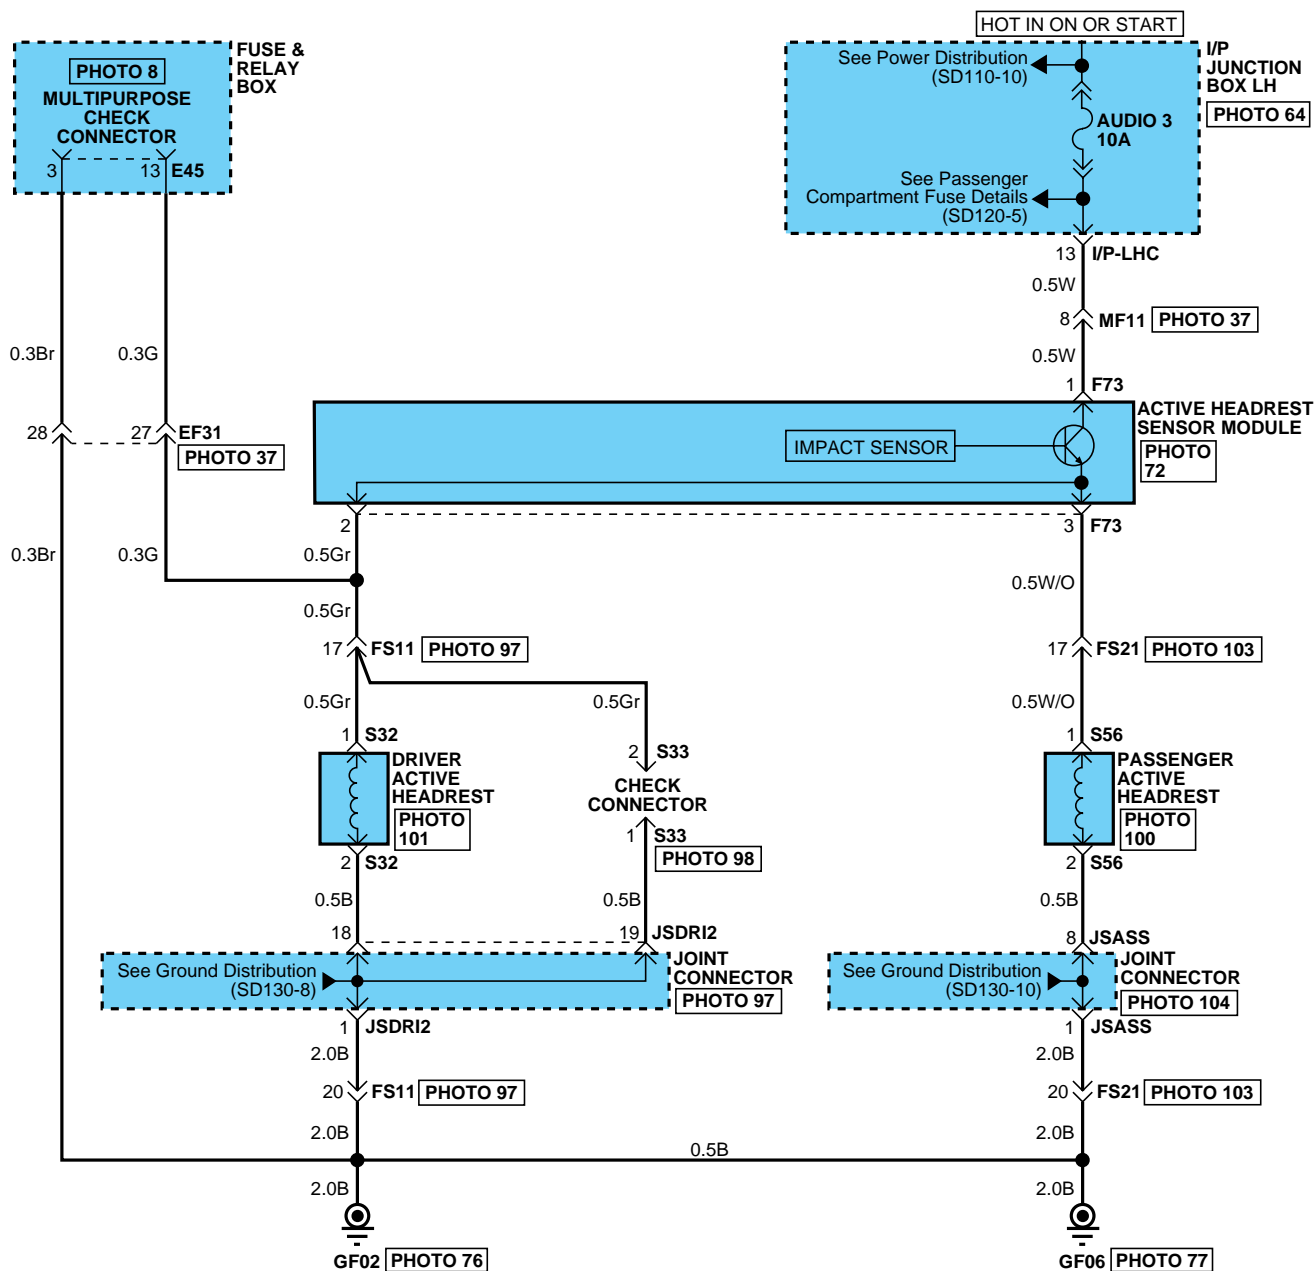

ELECTRONIC ACTIVE HEADREST SYSTEM


Electronic Active Headrest System (2)

SD886-2

E45


4	3				*	1	
12	*	*	9	*	*	6	5
*	19	18	17	*	15	14	13

F73

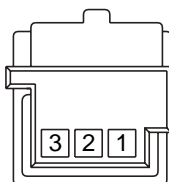


AMP_MQS_03F_V_D

S32,S56

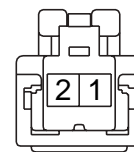

KET_040III_02F_W

 
S33



KET_090II_02M_W

Climate Seat Control (1)


SD886-3

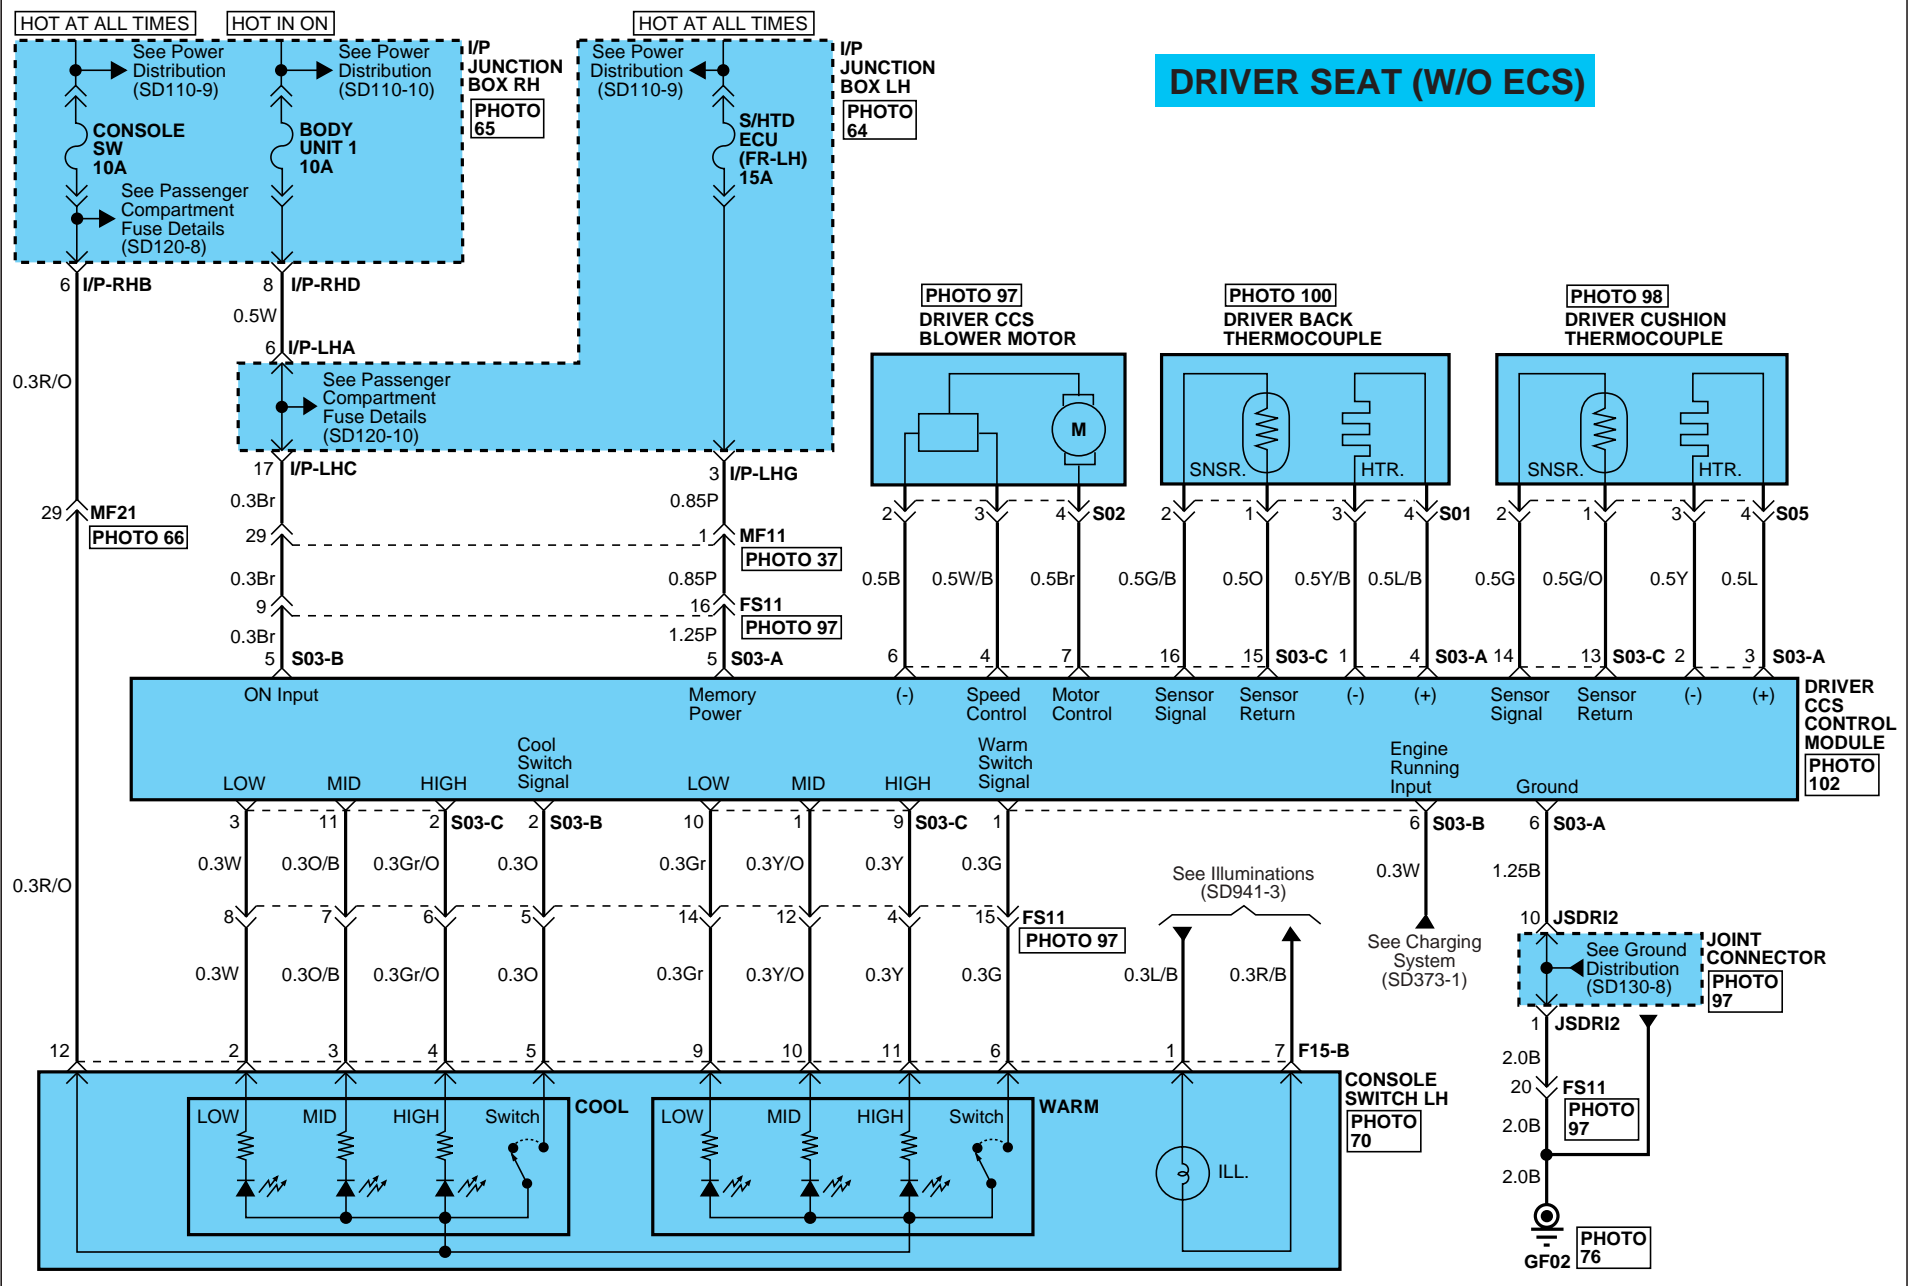

CLIMATE SEAT CONTROL

Climate Seat Control (2)


SD886-4

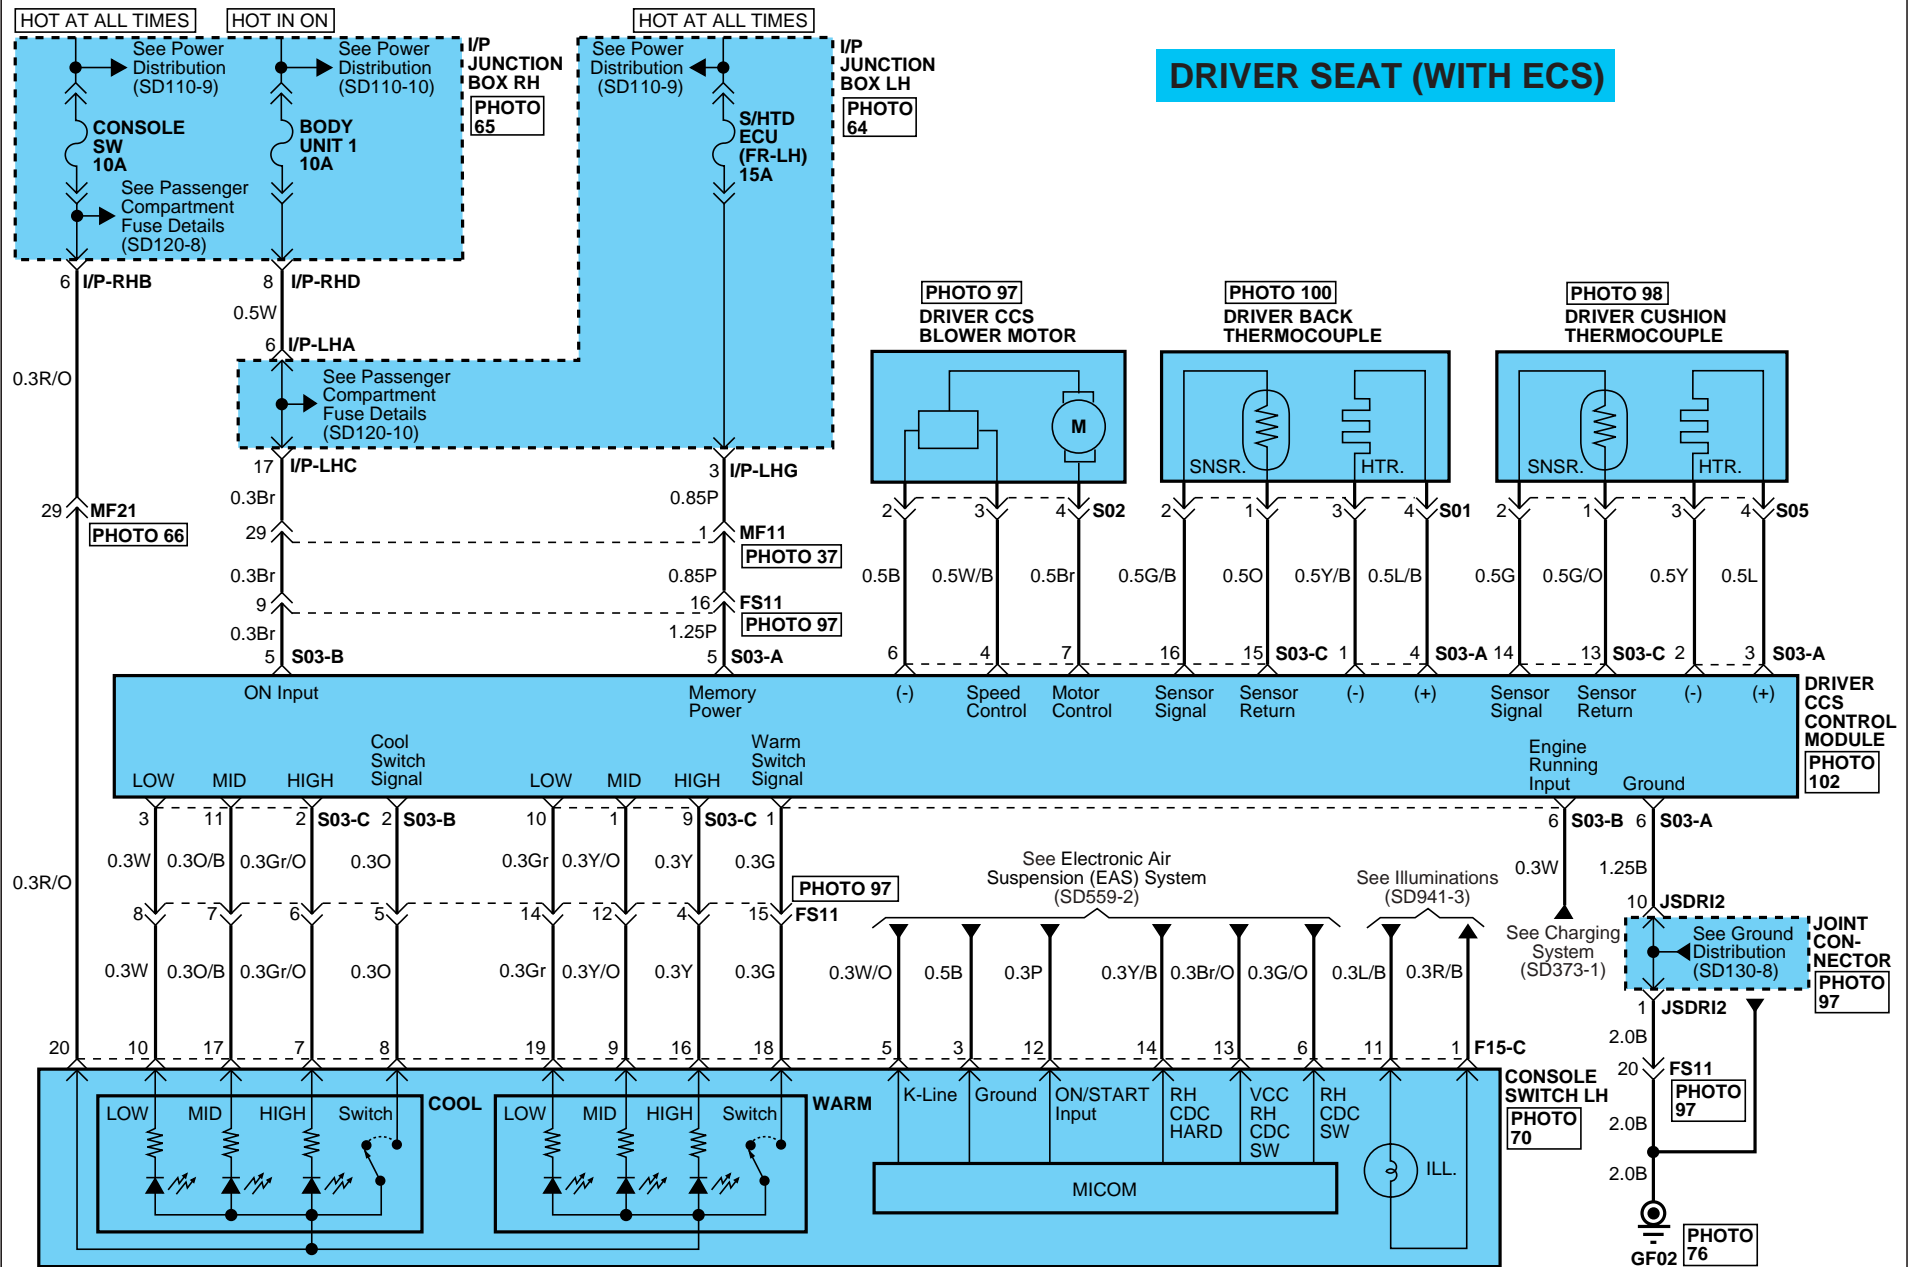

CLIMATE SEAT CONTROL

Climate Seat Control (3)


SD886-5

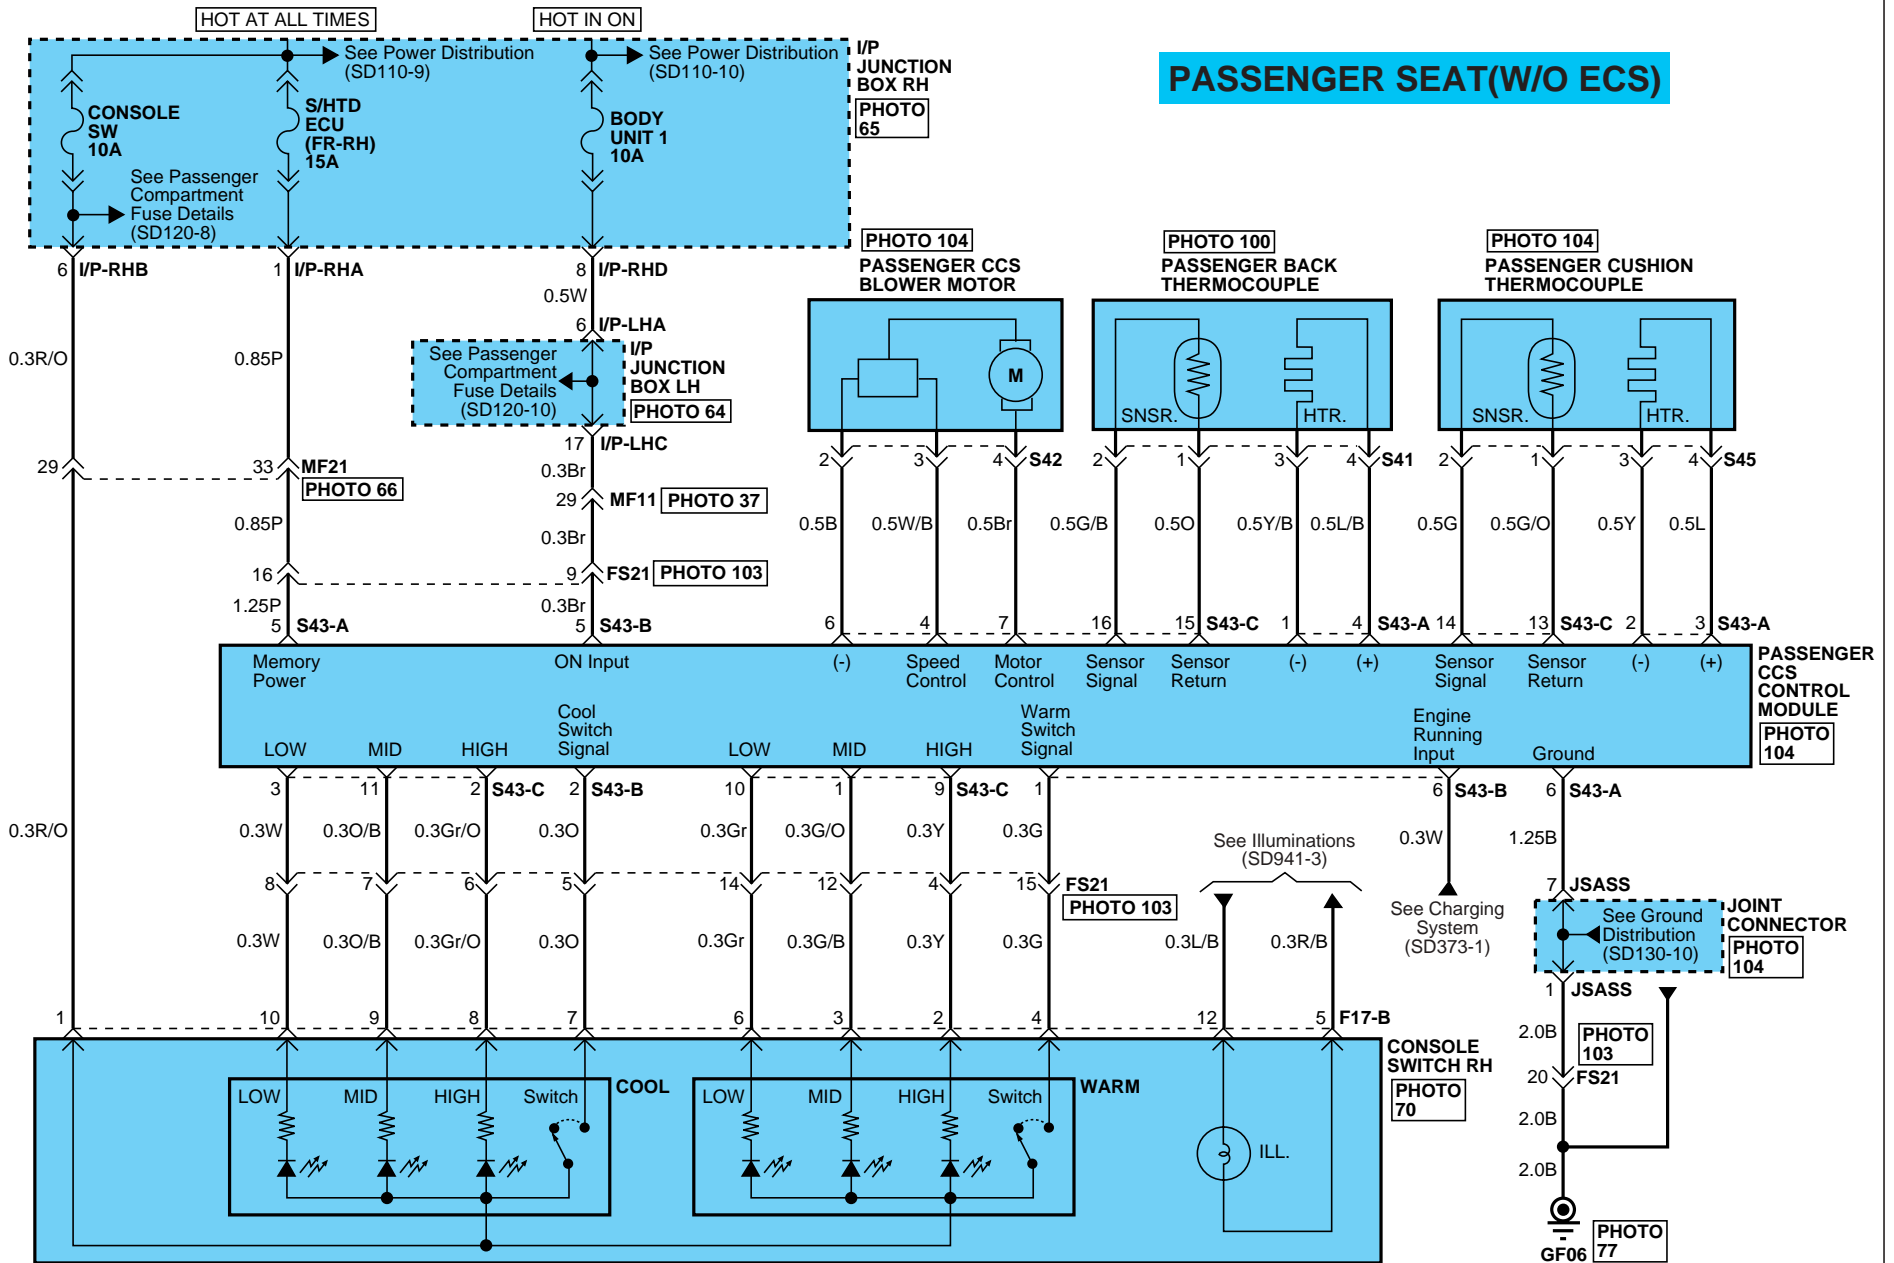

CLIMATE SEAT CONTROL

Climate Seat Control (4)

















SD886-6

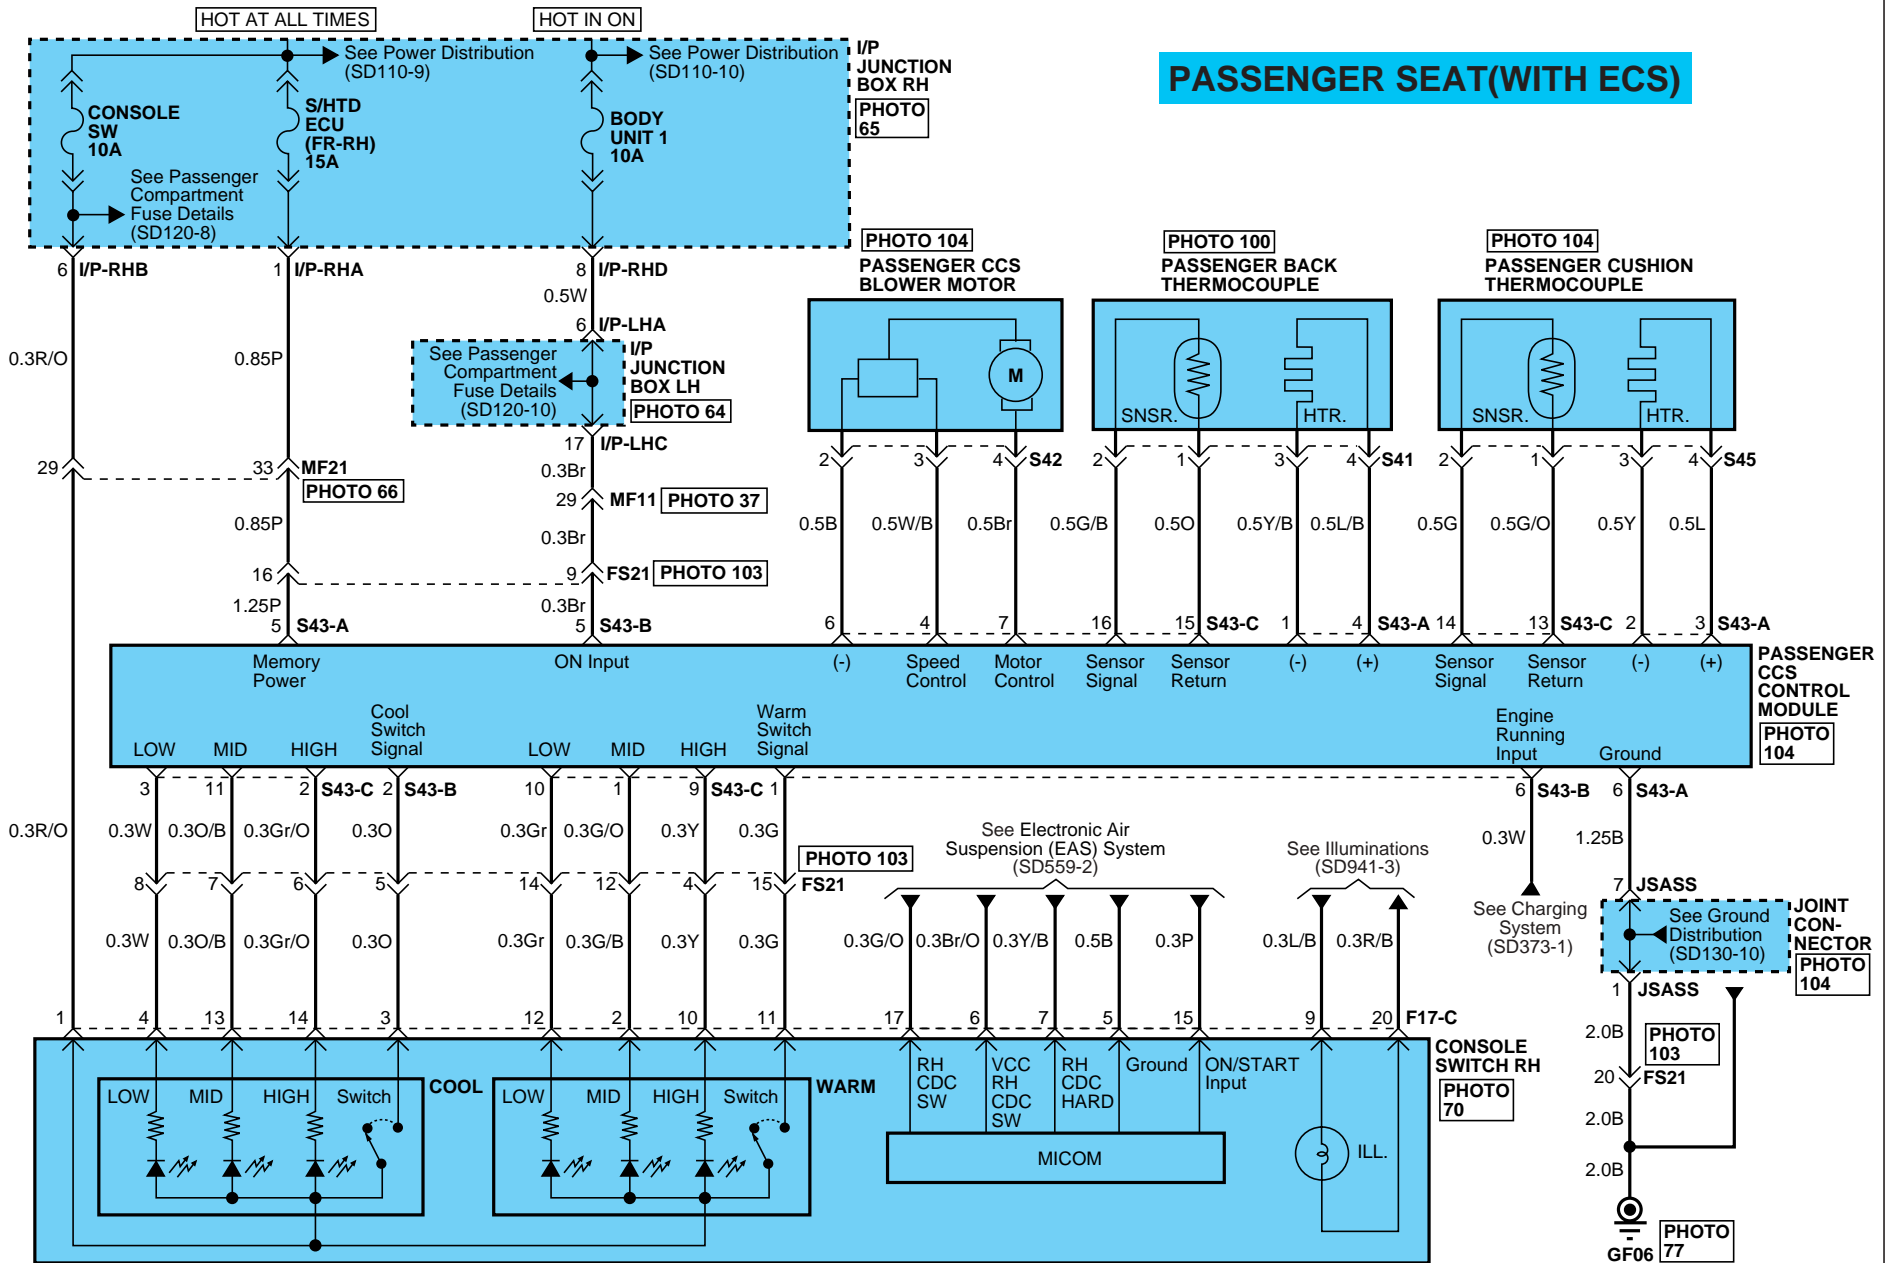

CLIMATE SEAT CONTROL

Climate Seat Control (5)

SD886-7
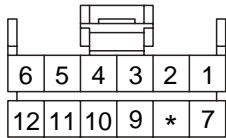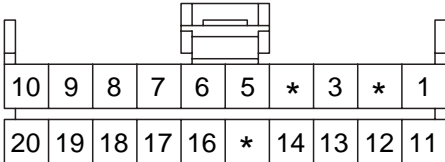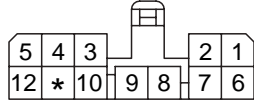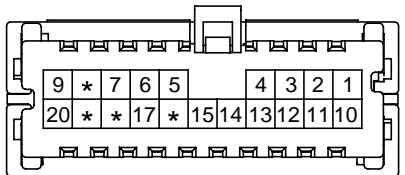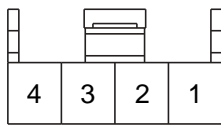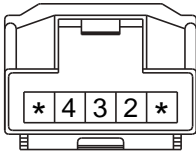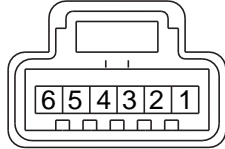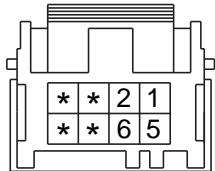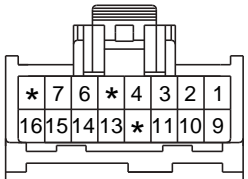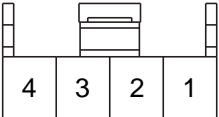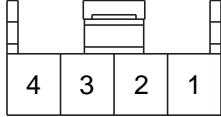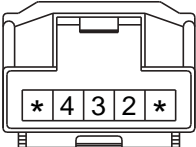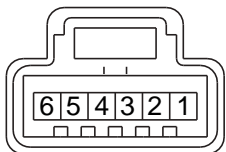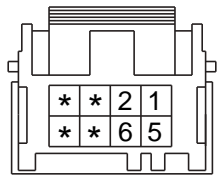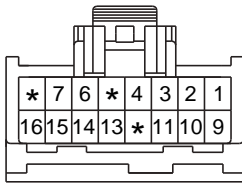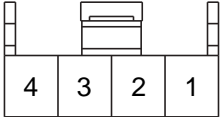
<p>F15-B</p>  <p>AMP_040M1_12F_B</p>	<p>F15-C</p>  <p>AMP_040M1_20F_B</p>	<p>F17-B</p>  <p>AMP_070_12F_W</p>	<p>F17-C</p>  <p>KET_040III_20F_W</p>
<p>S01</p>  <p>SUM_TS_04F_W</p>	<p>S02</p>  <p>YAZ_040III_05F_W</p>	<p>S03-A</p>  <p>DEL_GT150_06F</p>	<p>S03-B</p>  <p>DEL_MICRO064_08F</p>
<p>S03-C</p>  <p>DEL_MICRO064_16F</p>	<p>S05</p>  <p>SUM_TS_04F_W</p>	<p>S41</p>  <p>SUM_TS_04F_W</p>	<p>S42</p>  <p>YAZ_040III_05F_W</p>
<p>S43-A</p>  <p>DEL_GT150_06F</p>	<p>S43-B</p>  <p>DEL_MICRO064_08F</p>	<p>S43-C</p>  <p>DEL_MICRO064_16F</p>	<p>S45</p>  <p>SUM_TS_04F_W</p>

CLIMATE SEAT CONTROL


Climate Seat Control (6)

SD886-8

MEMO

Head Lamps (1)


SD921-1

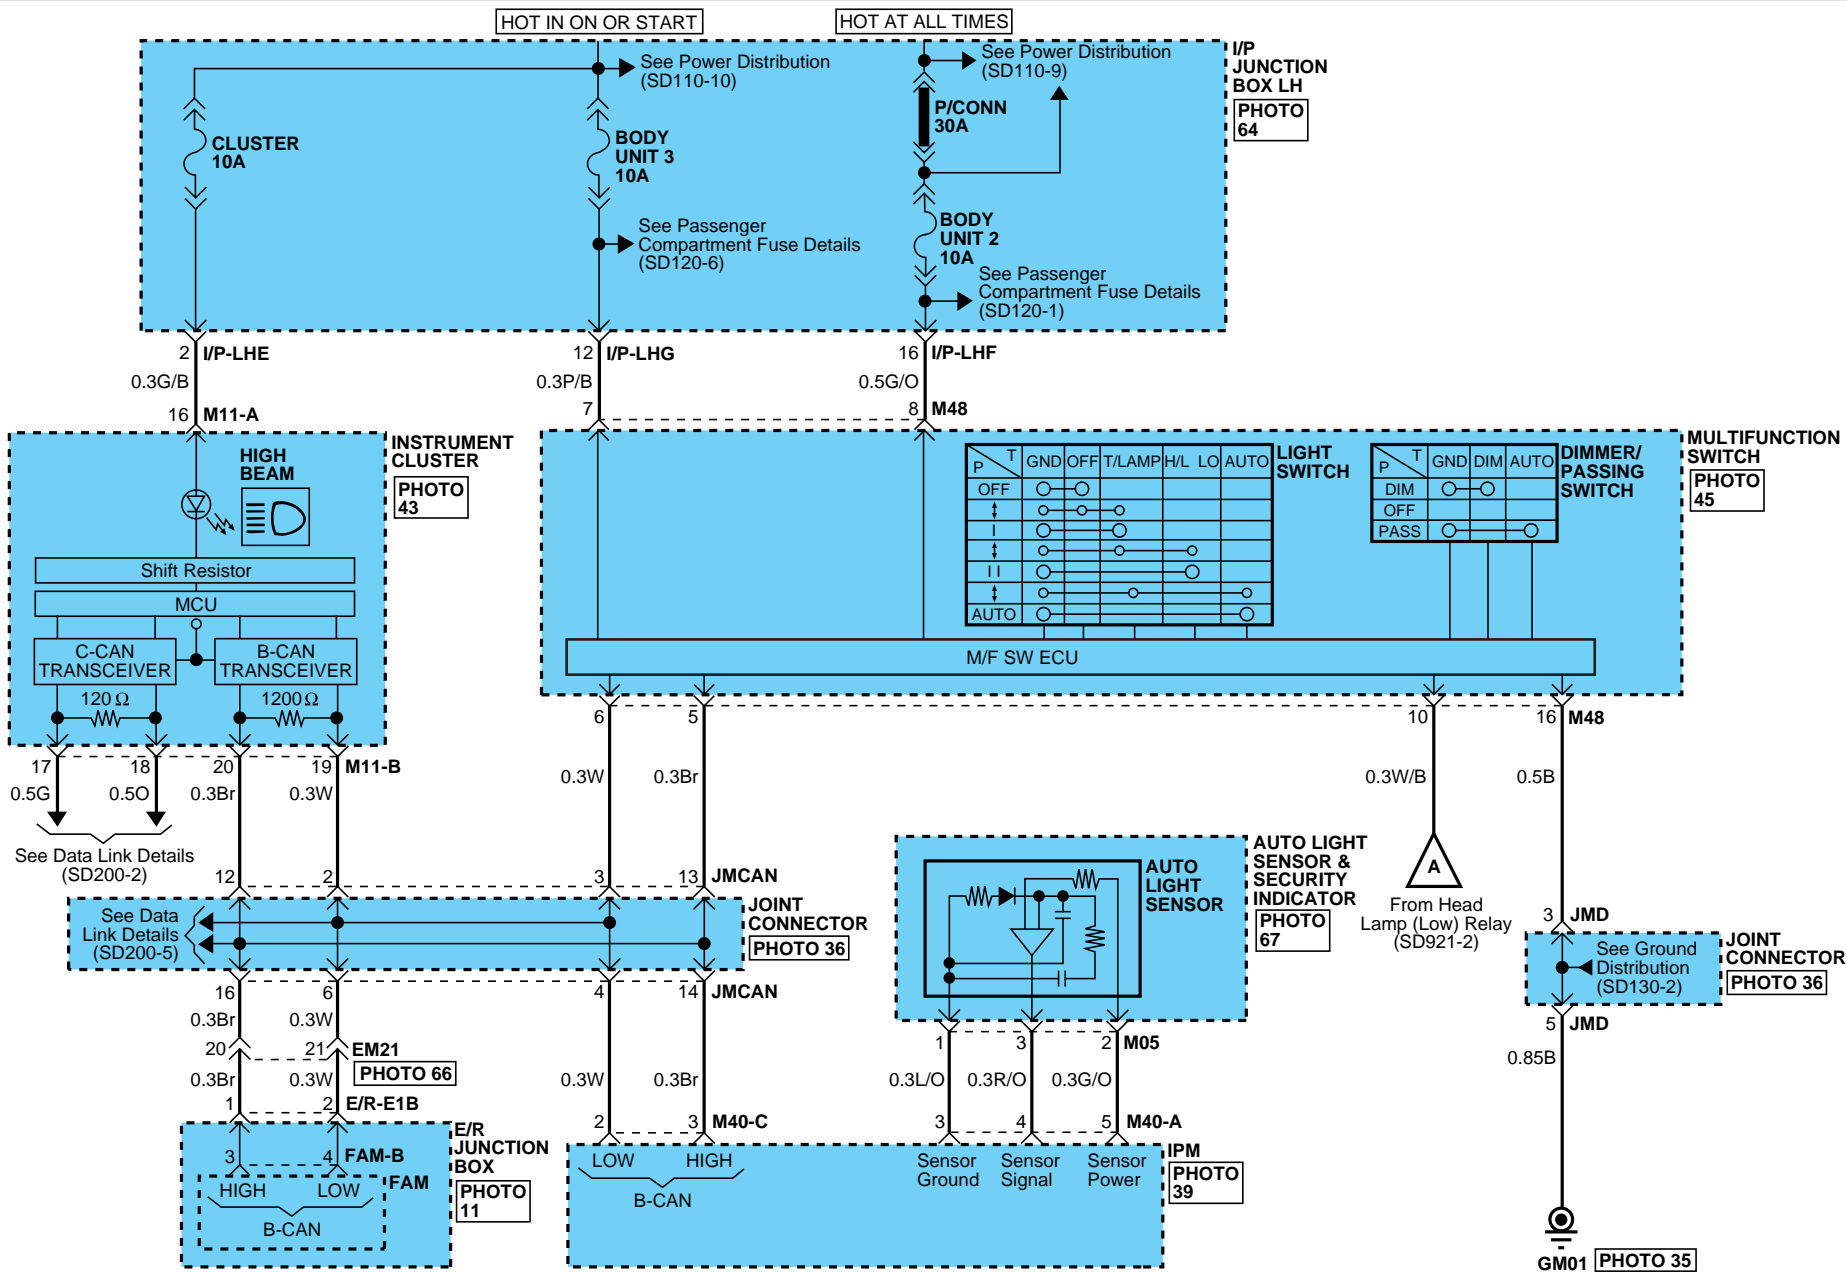

HEAD LAMPS

Head Lamps (2)

SD921-2

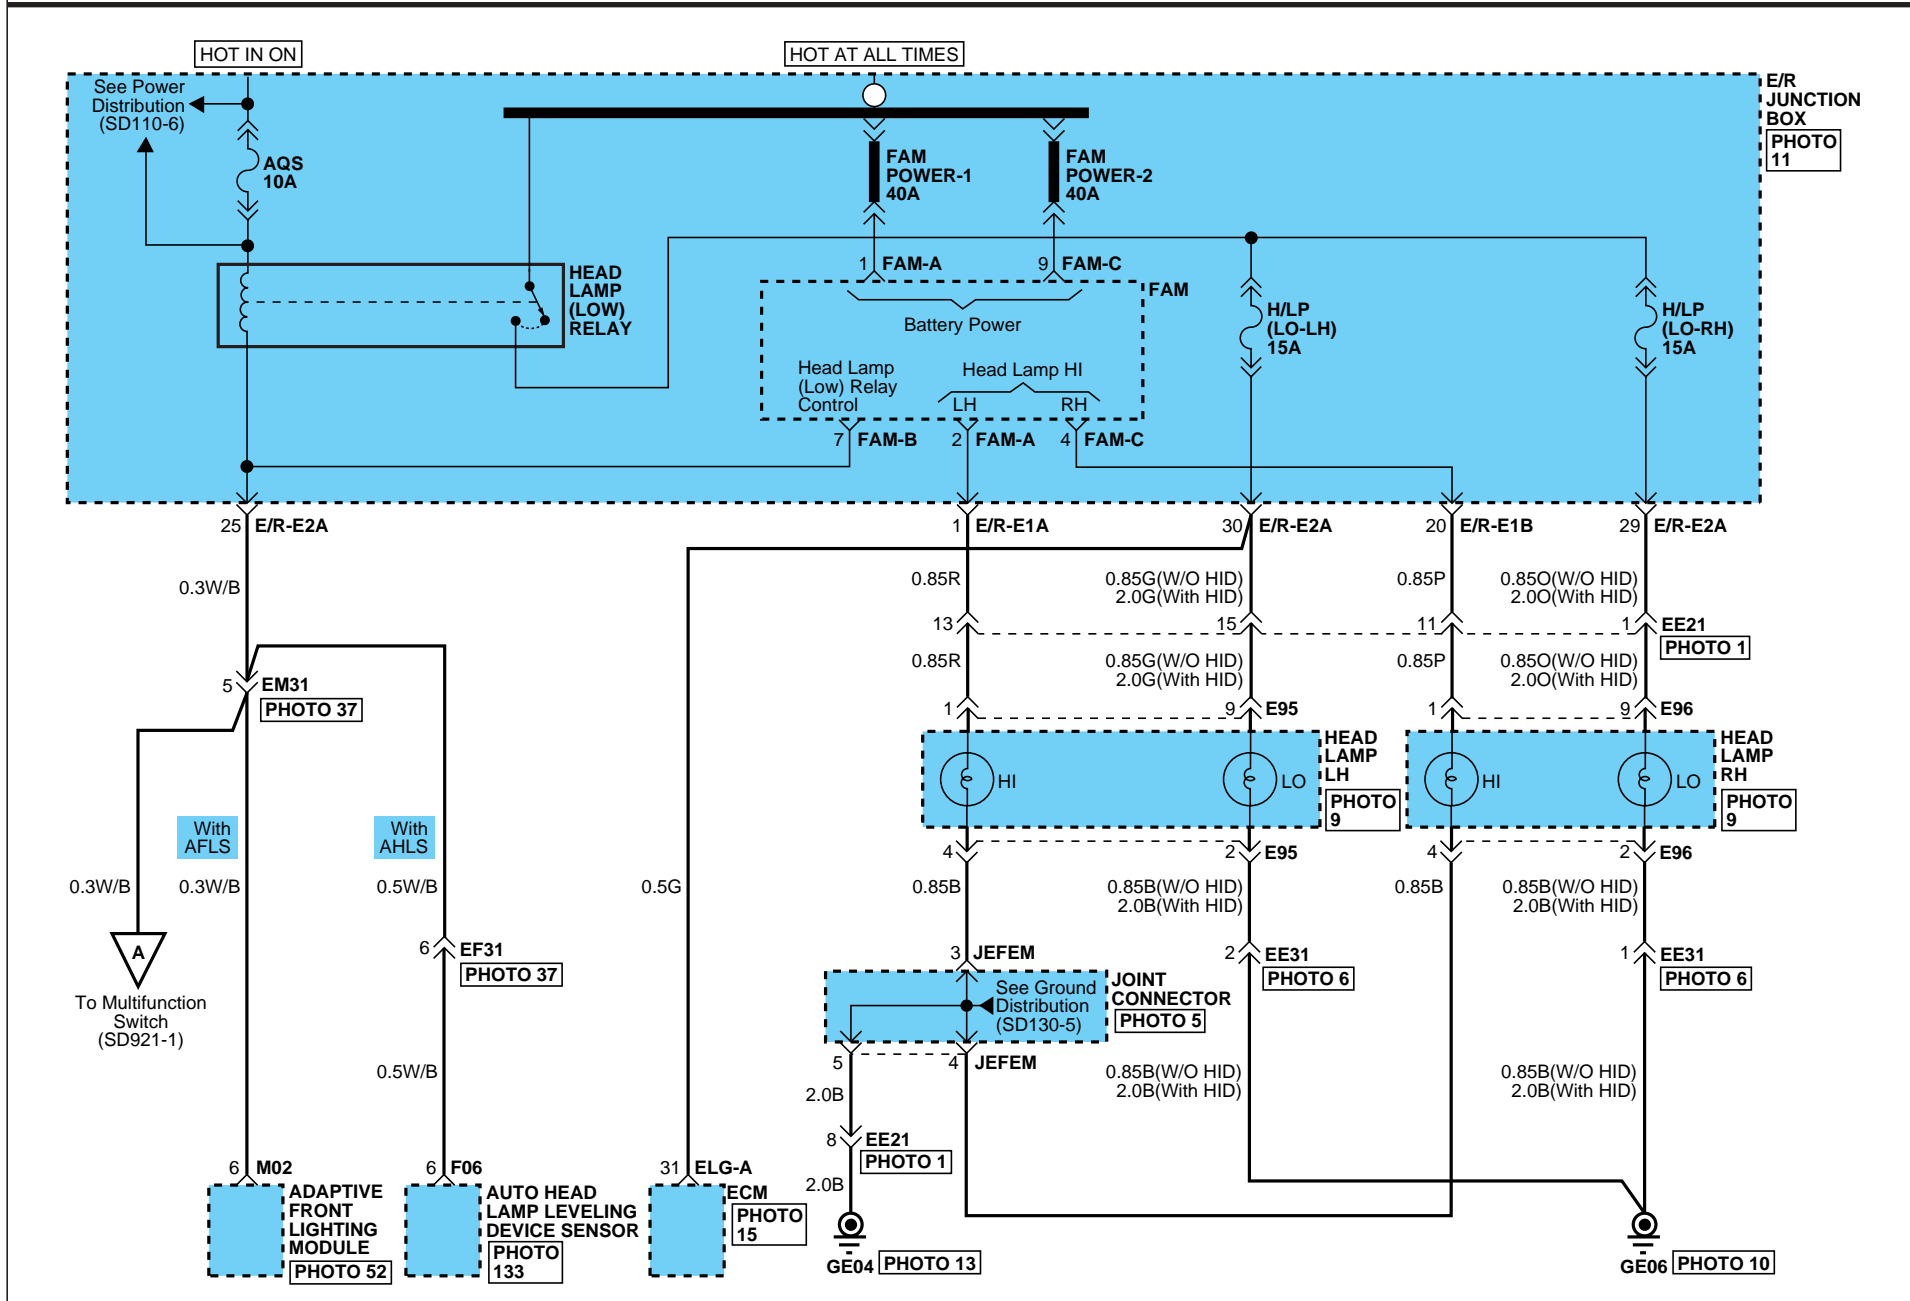


HEAD LAMPS

Head Lamps (3)

SD921-3

ELG-A

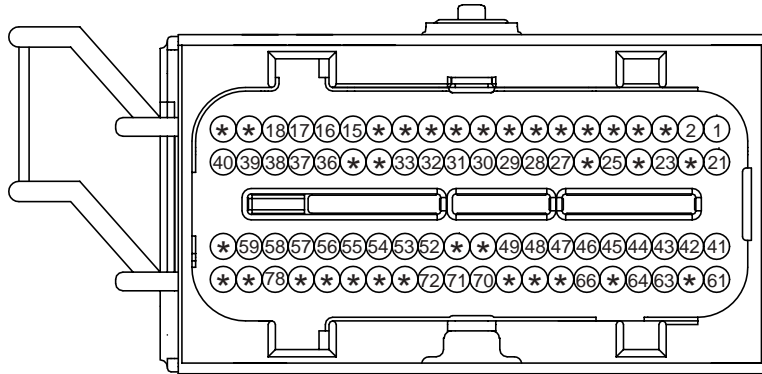

PKD_ECU_80F_Gr_1

E95




KET_090WP_10F_B

E96



KET_090WP_10F_B


F06

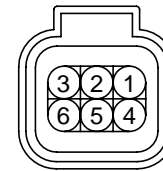


AMP_MCPE_06F_B

BLANK


FAM-A

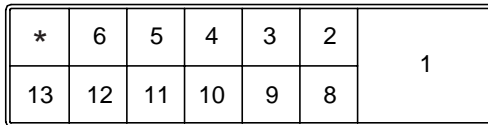


FAM-B

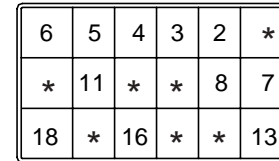

FAM-C

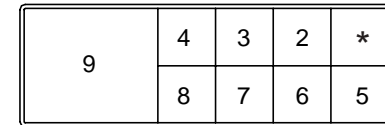


M02

 


AMP_MQS_18F_B_1

M05

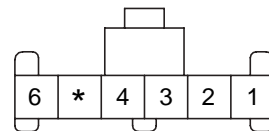


KET_91A_06F_W

M11-A

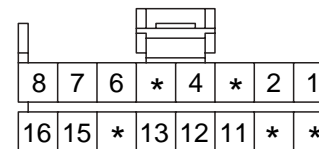


AMP_040M1_16F_B

M11-B

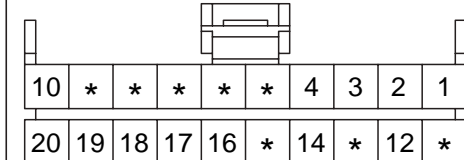


AMP_040M1_20F_B

M40-A

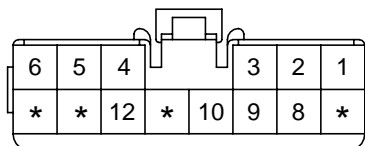


KET_090II_14F_W

M40-C

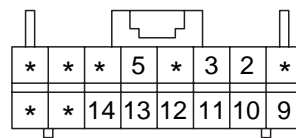

AMP_0407_16F_W_040

M48

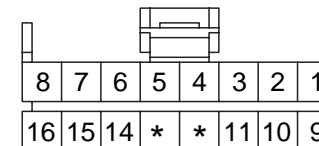

AMP_040M1_16F_B

BLANK

HEAD LAMPS

Head Lamps (4)


SD921-4

MEMO

Auto Head Lamp Leveling System (AHLS) (1)

SD922-1

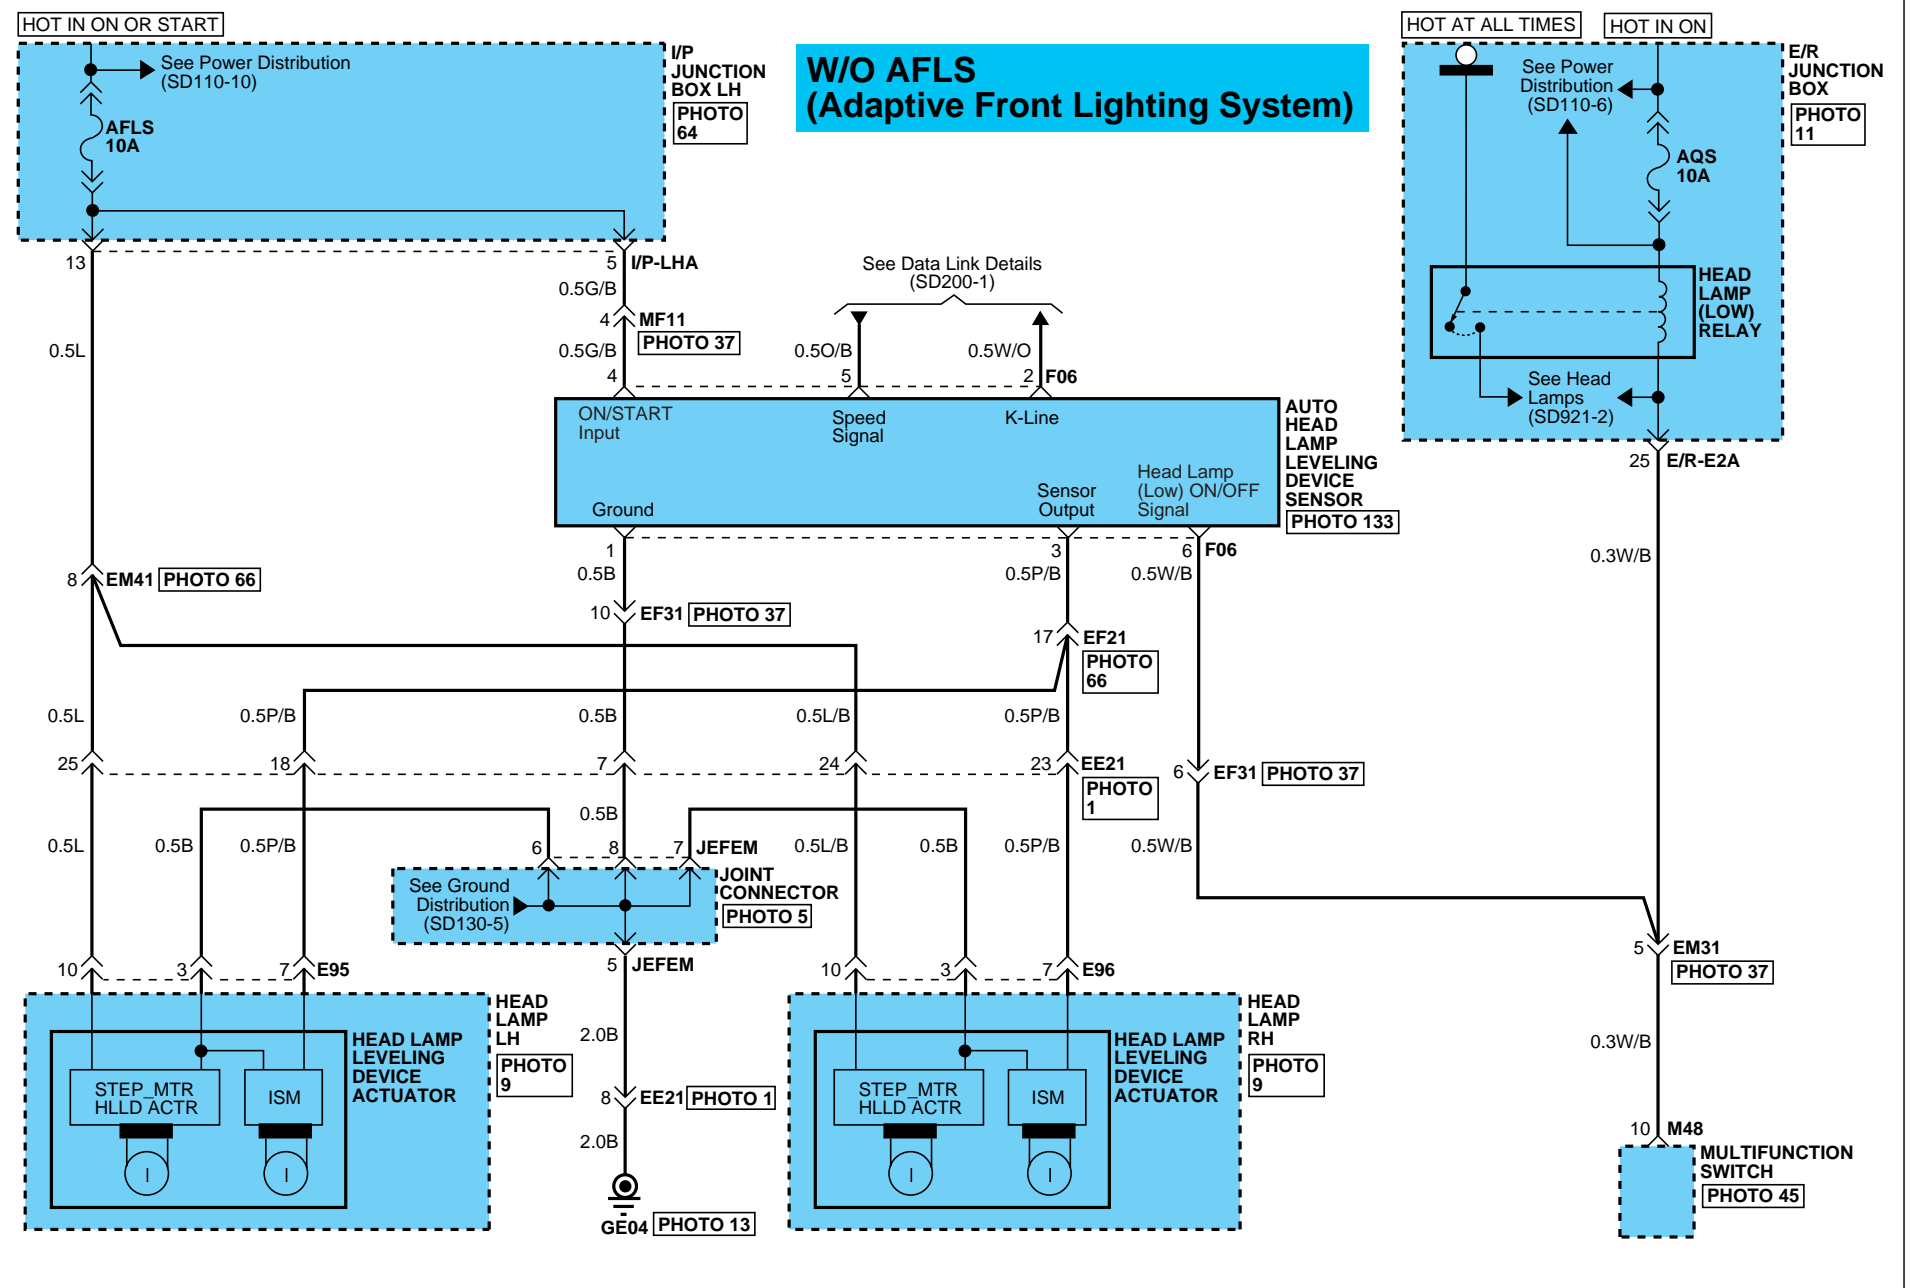




W/O AFLS
(Adaptive Front Lighting System)



AUTO HEAD LAMP LEVELING SYSTEM (AHLS)

Auto Head Lamp Leveling System (AHLS) (3)

SD922-3
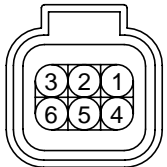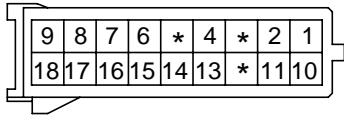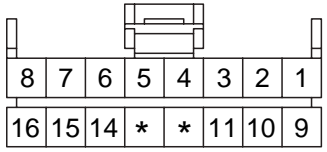
<p>E95</p>  <p>KET_090WP_10F_B</p>	<p>E96</p>  <p>KET_090WP_10F_B</p>	<p>F06</p>  <p>AMP_MCPE_06F_B</p>	<p>M02</p>  <p>AMP_MQS_18F_B_1</p>
<p>M48</p>  <p>AMP_040M1_16F_B</p>	<p>BLANK</p>	<p>BLANK</p>	<p>BLANK</p>
Empty space for additional diagrams or notes			

AUTO HEAD LAMP LEVELING SYSTEM (AHLS)


Auto Head Lamp Leveling System (AHLS) (4)

SD922-4

MEMO

Adaptive Front Lighting System (AFLS) (1)

SD922-5

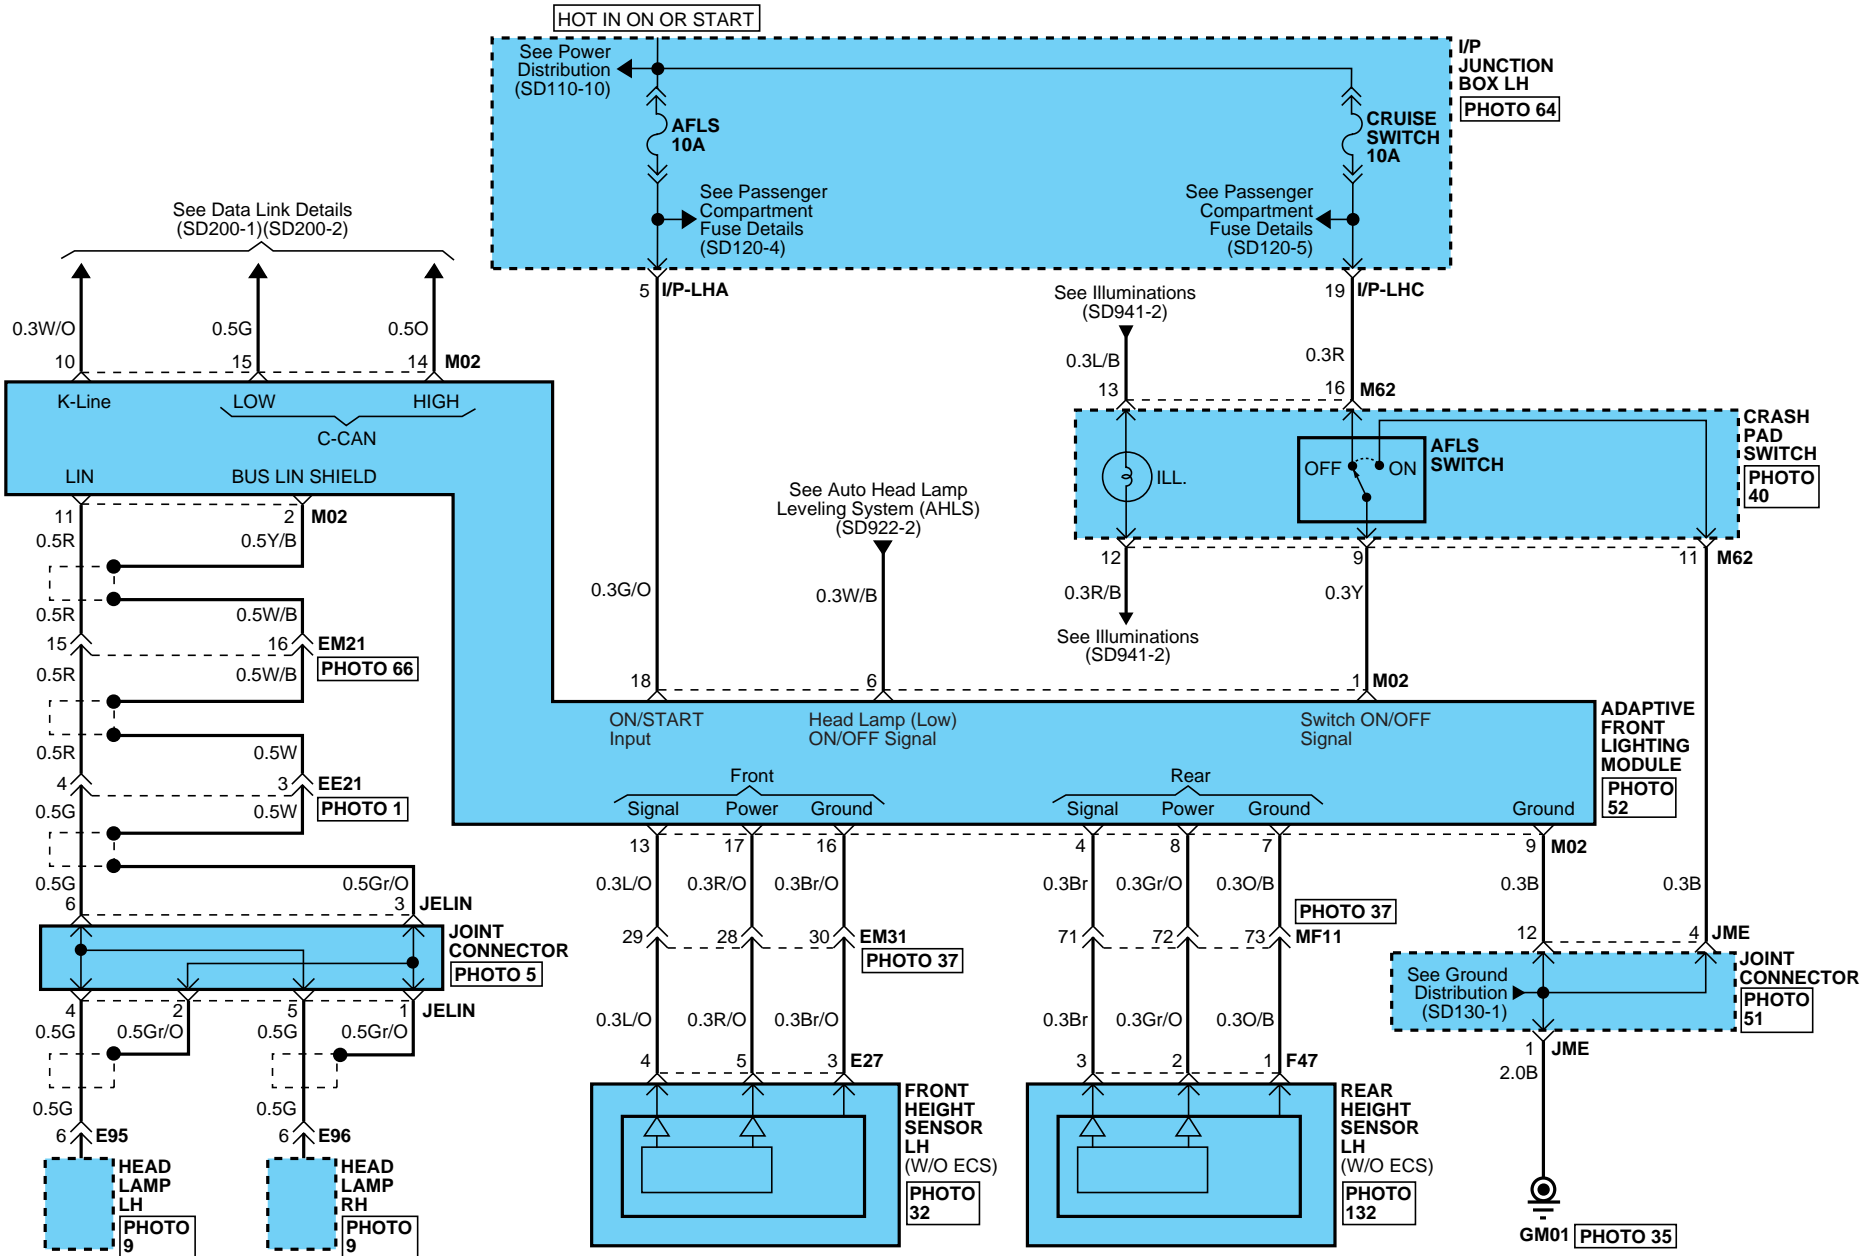


ADAPTIVE FRONT LIGHTING SYSTEM (AFLS)

Adaptive Front Lighting System (AFLS) (2)

SD922-6

E27

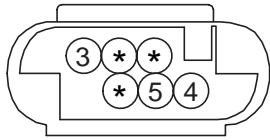

AMP_MQSWP_06F_B_1

E95




KET_090WP_10F_B

E96




KET_090WP_10F_B

F47

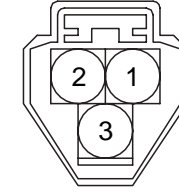


KUM_NMWP_03F_B

 M02



AMP_MQS_18F_B_1

M62

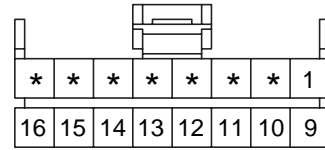


AMP_040MI_16F_B

BLANK

BLANK

Head Lamp Washer (1)

SD923-1

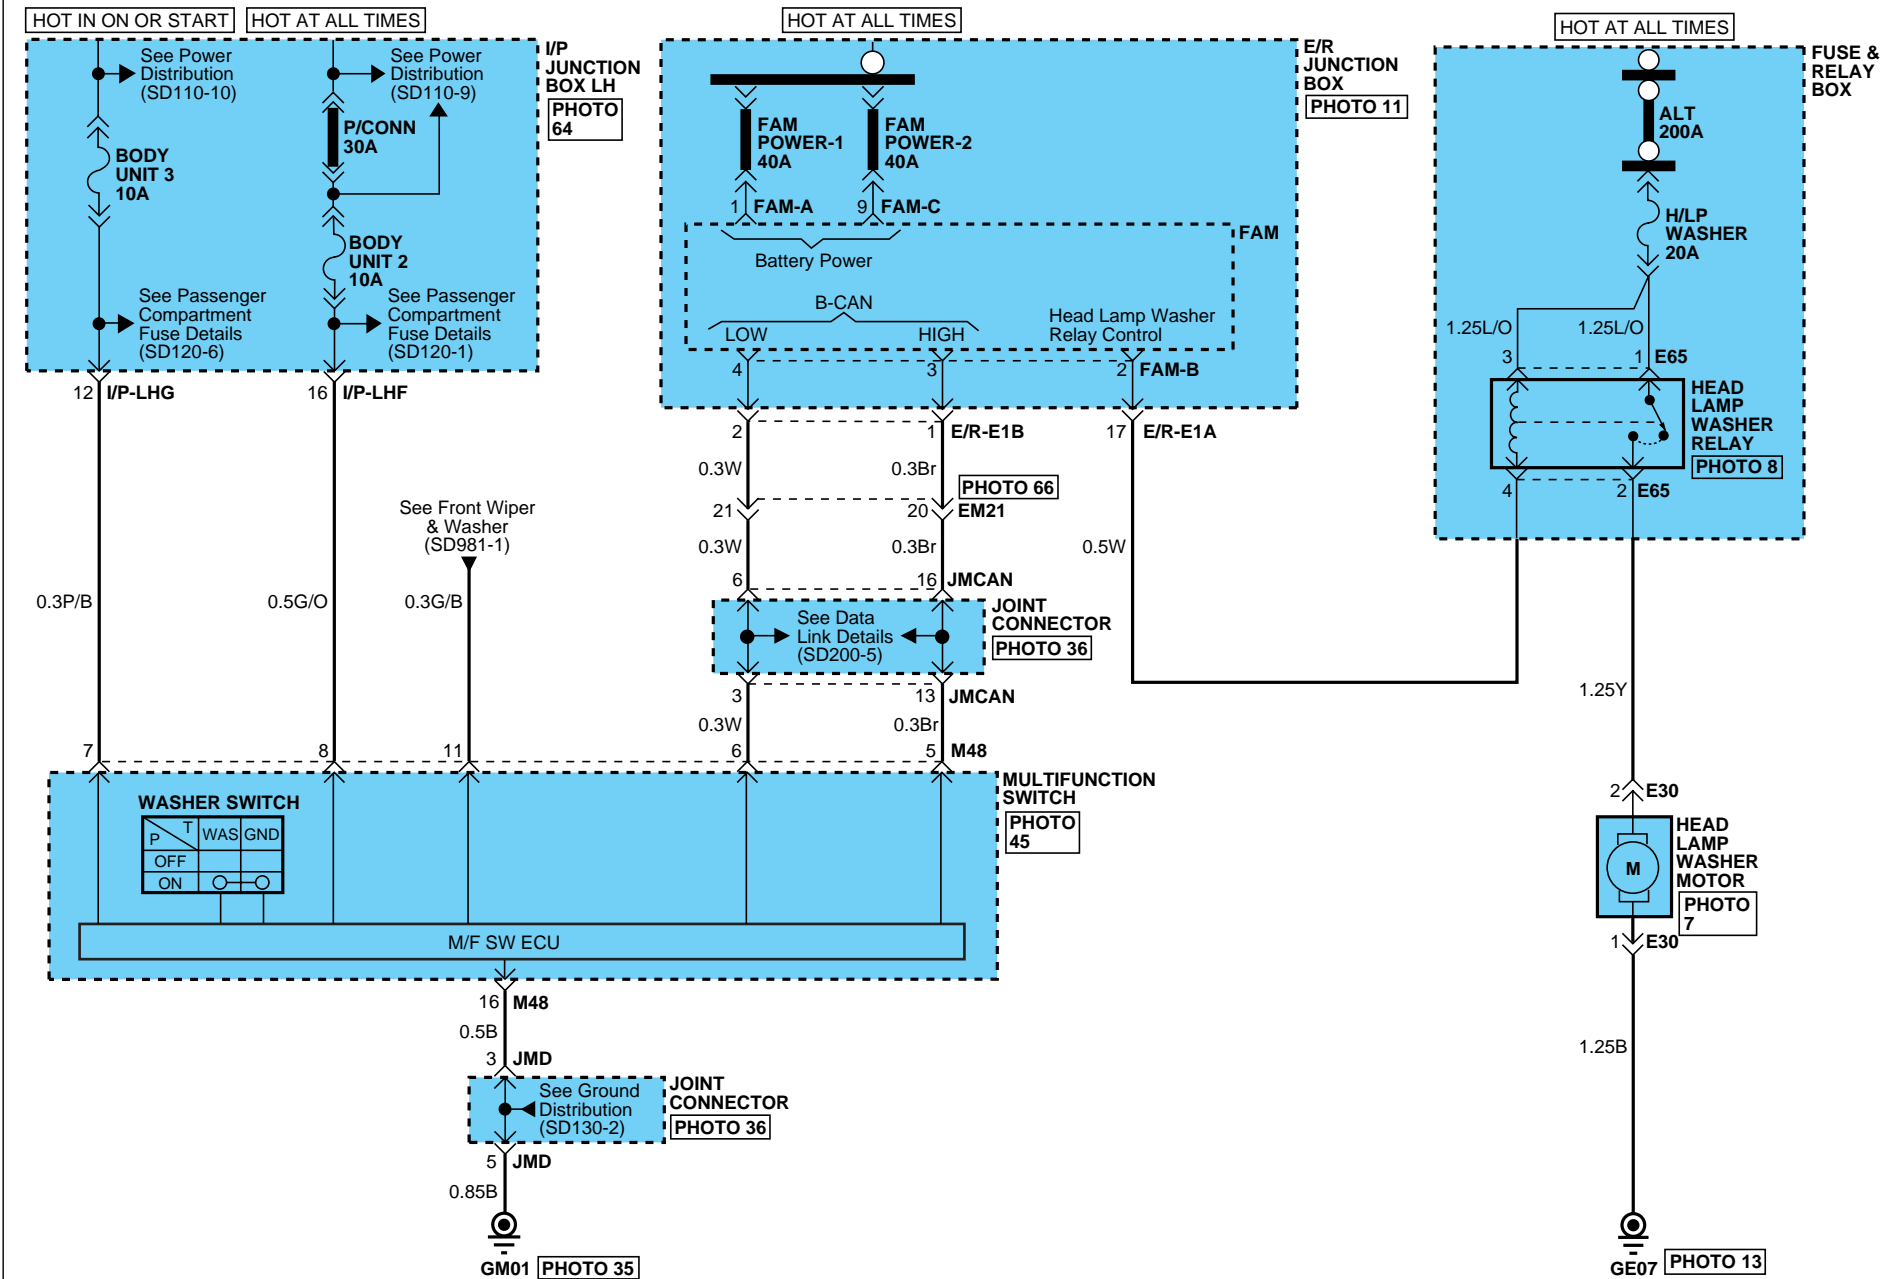


HEAD LAMP WASHER

Head Lamp Washer (2)


SD923-2

 E30




KET_110WP_02F_B


E65

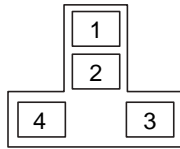

FAM-A

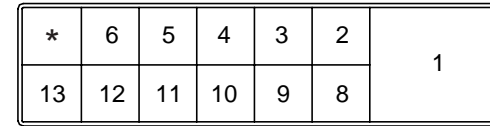


FAM-B

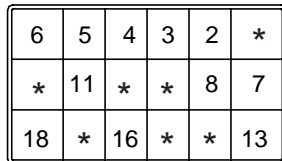

FAM-C



M48

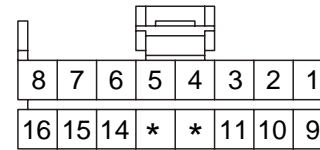

AMP_040M1_16F_B


BLANK

FRONT FOG & REAR FOG LAMPS

Front Fog & Rear Fog Lamps (2)

SD924-2

REAR FOG LAMP

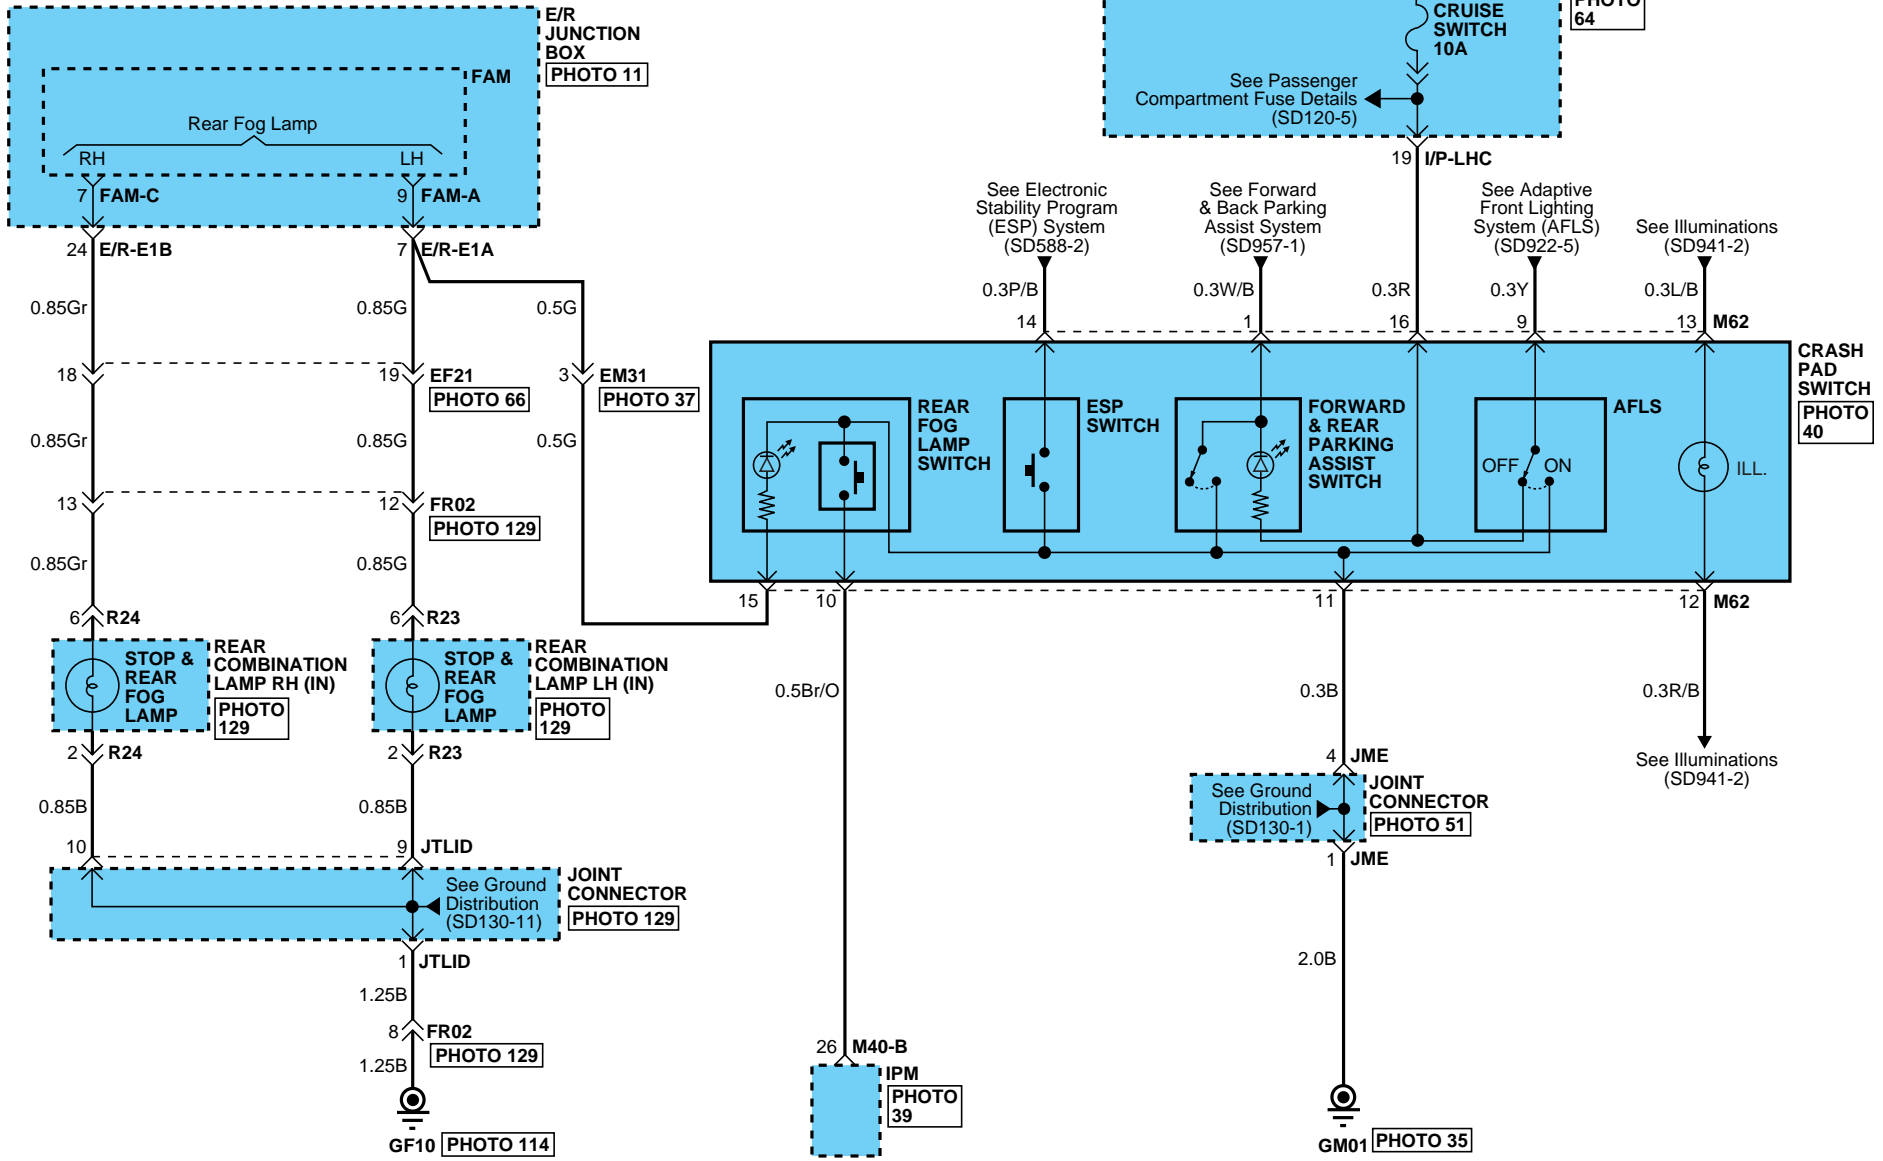

FRONT FOG & REAR FOG LAMPS

Front Fog & Rear Fog Lamps (3)

SD924-3

E19



KET_110WP_02F_B_FOG

E20



KET_110WP_02F_B_FOG

FAM-A

*	6	5	4	3	2	1
13	12	11	10	9	8	


FAM-B

6	5	4	3	2	*
*	11	*	*	8	7
18	*	16	*	*	13

FAM-C


9	4	3	2	*
	8	7	6	5

M11-B

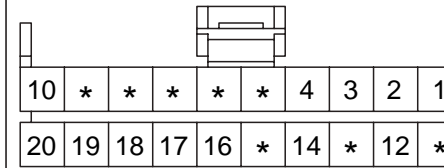


AMP_040M1_20F_B

 M40-B




AMP_0407_26F_W_HD

M48

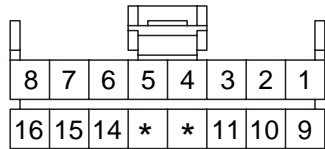


AMP_040M1_16F_B

M62

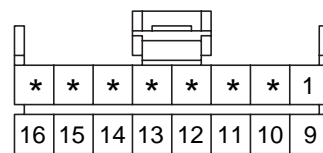


AMP_040M1_16F_B

R23

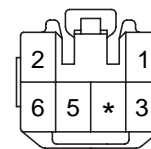

KET_090II_06F_B

R24

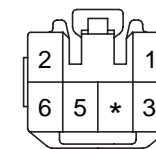

KET_090II_06F_W

FRONT FOG & REAR FOG LAMPS


Front Fog & Rear Fog Lamps (4)

SD924-4

MEMO

Turn & Hazard Lamps (1)


SD925-1

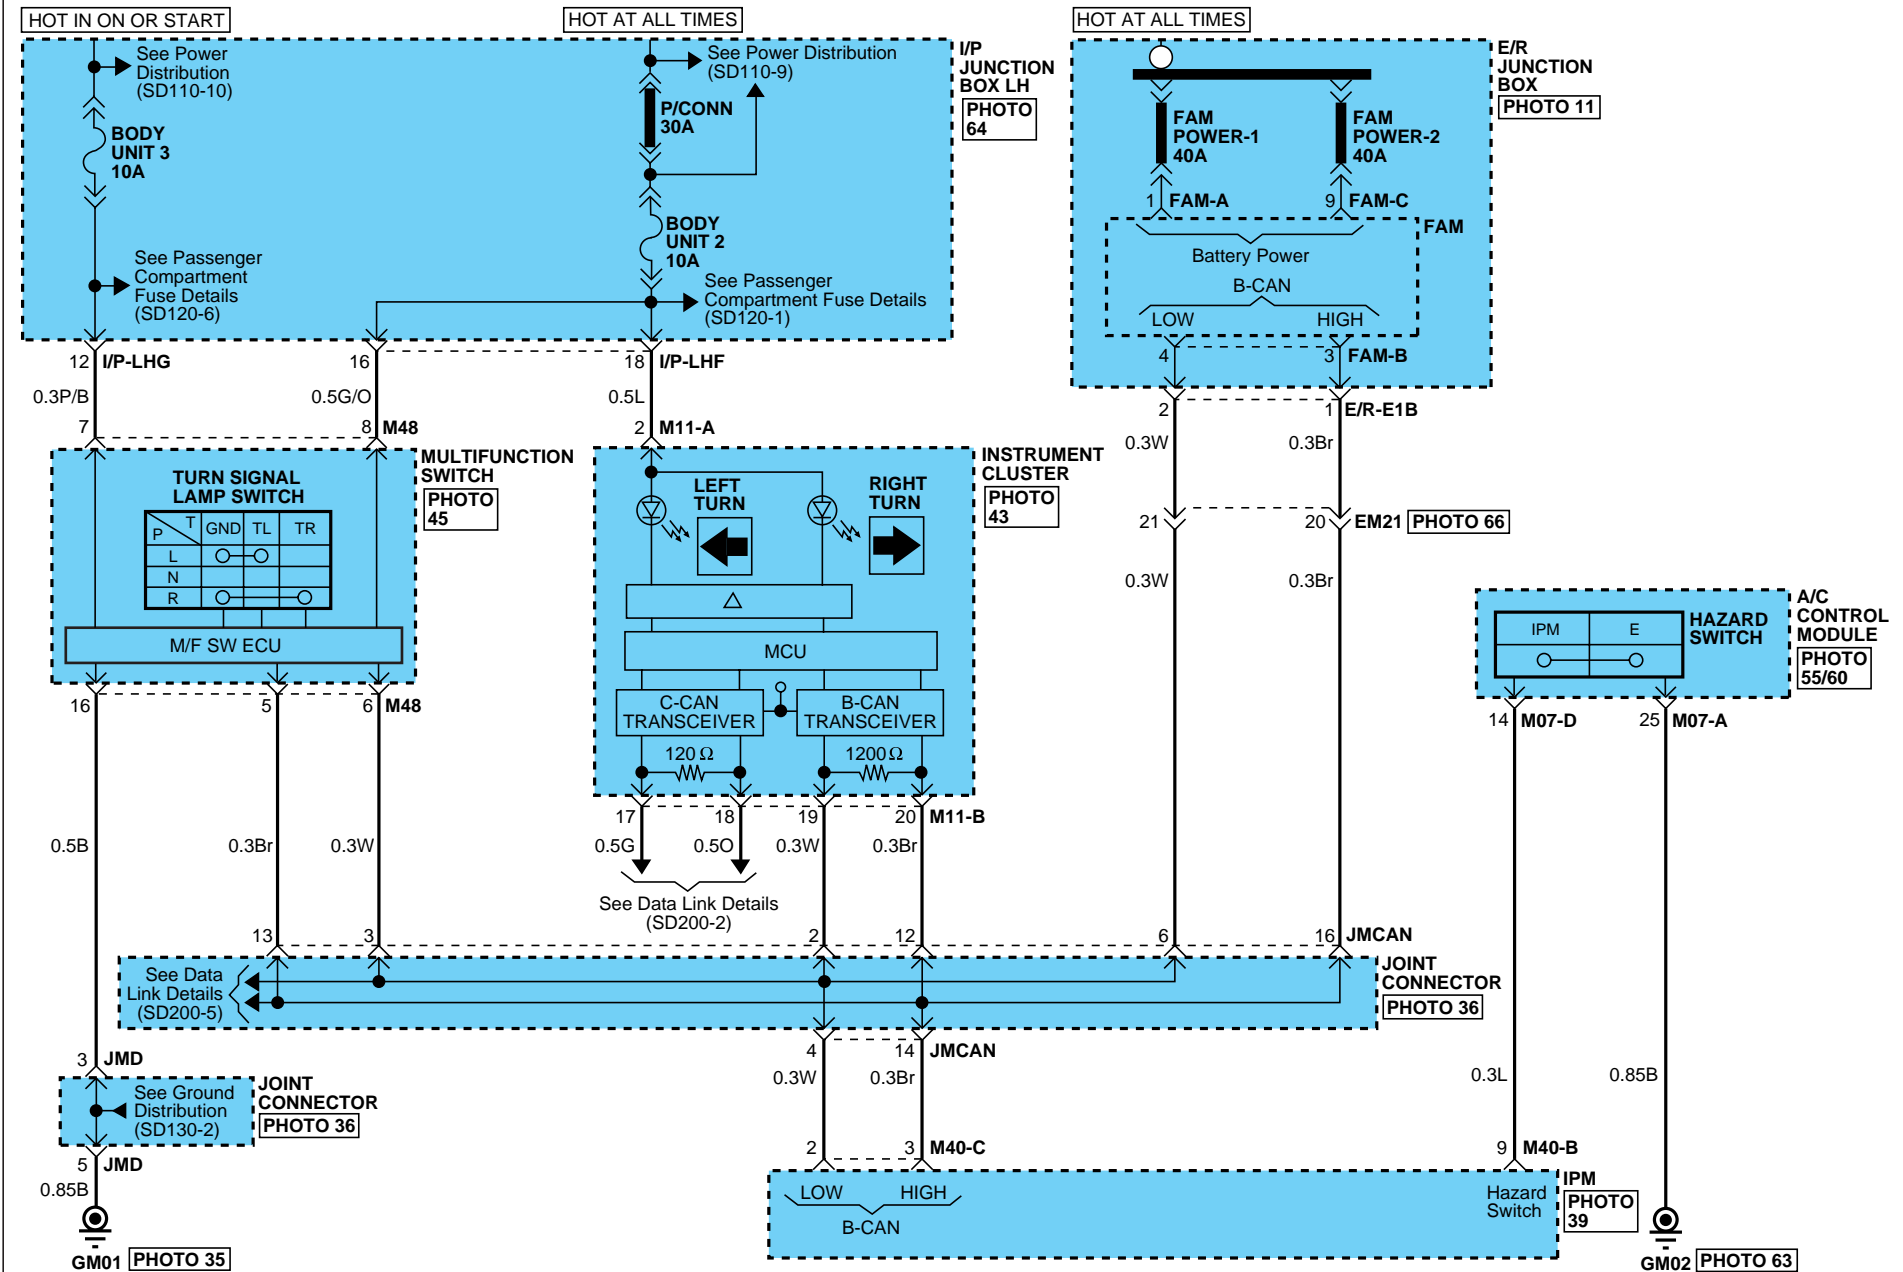

TURN & HAZARD LAMPS

Turn & Hazard Lamps (2)

SD925-2

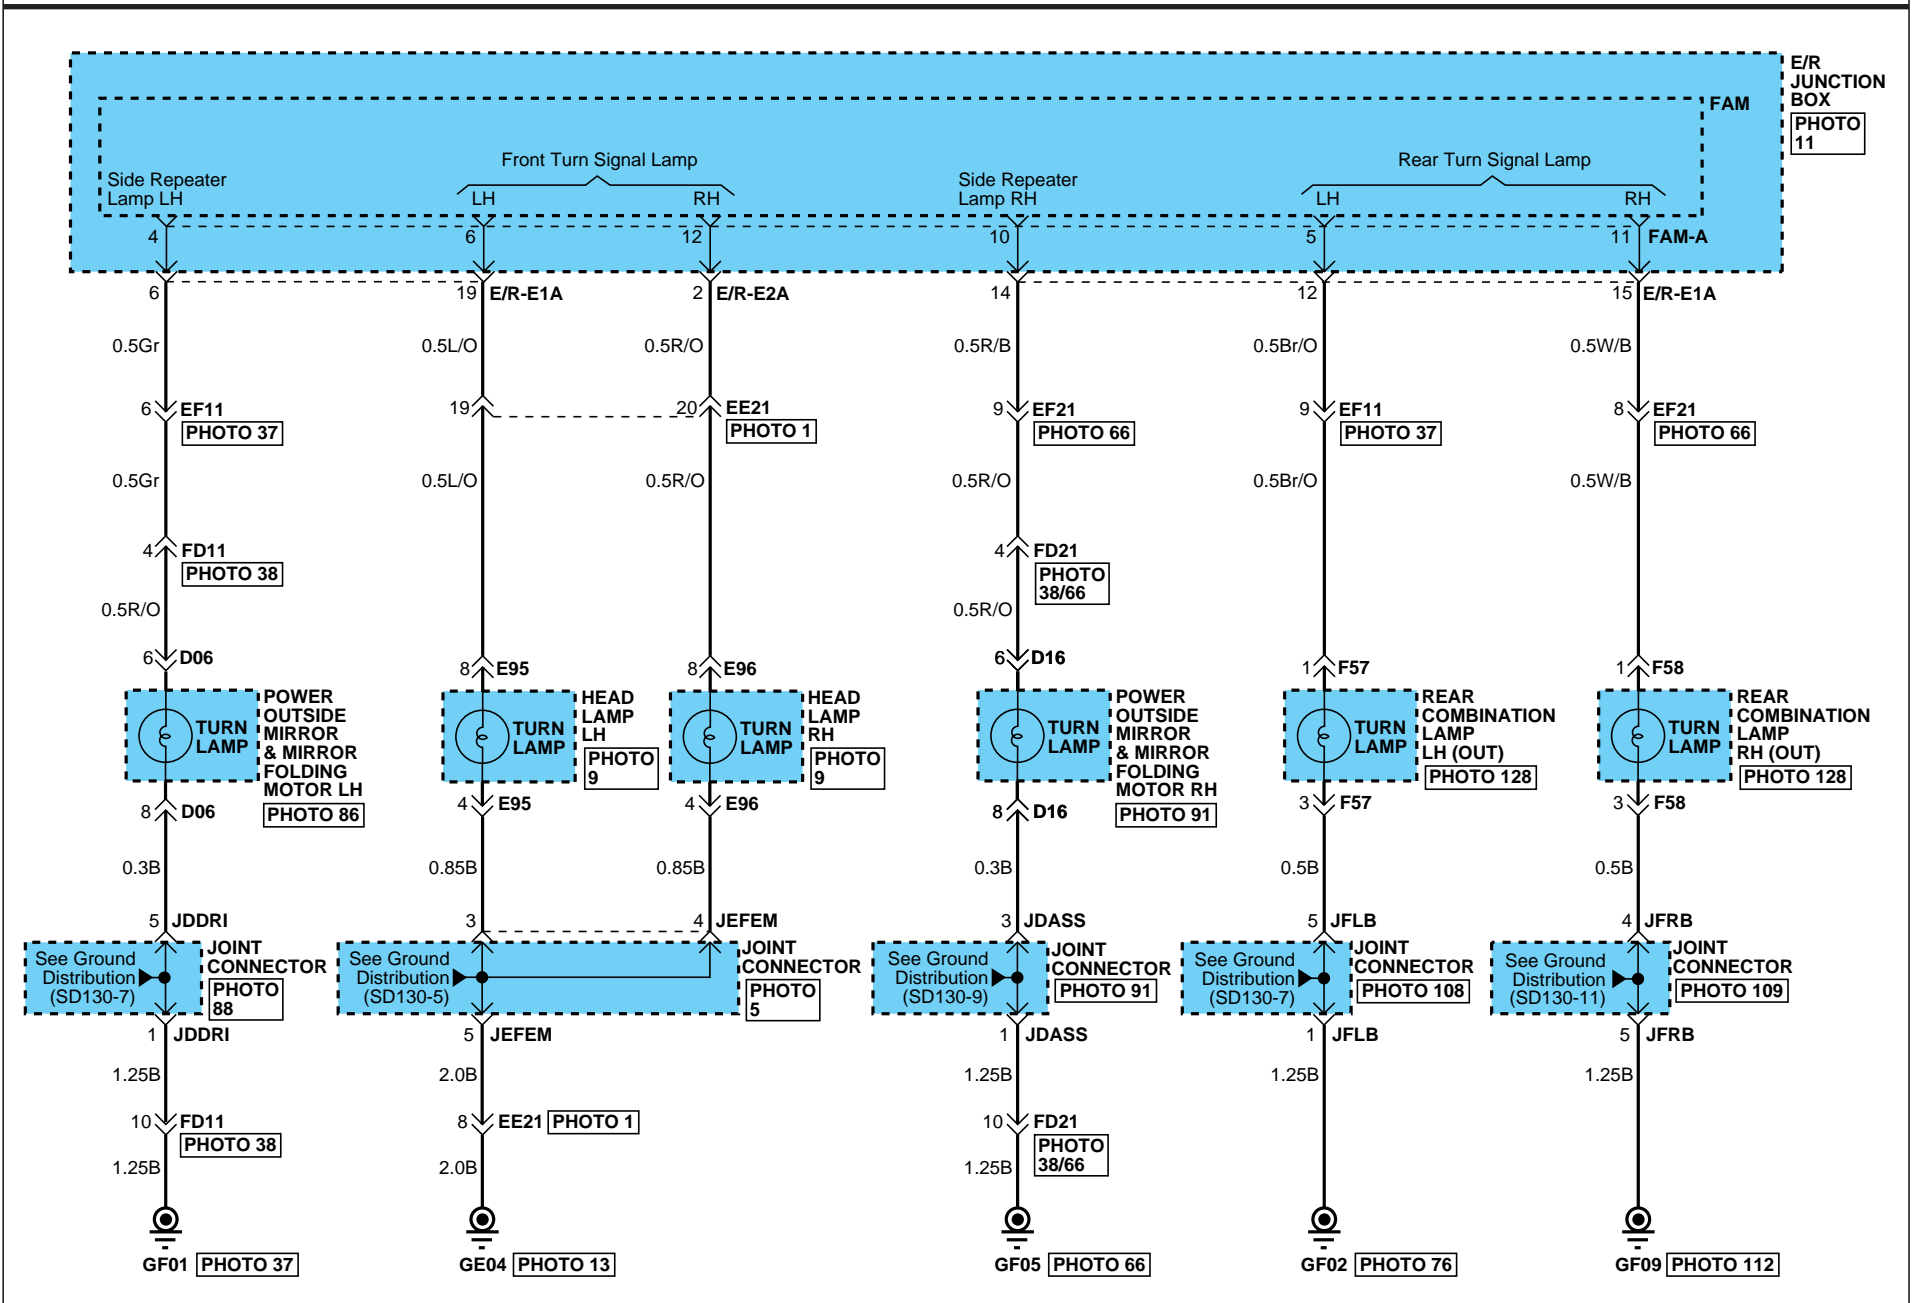


TURN & HAZARD LAMPS

Turn & Hazard Lamps (3)


SD925-3

D06

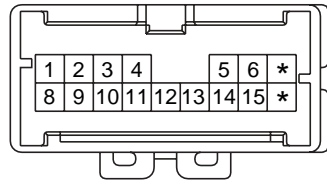

AMP_040III_16M_W

D16

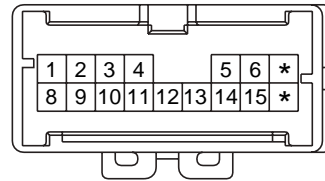

AMP_040III_16M_W

E95




KET_090WP_10F_B

E96




KET_090WP_10F_B


FAM-A

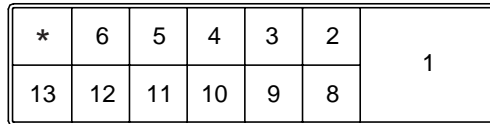


FAM-B

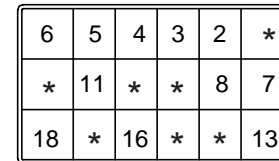

FAM-C

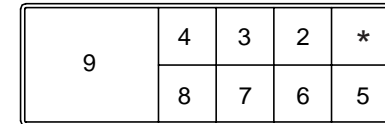


F57

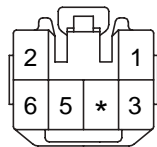


KET_090II_06F_B

F58

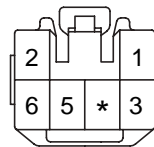


KET_090II_06F_B

M07-A

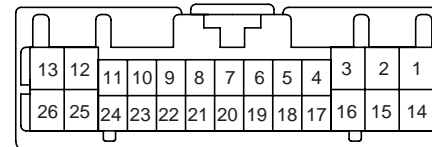


KET_0407_26F_W

 M07-D




AMP_MQS_18F_B_3

M11-A

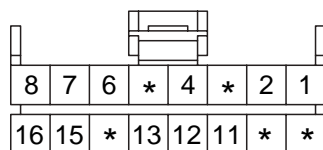


AMP_040M1_16F_B

M11-B

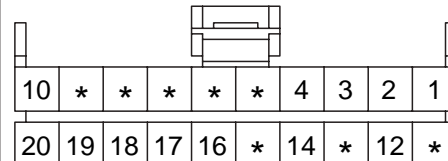


AMP_040M1_20F_B

 M40-B




AMP_0407_26F_W_HD

M40-C

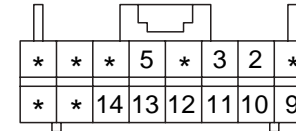

AMP_0407_16F_W_040

M48

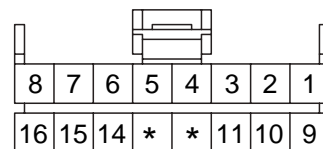

AMP_040M1_16F_B

BLANK

BLANK

BLANK

TURN & HAZARD LAMPS


Turn & Hazard Lamps (4)

SD925-4

MEMO

Back-Up Lamps (1)

SD926-1

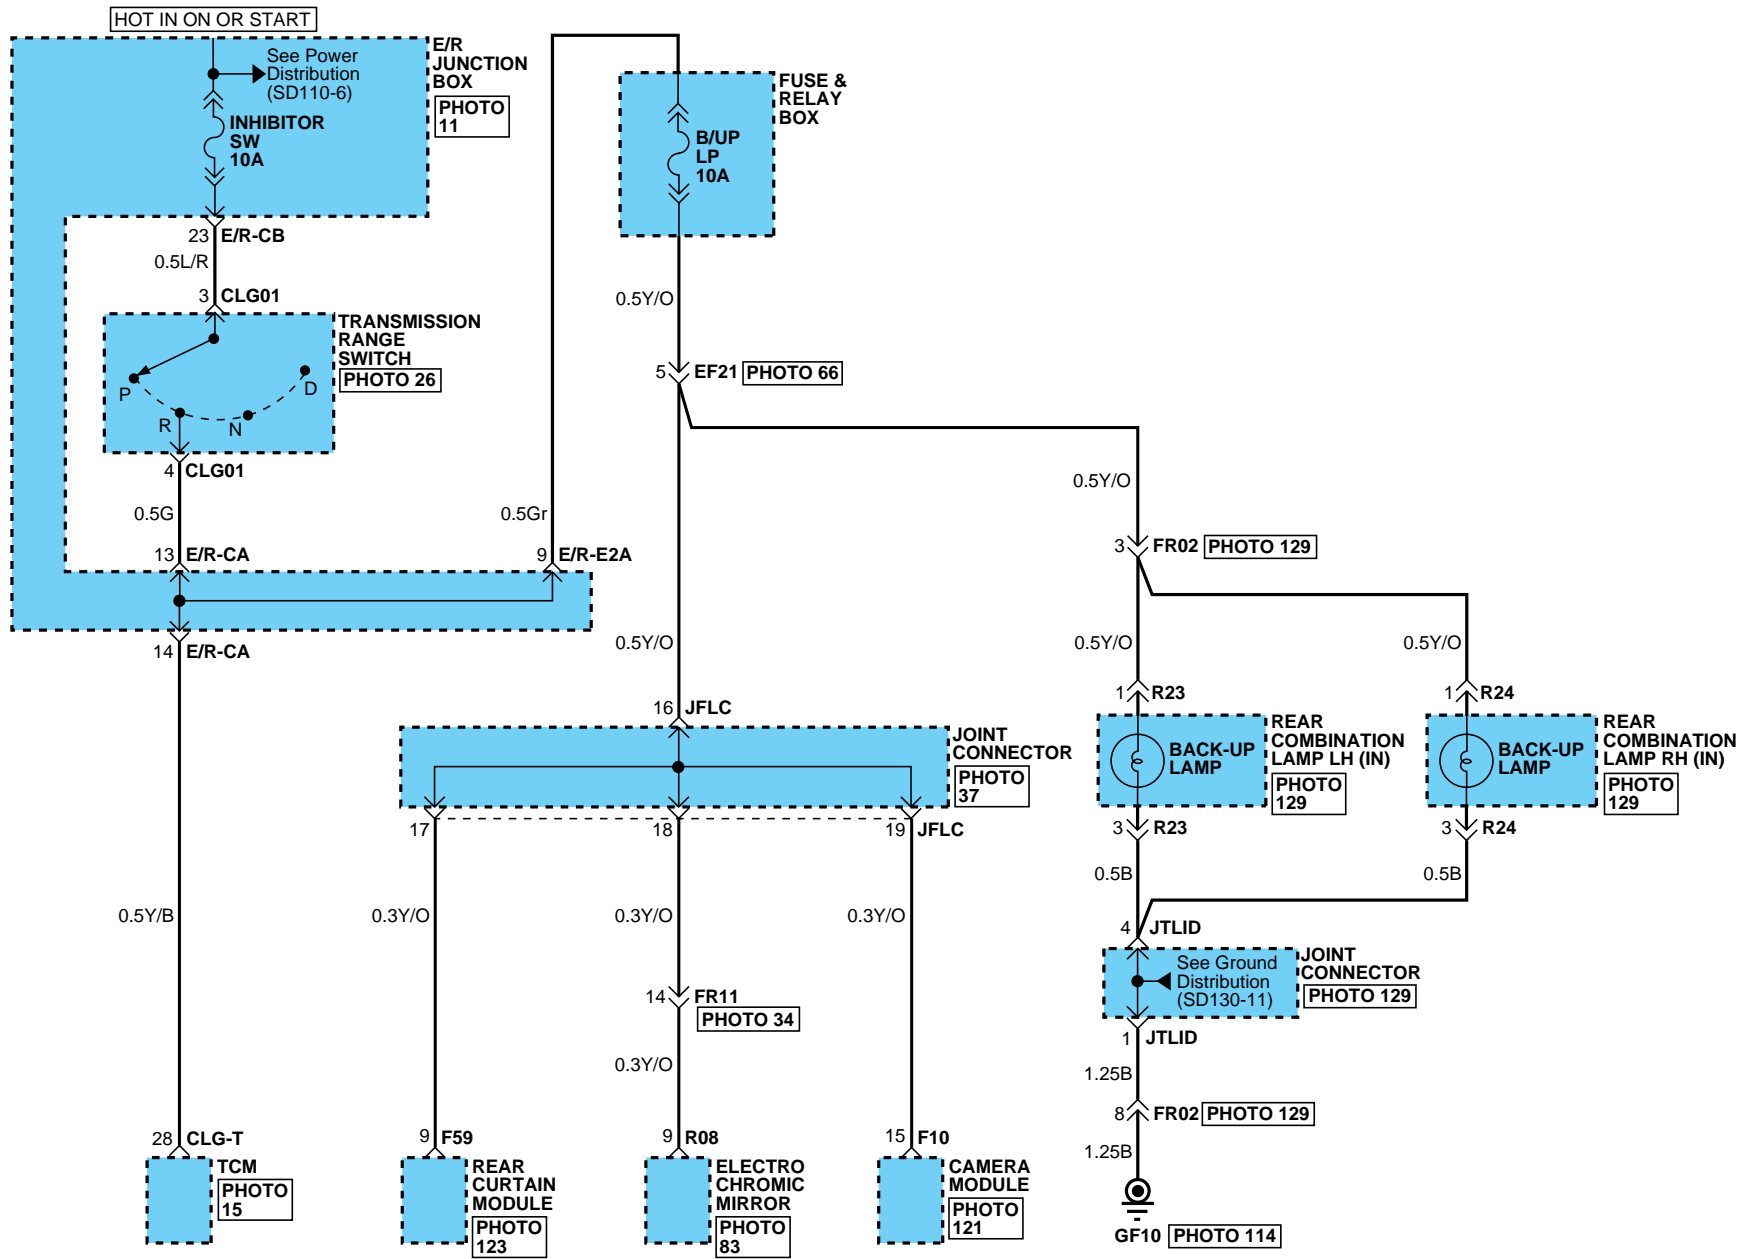


BACK-UP LAMPS

Back-Up Lamps (2)


SD926-2

CLG-T

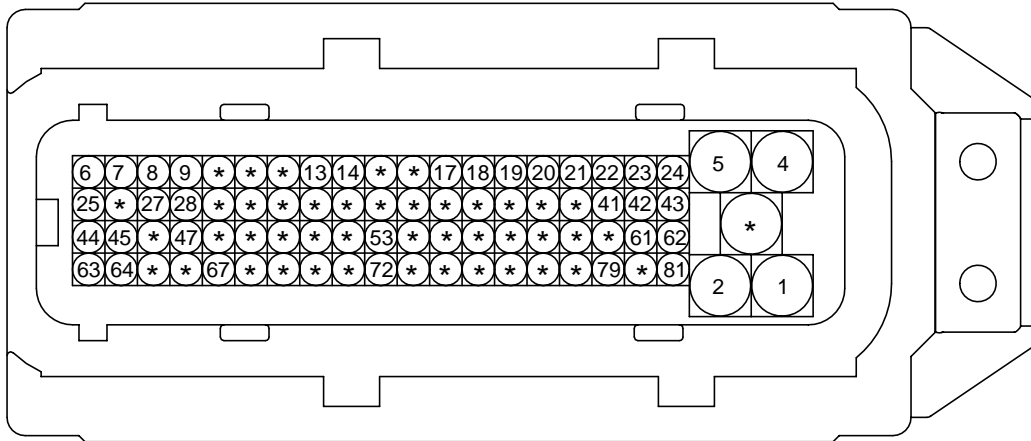


AMP_MQJWP_81F_B_1

CLG01

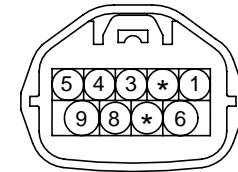


YAZ_0918WP_09F_GR

 F10




AMP_040II_24F_B

 F59




AMP_070_14F_W

R08

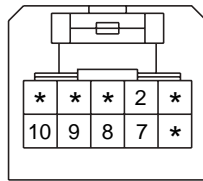


SUM_025_10F_B

R23

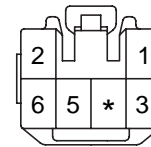


KET_090II_06F_B

R24

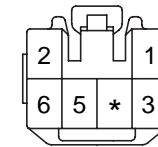

KET_090II_06F_W


Stop Lamps (1)

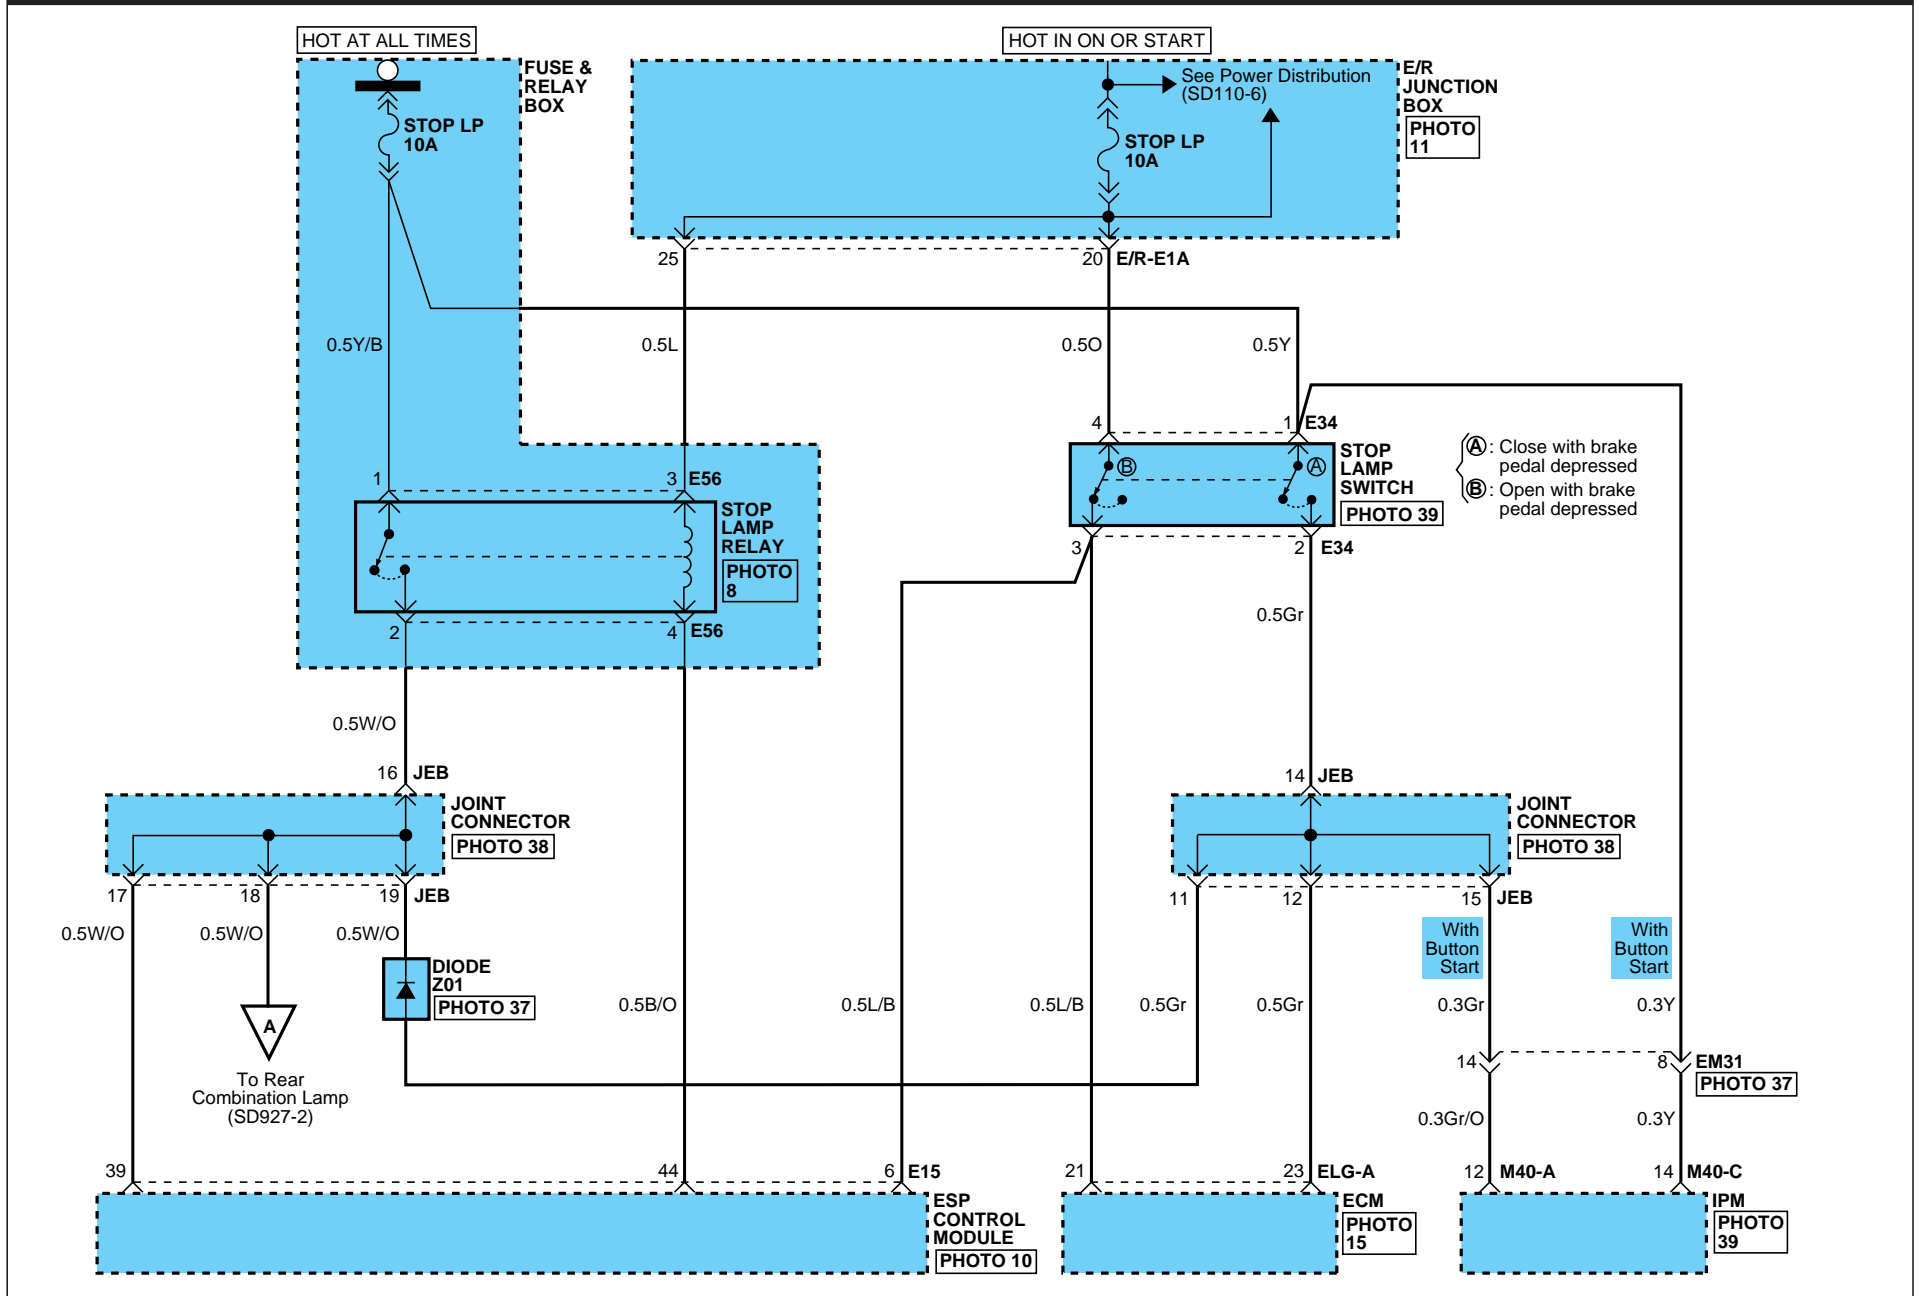

STOP LAMPS

Stop Lamps (2)

SD927-2

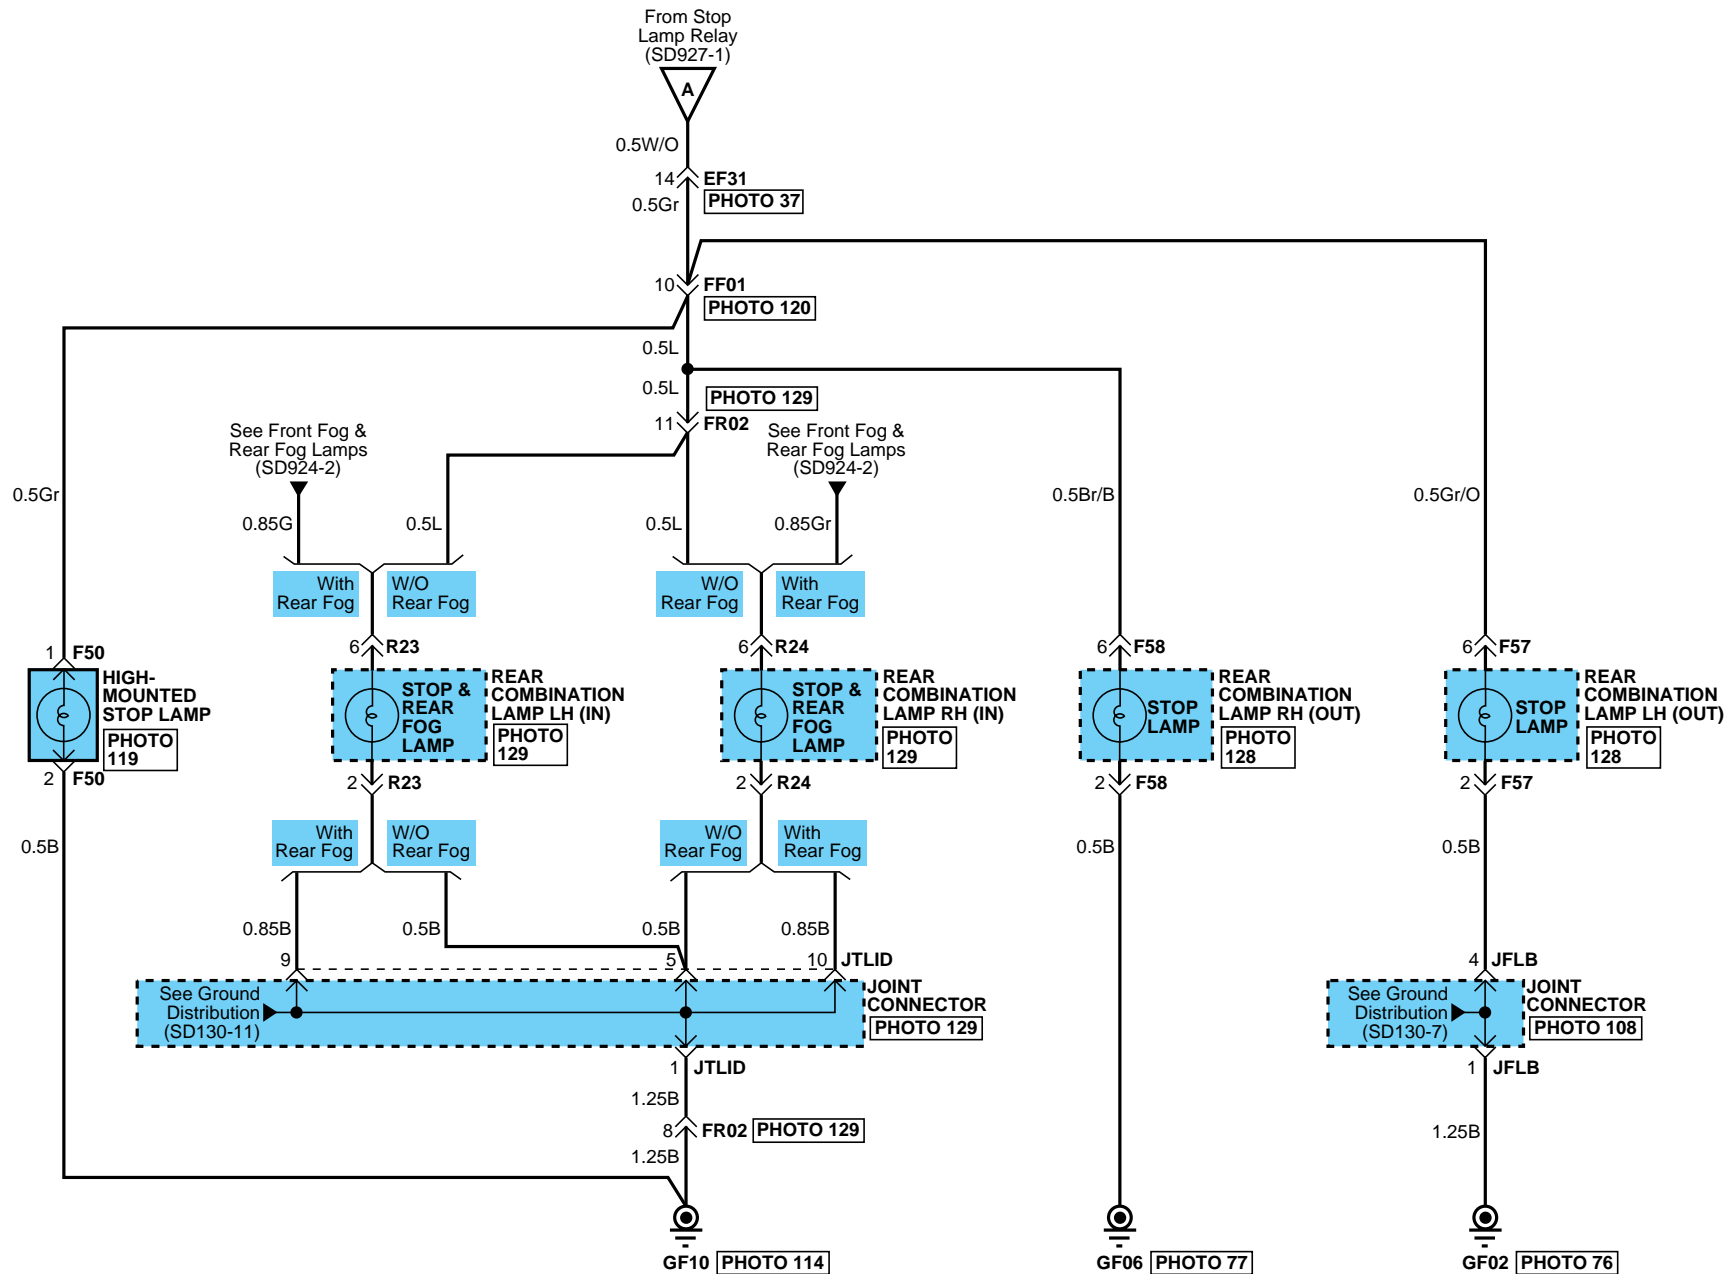


STOP LAMPS

Stop Lamps (3)


SD927-3

ELG-A

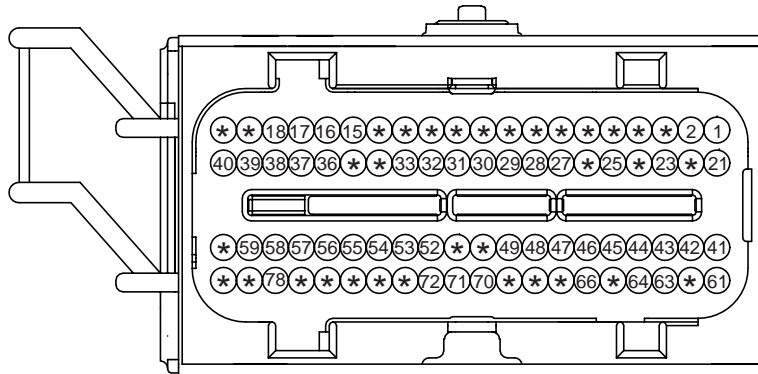


PKD_ECU_80F_Gr_1

E15

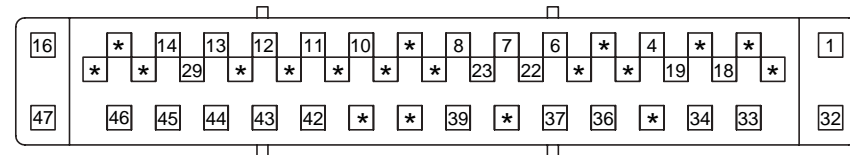


AMP_ESP_47F_L_UNIT

E34

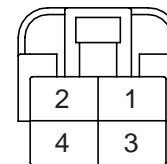


KET_250DL_04F_W

E56

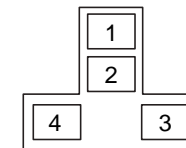


F50

 


KUM_CDR_02F_W

F57

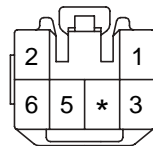


KET_090II_06F_B

F58

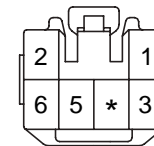


KET_090II_06F_B

M40-A

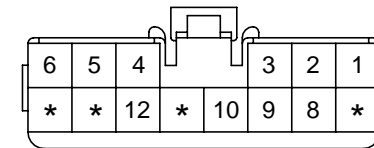


KET_090II_14F_W

M40-C

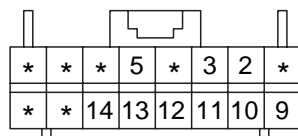


AMP_0407_16F_W_040

R23

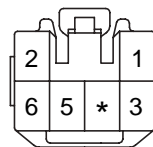

KET_090II_06F_B

R24

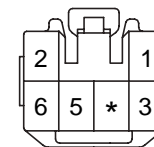

KET_090II_06F_W

BLANK

STOP LAMPS


Stop Lamps (4)

SD927-4

MEMO

Tail, Parking & License Lamps (1)


SD928-1

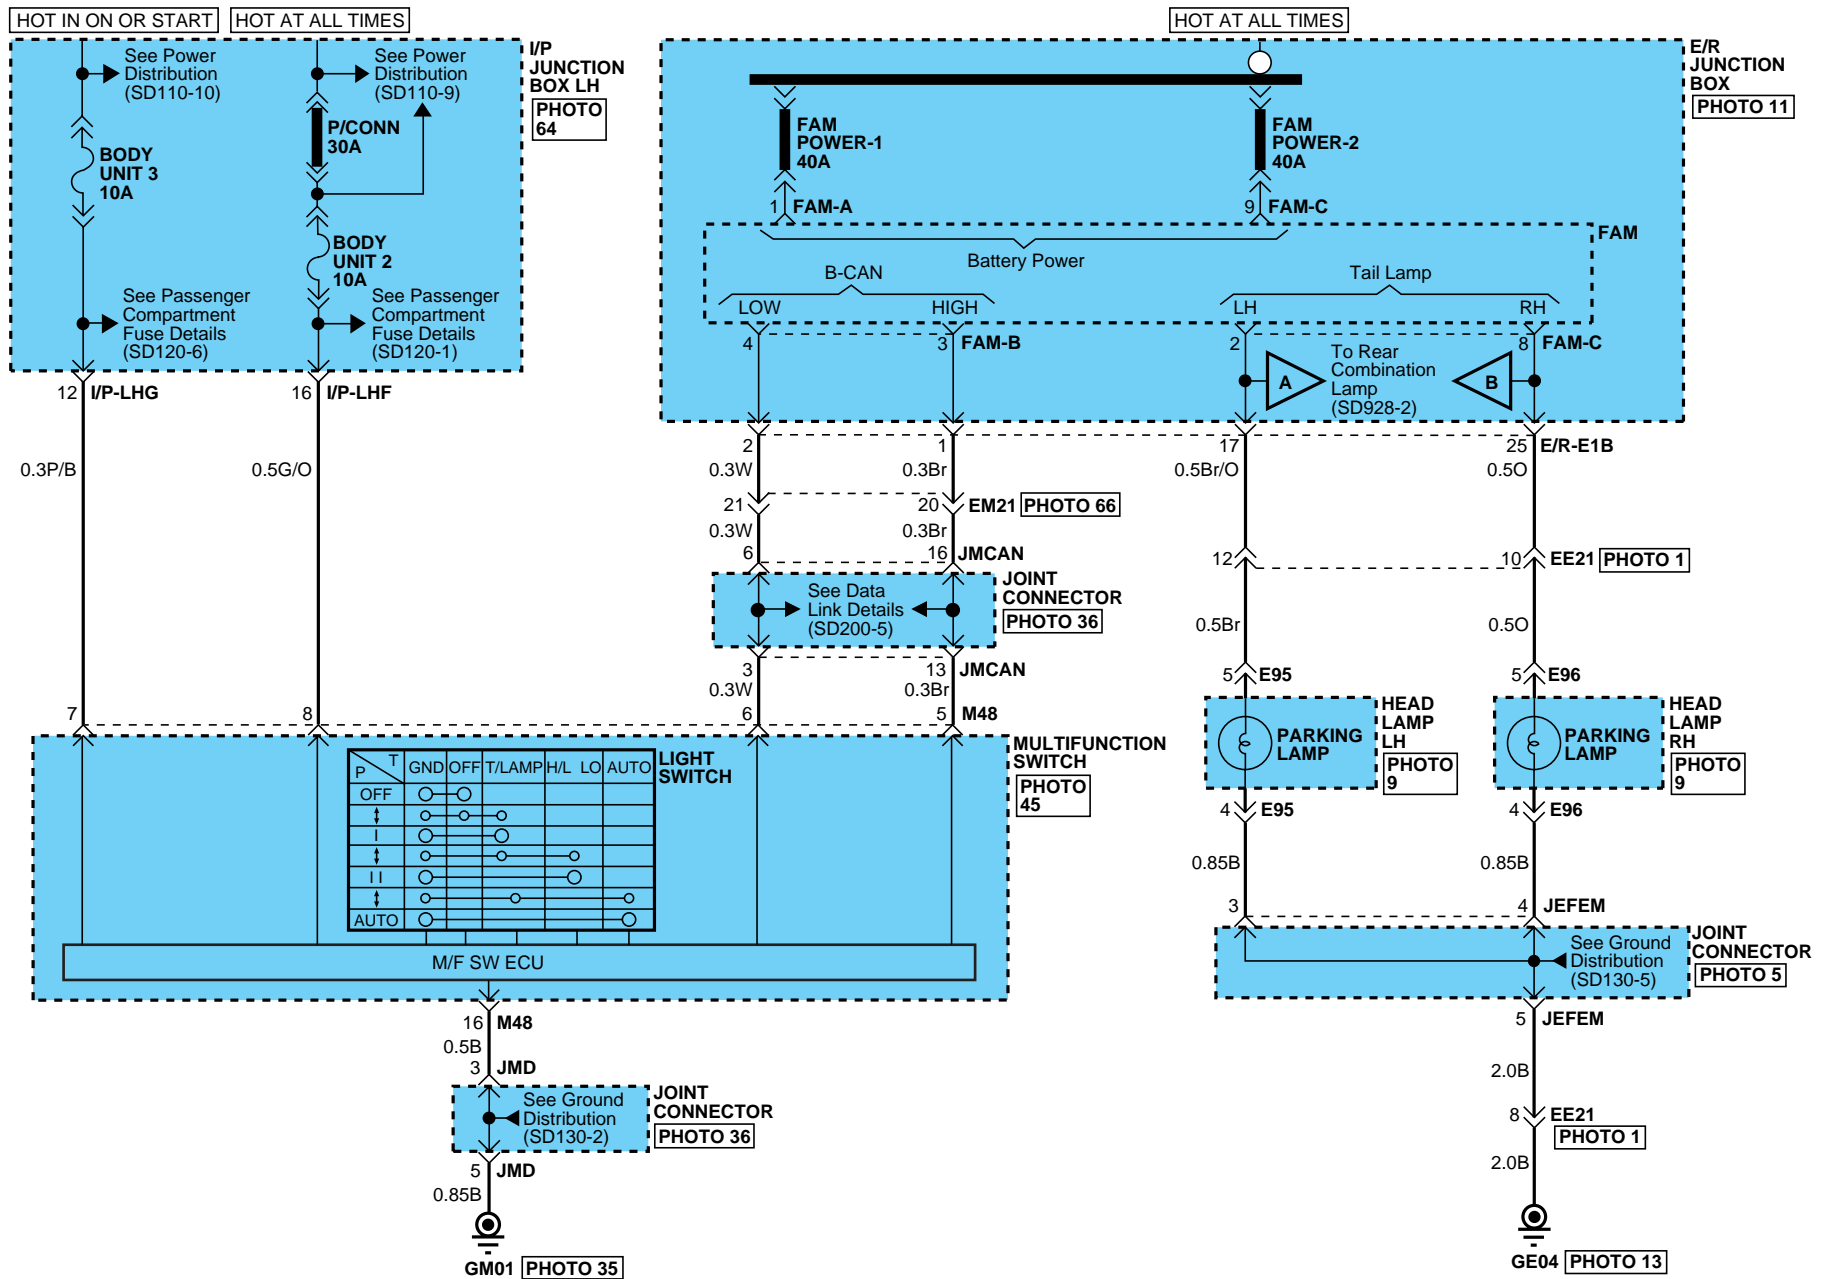

TAIL, PARKING & LICENSE LAMPS

Tail, Parking & License Lamps (2)

SD928-2

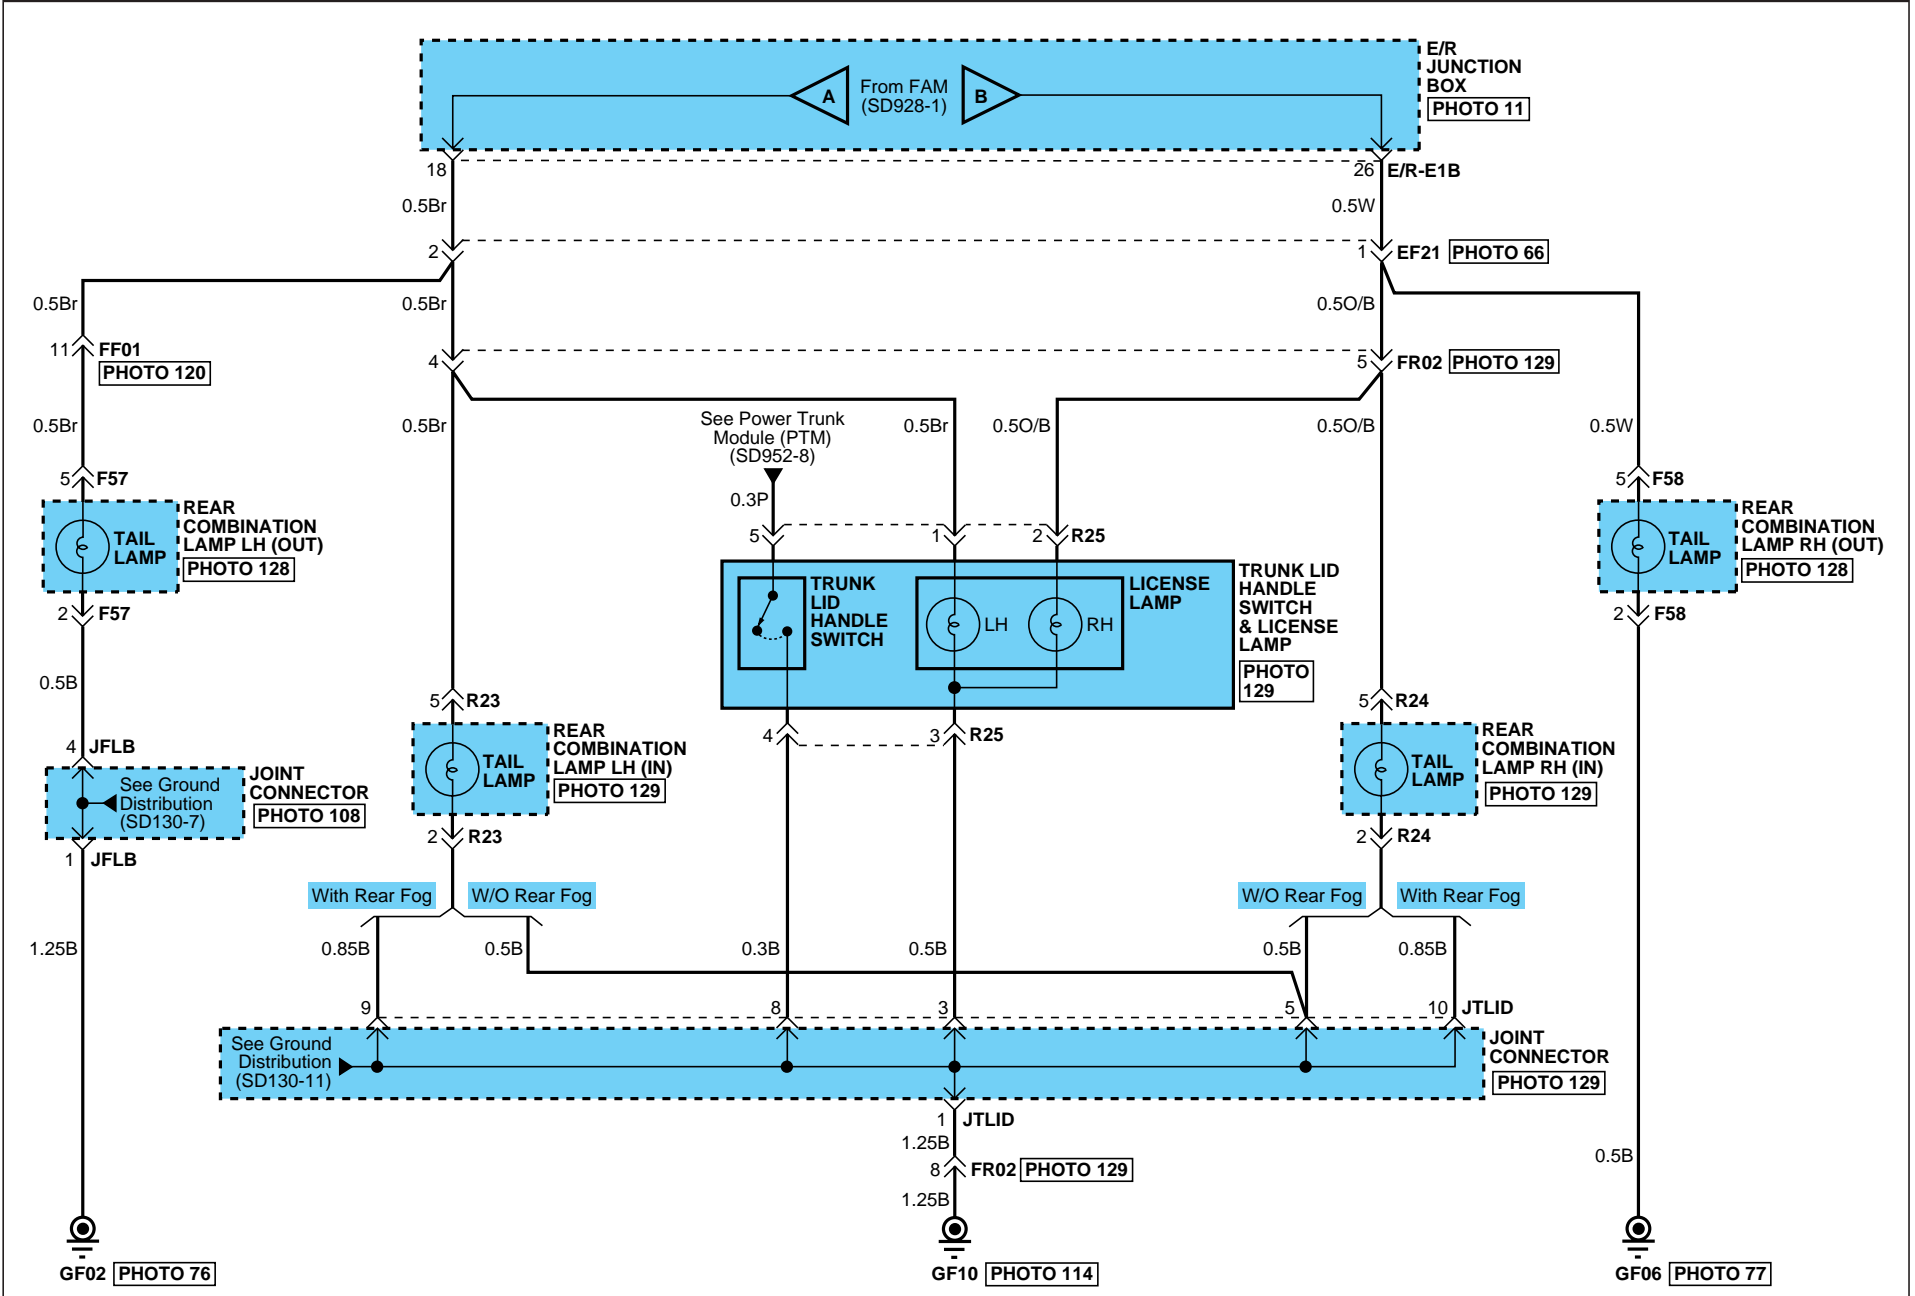

TAIL, PARKING & LICENSE LAMPS

Tail, Parking & License Lamps (3)

SD928-3

E95




KET_090WP_10F_B

E96




KET_090WP_10F_B

FAM-A

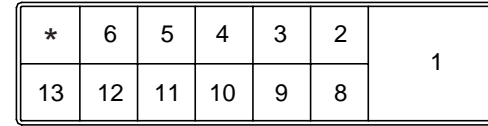


FAM-B

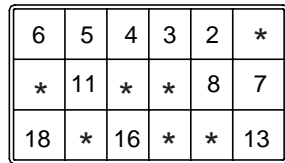

FAM-C




F57

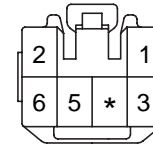


KET_090II_06F_B

F58

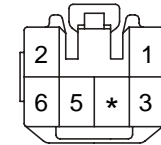


KET_090II_06F_B

M48

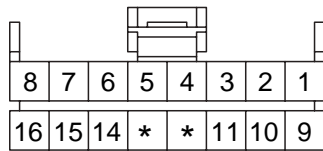


AMP_040M1_16F_B

R23

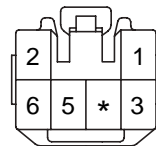


KET_090II_06F_B

R24

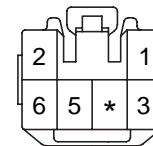

KET_090II_06F_W

R25

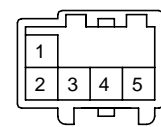

KUM_CDR_05M_W


TAIL, PARKING & LICENSE LAMPS


Tail, Parking & License Lamps (4)

SD928-4

MEMO

Courtesy & Trunk Lamps (2)

















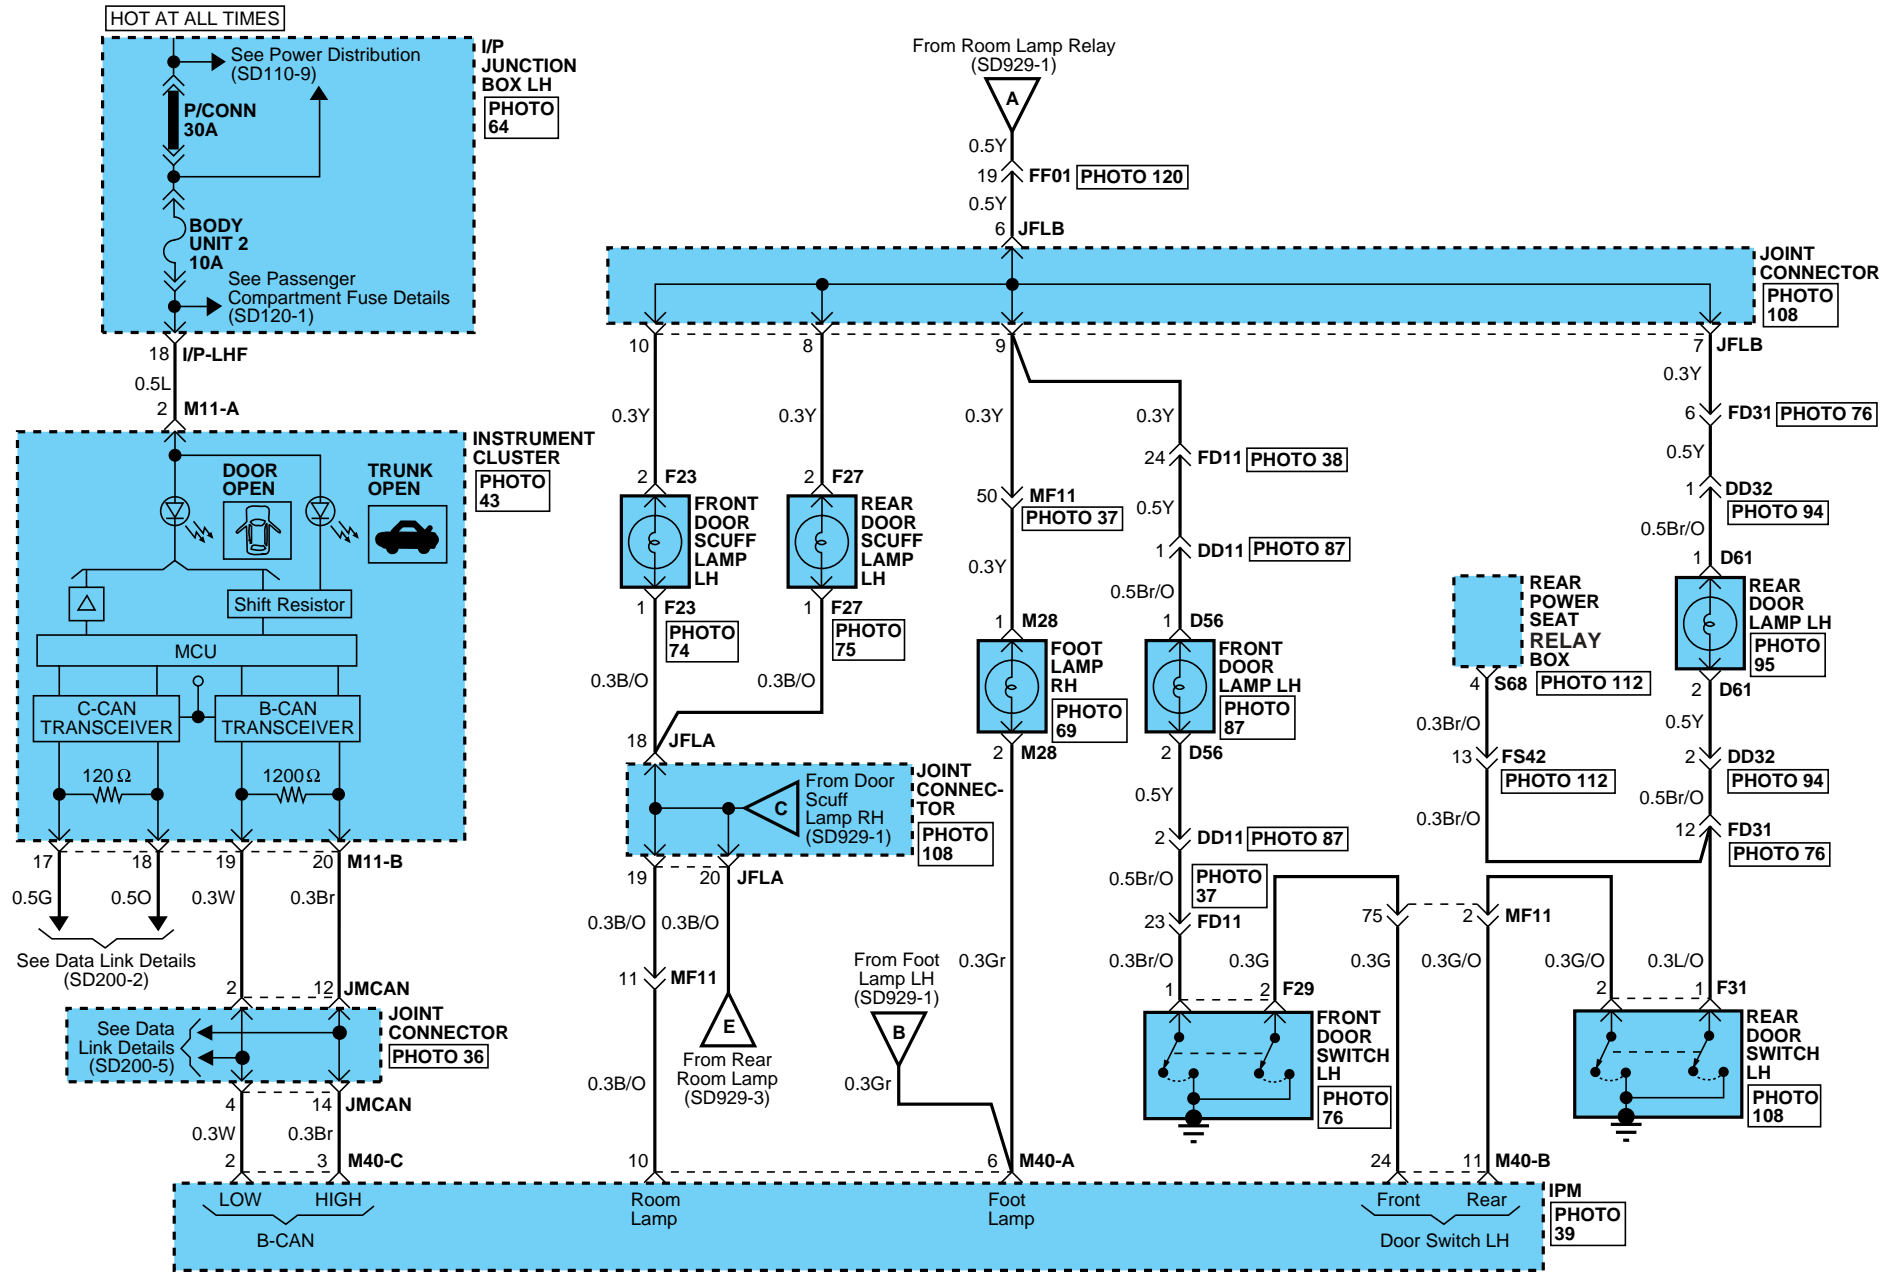


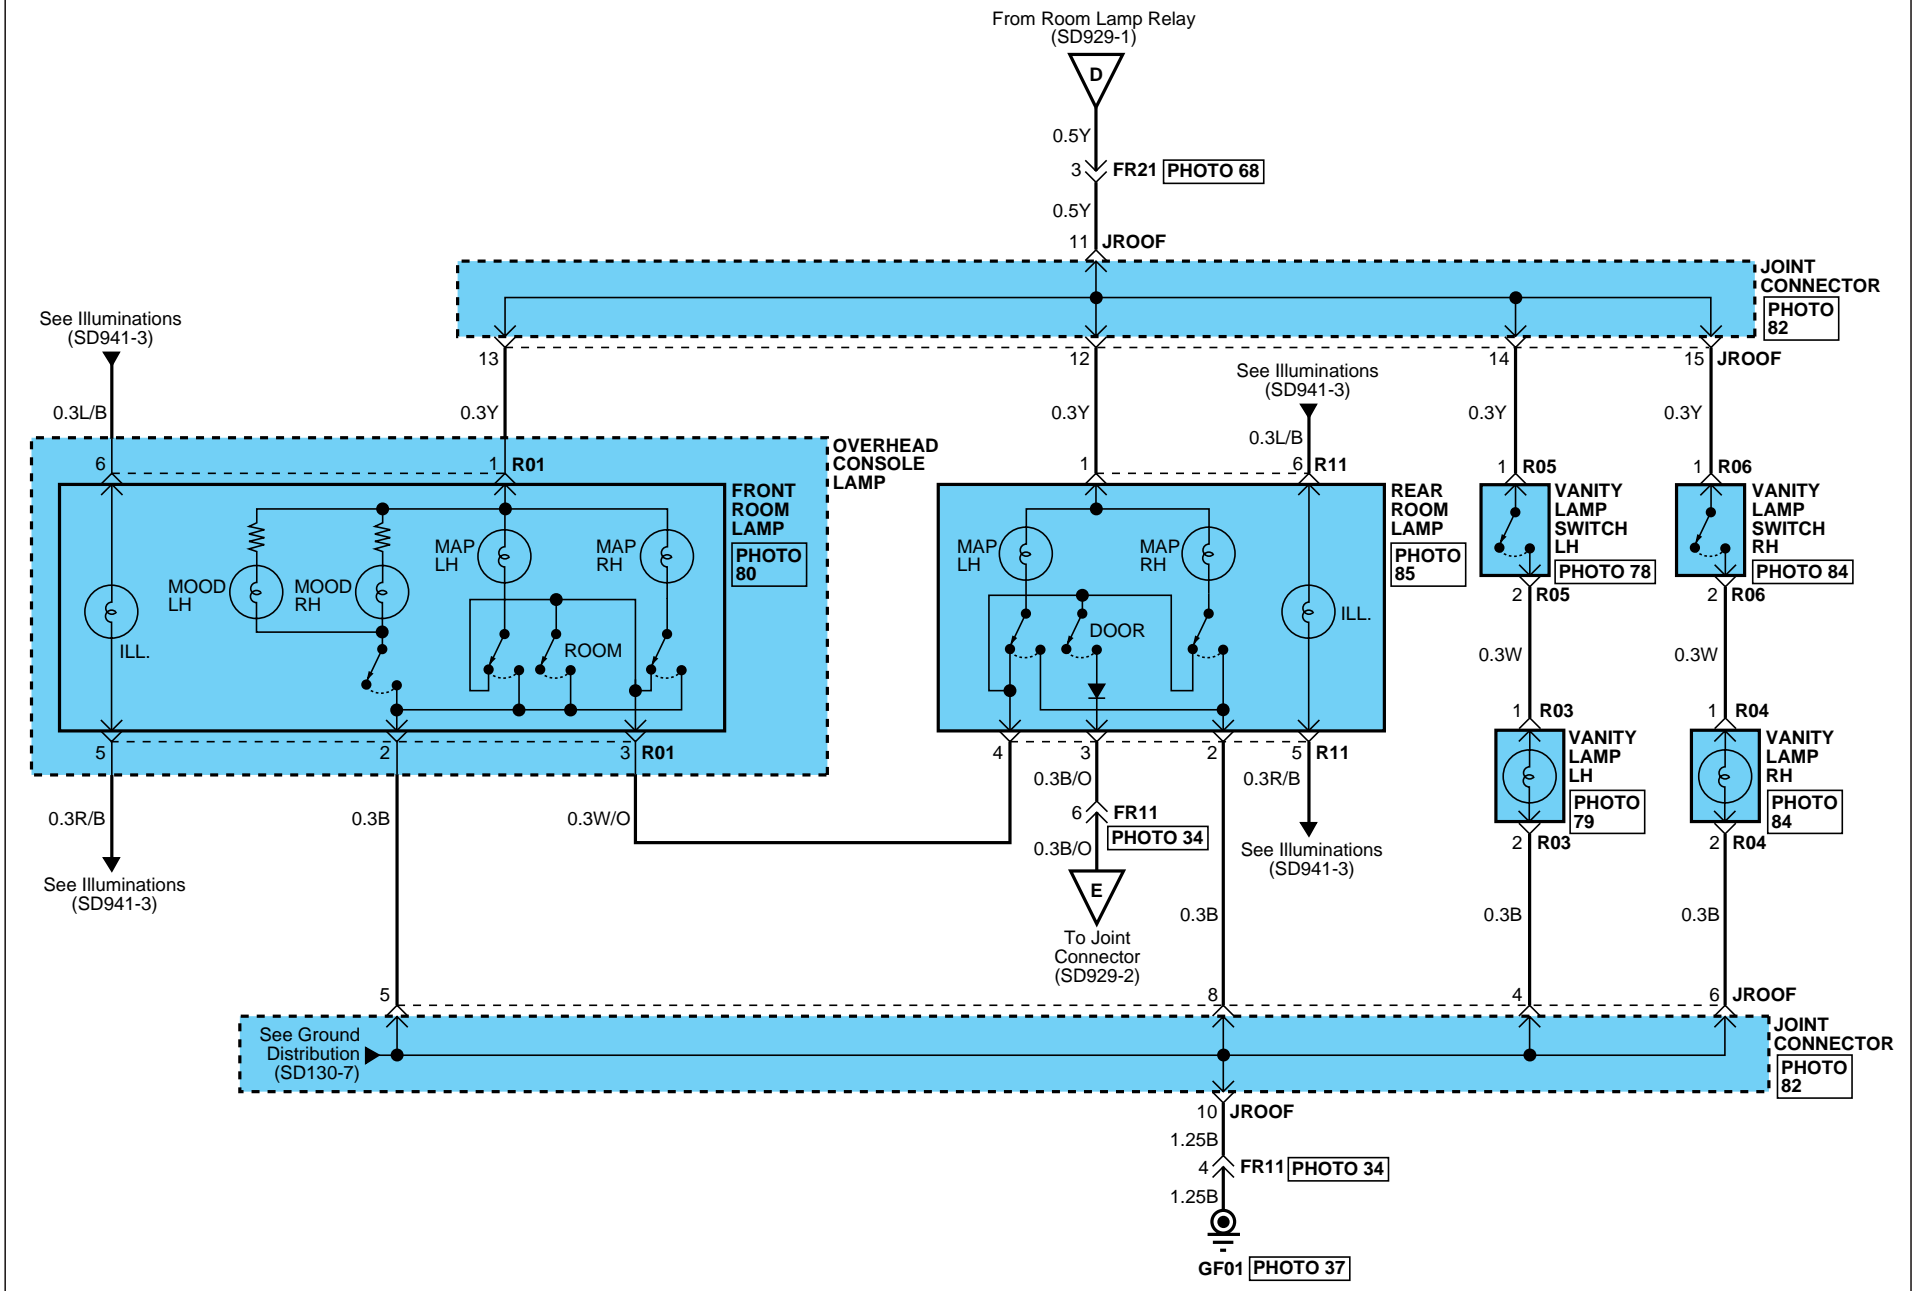

COURTESY & TRUNK LAMPS

Courtesy & Trunk Lamps (4)

SD929-4

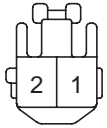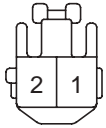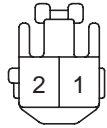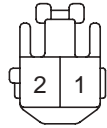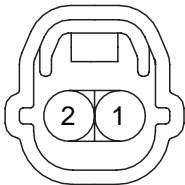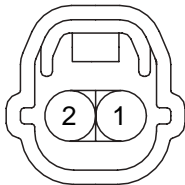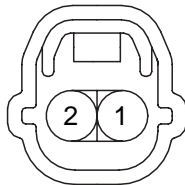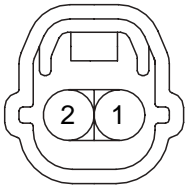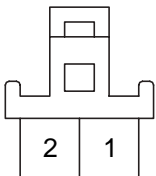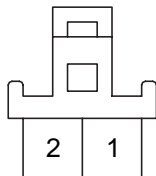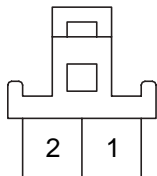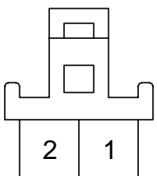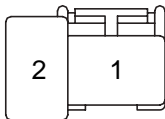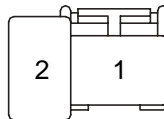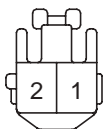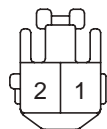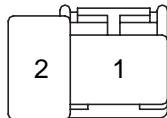
<p>D56</p>  <p>KET_090II_02F_L</p>	<p>D58</p>  <p>KET_090II_02F_L</p>	<p>D61</p>  <p>KET_090II_02F_L</p>	<p>D65</p>  <p>KET_090II_02F_L</p>																				
<p>FAM-B</p> <table border="1" data-bbox="275 534 555 694"> <tr><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>*</td></tr> <tr><td>*</td><td>11</td><td>*</td><td>*</td><td>8</td><td>7</td></tr> <tr><td>18</td><td>*</td><td>16</td><td>*</td><td>*</td><td>13</td></tr> </table>	6	5	4	3	2	*	*	11	*	*	8	7	18	*	16	*	*	13	<p>F23</p>  <p>KET_SSD_02F_B</p>	<p>F24</p>  <p>KET_SSD_02F_B</p>	<p>F27</p>  <p>KET_SSD_02F_B</p>		
6	5	4	3	2	*																		
*	11	*	*	8	7																		
18	*	16	*	*	13																		
<p>F28</p>  <p>KET_SSD_02F_B</p>	<p>F29</p>  <p>KET_070_02F_W</p>	<p>F30</p>  <p>KET_070_02F_W</p>	<p>F31</p>  <p>KET_070_02F_W</p>																				
<p>F32</p>  <p>KET_070_02F_W</p>	<p>F71</p>  <p>AMP_PLM2_02F_B</p>	<p>F72</p>  <p>AMP_PLM2_02F_B</p>	<p>M11-A</p> <table border="1" data-bbox="1666 1058 1984 1201"> <tr><td>8</td><td>7</td><td>6</td><td>*</td><td>4</td><td>*</td><td>2</td><td>1</td></tr> <tr><td>16</td><td>15</td><td>*</td><td>13</td><td>12</td><td>11</td><td>*</td><td>*</td></tr> </table> <p>AMP_040M1_16F_B</p>	8	7	6	*	4	*	2	1	16	15	*	13	12	11	*	*				
8	7	6	*	4	*	2	1																
16	15	*	13	12	11	*	*																
<p>M11-B</p> <table border="1" data-bbox="179 1308 622 1468"> <tr><td>10</td><td>*</td><td>*</td><td>*</td><td>*</td><td>*</td><td>4</td><td>3</td><td>2</td><td>1</td></tr> <tr><td>20</td><td>19</td><td>18</td><td>17</td><td>16</td><td>*</td><td>14</td><td>*</td><td>12</td><td>*</td></tr> </table> <p>AMP_040M1_20F_B</p>	10	*	*	*	*	*	4	3	2	1	20	19	18	17	16	*	14	*	12	*	<p>M27</p>  <p>KET_090II_02F_W_L</p>	<p>M28</p>  <p>KET_090II_02F_W_L</p>	<p>M32</p>  <p>AMP_PLM2_02F_B_DL</p>
10	*	*	*	*	*	4	3	2	1														
20	19	18	17	16	*	14	*	12	*														

COURTESY & TRUNK LAMPS

Courtesy & Trunk Lamps (5)


SD929-5

 M33




KET_187_02F_W

M40-A

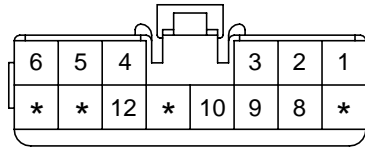


KET_090II_14F_W

 M40-B




AMP_0407_26F_W_HD

M40-C

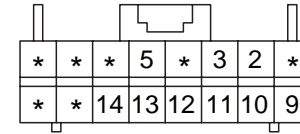


AMP_0407_16F_W_040

 R01




AMP_MQS_06F_W

R03

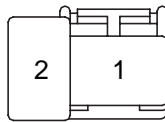


AMP_PLM2_02F_WDL

R04

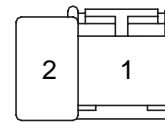


AMP_PLM2_02F_WDL

 R05




KUM_CDR_02F_W

 R06




KUM_CDR_02F_W

R11

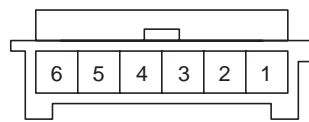


AMP_MQS_06F_W

R21

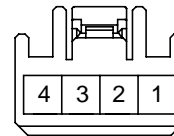

AMP_090III_04F_W

 S68



AMP_09250_20F_W

COURTESY & TRUNK LAMPS


Courtesy & Trunk Lamps (6)


SD929-6

MEMO

Driver Information System (DIS) (1)

SD937-1

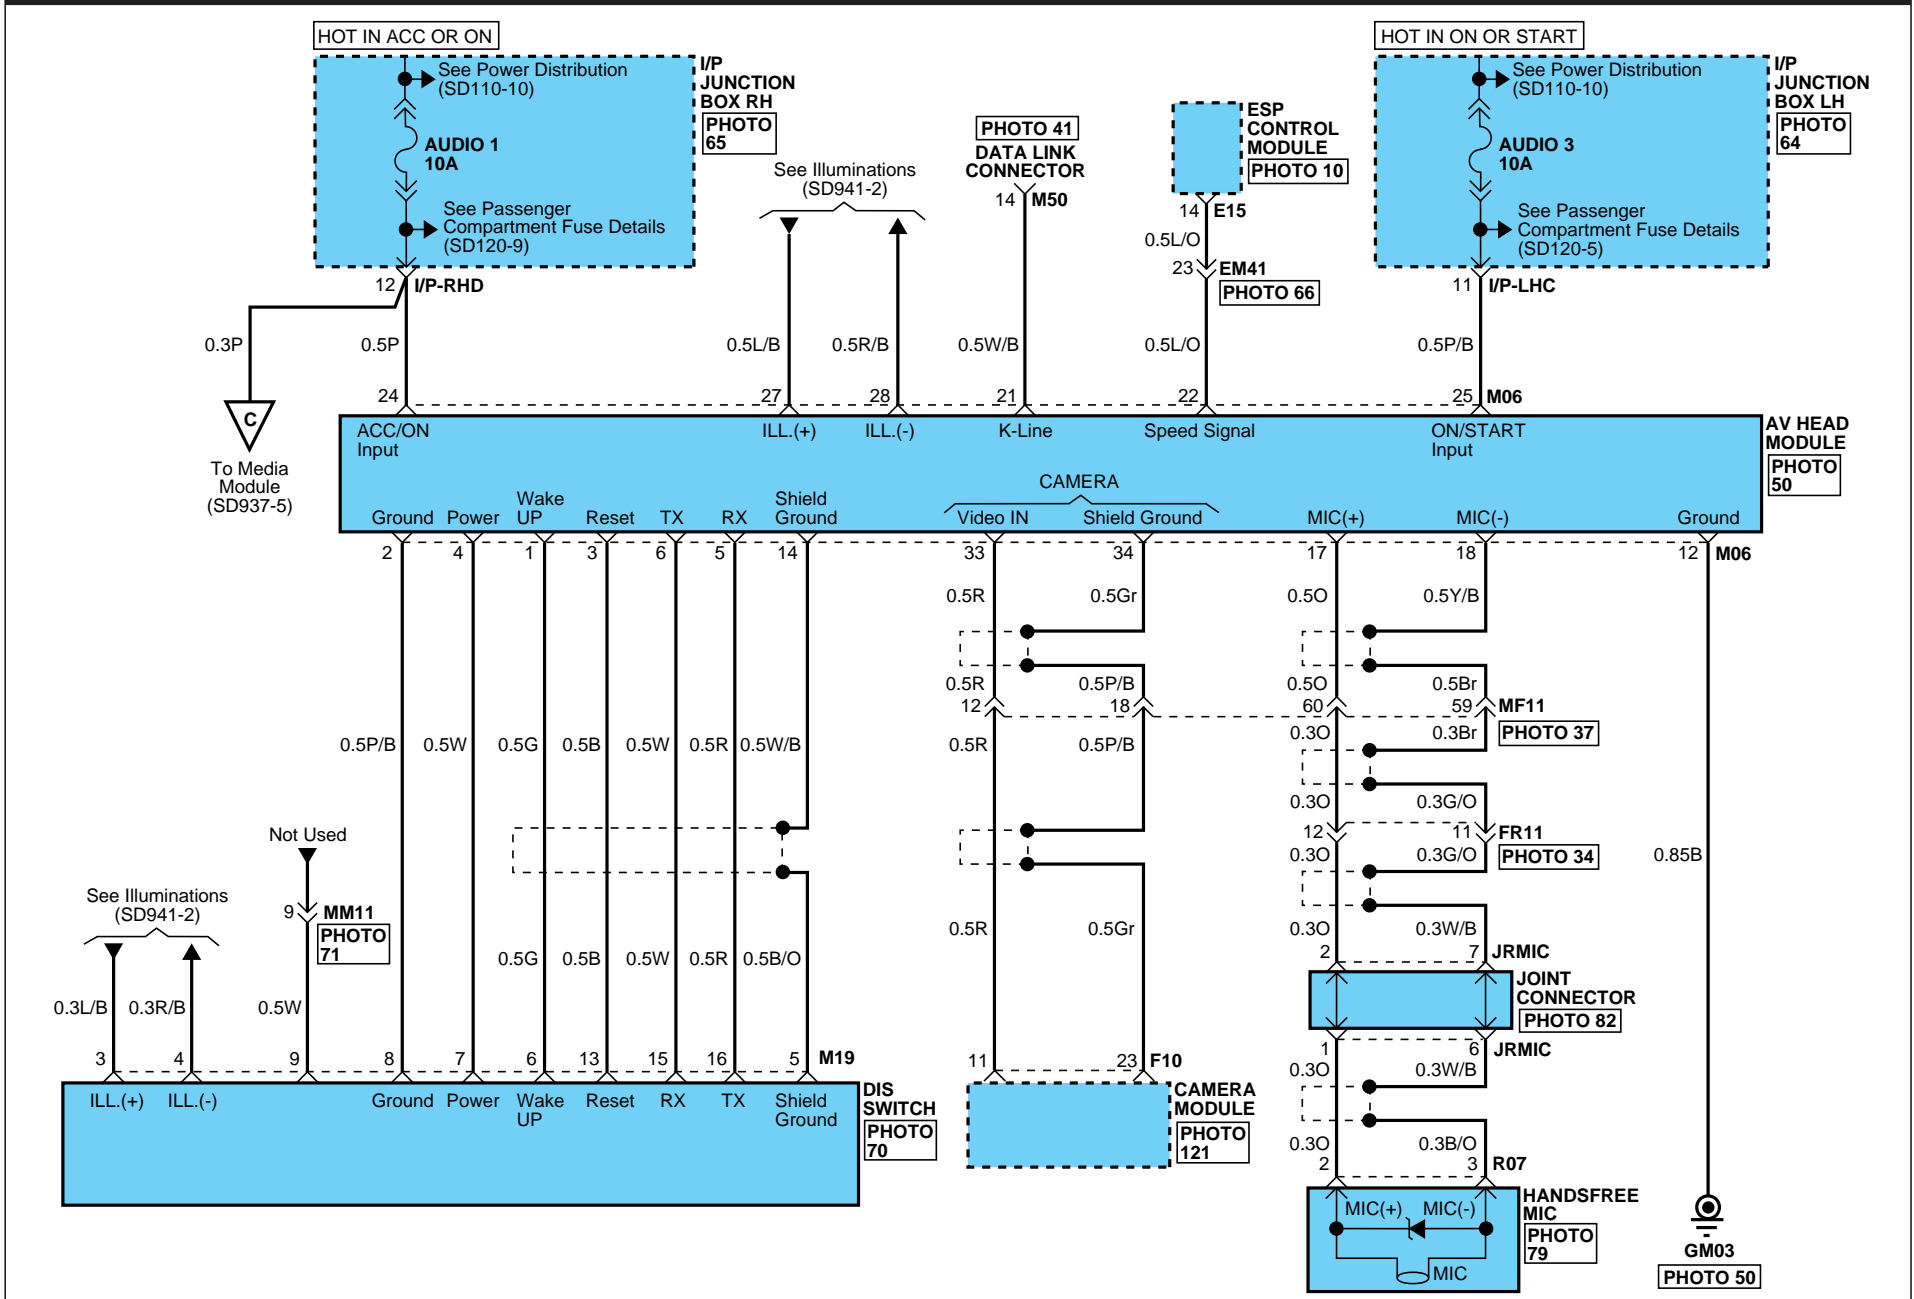


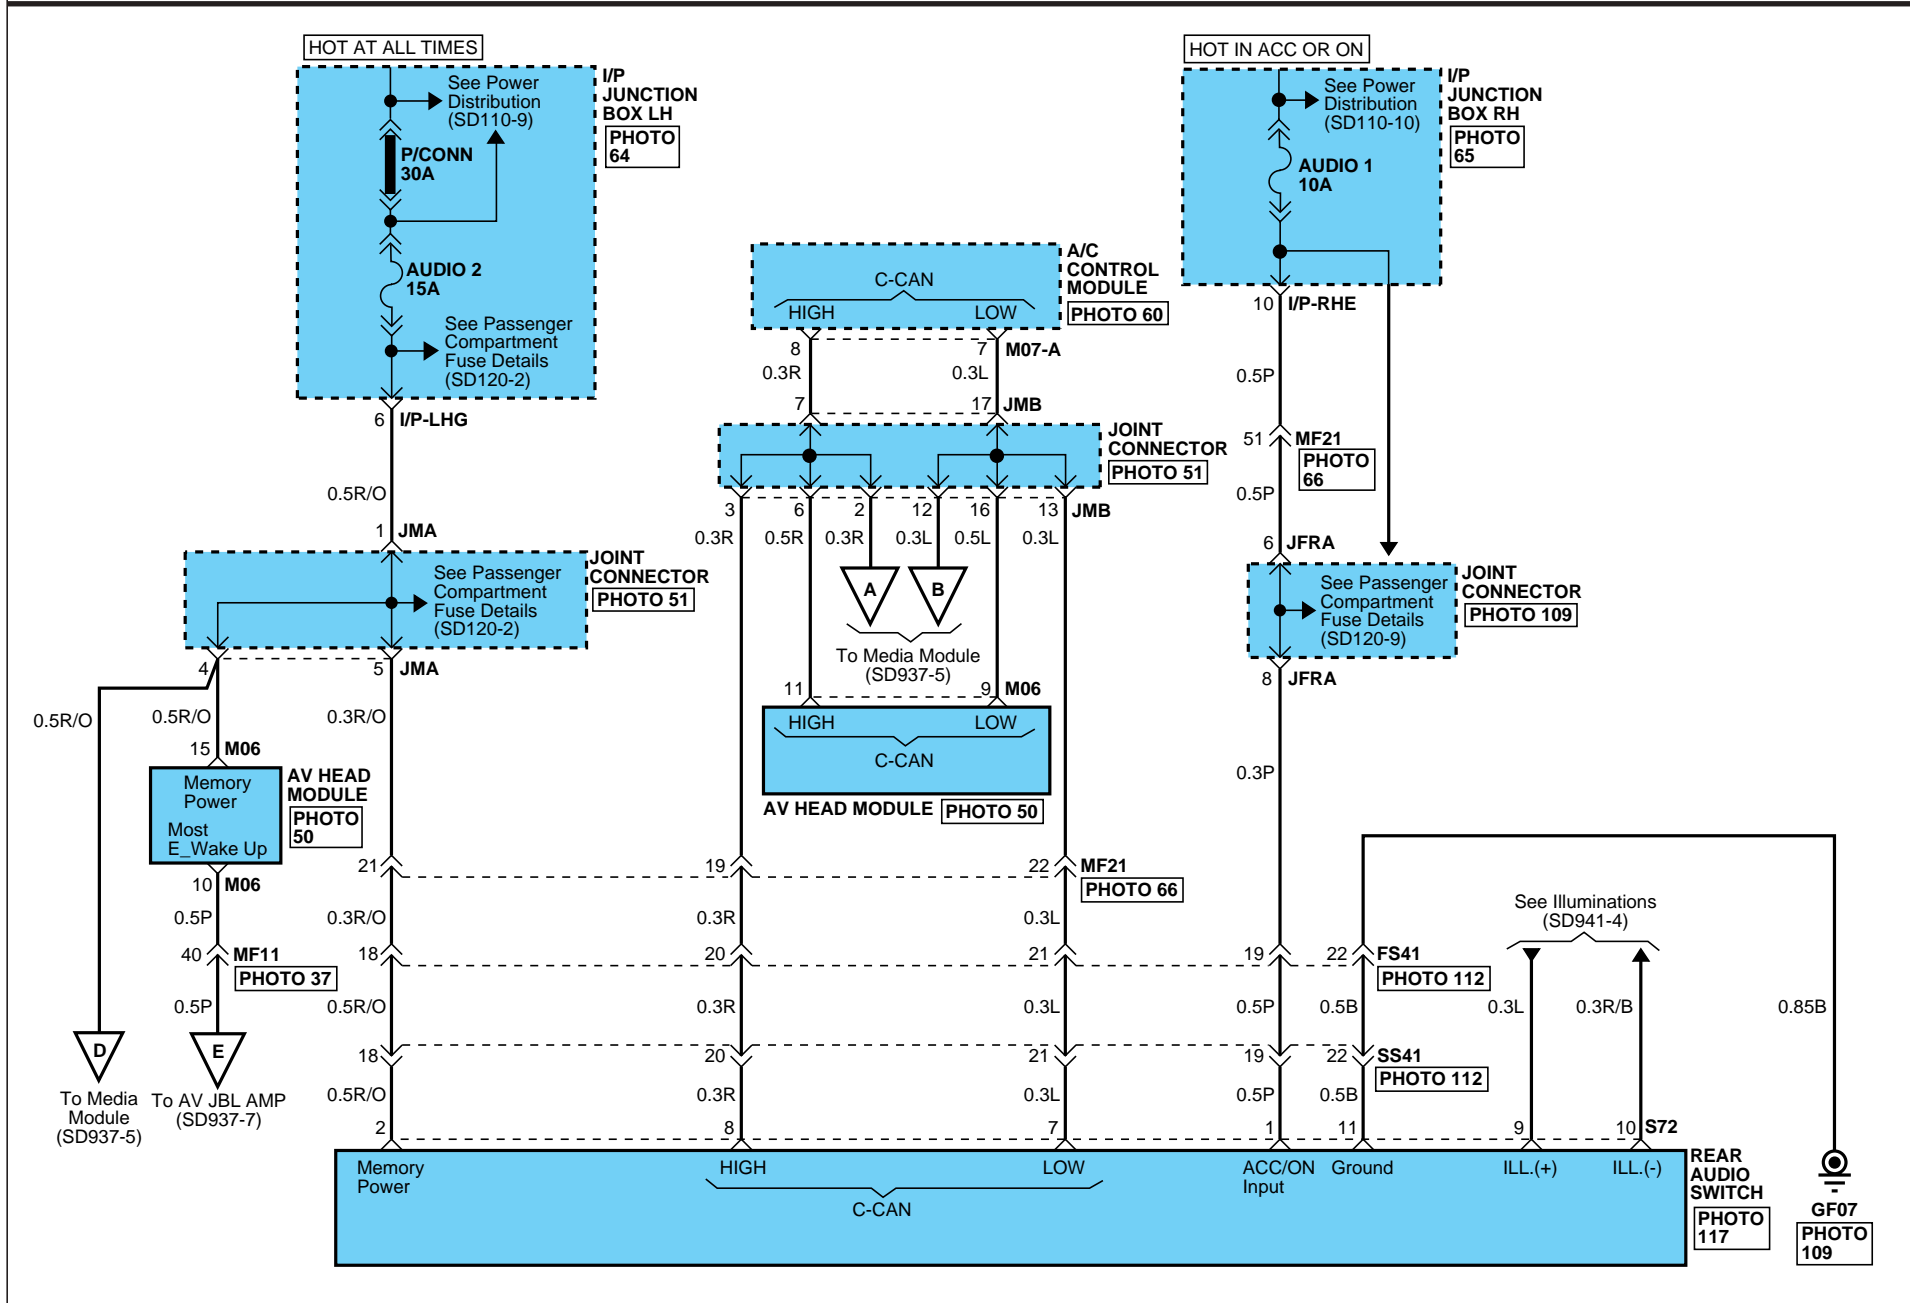

DRIVER INFORMATION SYSTEM (DIS)

Driver Information System (DIS) (3)


SD937-3

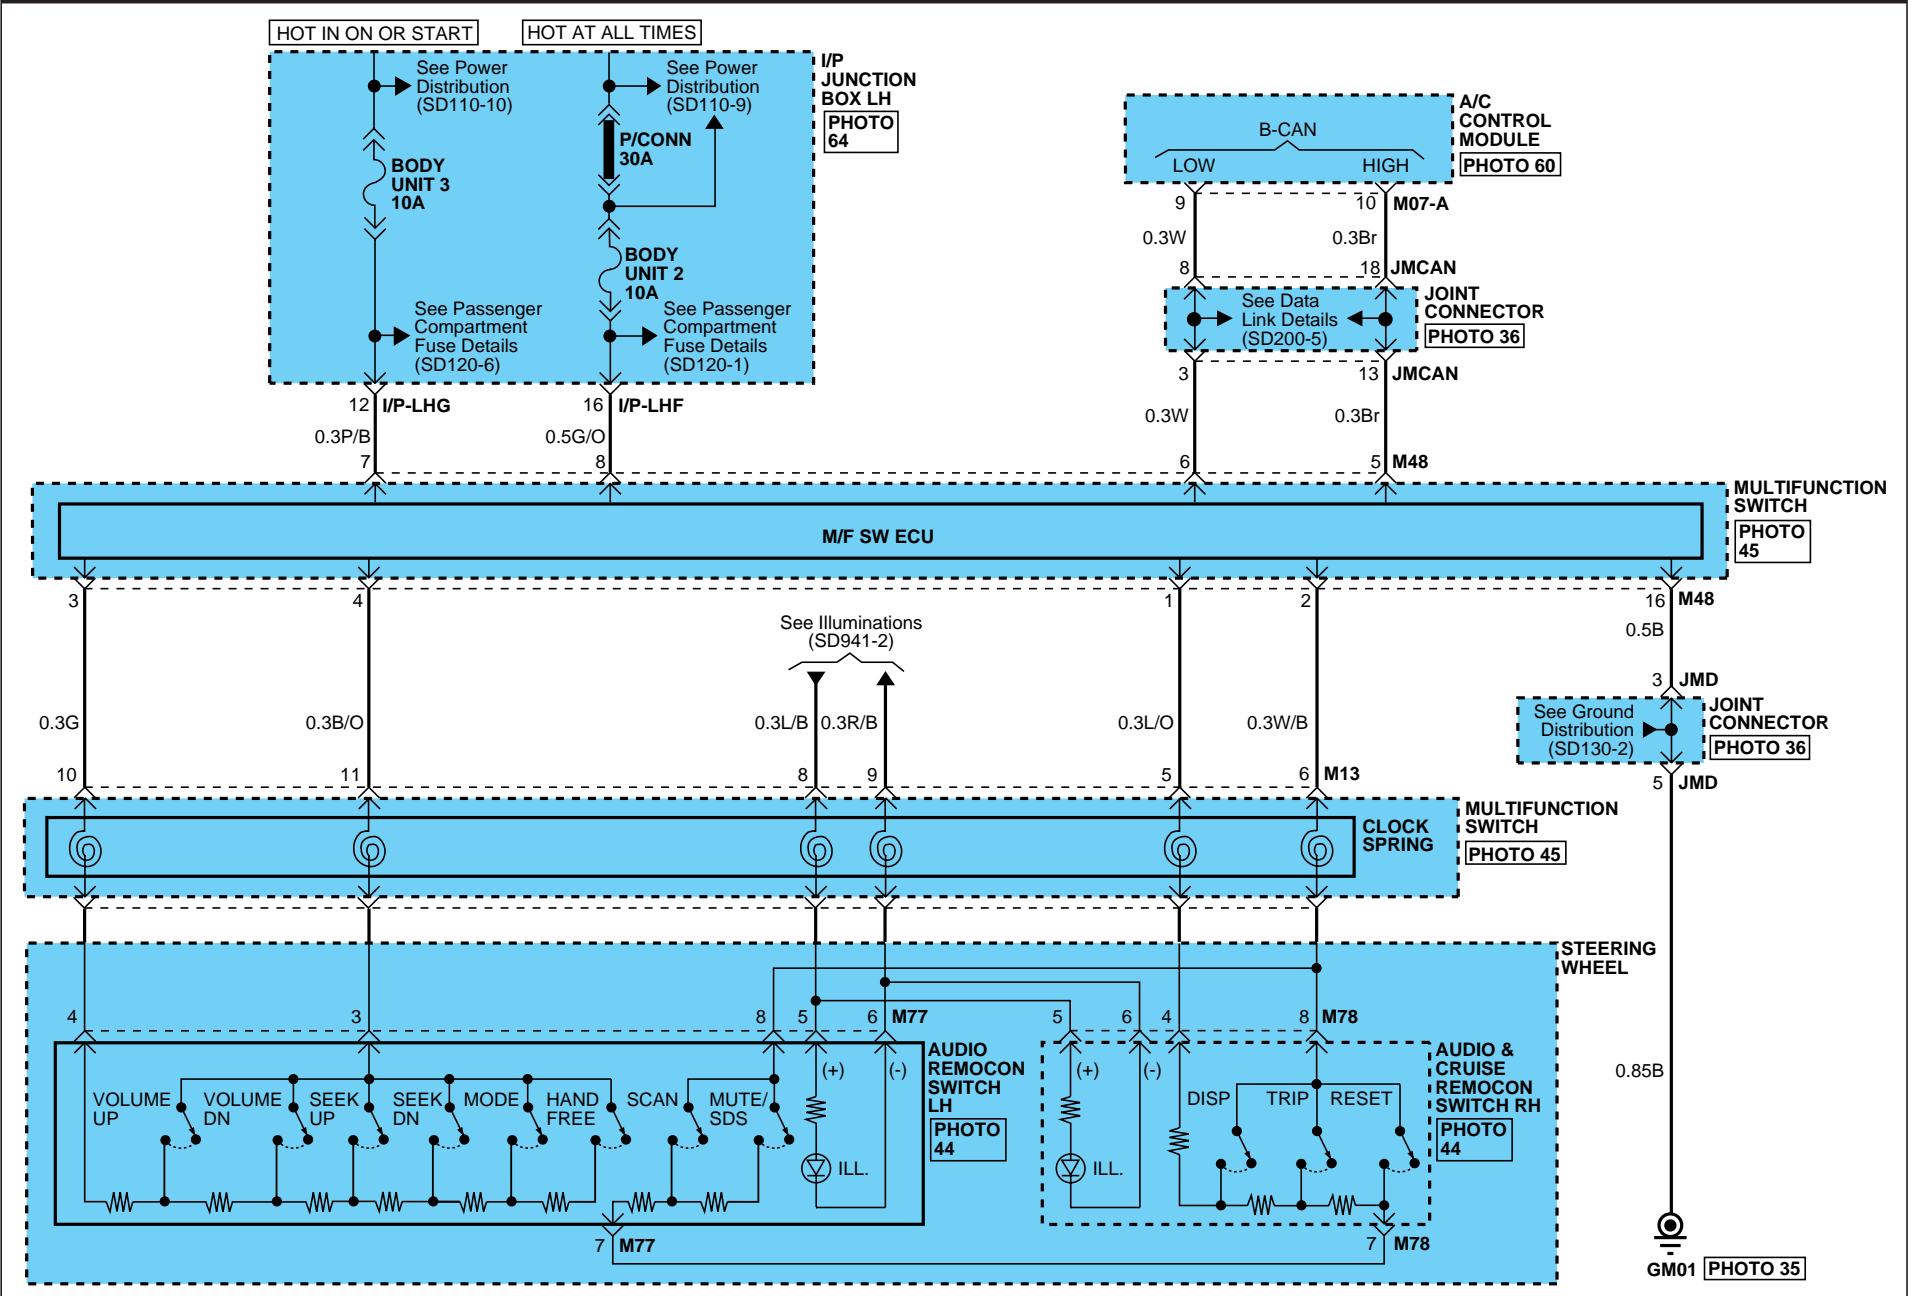

DRIVER INFORMATION SYSTEM (DIS)

Driver Information System (DIS) (4)


SD937-4

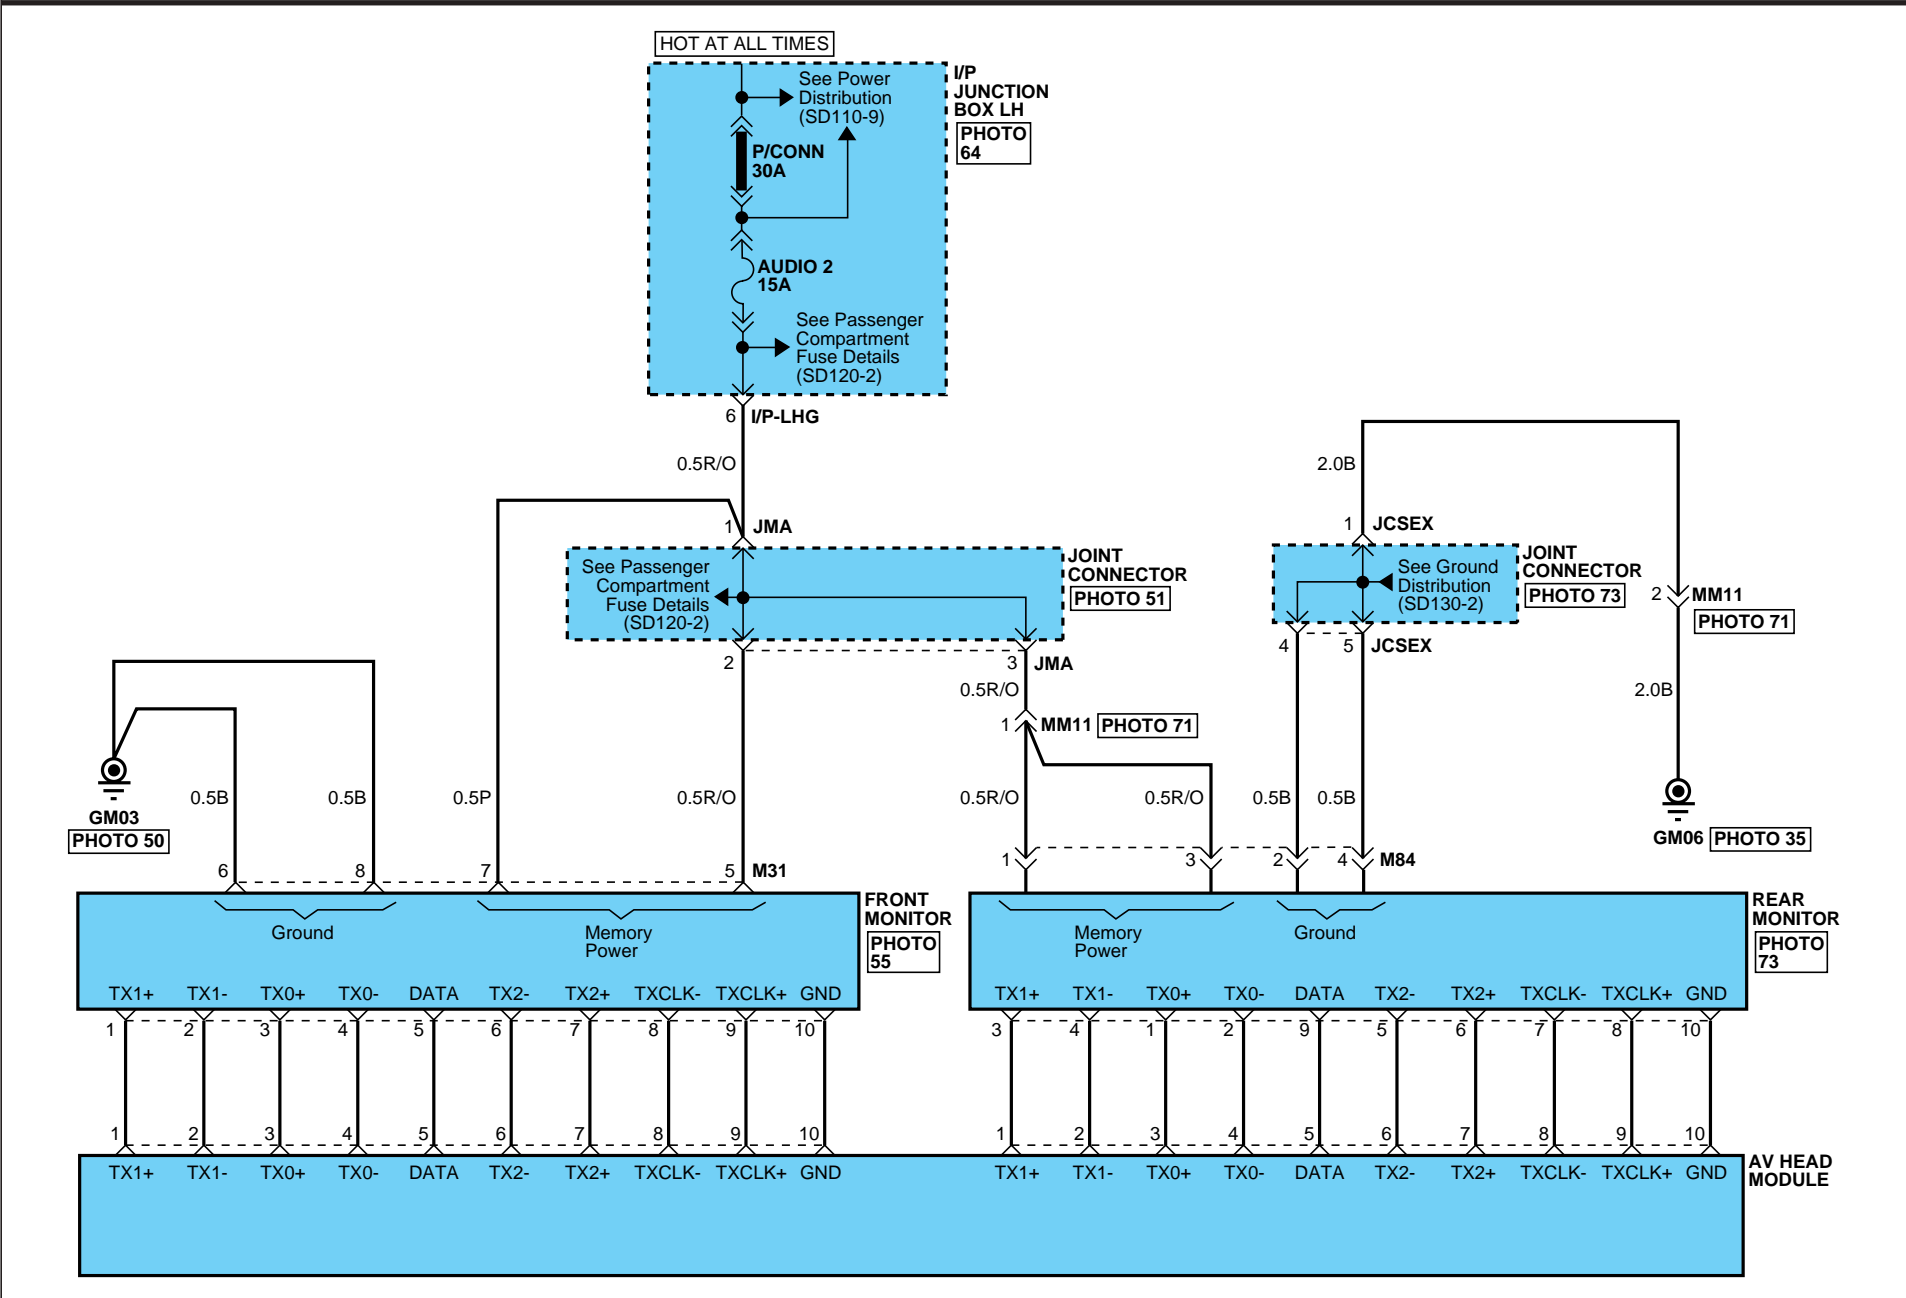

DRIVER INFORMATION SYSTEM (DIS)

Driver Information System (DIS) (5)


SD937-5

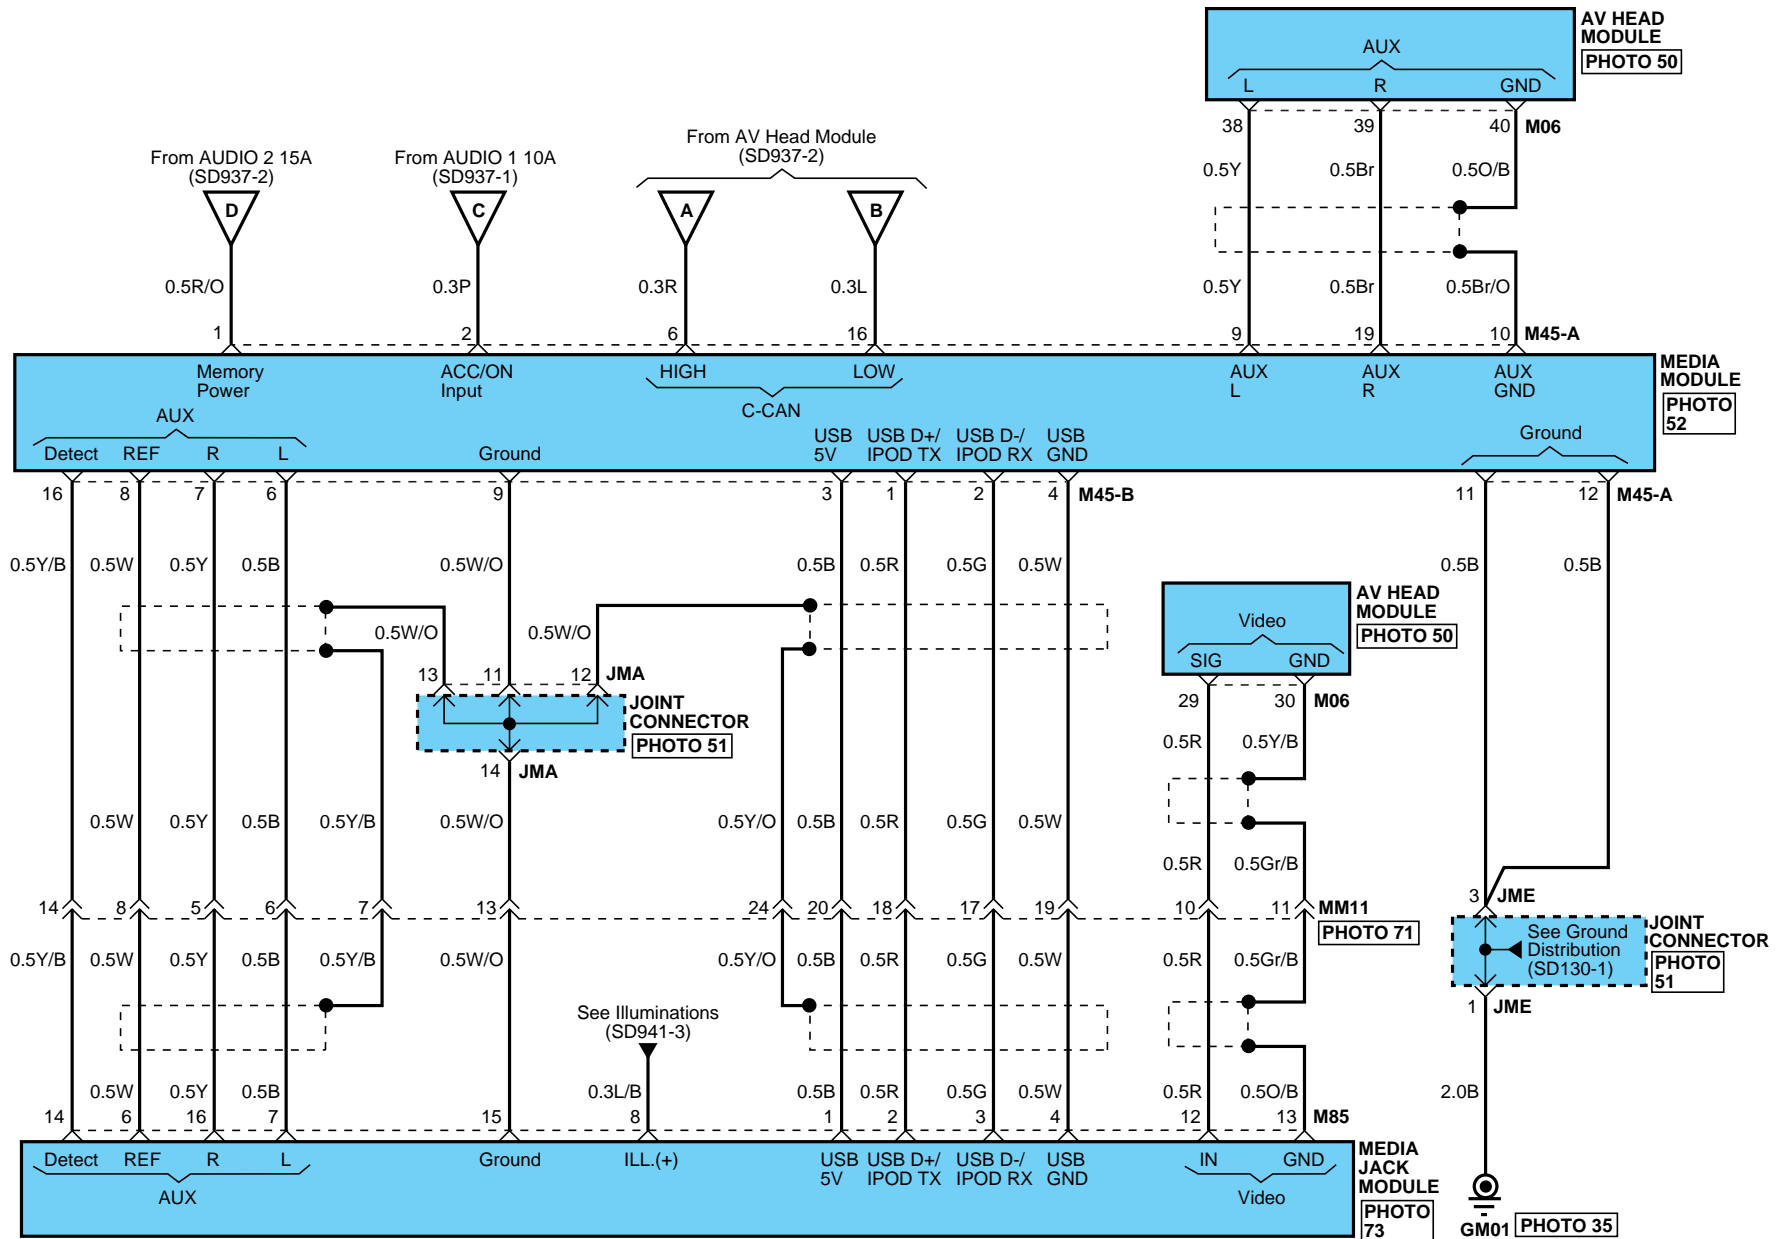

DRIVER INFORMATION SYSTEM (DIS)

Driver Information System (DIS) (6)


SD937-6

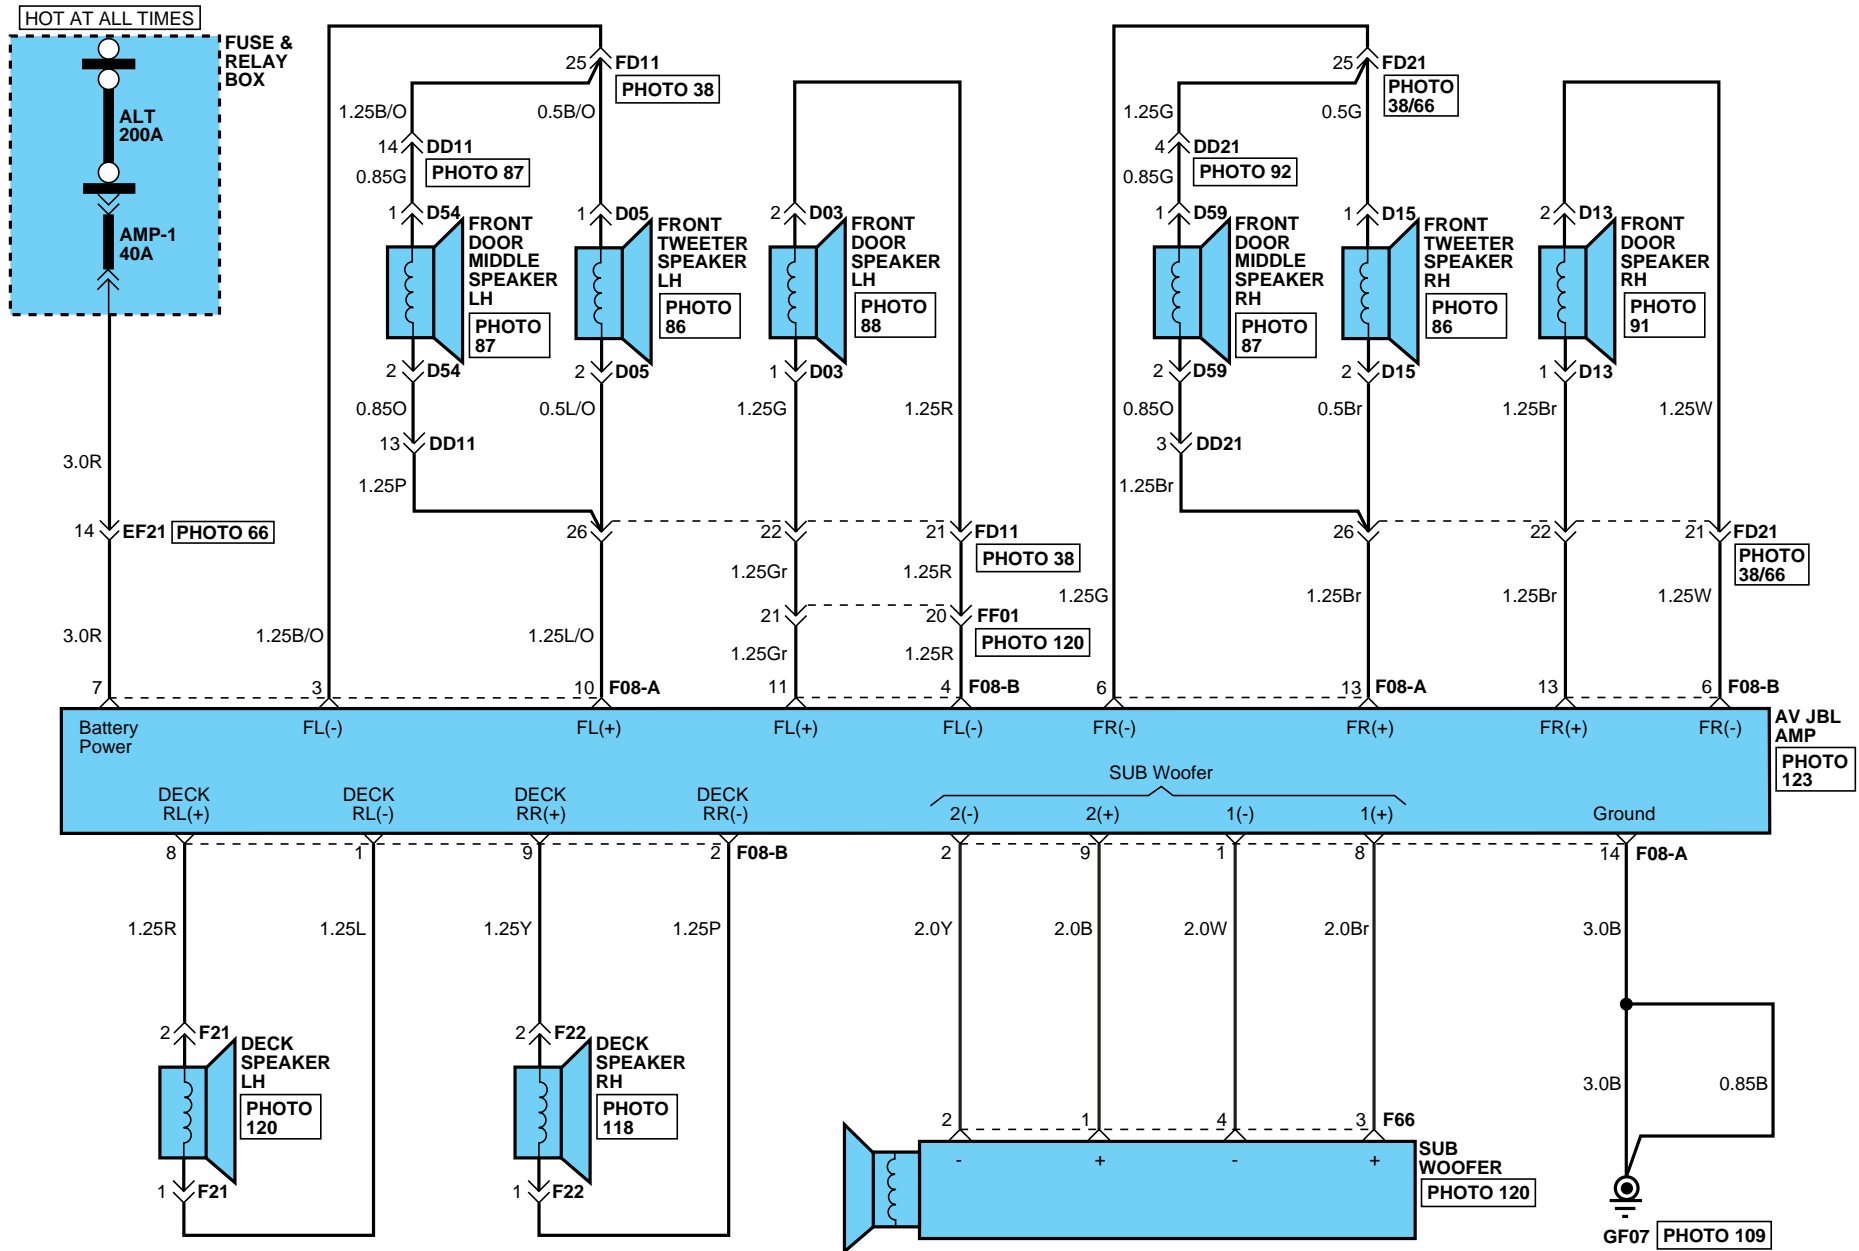

DRIVER INFORMATION SYSTEM (DIS)

Driver Information System (DIS) (7)

















SD937-7

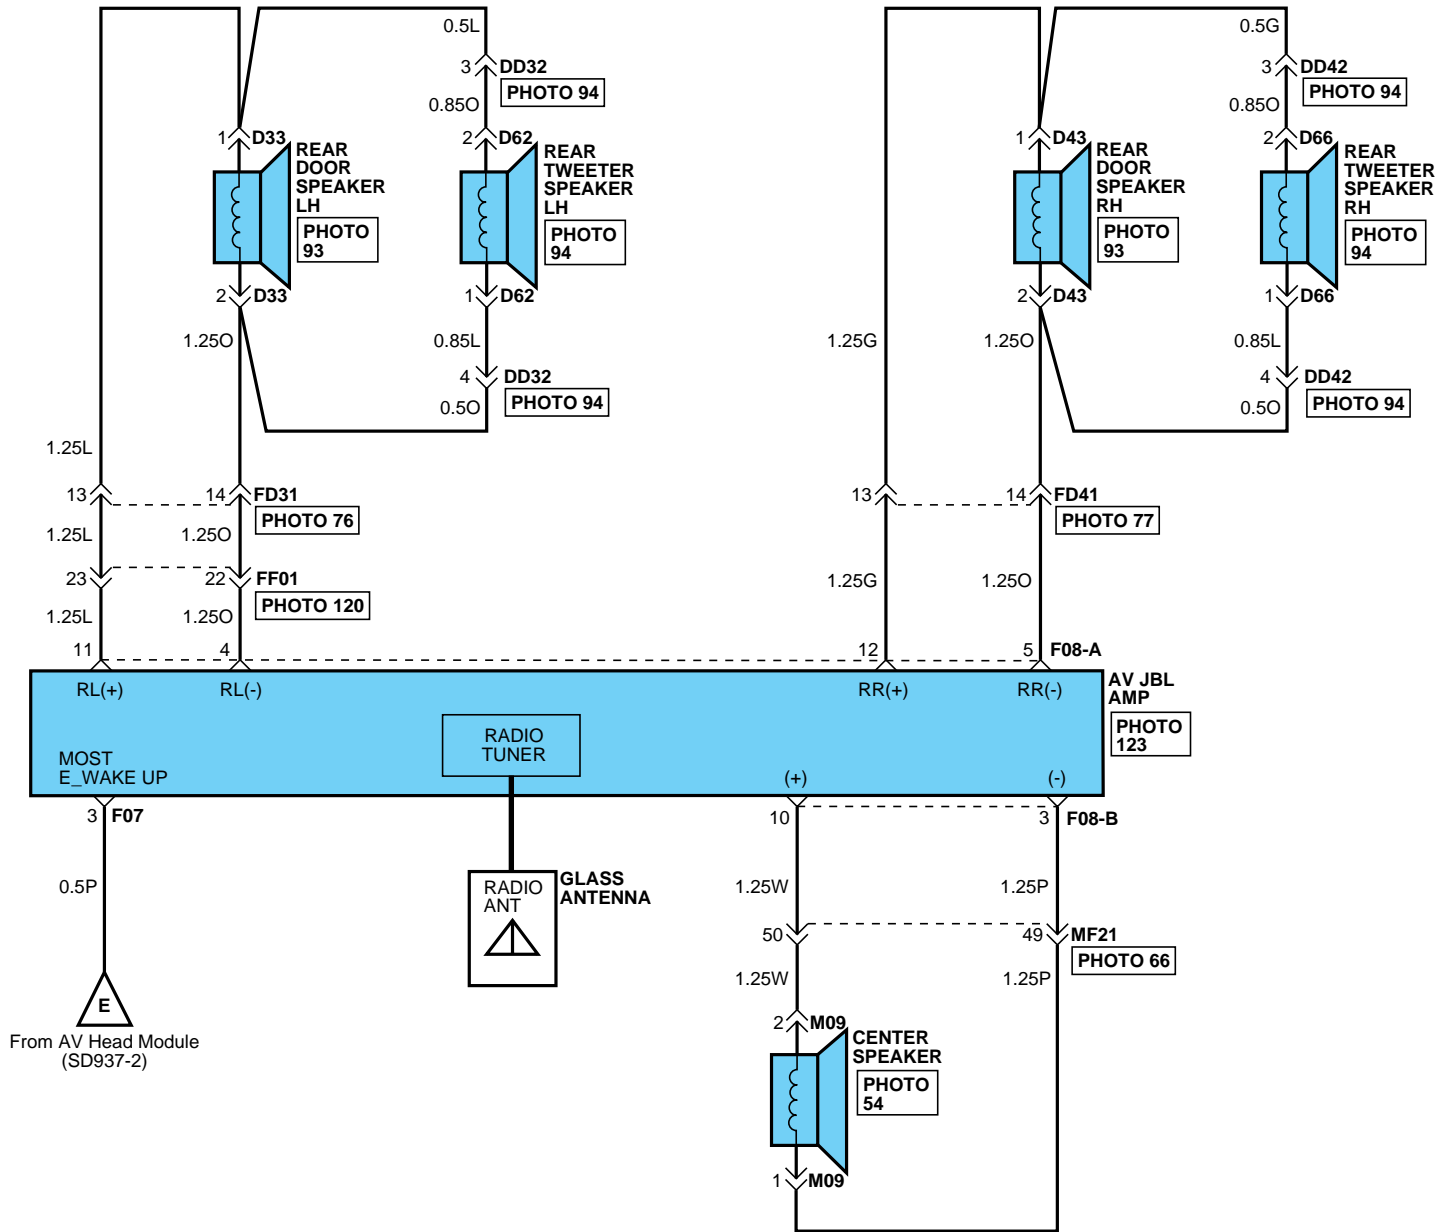

DRIVER INFORMATION SYSTEM (DIS)

Driver Information System (DIS) (8)

SD937-8

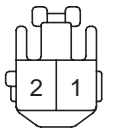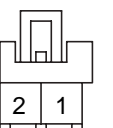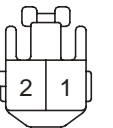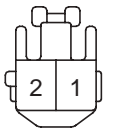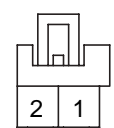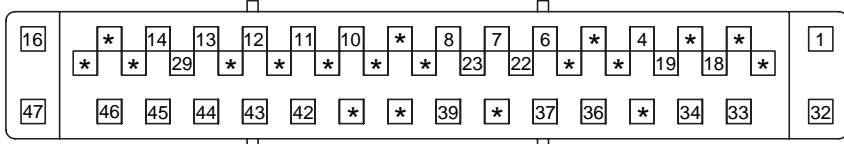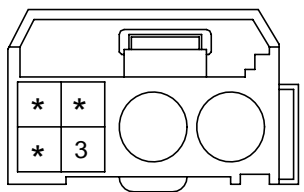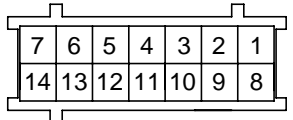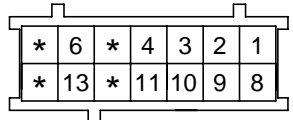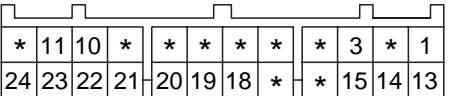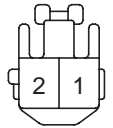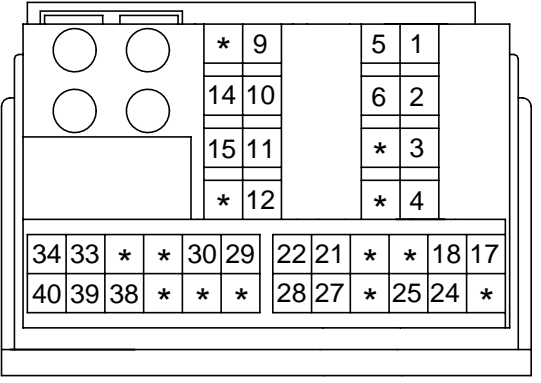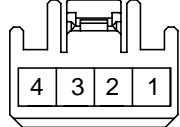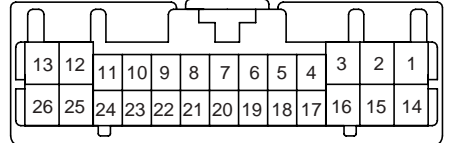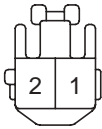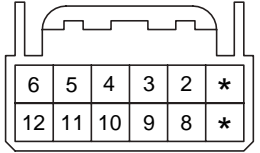
<p>D03,D13</p>  <p>KET_090II_02F_W_L</p>	<p>D05,D15</p>  <p>KUM_CDR_02F_W</p>	<p>D33,D43</p>  <p>KET_090II_02F_W_L</p>	<p>D54,D59</p>  <p>KET_090II_02F_B_L</p>
<p>D62,D66</p>  <p>KUM_CDR_02F_W</p>	<p>E15</p>  <p>AMP_ESP_47F_L_UNIT</p>		<p>F07</p>  <p>YAZ_OPT_04F_B</p>
<p>F08-A</p>  <p>HIR_MESS_14F_B</p>	<p>F08-B</p>  <p>HIR_MESS_14F_W_1</p>	<p>F10</p>  <p>AMP_040II_24F_B</p>	<p>F21,F22</p>  <p>KET_090II_02F_W_L</p>
<p>M06</p>  <p>YAZ_OPT_40F_B</p>		<p>F66</p>  <p>AMP_090III_04F_W</p>	<p>M07-A</p>  <p>KET_0407_26F_W</p>
		<p>M09</p>  <p>KET_090II_02F_W_L</p>	<p>M13</p>  <p>AMP_025_12F_W</p>

DRIVER INFORMATION SYSTEM (DIS)

Driver Information System (DIS) (9)


SD937-9

M19

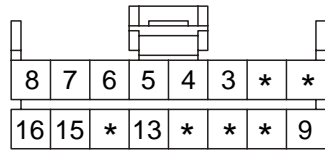


AMP_040M1_16F_B

 M31




MLX_FIT_08F_B

M45-A

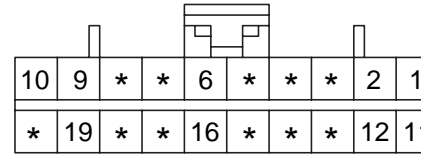


AMP_040M2_20F_B

 M45-B




AMP_040M2_16F_B

M48

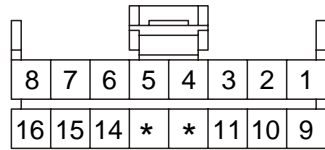


AMP_040M1_16F_B

M50

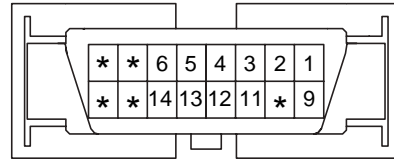


MLX_OBDII_16F_B

M77

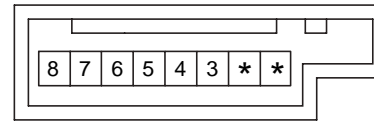


AMP_1743386-2

M78

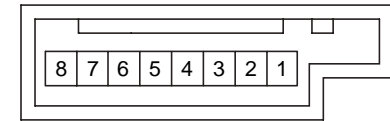


AMP_1743386-1

M84

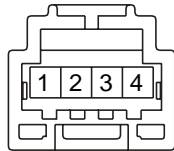


AMP_MQS_04M_Y_040

M85

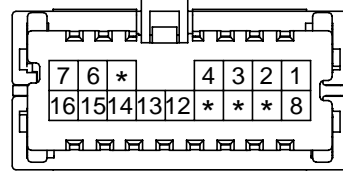


KET_040III_16F_W

 R07



KET_SP_04F_W

S72

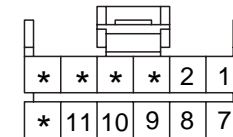

AMP_040MK1_12F_B

DRIVER INFORMATION SYSTEM (DIS)


Driver Information System (DIS) (10)

SD937-10

MEMO

Indicator & Gauges (Supervision Type) (1)

SD940-1

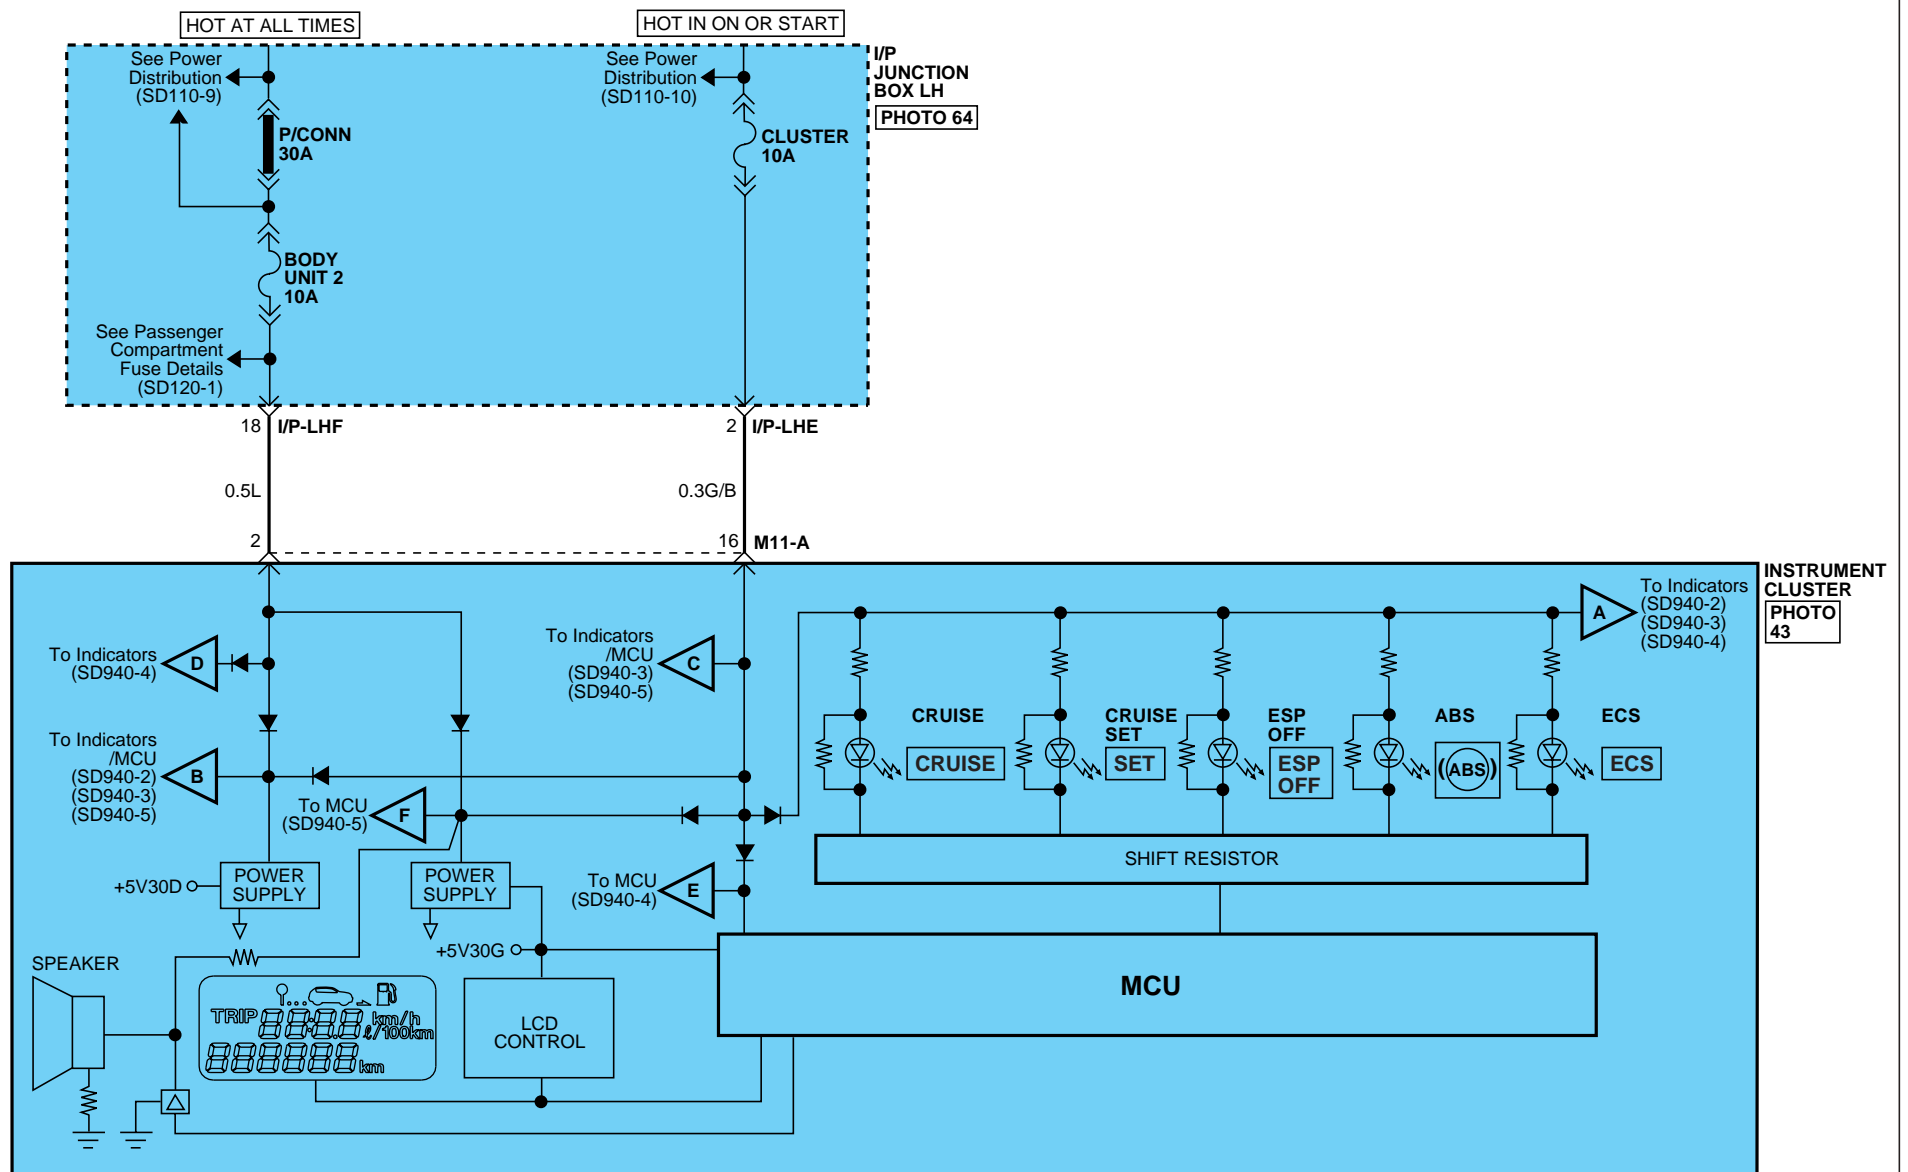


INDICATOR & GAUGES (SUPERVISION TYPE)

Indicator & Gauges (Supervision Type) (2)

SD940-2


PHOTO 43 INSTRUMENT CLUSTER

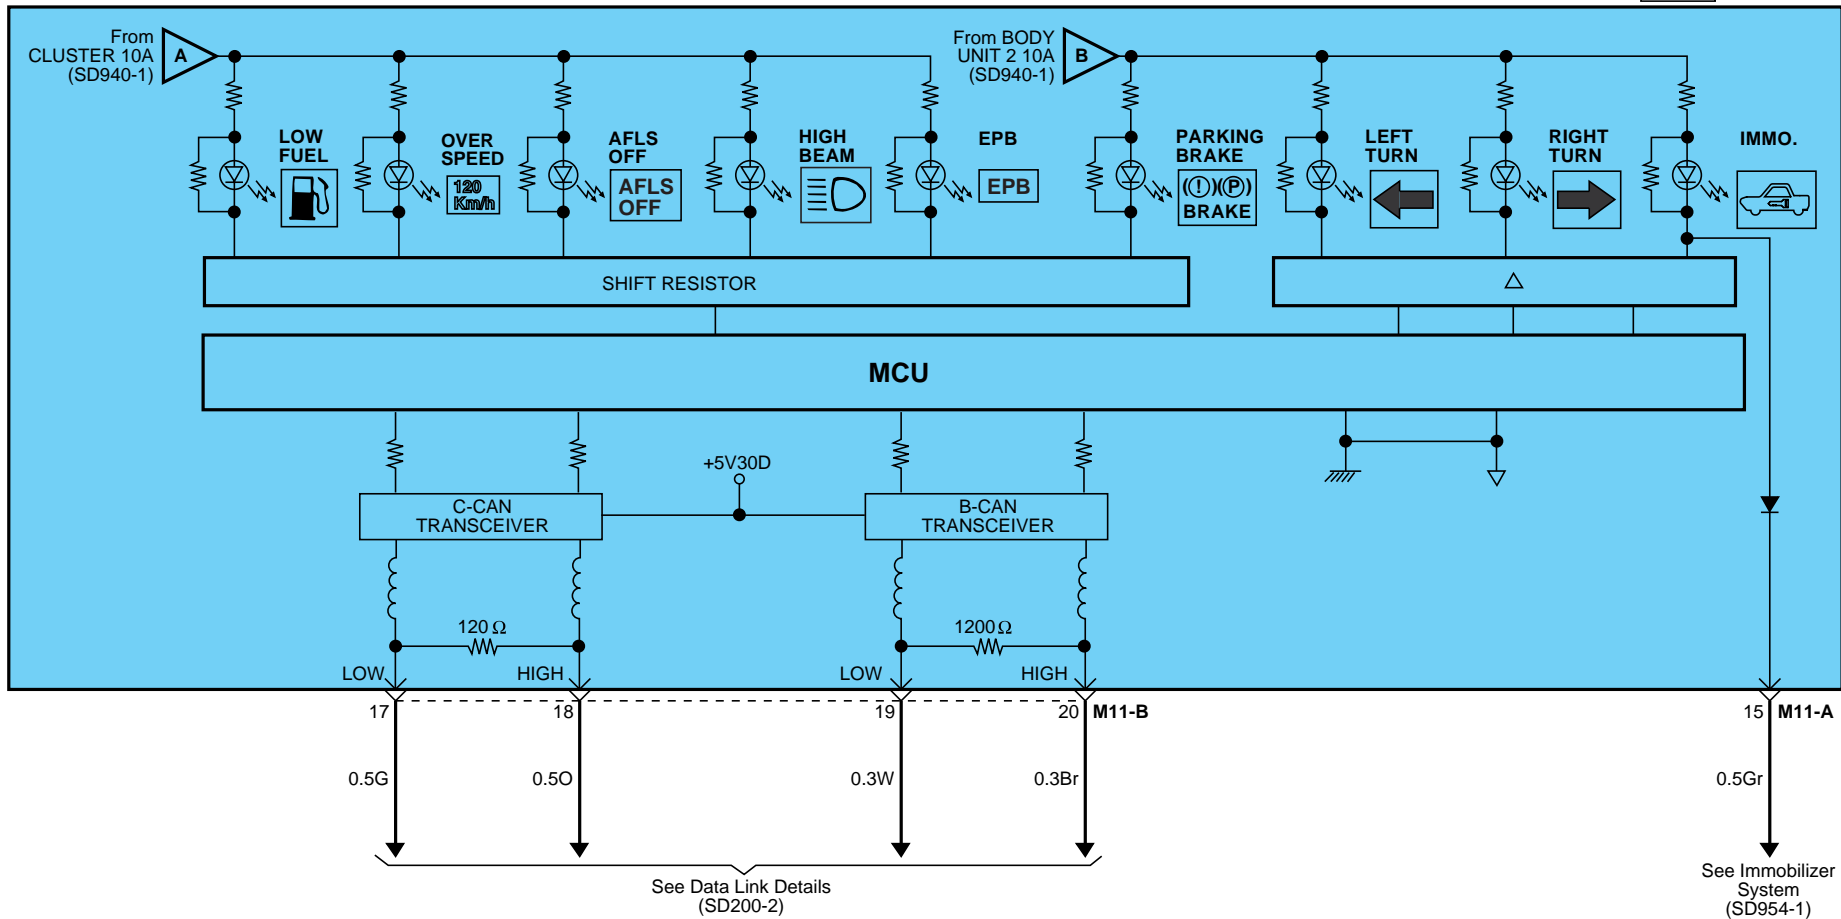

INDICATOR & GAUGES (SUPERVISION TYPE)

Indicator & Gauges (Supervision Type) (3)


SD940-3

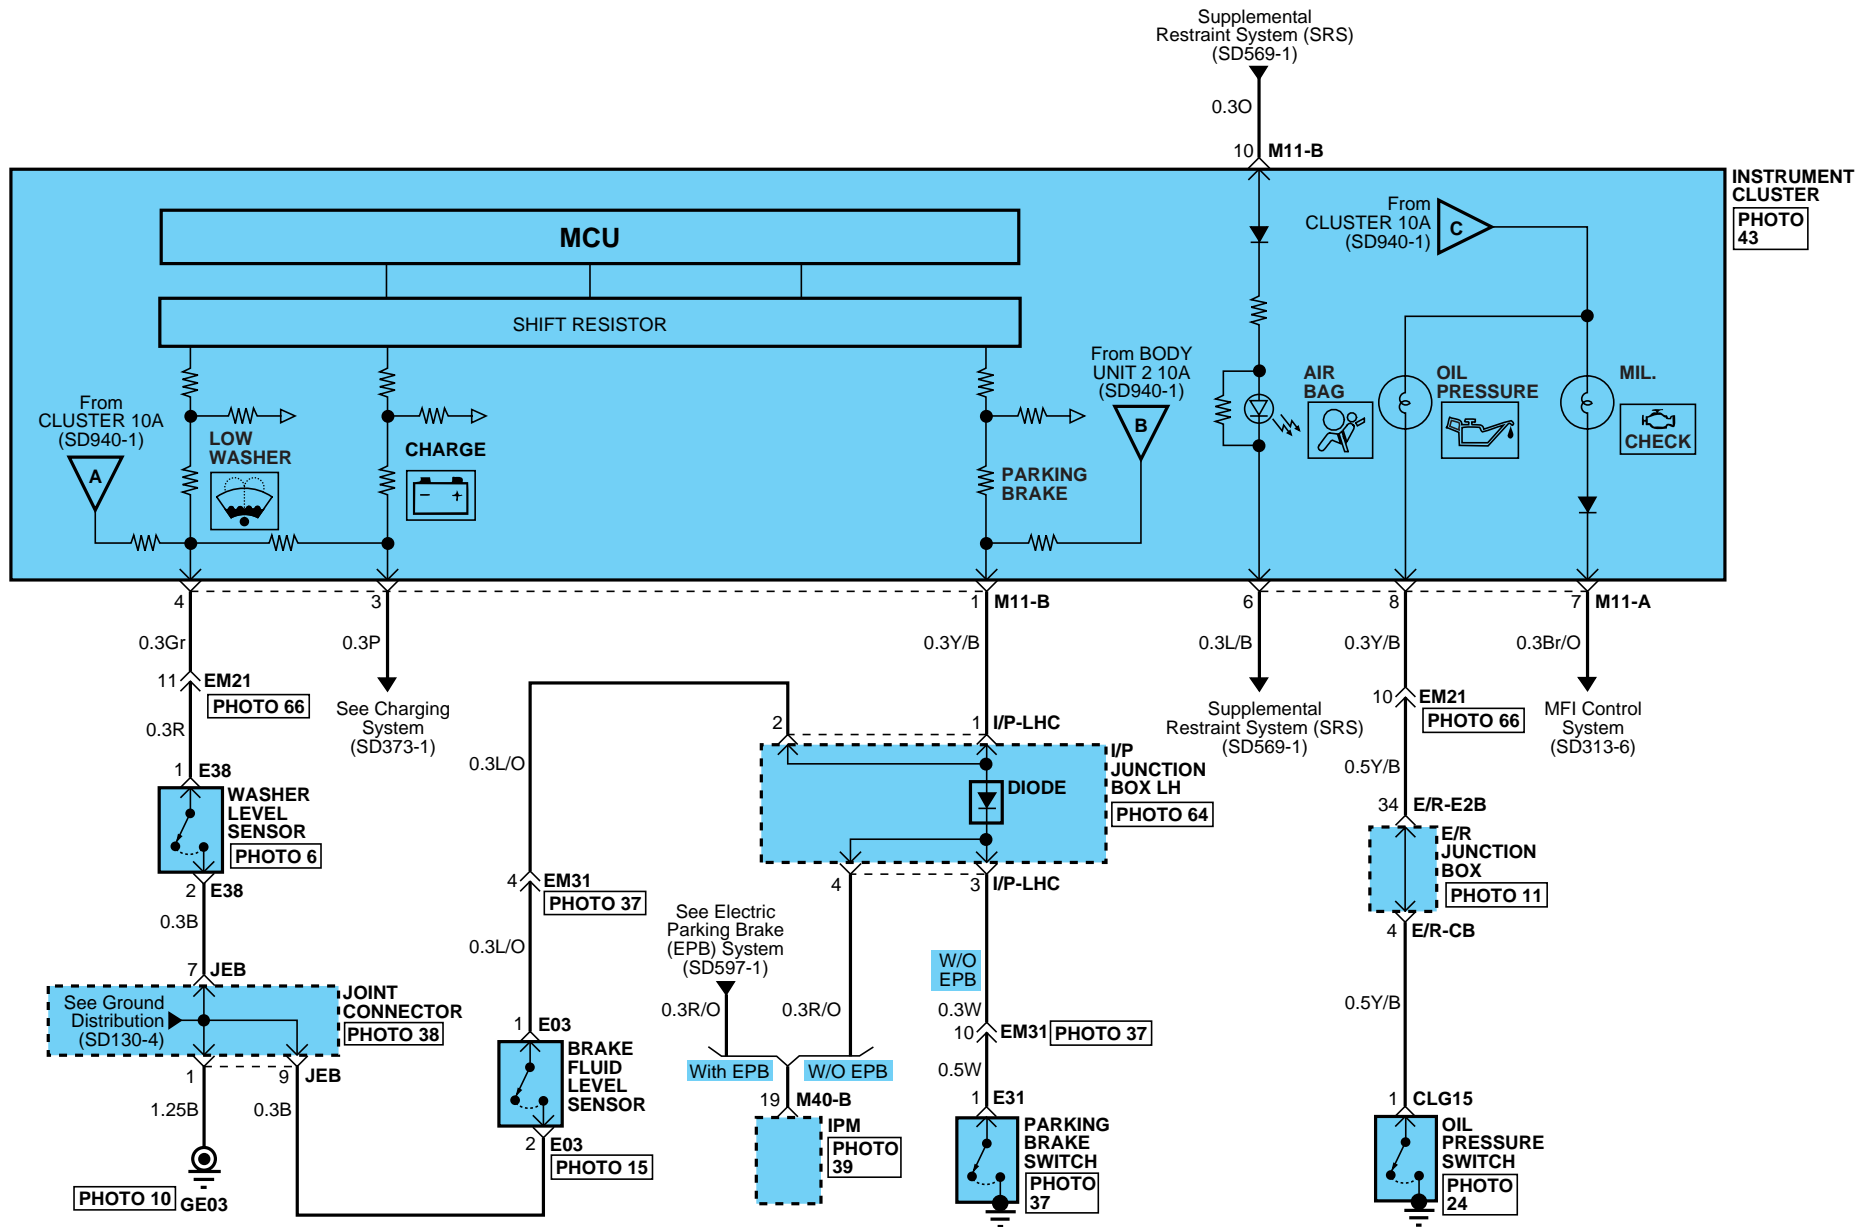

INDICATOR & GAUGES (SUPERVISION TYPE)

Indicator & Gauges (Supervision Type) (4)


SD940-4

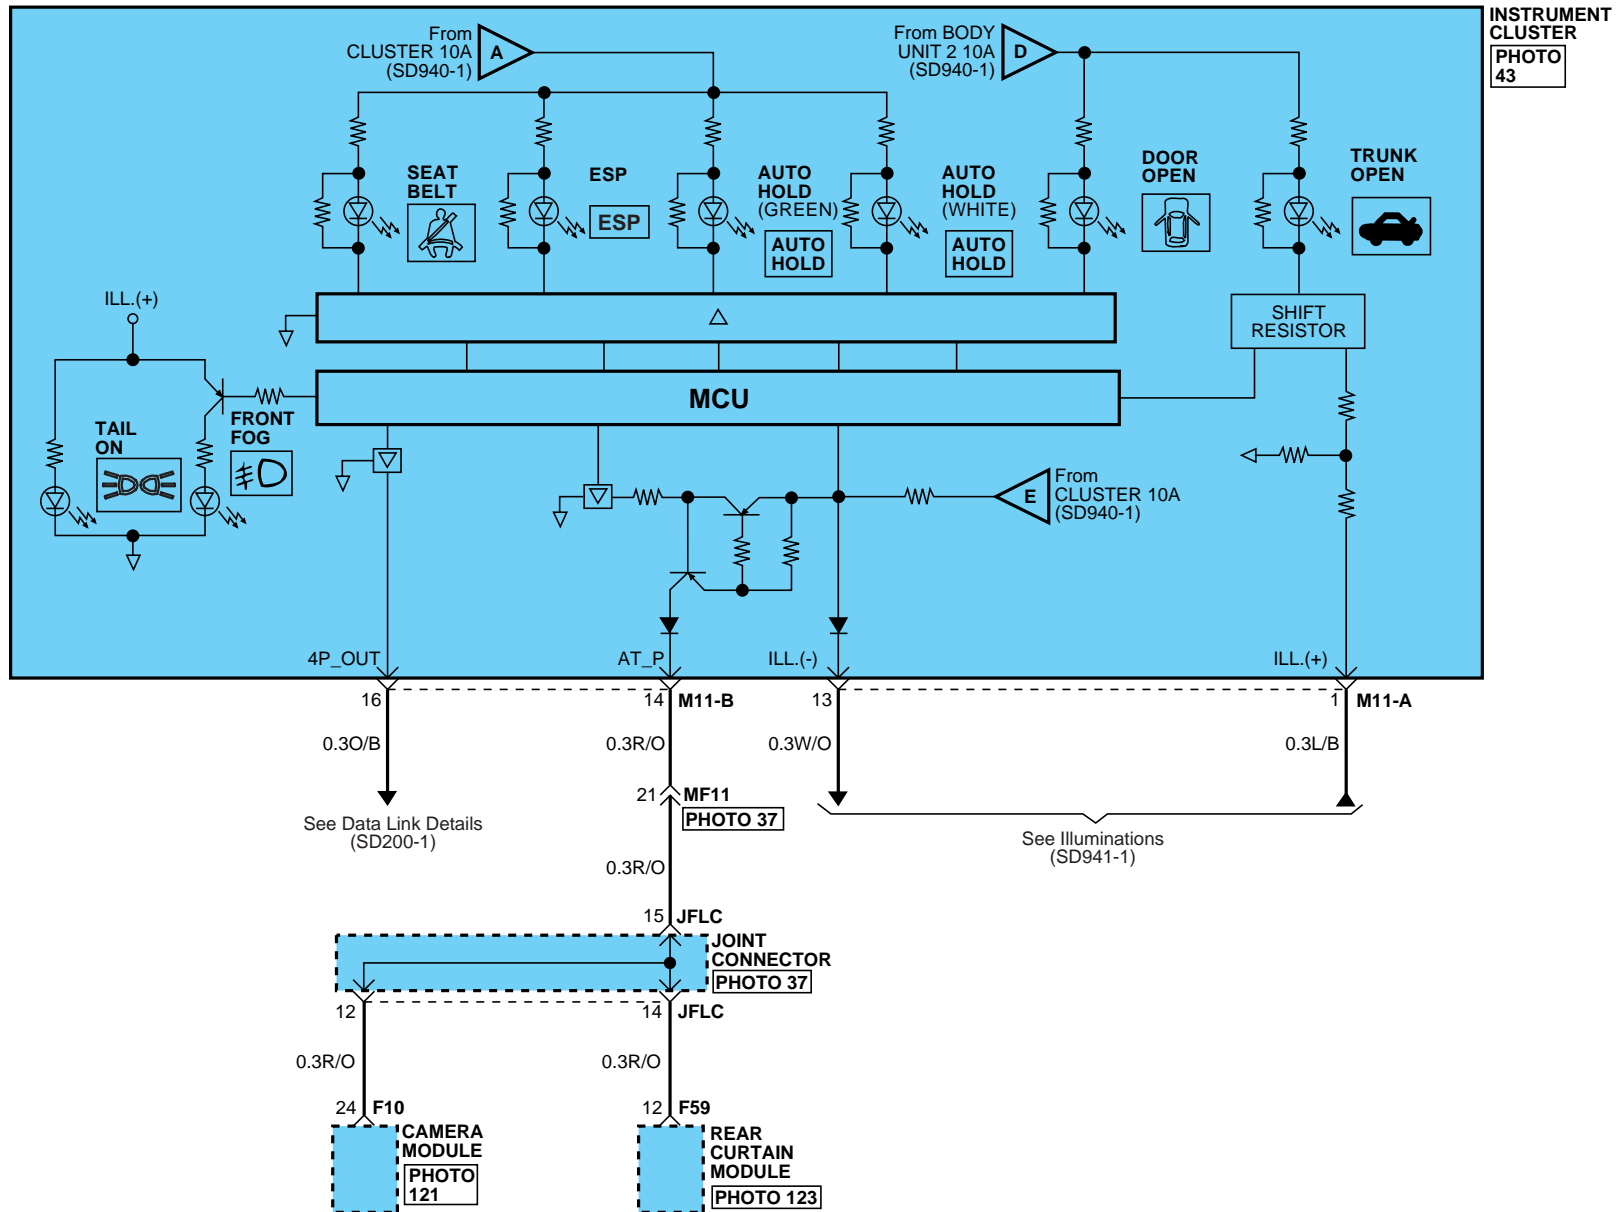

INDICATOR & GAUGES (SUPERVISION TYPE)

Indicator & Gauges (Supervision Type) (5)

SD940-5

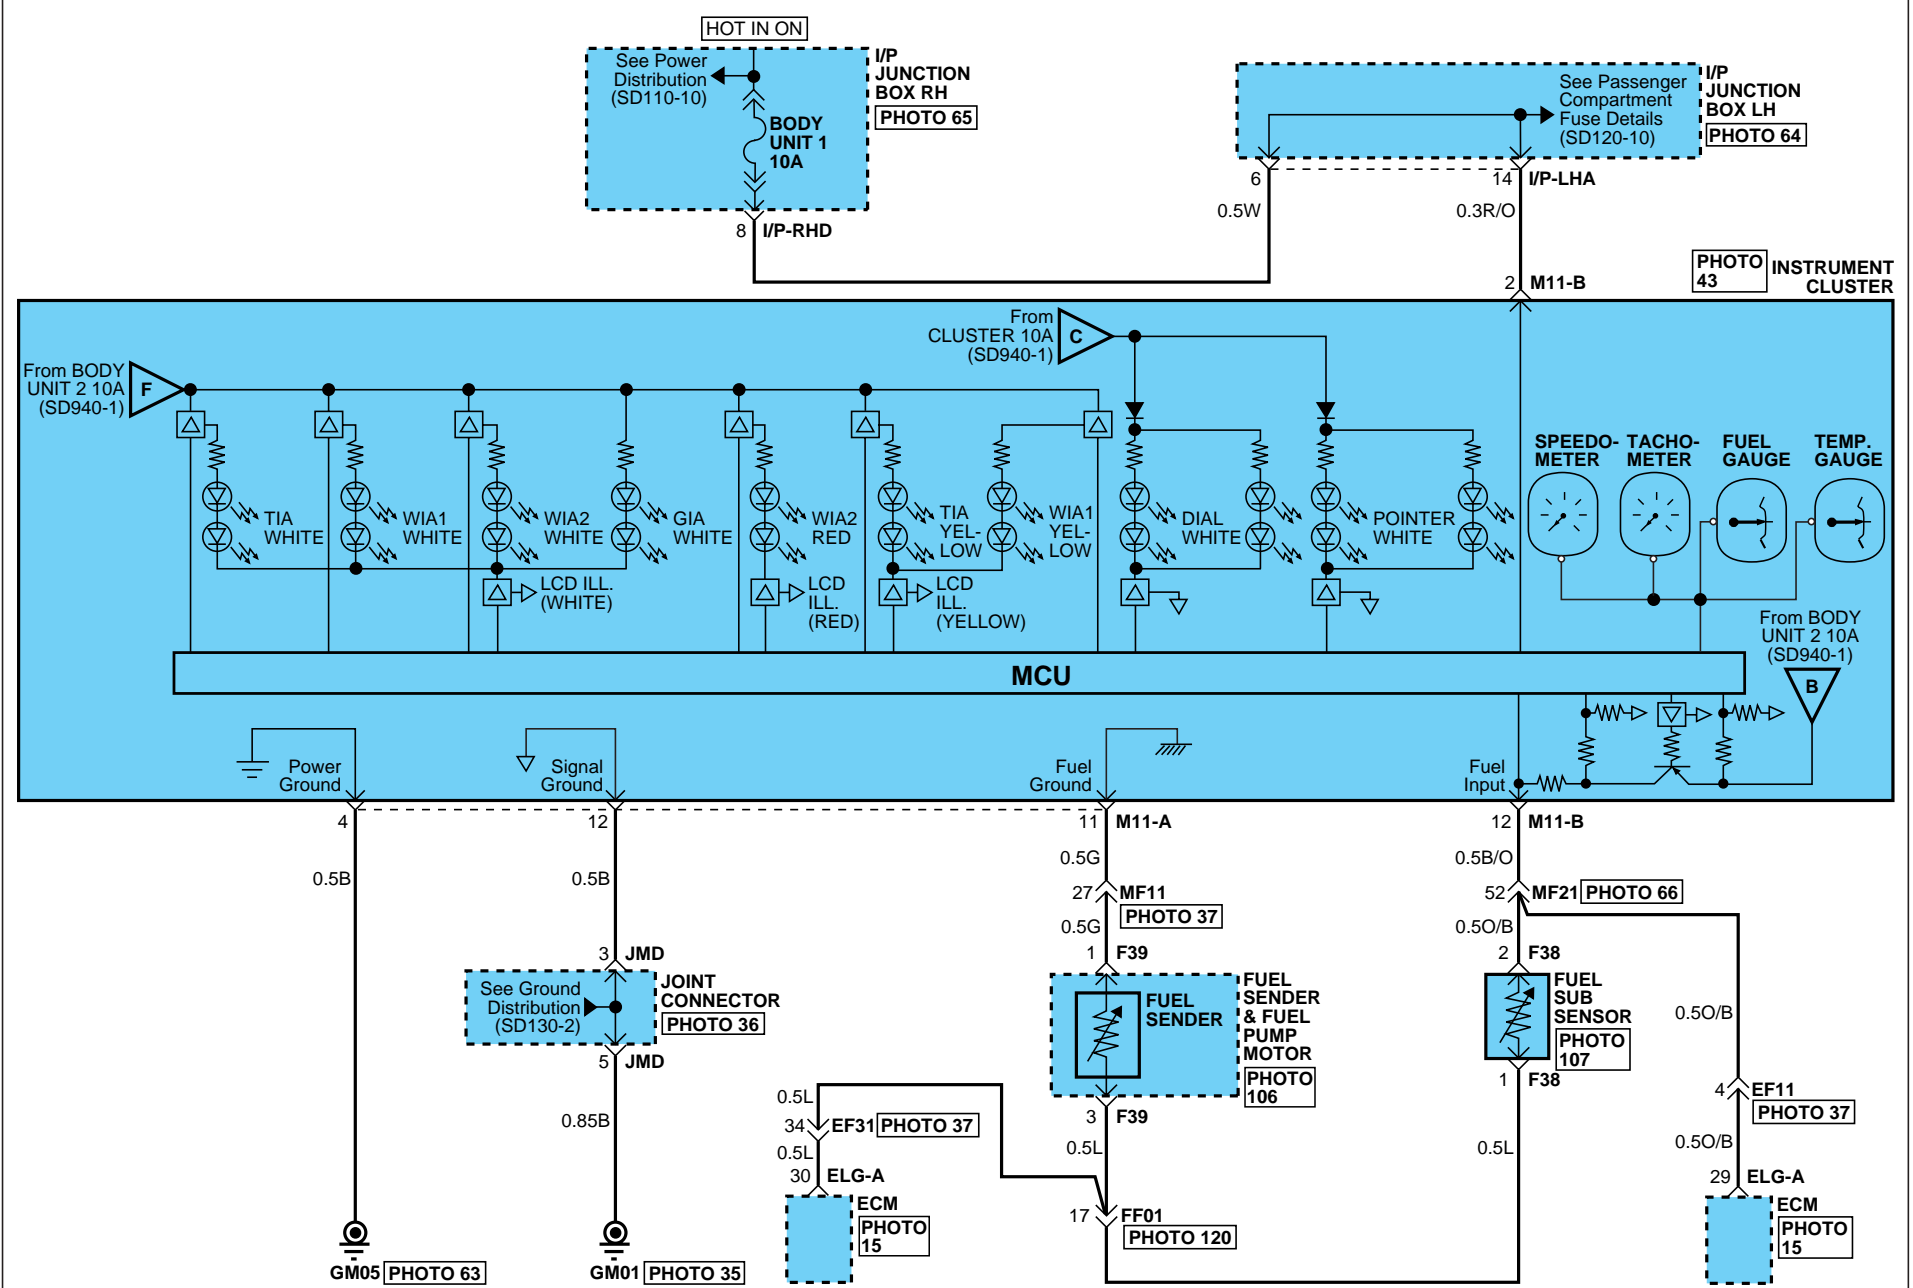


INDICATOR & GAUGES (SUPERVISION TYPE)

Indicator & Gauges (Supervision Type) (6)

SD940-6

ELG-A

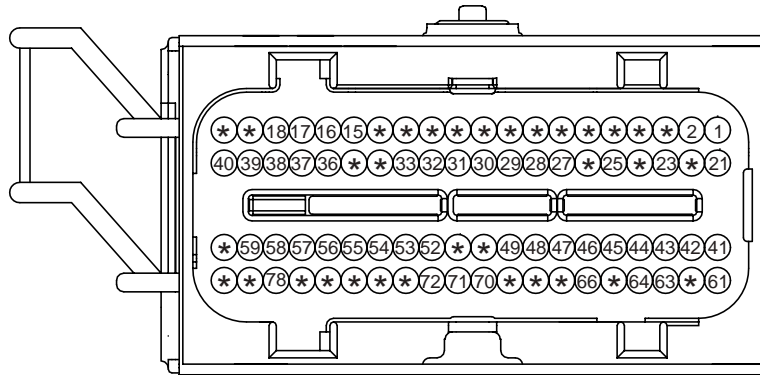


PKD_ECU_80F_Gr_1

CLG15




KUM_NMWP_01F_B

E03

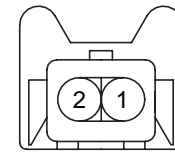


AMP_JPT_02F_B_S1

 E31




AMP_250DL_01F_B

E38

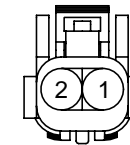


YAZ_62Z_02F_BR

 F10




AMP_040II_24F_B

 F38




AMP_090WP_02F_B

F39

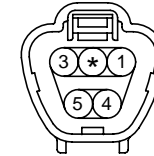


KET_090IWP_05F_Gr_2

 F59




AMP_070_14F_W

M11-A

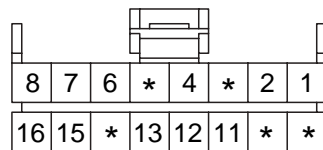


AMP_040M1_16F_B

M11-B

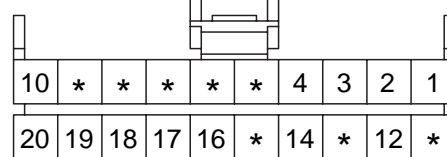

AMP_040M1_20F_B

 M40-B




AMP_0407_26F_W_HD

BLANK

Indicator & Gauges (Analog Type) (1)


SD940-7

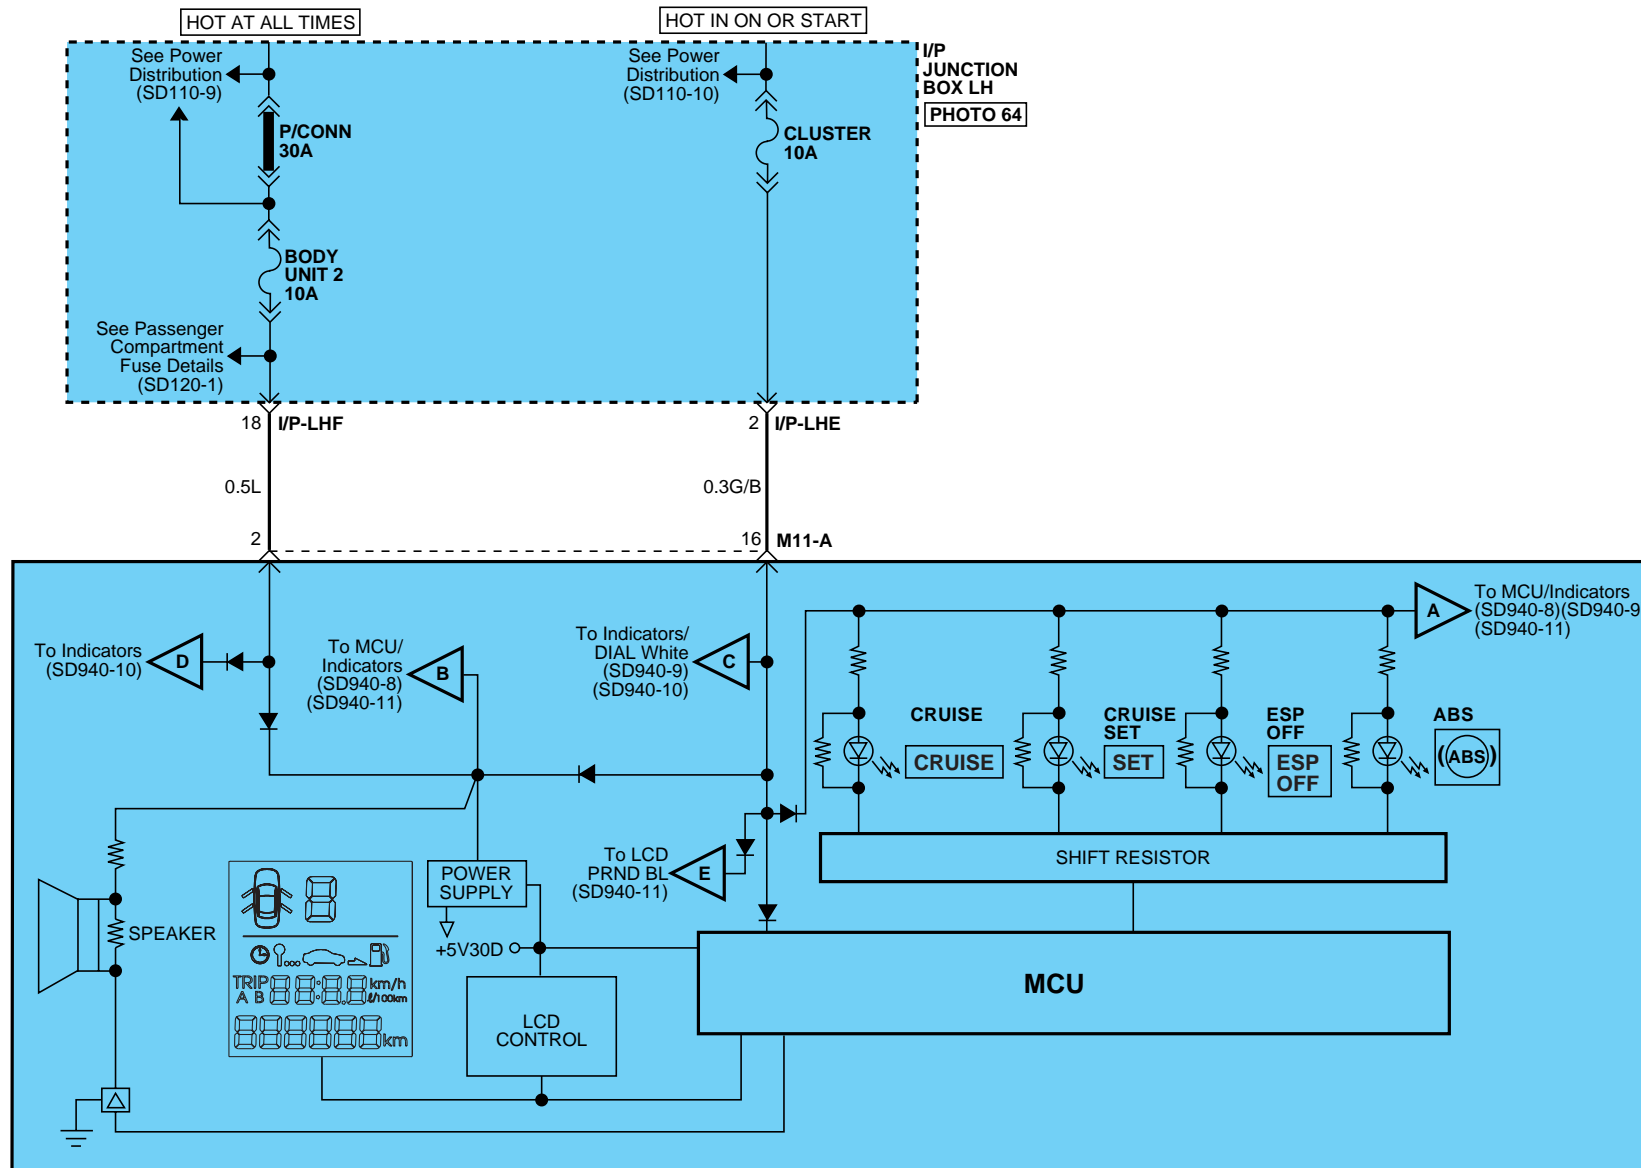

INDICATOR & GAUGES (ANALOG TYPE)

Indicator & Gauges (Analog Type) (2)


SD940-8

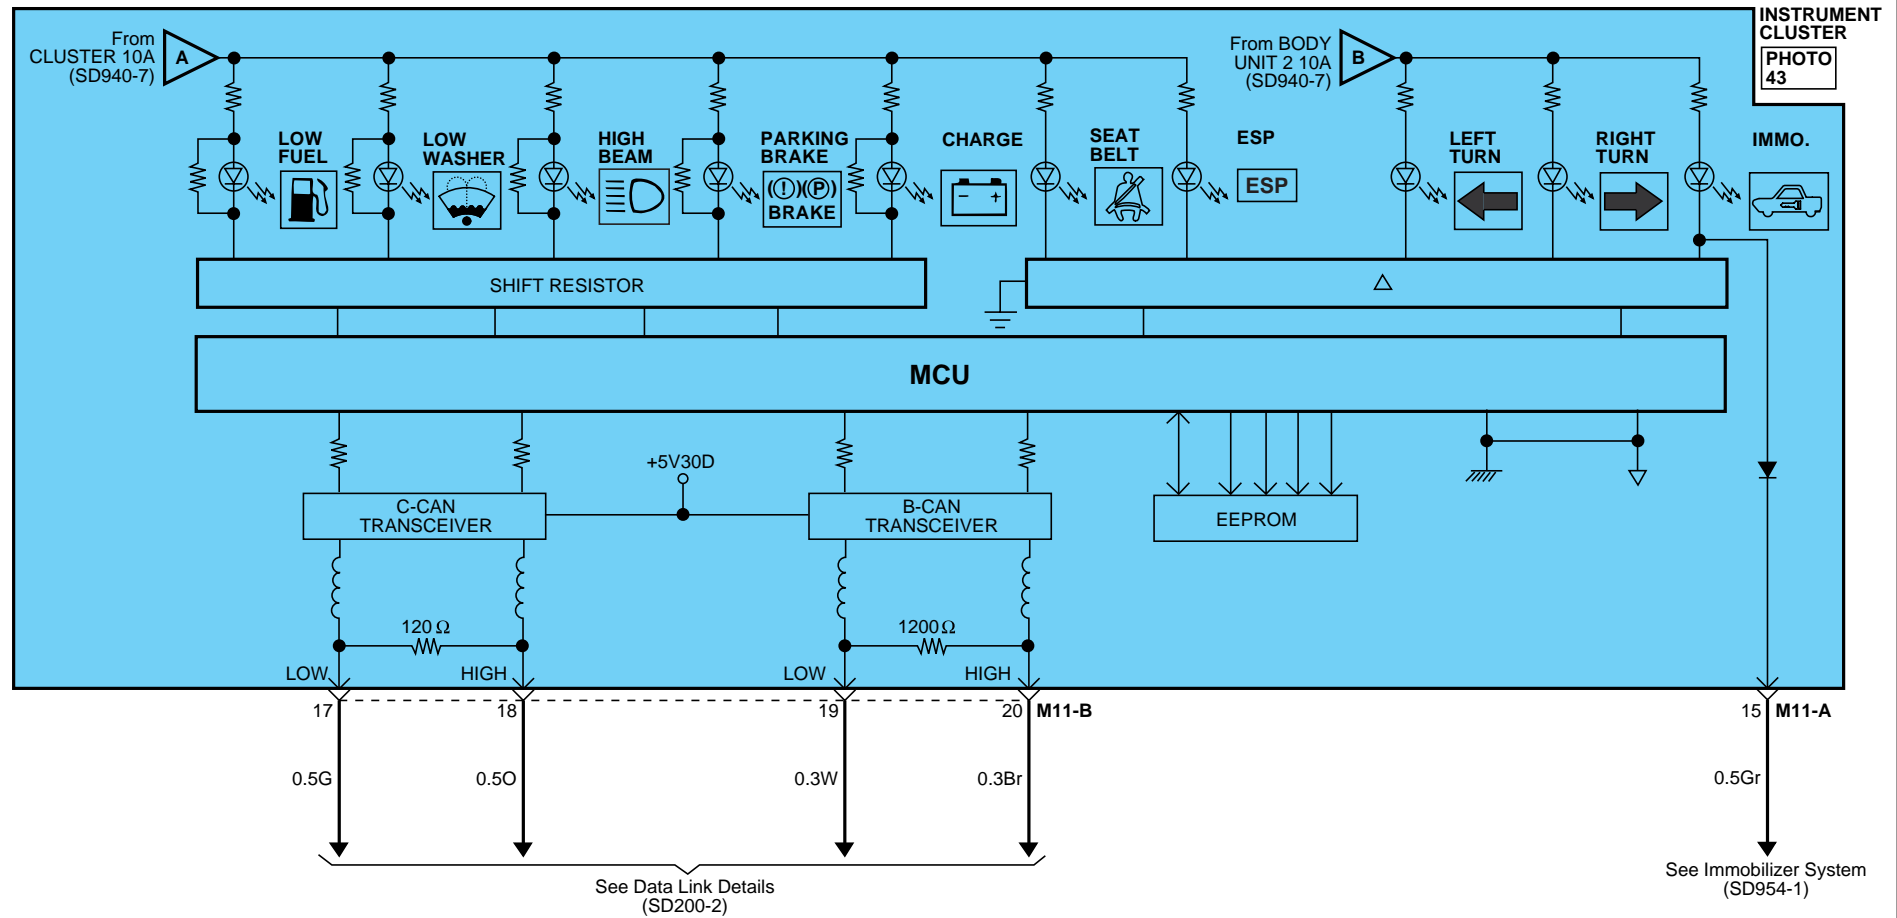

INDICATOR & GAUGES (ANALOG TYPE)

Indicator & Gauges (Analog Type) (3)


SD940-9

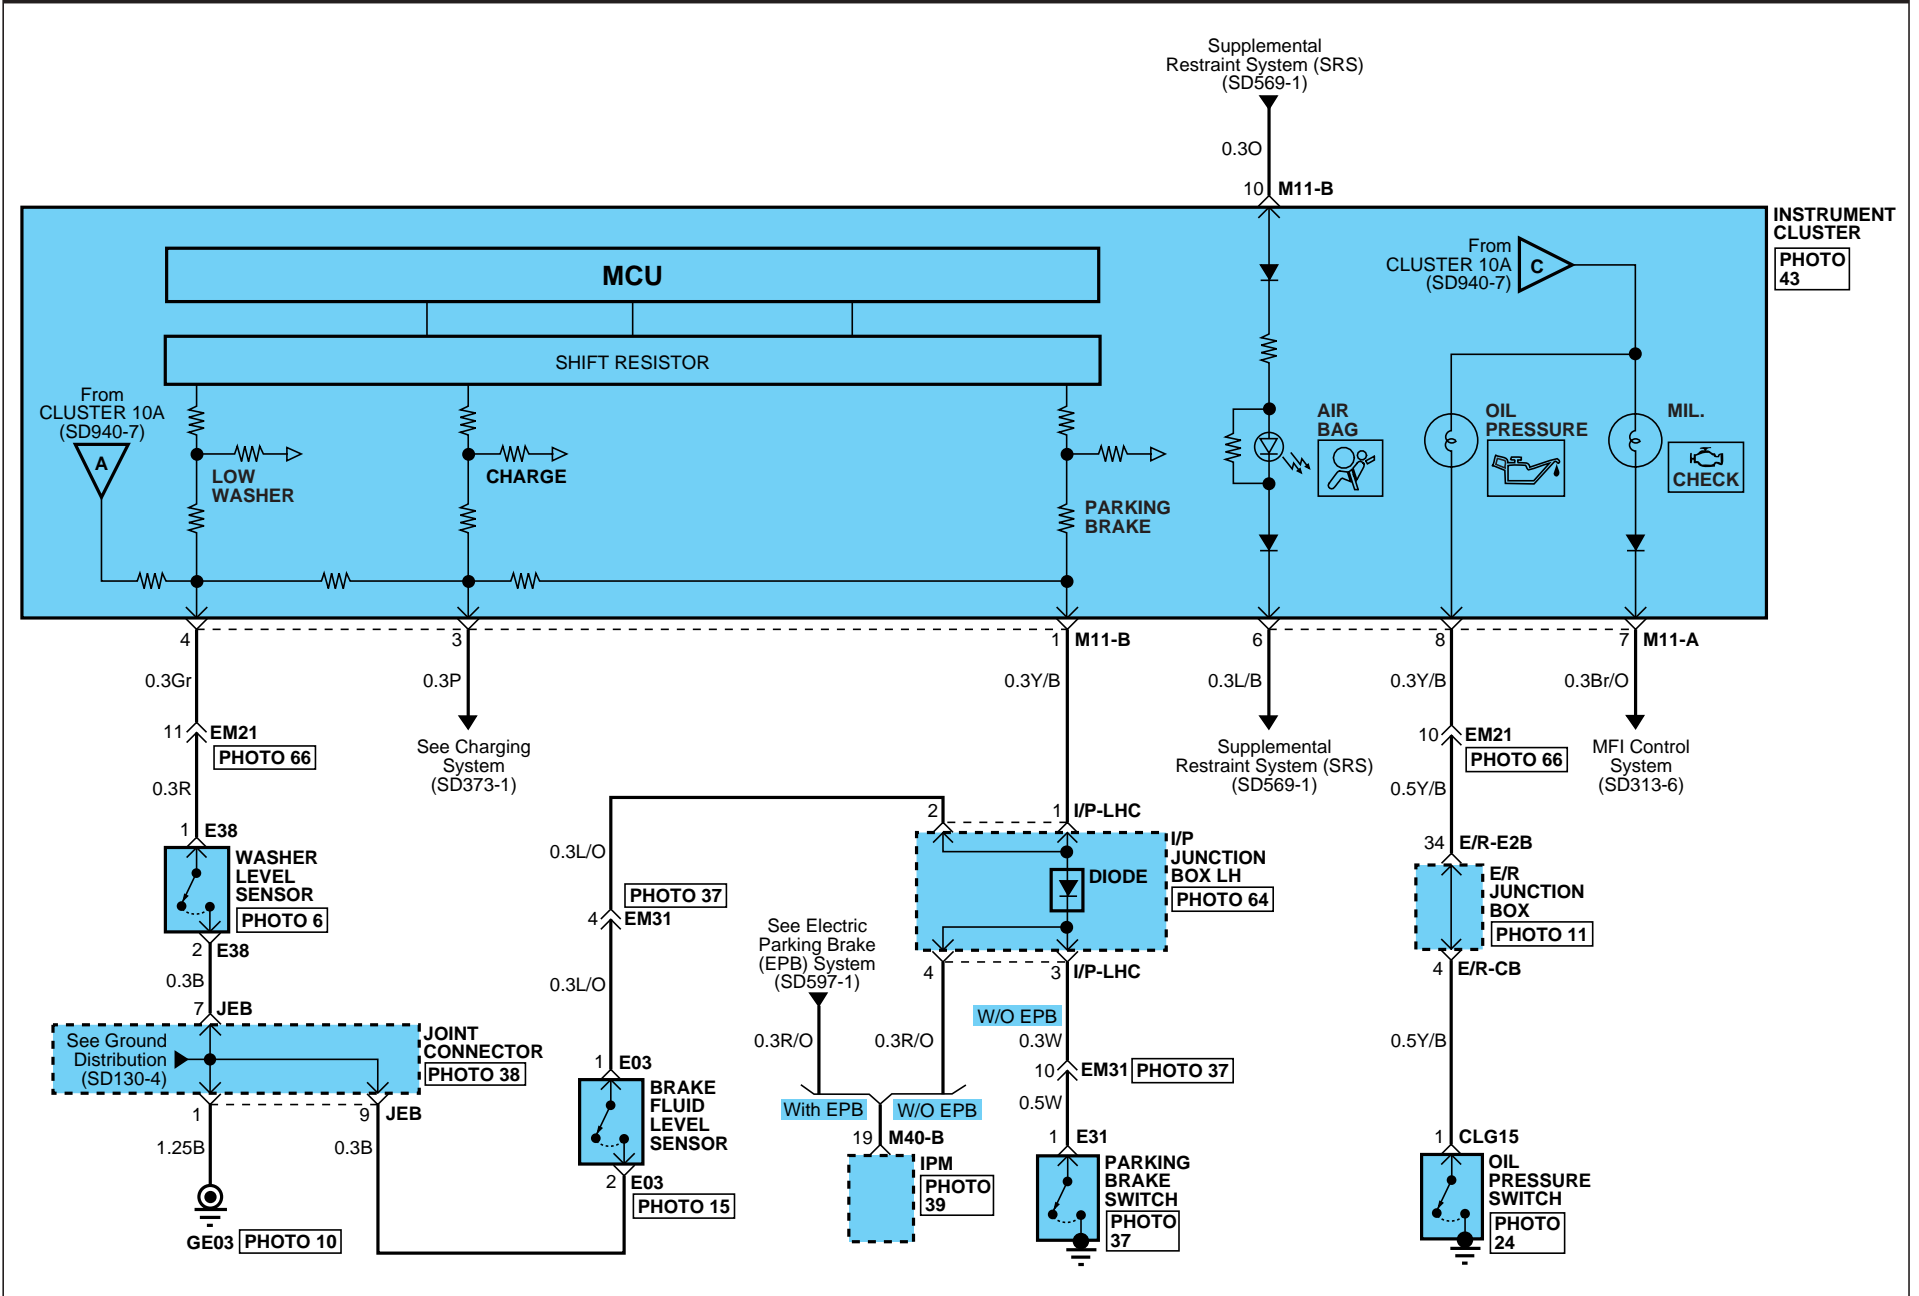

INDICATOR & GAUGES (ANALOG TYPE)

Indicator & Gauges (Analog Type) (4)


SD940-10

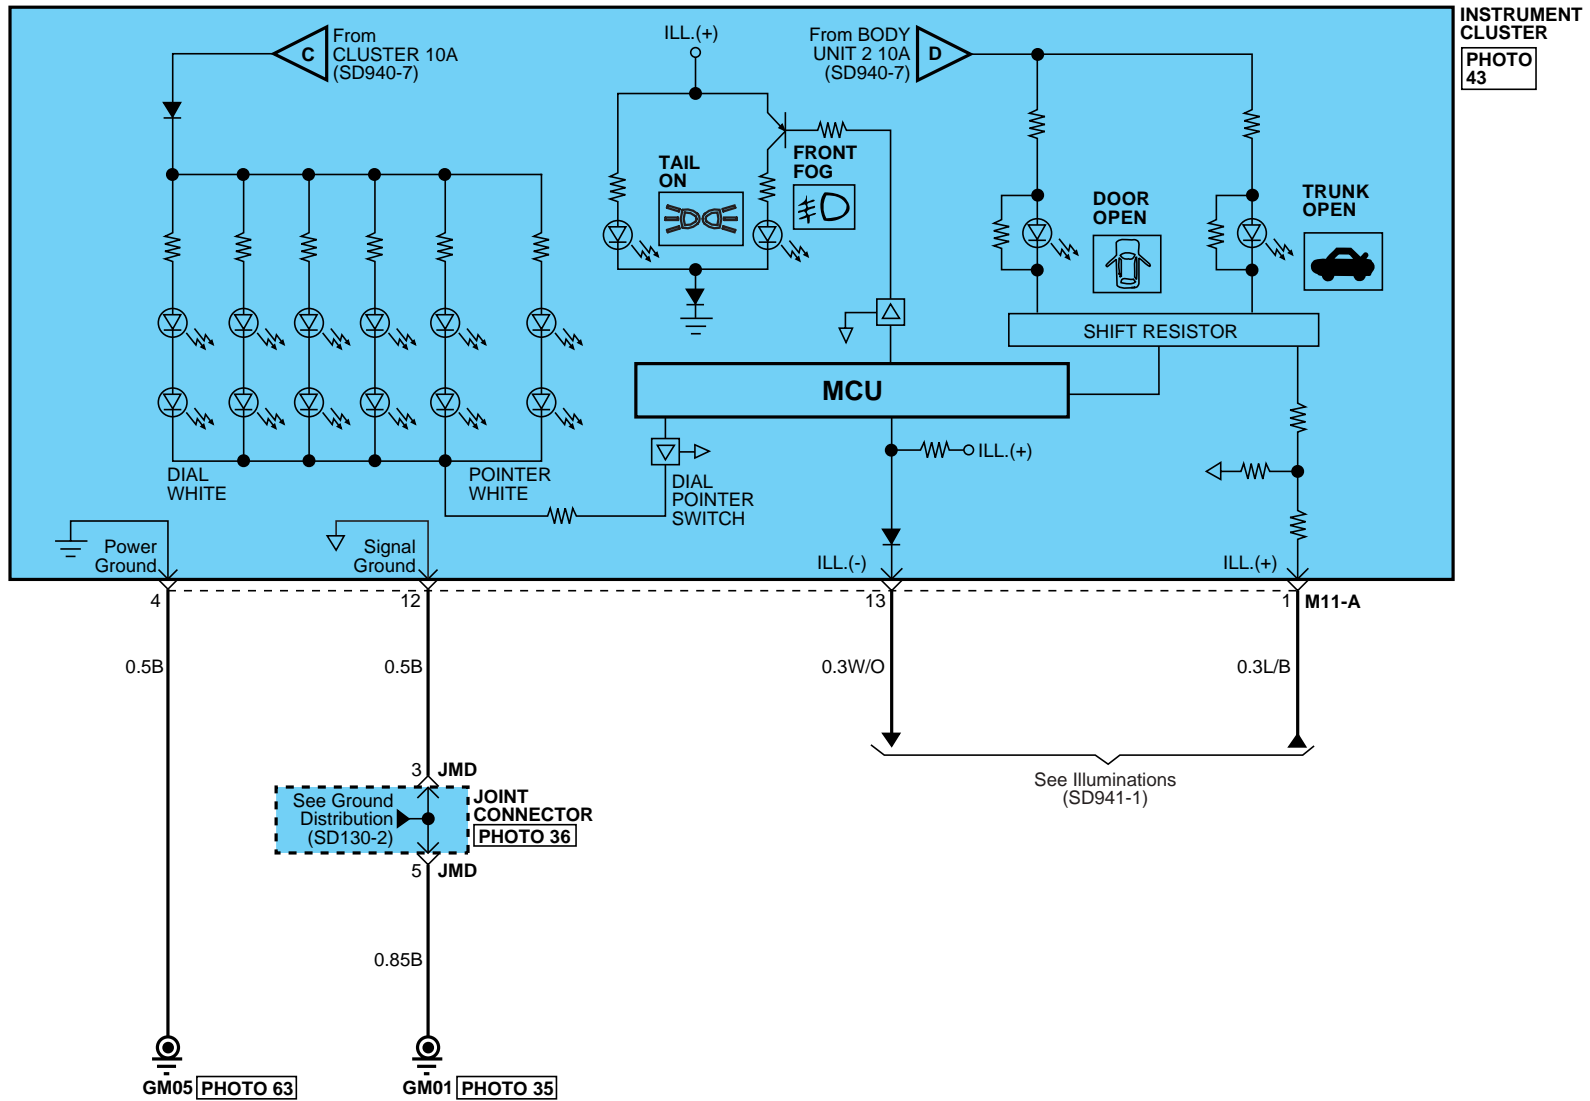

INDICATOR & GAUGES (ANALOG TYPE)

Indicator & Gauges (Analog Type) (5)

SD940-11

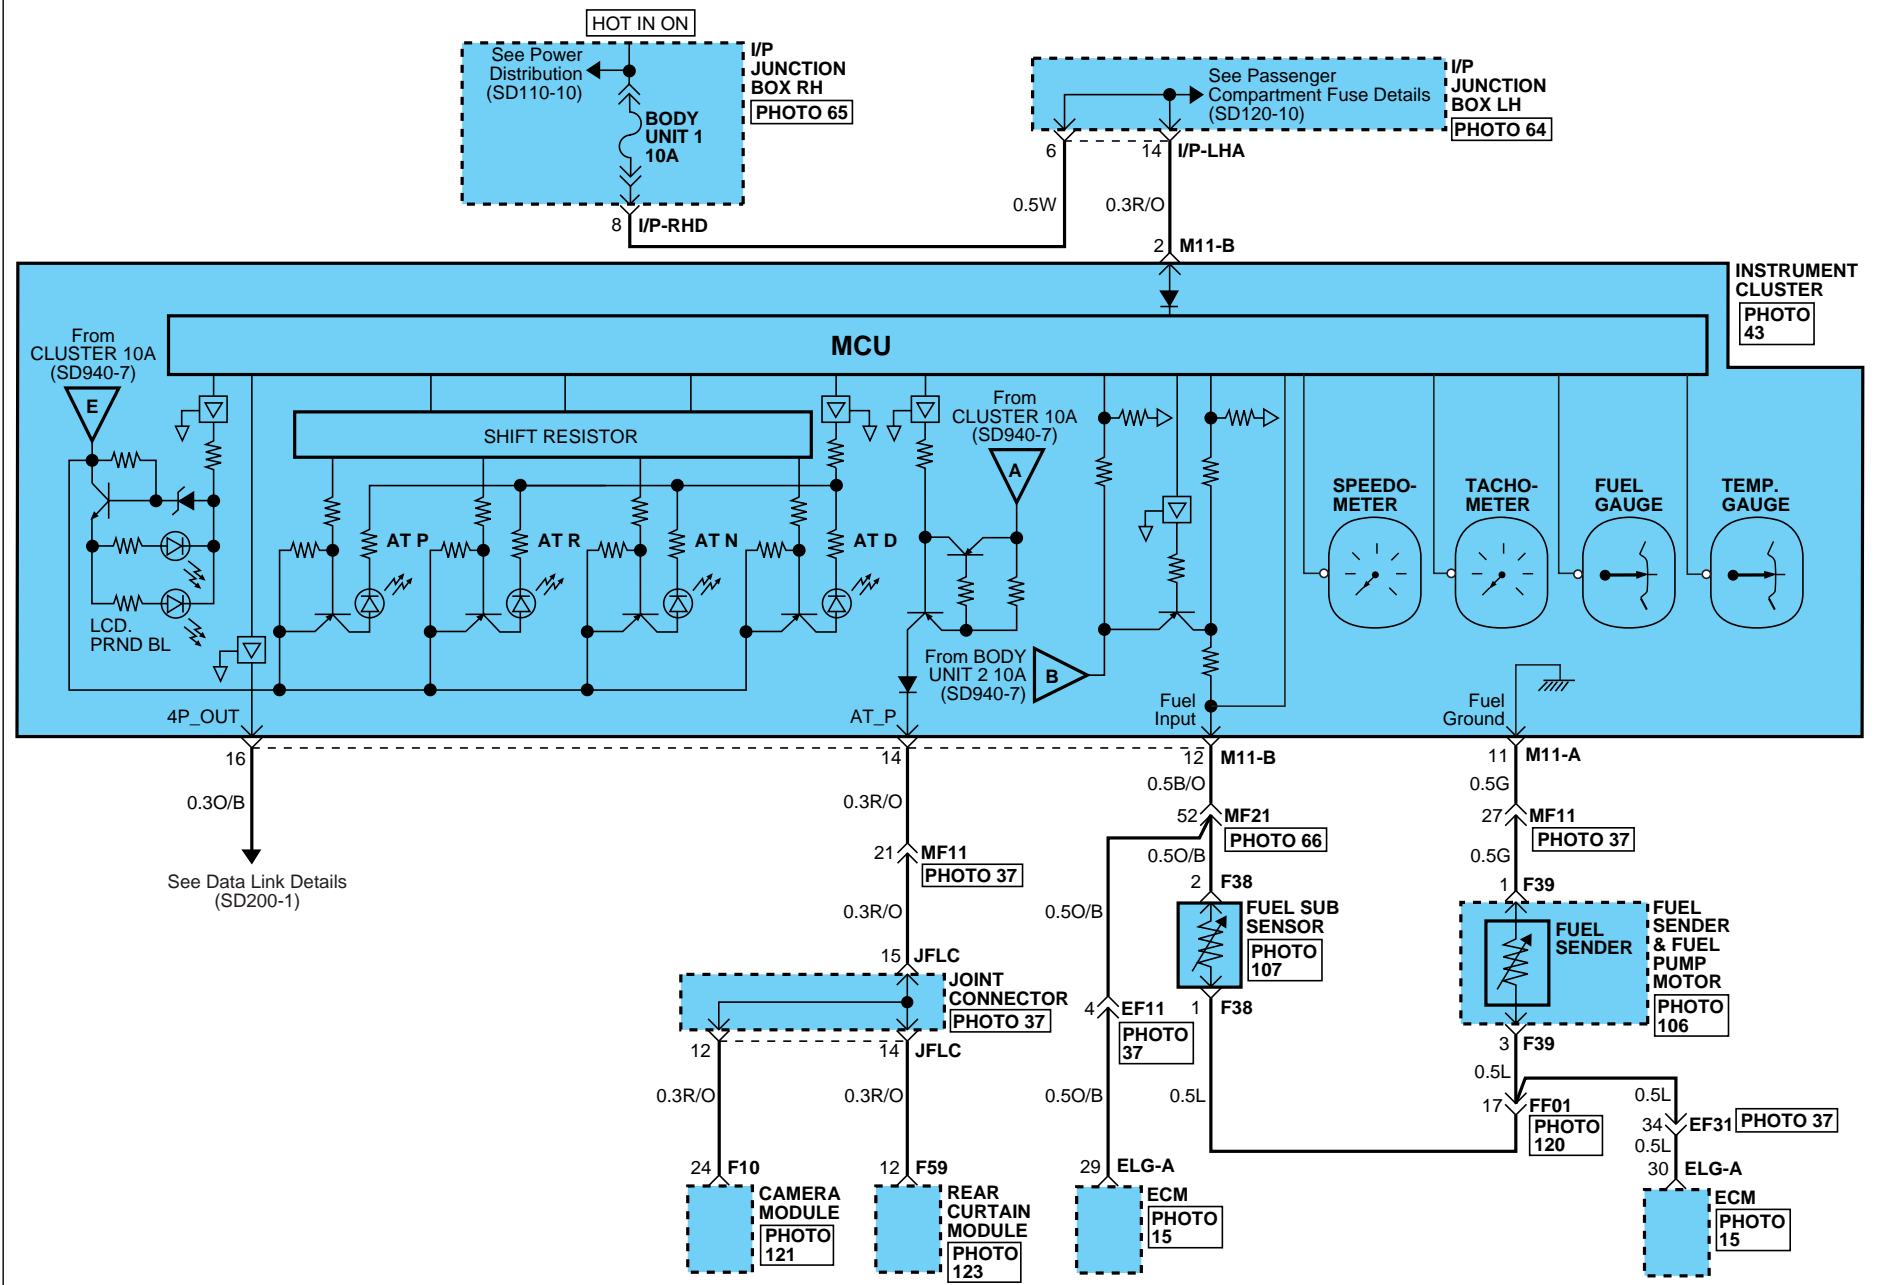


INDICATOR & GAUGES (ANALOG TYPE)

Indicator & Gauges (Analog Type) (6)

SD940-12

ELG-A

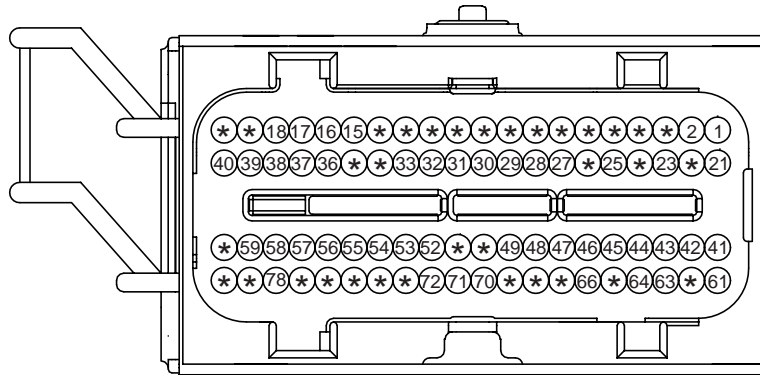


PKD_ECU_80F_Gr_1

CLG15




KUM_NMWP_01F_B

E03

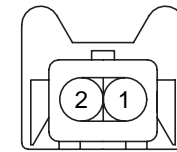


AMP_JPT_02F_B_S1

 E31




AMP_250DL_01F_B

E38

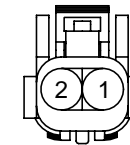


YAZ_62Z_02F_BR

 F10




AMP_040II_24F_B

 F38




AMP_090WP_02F_B

F39

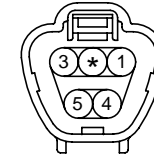


KET_090IWP_05F_Gr_2

 F59




AMP_070_14F_W

M11-A

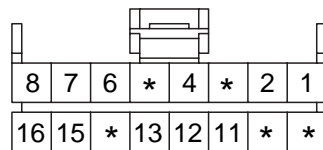


AMP_040M1_16F_B

M11-B

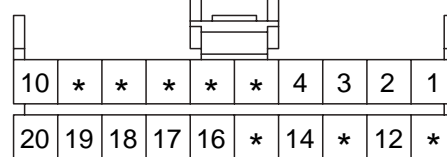

AMP_040M1_20F_B

 M40-B




AMP_0407_26F_W_HD

BLANK

Illuminations (1)


SD941-1

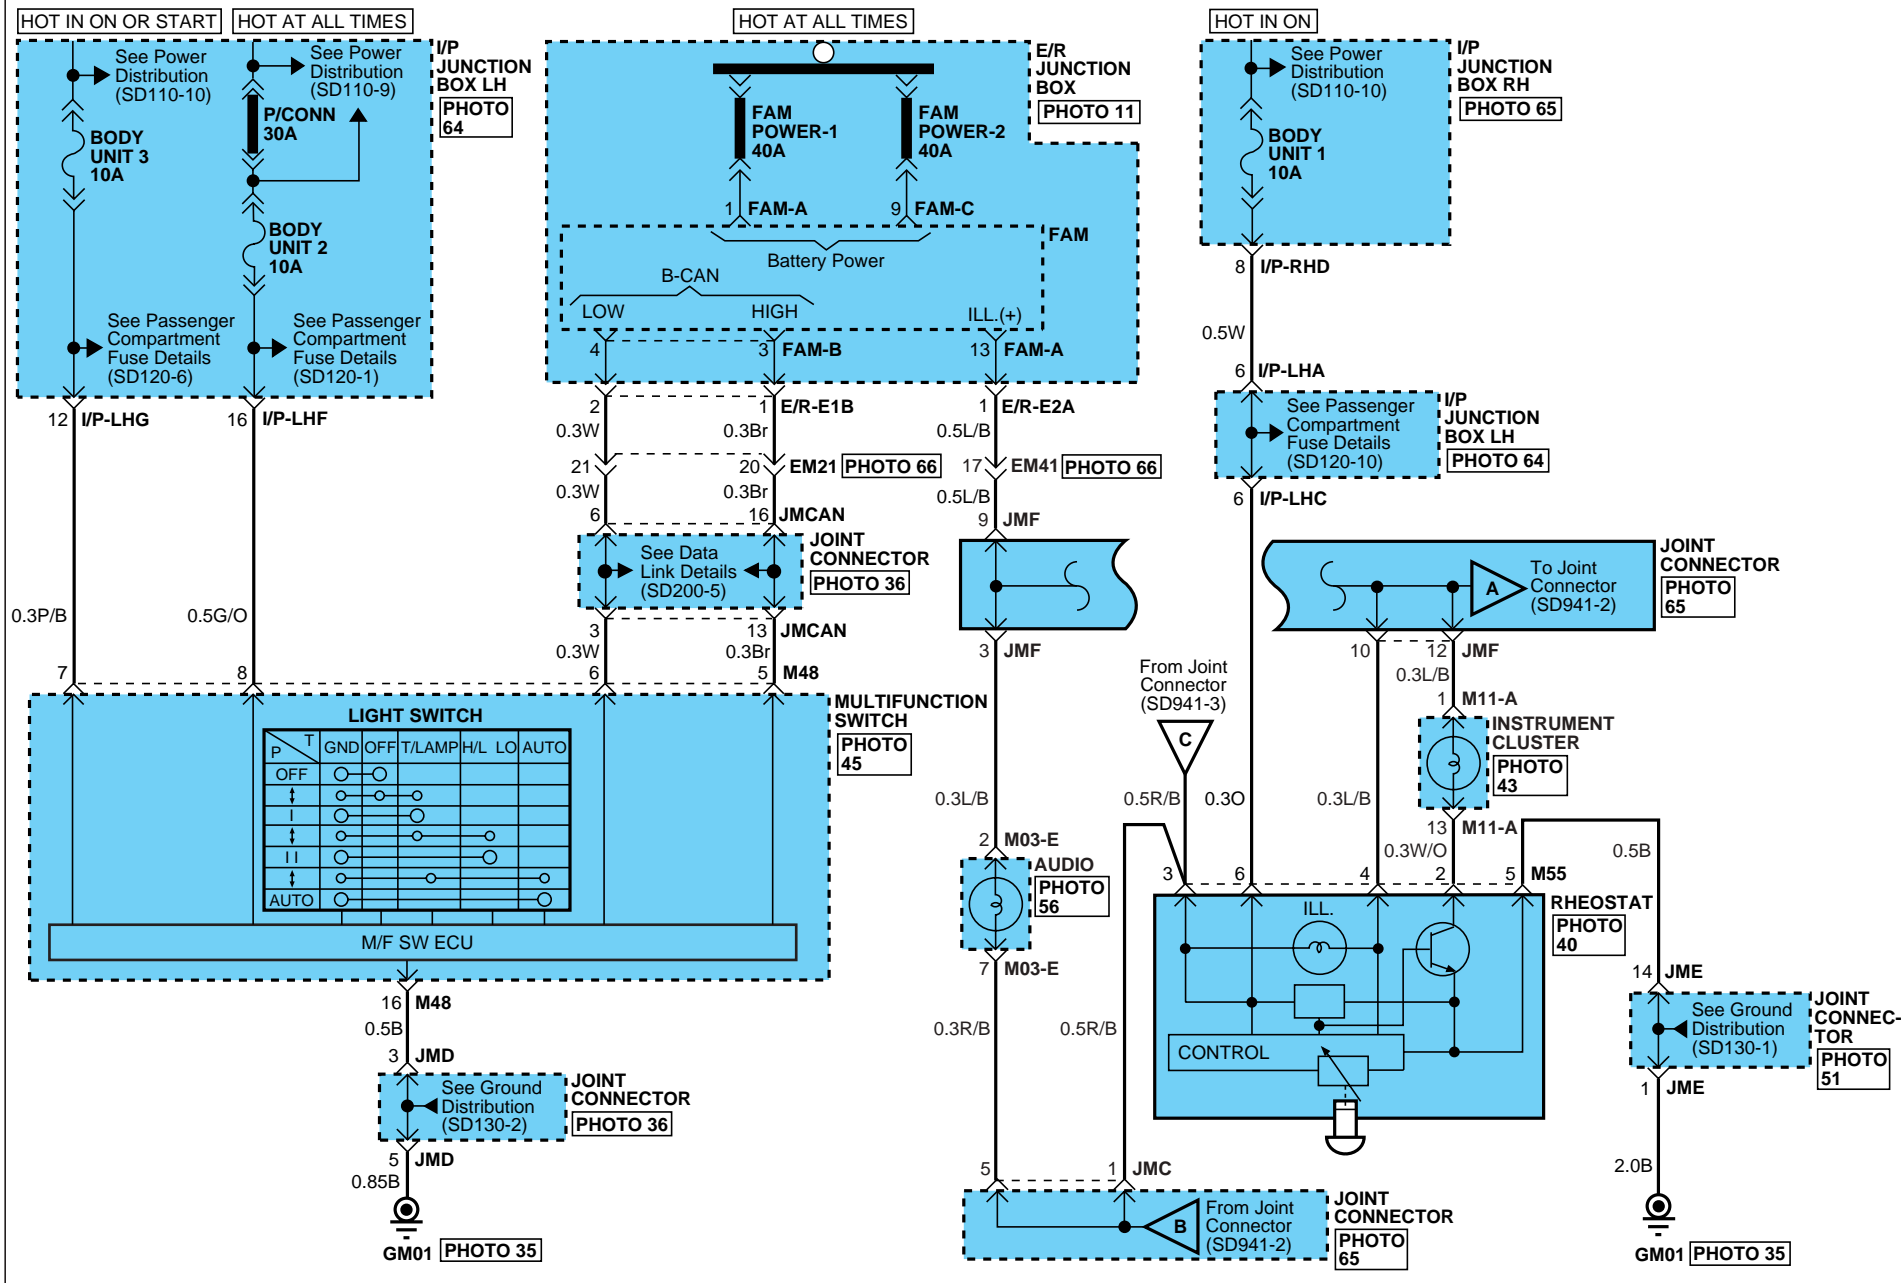

ILLUMINATIONS

Illuminations (2)


SD941-2

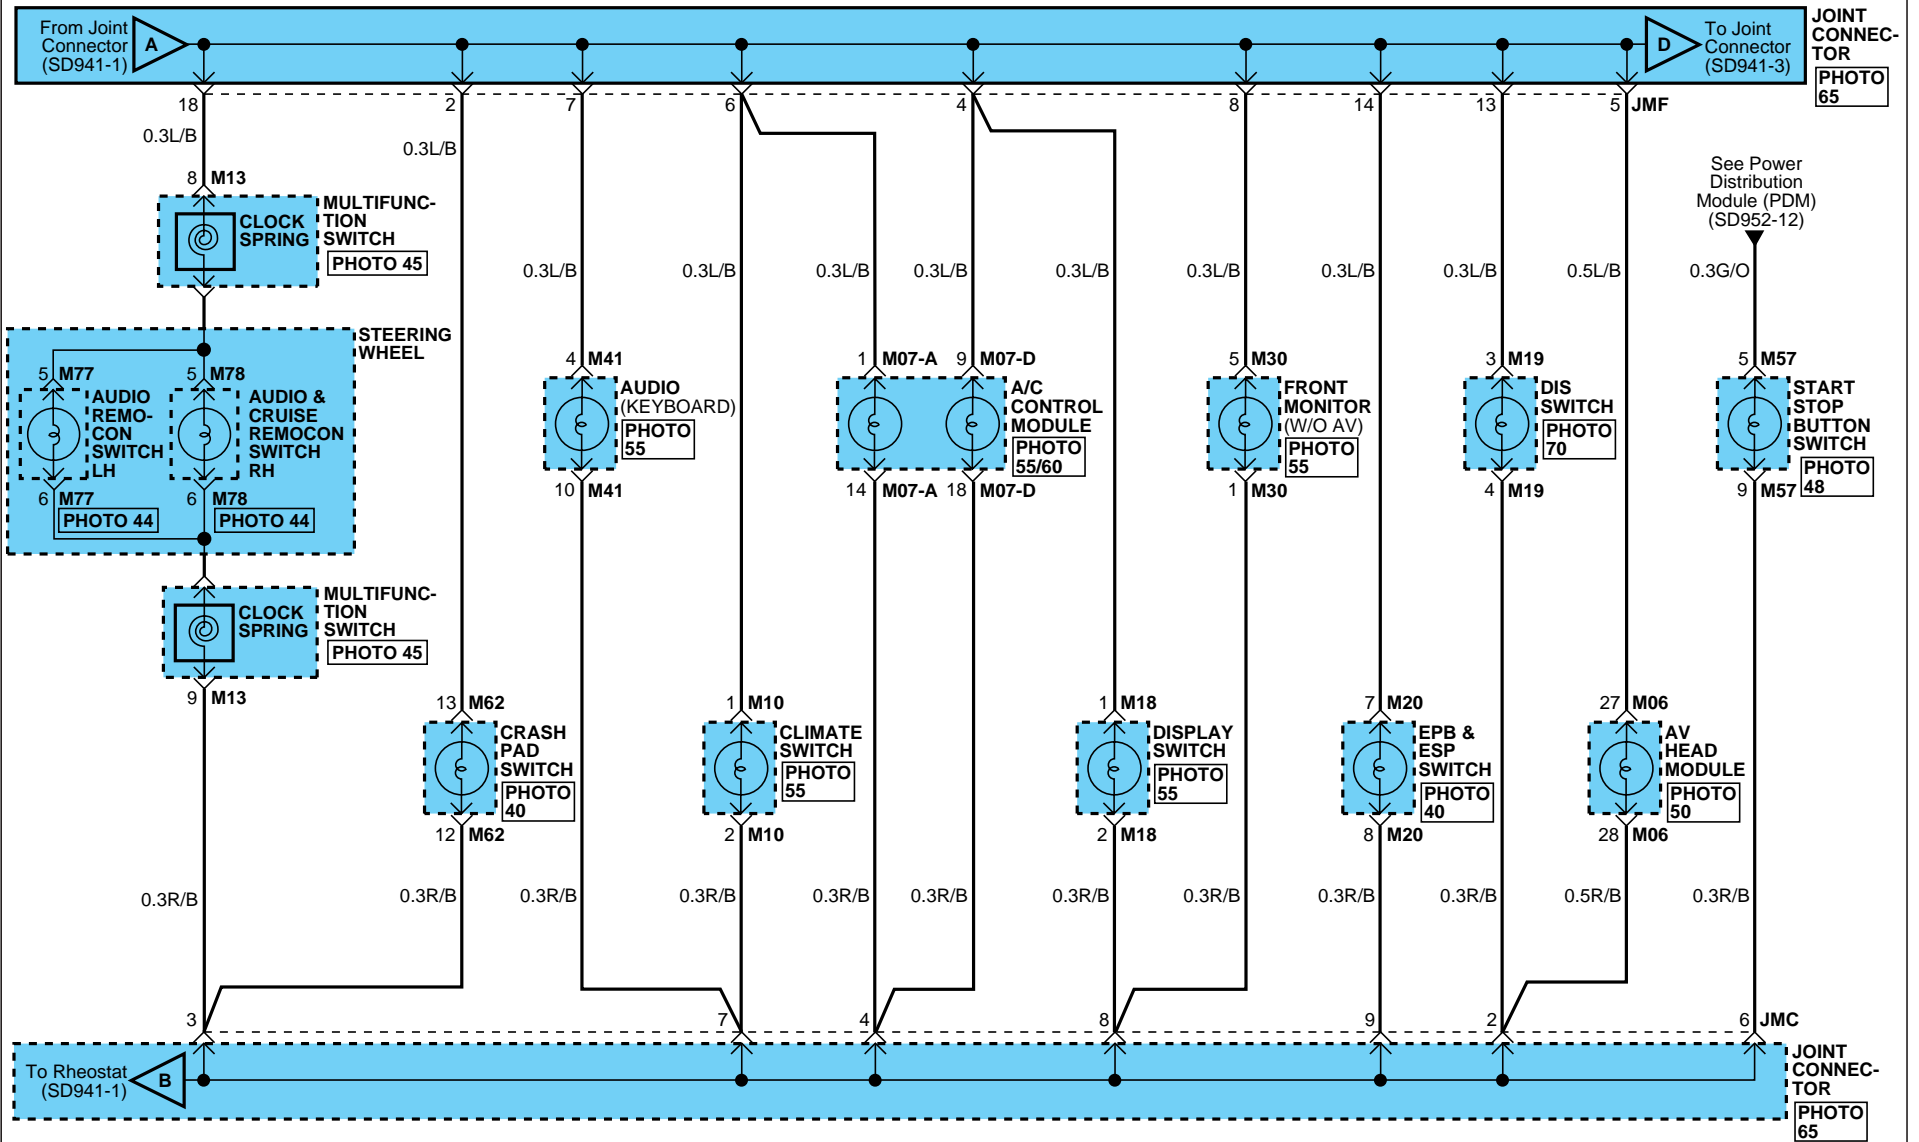

ILLUMINATIONS

Illuminations (3)


SD941-3

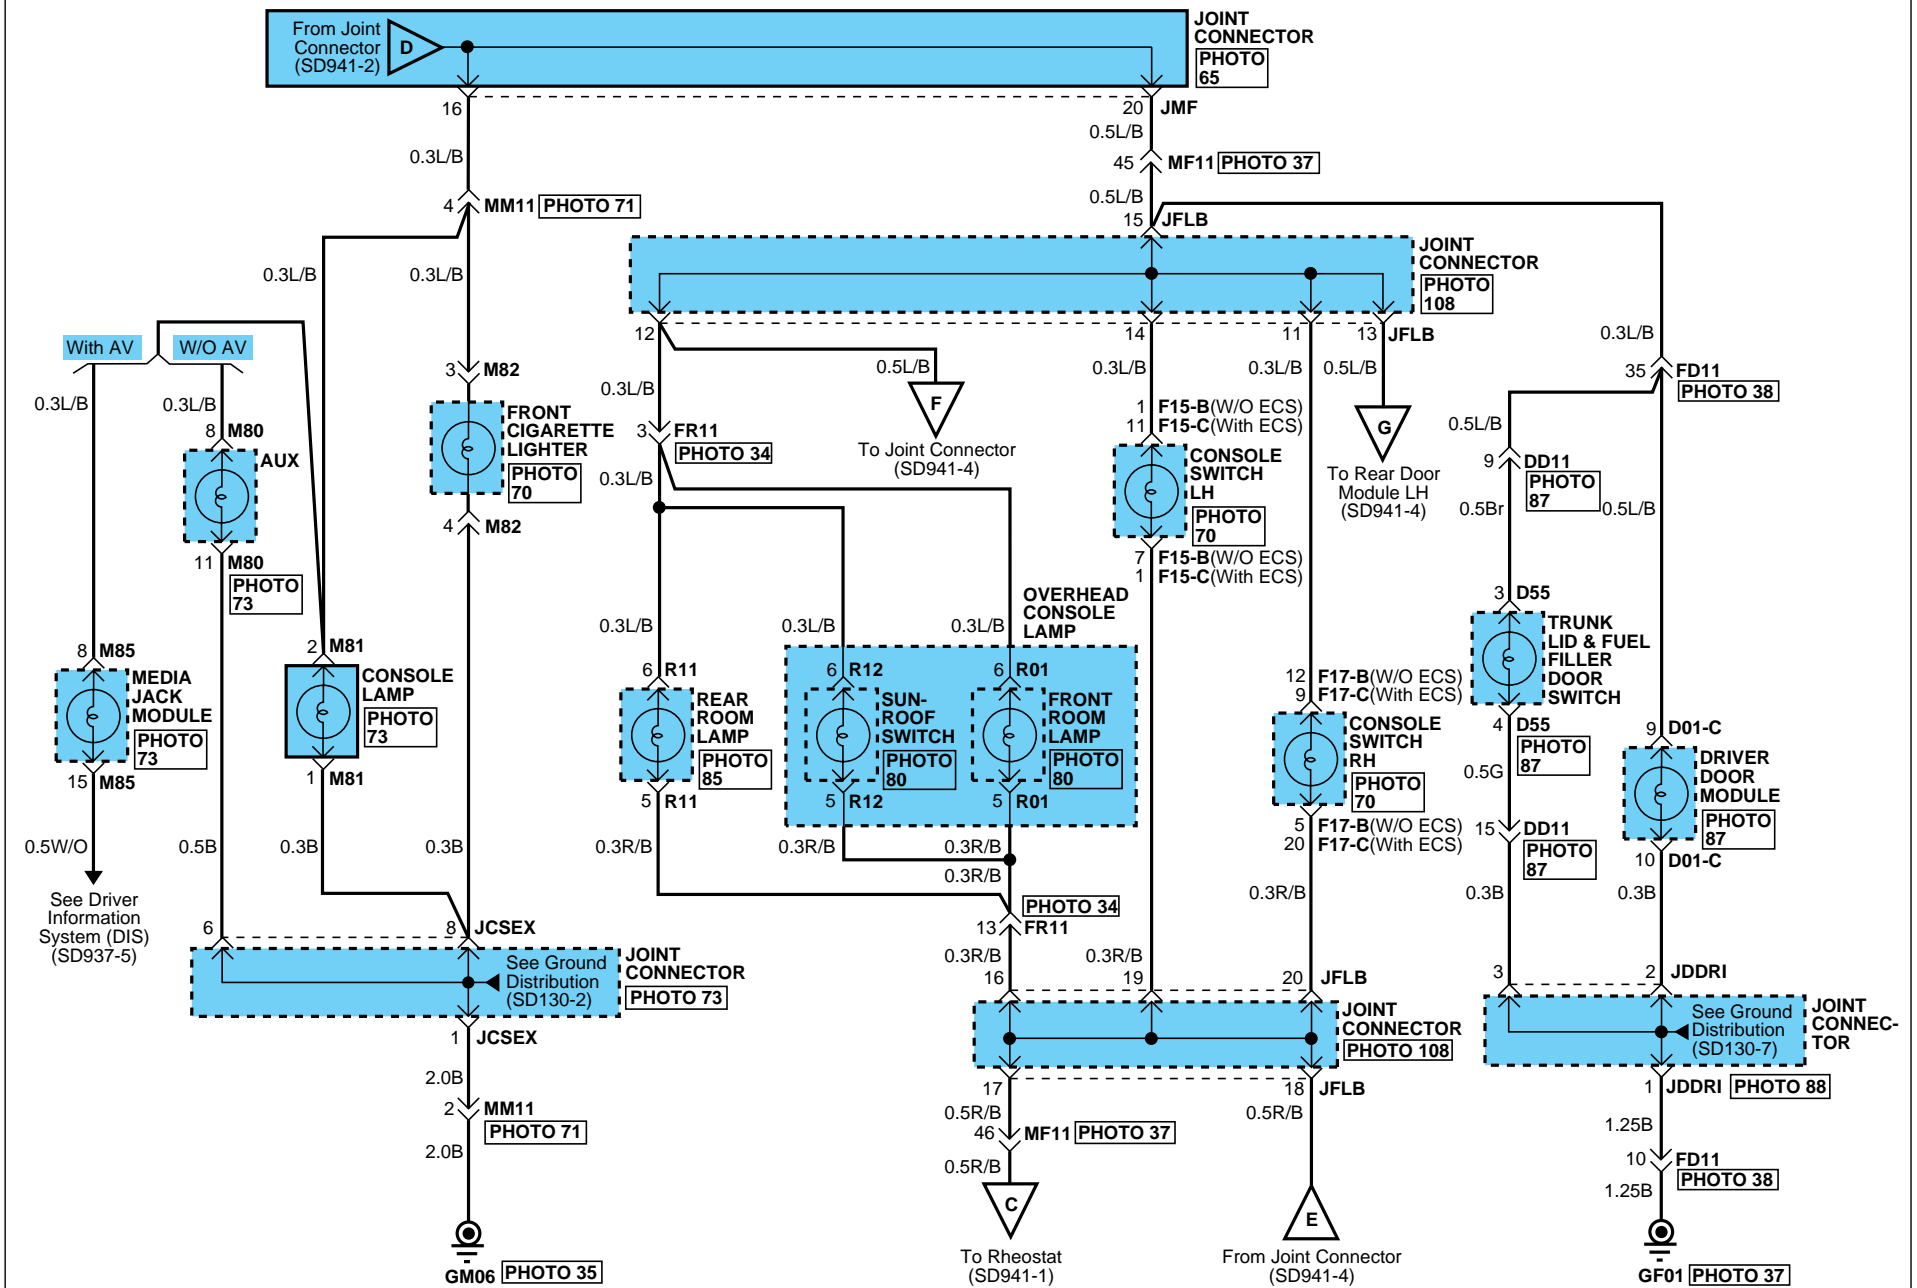

ILLUMINATIONS

Illuminations (4)

SD941-4

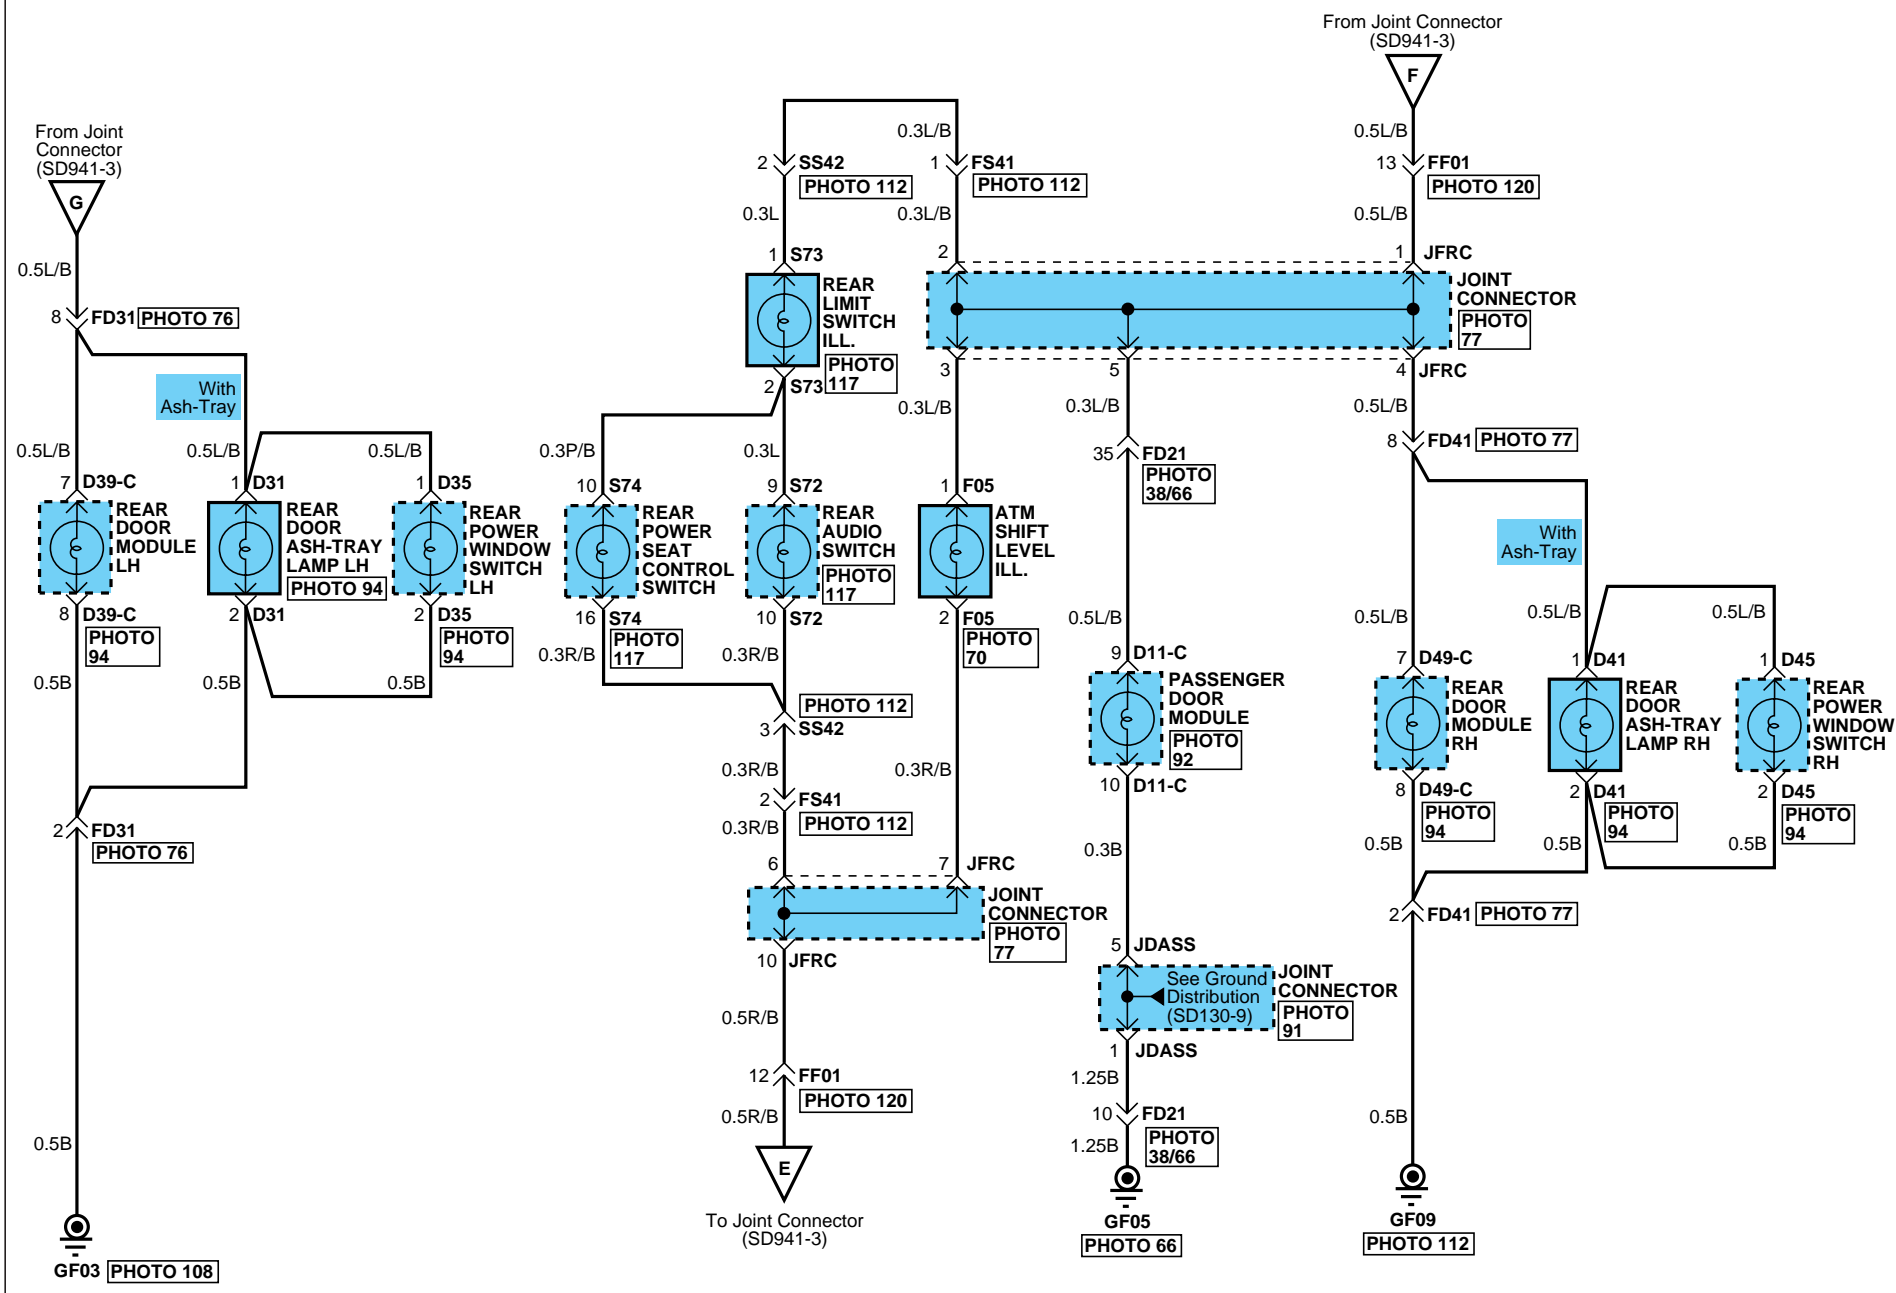

ILLUMINATIONS


Illuminations (5)			SD941-5																																
<p>D01-C</p> <table border="1"> <tr><td>8</td><td>7</td><td>*</td><td>*</td><td>4</td><td>3</td><td>2</td><td>1</td></tr> <tr><td>16</td><td>15</td><td>*</td><td>*</td><td>12</td><td>11</td><td>10</td><td>9</td></tr> </table> <p>AMP_DLI_16F_B_DL</p>	8	7	*	*	4	3	2	1	16	15	*	*	12	11	10	9	<p>D11-C</p> <table border="1"> <tr><td>8</td><td>7</td><td>*</td><td>*</td><td>4</td><td>3</td><td>2</td><td>1</td></tr> <tr><td>16</td><td>15</td><td>*</td><td>*</td><td>12</td><td>11</td><td>10</td><td>9</td></tr> </table> <p>AMP_DLI_16F_B_DL</p>	8	7	*	*	4	3	2	1	16	15	*	*	12	11	10	9	<p>D31</p> <p>KET_090II_02F_Gr_T</p>	<p>D35</p> <p>KET_91A_06F_W</p>
8	7	*	*	4	3	2	1																												
16	15	*	*	12	11	10	9																												
8	7	*	*	4	3	2	1																												
16	15	*	*	12	11	10	9																												
<p>D39-C</p> <p>AMP_DLI_12F_B_DL</p>	<p>D41</p> <p>KET_090II_02F_Gr_T</p>	<p>D45</p> <p>KET_91A_06F_W</p>	<p>D49-C</p> <p>AMP_DLI_12F_B_DL</p>																																
<p>D55</p> <p>KET_090II_08F_W</p>	<p>FAM-A</p> <table border="1"> <tr><td>*</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td rowspan="2">1</td></tr> <tr><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td></tr> </table>		*	6	5	4	3	2	1	13	12	11	10	9	8	<p>FAM-B</p> <table border="1"> <tr><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>*</td></tr> <tr><td>*</td><td>11</td><td>*</td><td>*</td><td>8</td><td>7</td></tr> <tr><td>18</td><td>*</td><td>16</td><td>*</td><td>*</td><td>13</td></tr> </table>	6	5	4	3	2	*	*	11	*	*	8	7	18	*	16	*	*	13	
*	6	5	4	3	2	1																													
13	12	11	10	9	8																														
6	5	4	3	2	*																														
*	11	*	*	8	7																														
18	*	16	*	*	13																														
<p>FAM-C</p> <table border="1"> <tr><td rowspan="2">9</td><td>4</td><td>3</td><td>2</td><td>*</td></tr> <tr><td>8</td><td>7</td><td>6</td><td>5</td></tr> </table>	9	4	3	2	*	8	7	6	5	<p>F05</p> <p>KUM_CDR_02F_W</p>	<p>F15-B</p> <p>AMP_040M1_12F_B</p>	<p>F15-C</p> <p>AMP_040M1_20F_B</p>																							
9		4	3	2	*																														
	8	7	6	5																															
<p>F17-B</p> <table border="1"> <tr><td>5</td><td>4</td><td>3</td><td></td><td>2</td><td>1</td></tr> <tr><td>12</td><td>*</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td></tr> </table> <p>AMP_070_12F_W</p>	5	4	3		2	1	12	*	10	9	8	7	6	<p>F17-C</p> <p>KET_040III_20F_W</p>	<p>M03-E</p> <table border="1"> <tr><td>4</td><td>*</td><td>2</td><td>*</td></tr> <tr><td>8</td><td>7</td><td>6</td><td>*</td></tr> </table> <p>AMP_JT_08F_Gr_D2</p>	4	*	2	*	8	7	6	*	<p>BLANK</p>											
5	4	3		2	1																														
12	*	10	9	8	7	6																													
4	*	2	*																																
8	7	6	*																																

ILLUMINATIONS

Illuminations (6)


SD941-6

M06

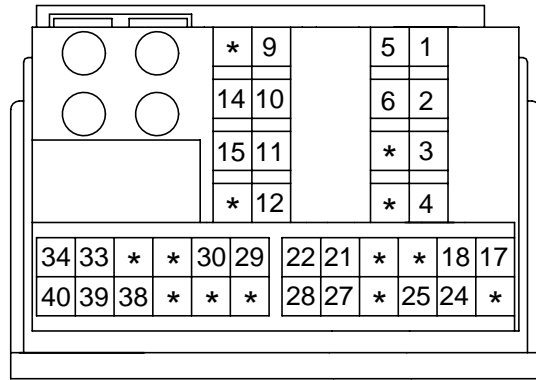


YAZ_OPT_40F_B

M07-A

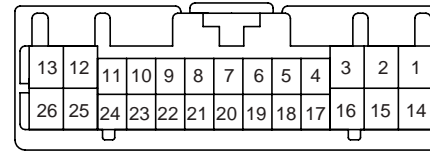


KET_0407_26F_W

 M07-D




AMP_MQS_18F_B_3

M10

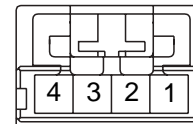


AMP_MQS_04F_B_040

M11-A

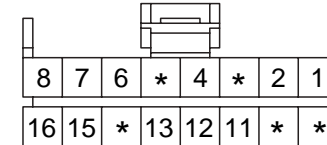


AMP_040M1_16F_B

M13

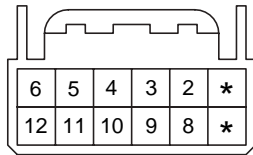


AMP_025_12F_W

M18

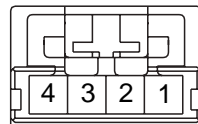


AMP_MQS_04F_Y_040

M19

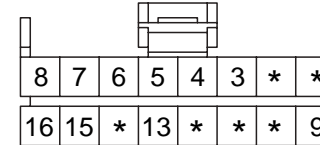


AMP_040M1_16F_B

M20

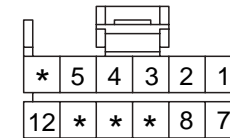


AMP_040M1_12F_B

M30

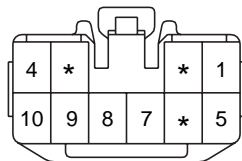


KET_090II_10F_W

M41

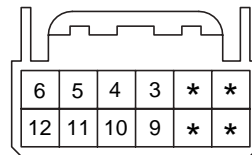


AMP_025_12F_W

M48

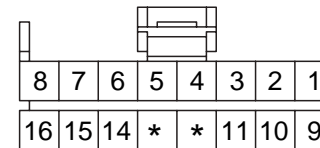


AMP_040M1_16F_B

M55

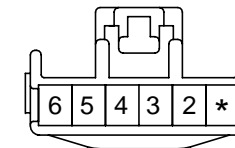


KET_090II_06F_W_SW

M57

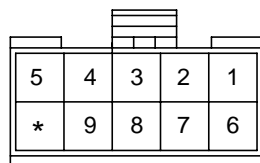


MLX_FIT_10F_B

M62

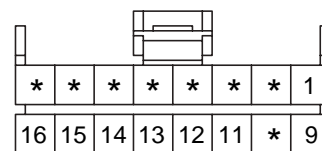


AMP_040M1_16F_B

M77

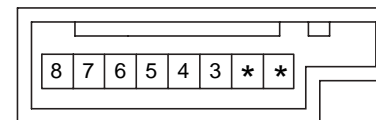

AMP_1743386-2

M78

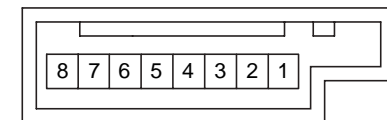

AMP_1743386-1

ILLUMINATIONS

Illuminations (7)			SD941-7
<p>M80</p> <p>KET_040III_16F_W</p>	<p>M81</p> <p>AMP_090III_02F_B</p>	<p>M82</p> <p>AMP_090III_04M_W</p>	<p>M85</p> <p>KET_040III_16F_W</p>
<p>R01</p> <p>AMP_MQS_06F_W</p>	<p>R11</p> <p>AMP_MQS_06F_W</p>	<p>R12</p> <p>AMP_MQS_06F_B</p>	<p>S72</p> <p>AMP_040MK1_12F_B</p>
<p>S73</p> <p>KUM_CDR_02F_W</p>	<p>S74</p> <p>AMP_025_24F_W</p>	<p>BLANK</p>	<p>BLANK</p>

ILLUMINATIONS

Illuminations (8)

SD941-8


MEMO

CLOCK & CIGARETTE LIGHTER (ACCESSORY SOCKET)






E1DADF93

Clock & Cigarette Lighter (Accessory Socket) (1)

SD945-1

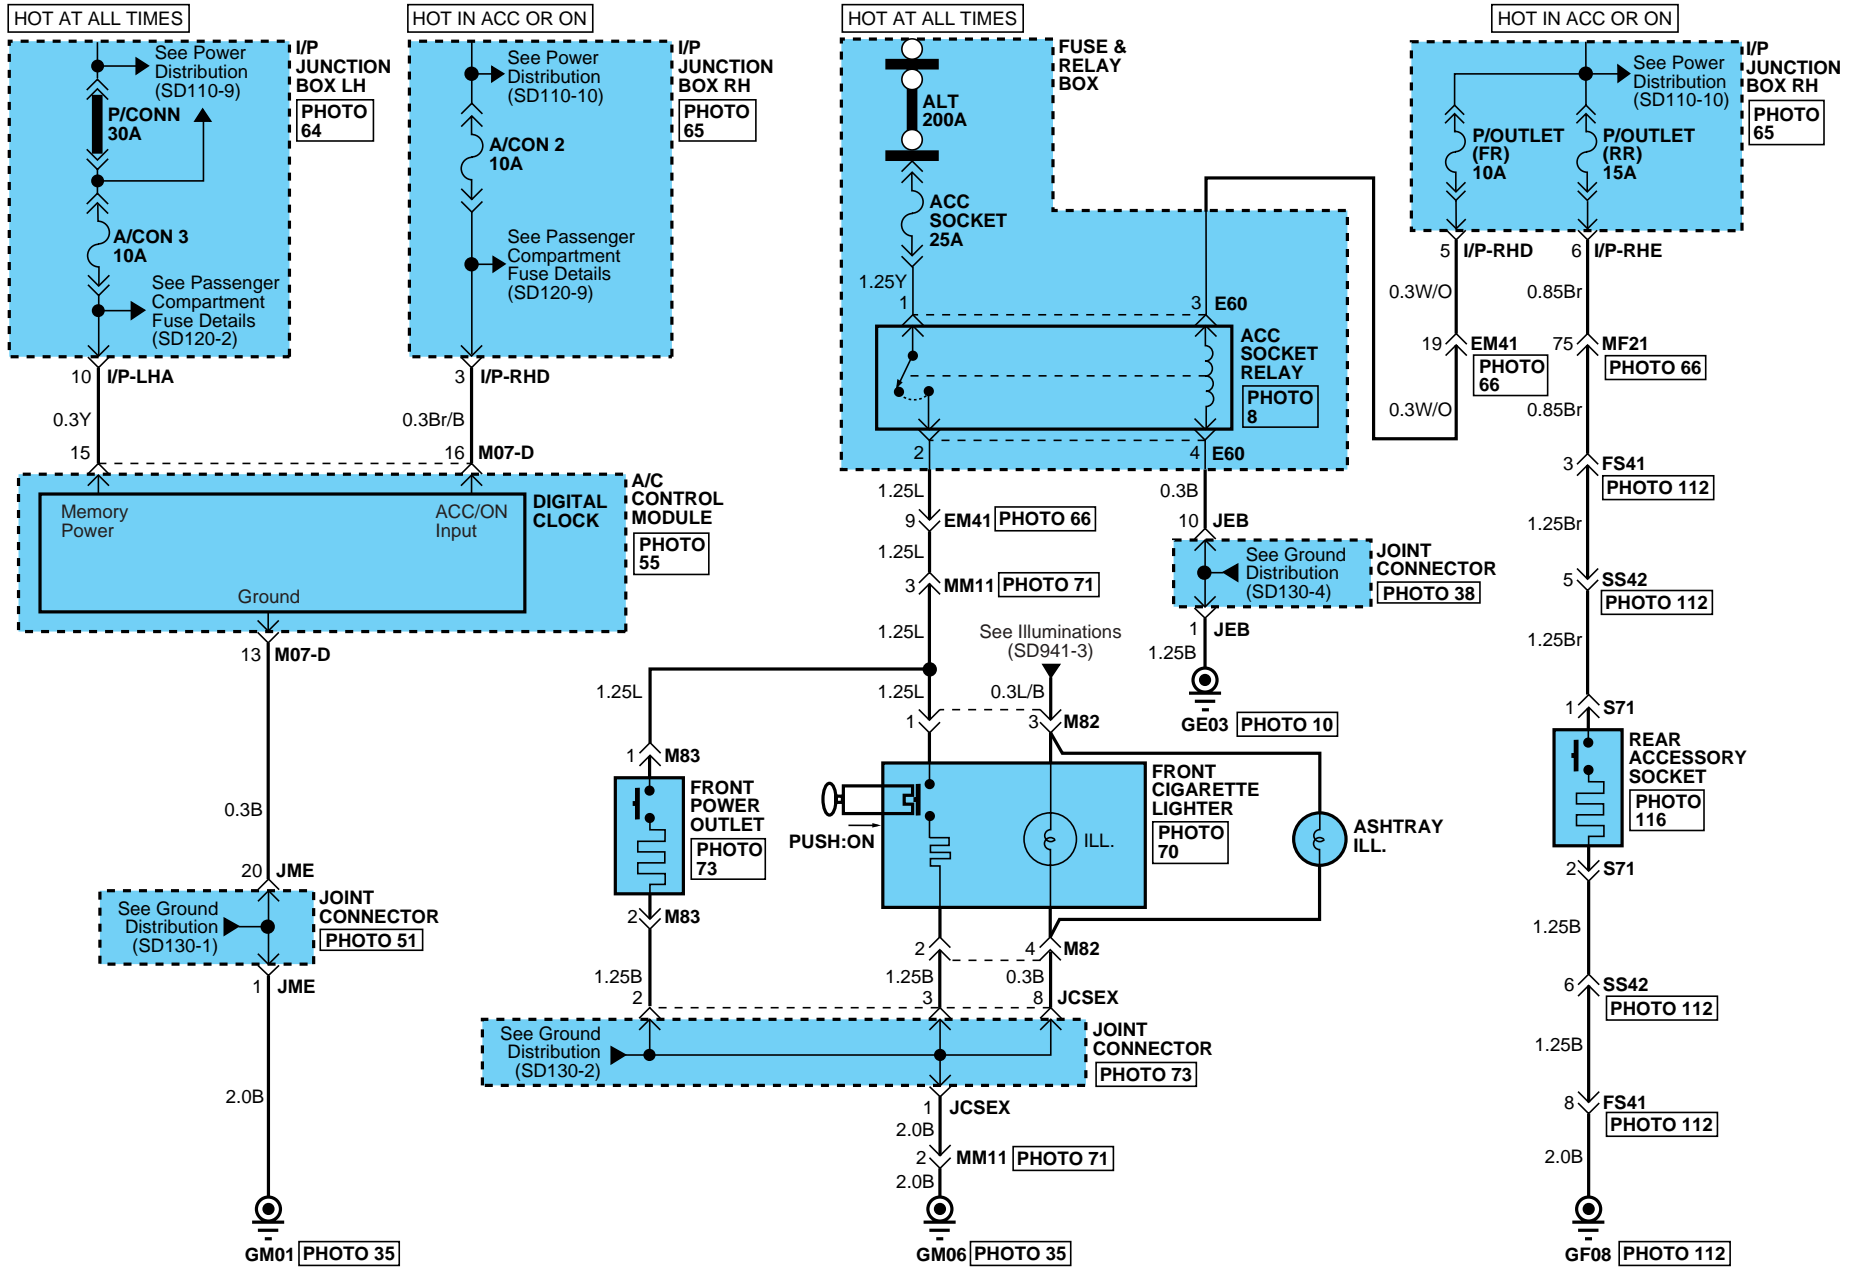

CLOCK & CIGARETTE LIGHTER (ACCESSORY SOCKET)

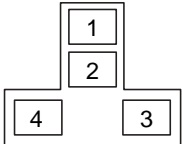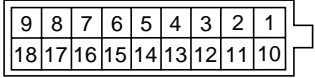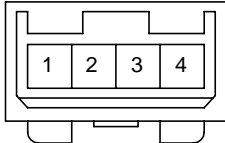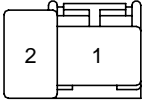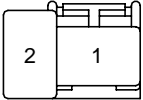
Clock & Cigarette Lighter (Accessory Socket) (2)			SD945-2
<p>E60</p> 	<p>M07-D</p>  <p>AMP_MQS_18F_B_3</p>	<p>M82</p>  <p>AMP_090III_04M_W</p>	<p>M83</p>  <p>AMP_PLM2_02F_B_DL</p>
<p>S71</p>  <p>AMP_250MK2(D/L)_02F</p>	<p>BLANK</p>	<p>BLANK</p>	<p>BLANK</p>

IN-PANEL MODULE (IPM)

E4FCE3BF

In-Panel Module (IPM) (1)


SD952-1

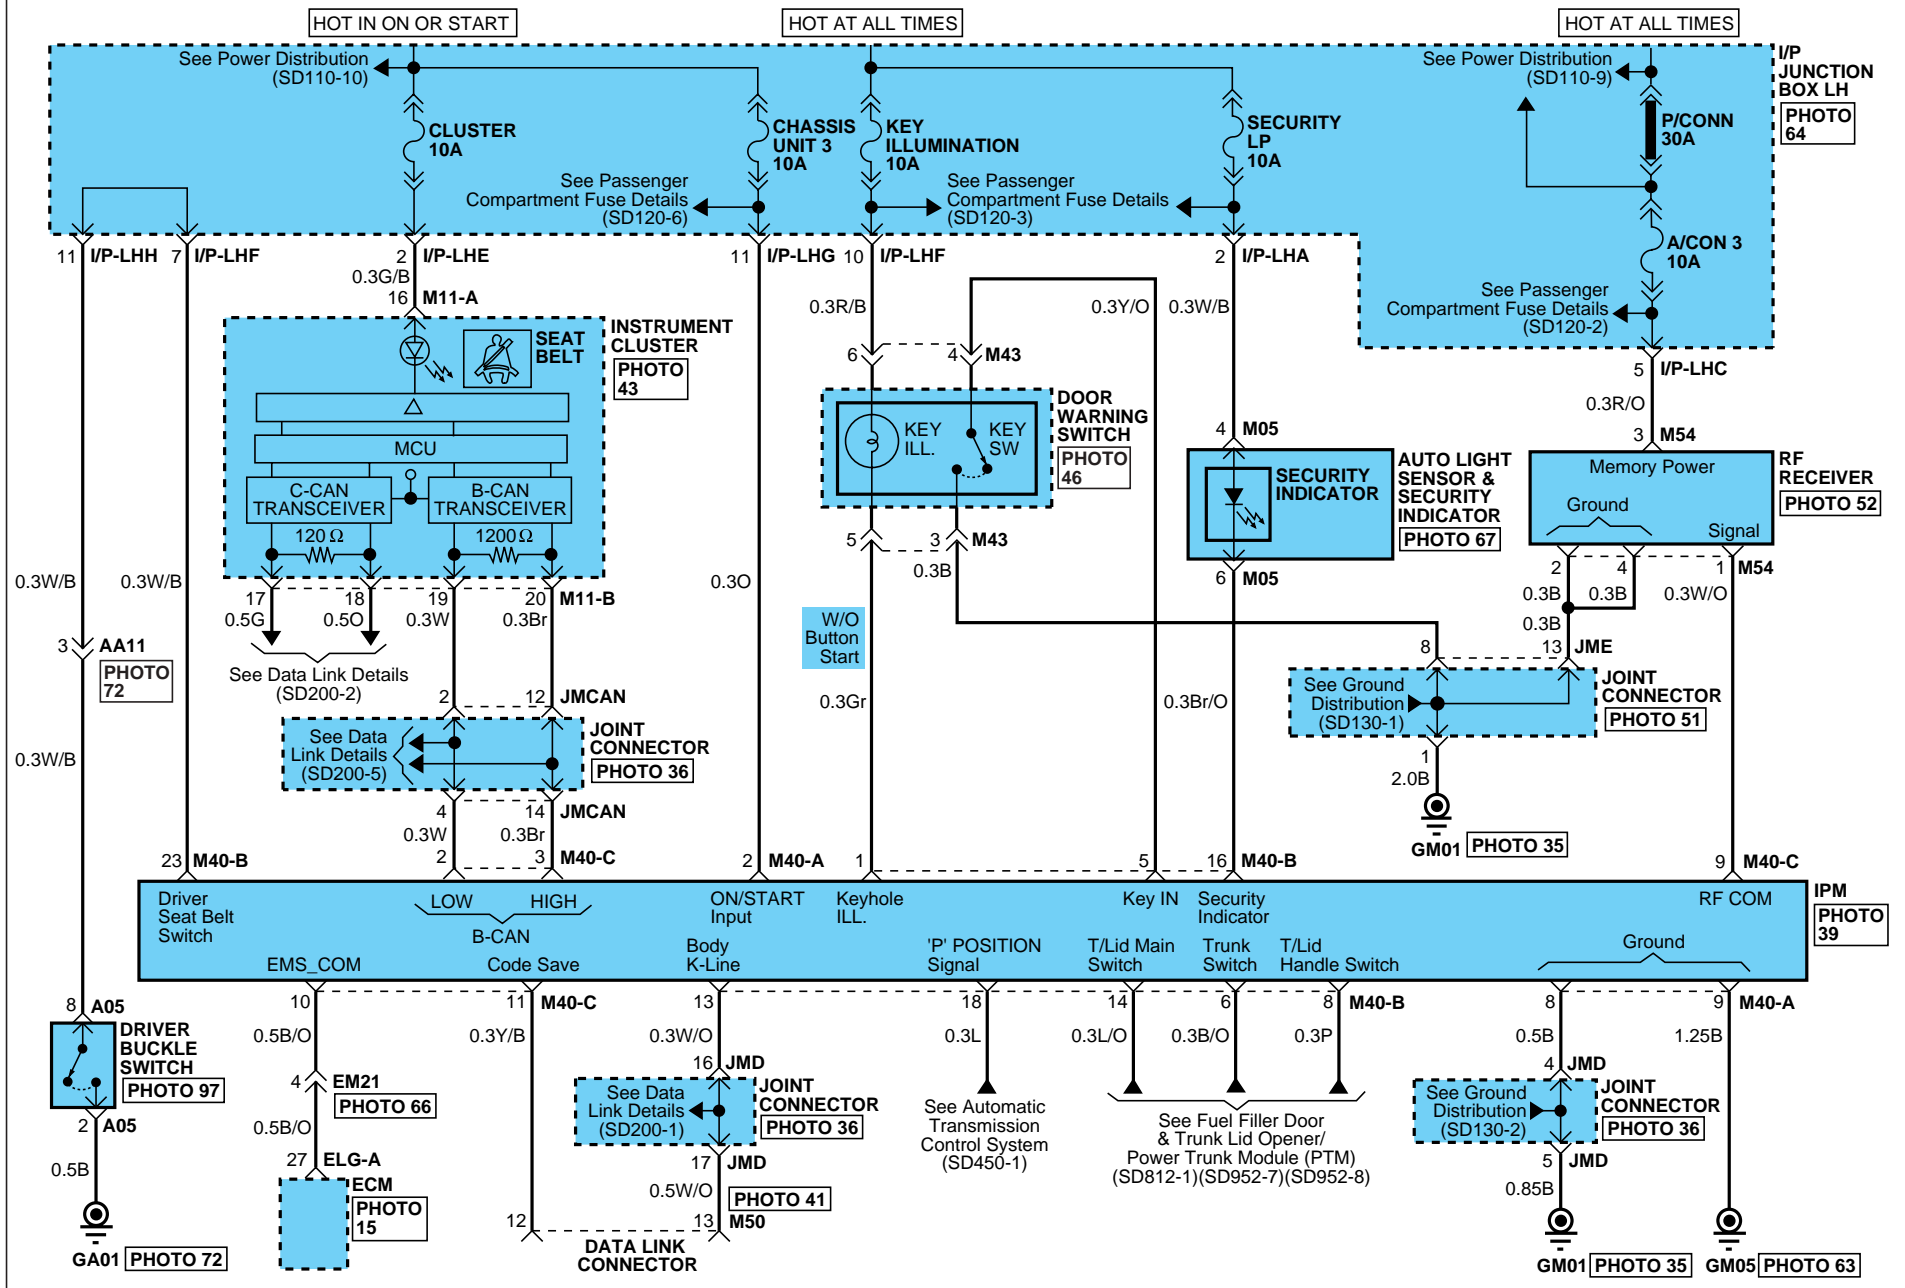

IN-PANEL MODULE (IPM)

In-Panel Module (IPM) (2)


SD952-2

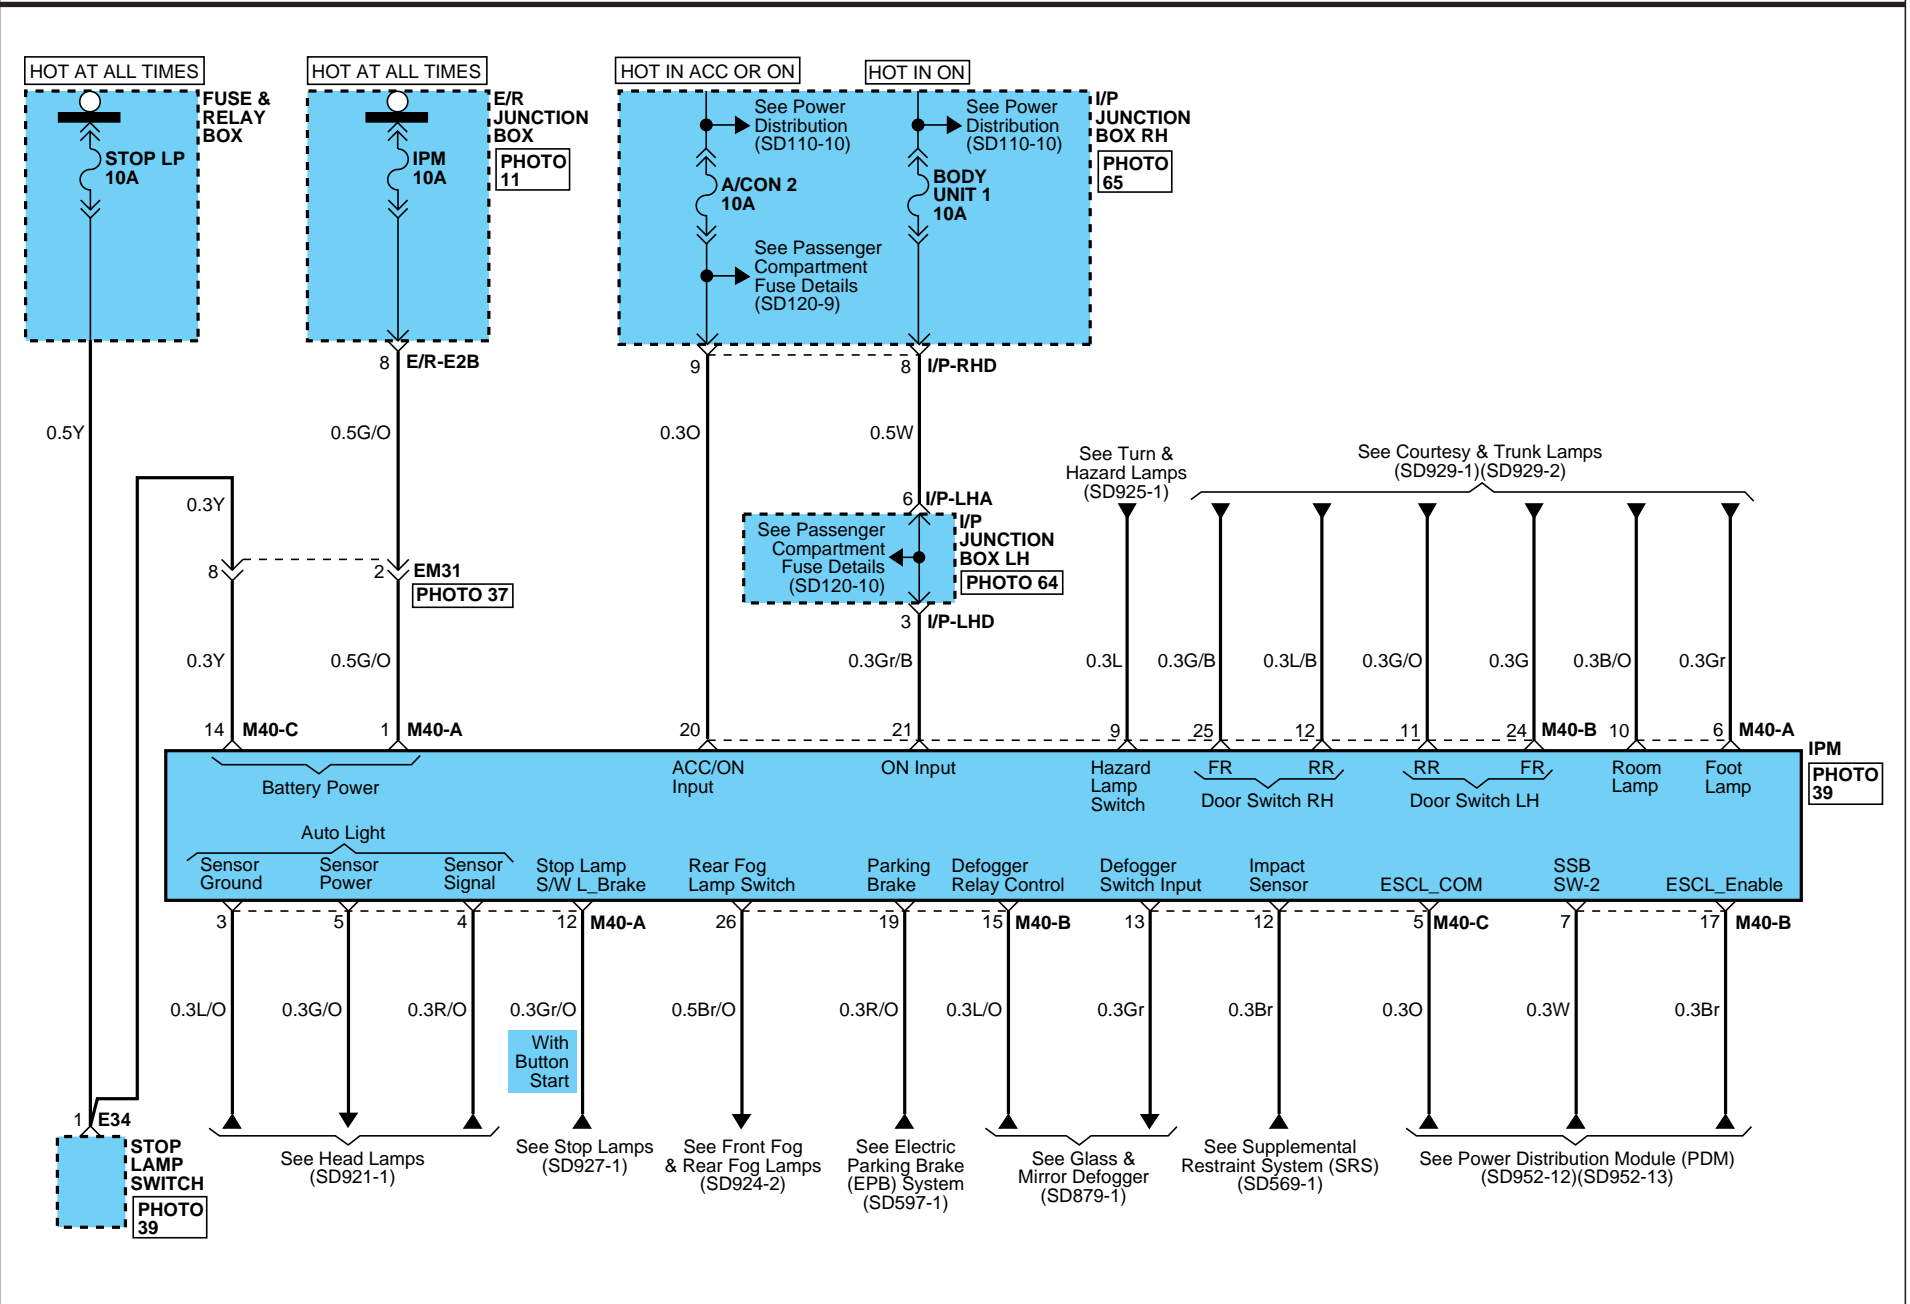

IN-PANEL MODULE (IPM)

In-Panel Module (IPM) (3)

SD952-3

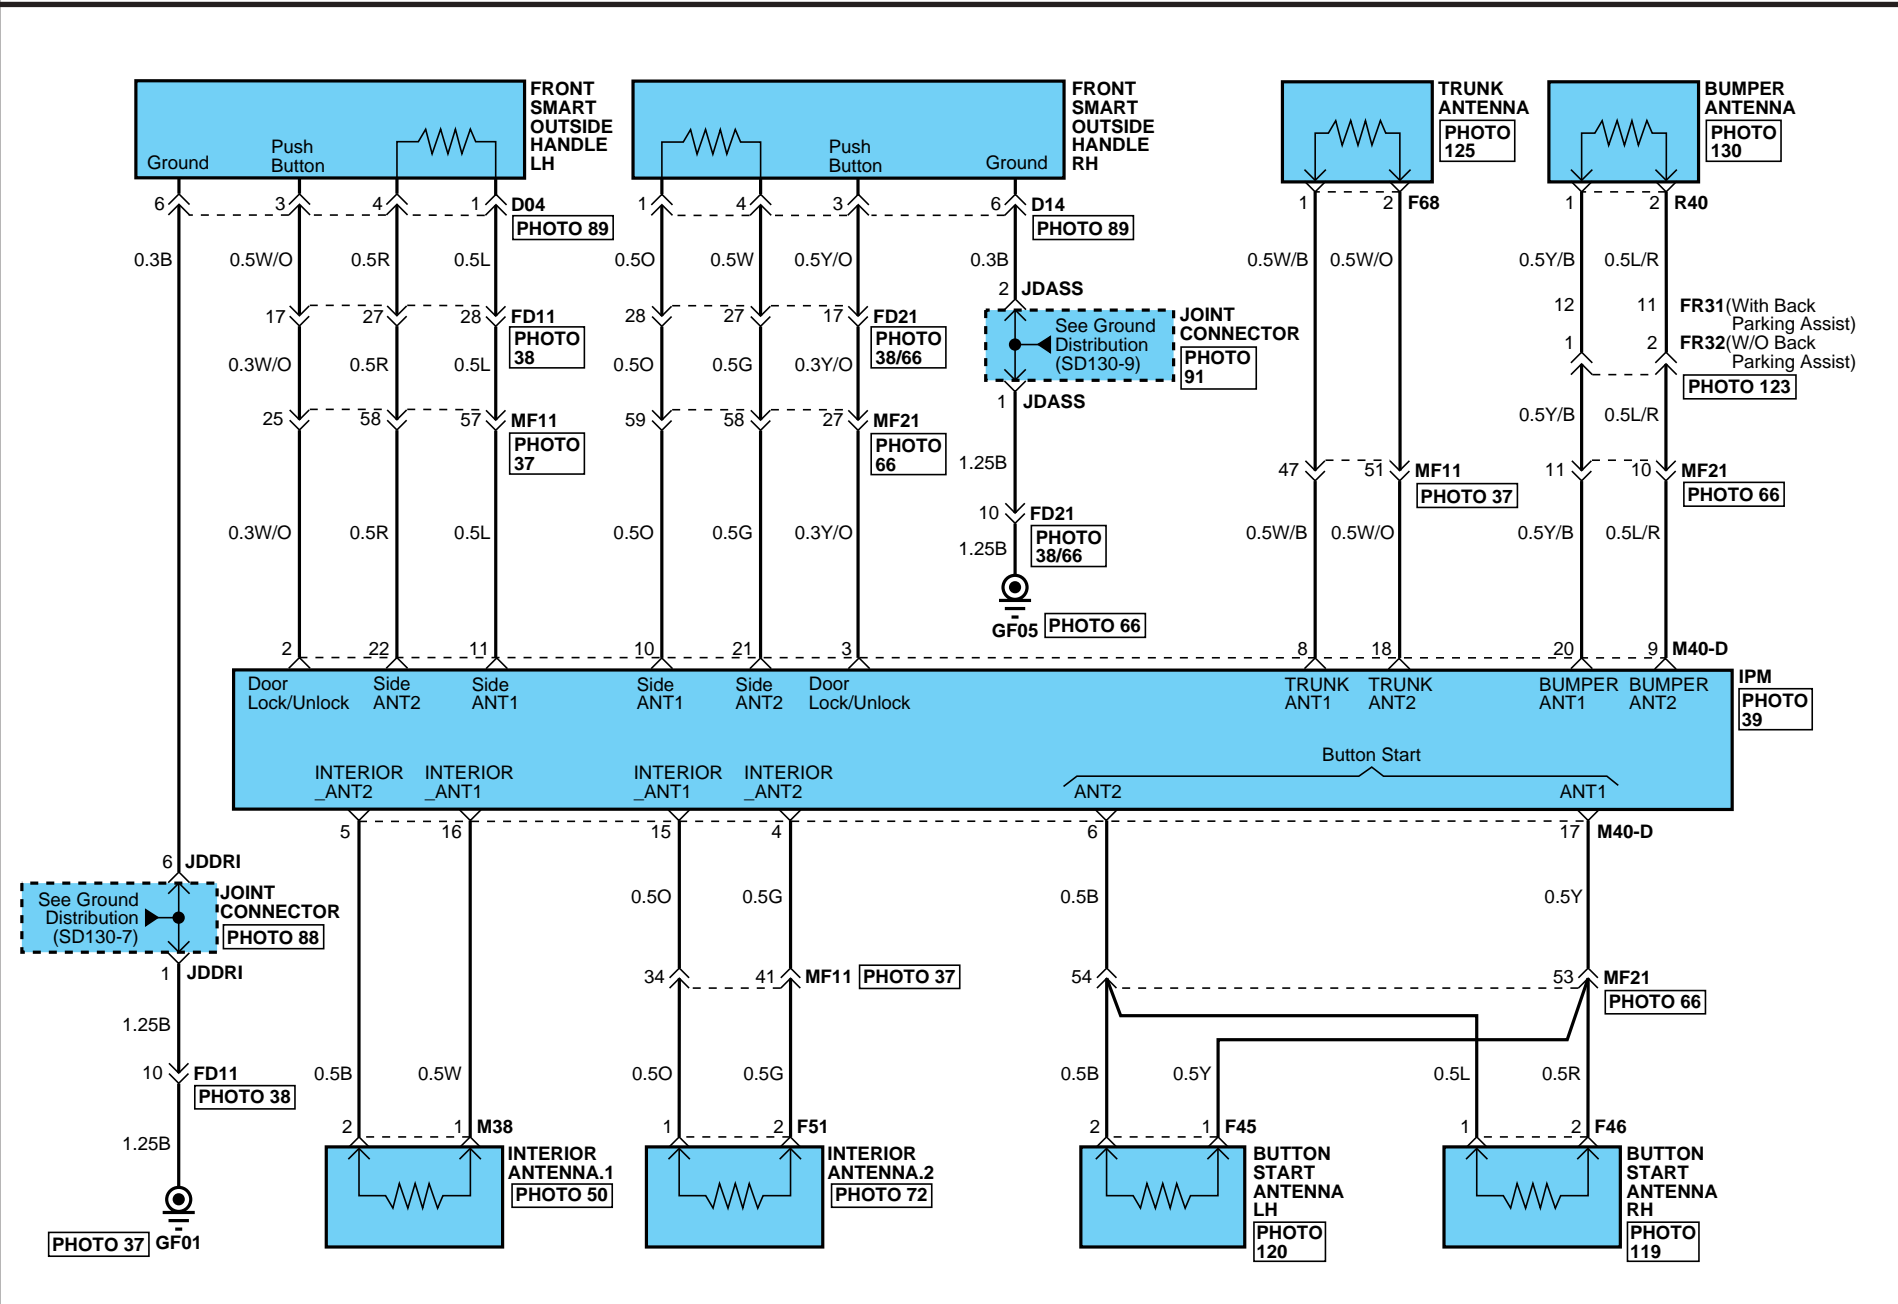


IN-PANEL MODULE (IPM)

In-Panel Module (IPM) (4)


SD952-4

ELG-A

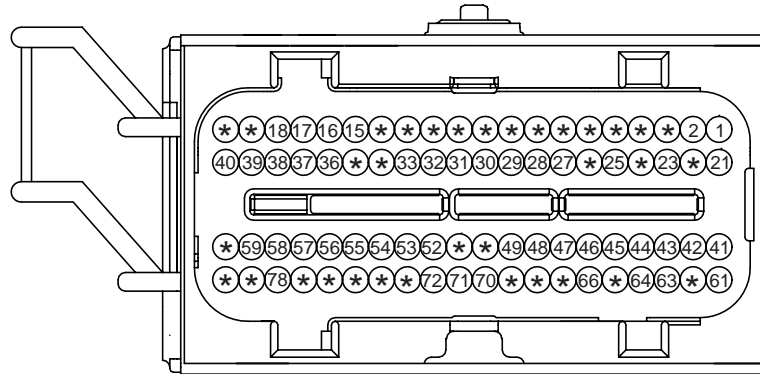


PKD_ECU_80F_Gr_1

A05

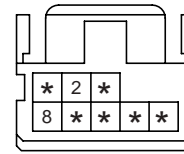


JST_HIC_08F_Y

D04,D14

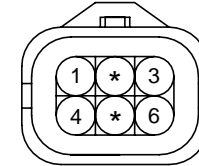

YAZ_040WP_06M_Gr_1

E34

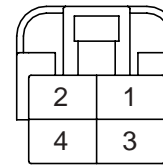


KET_250DL_04F_W

F45,F46




KET_090II_02F_W_SPK

 F51,F68




KET_090II_02F_W_SPK

M05

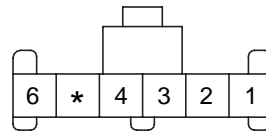


KET_91A_06F_W

M11-A

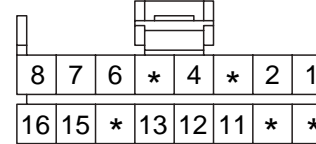


AMP_040M1_16F_B

M11-B

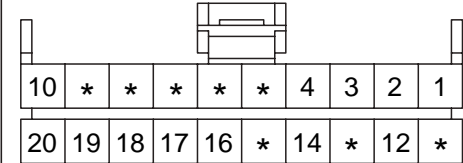


AMP_040M1_20F_B

 M38




KET_090II_02F_W_SPK

M40-A

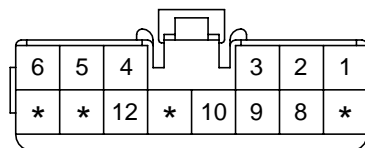


KET_090II_14F_W

 M40-B




AMP_0407_26F_W_HD

M40-C

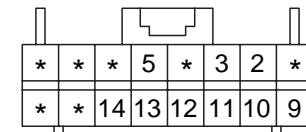


AMP_0407_16F_W_040

M40-D

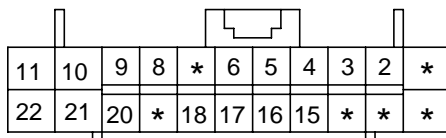


AMP_0407_22F_W_HD

M43

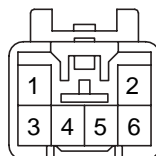


KET_090II_06M_W

M54

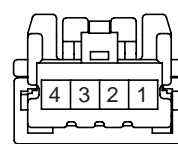

KET_040III_04F_W


R40

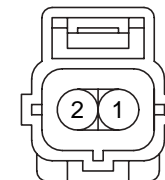

AMP_EJWP_02F_B

Front Area Module (FAM) (1)

SD952-5

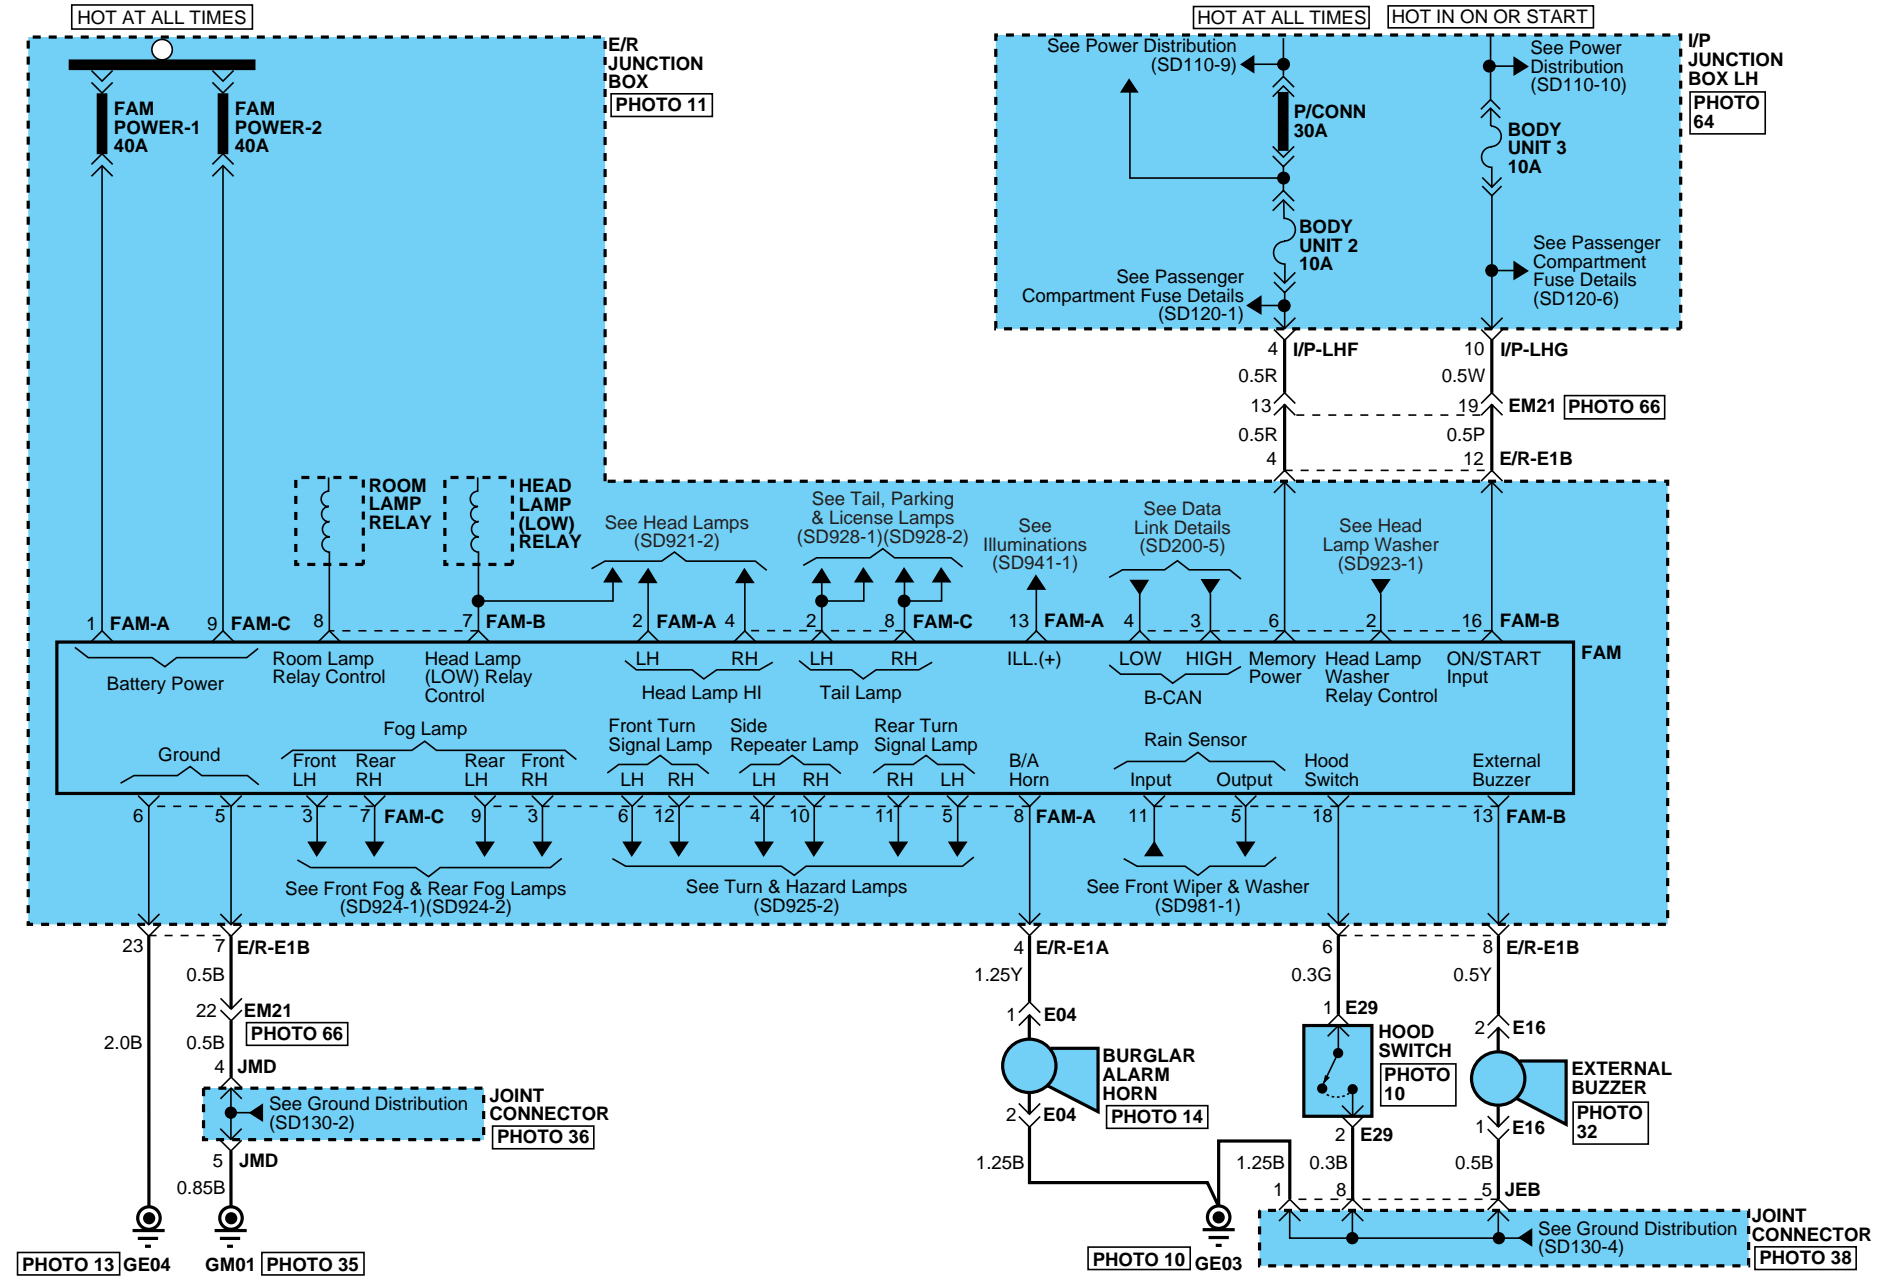


FRONT AREA MODULE (FAM)

Front Area Module (FAM) (2)


SD952-6

E04

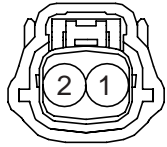


MLX_HORN_02F_B_FILT

E16

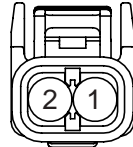

KET_090IWP_02F_B_ASM

E29

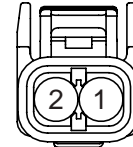

KET_090IWP_02F_B_ASM

BLANK

FAM-A

*	6	5	4	3	2	1
13	12	11	10	9	8	

FAM-B


6	5	4	3	2	*
*	11	*	*	8	7
18	*	16	*	*	13

FAM-C











9	4	3	2	*
	8	7	6	5

Power Trunk Module (PTM) (1)

SD952-7

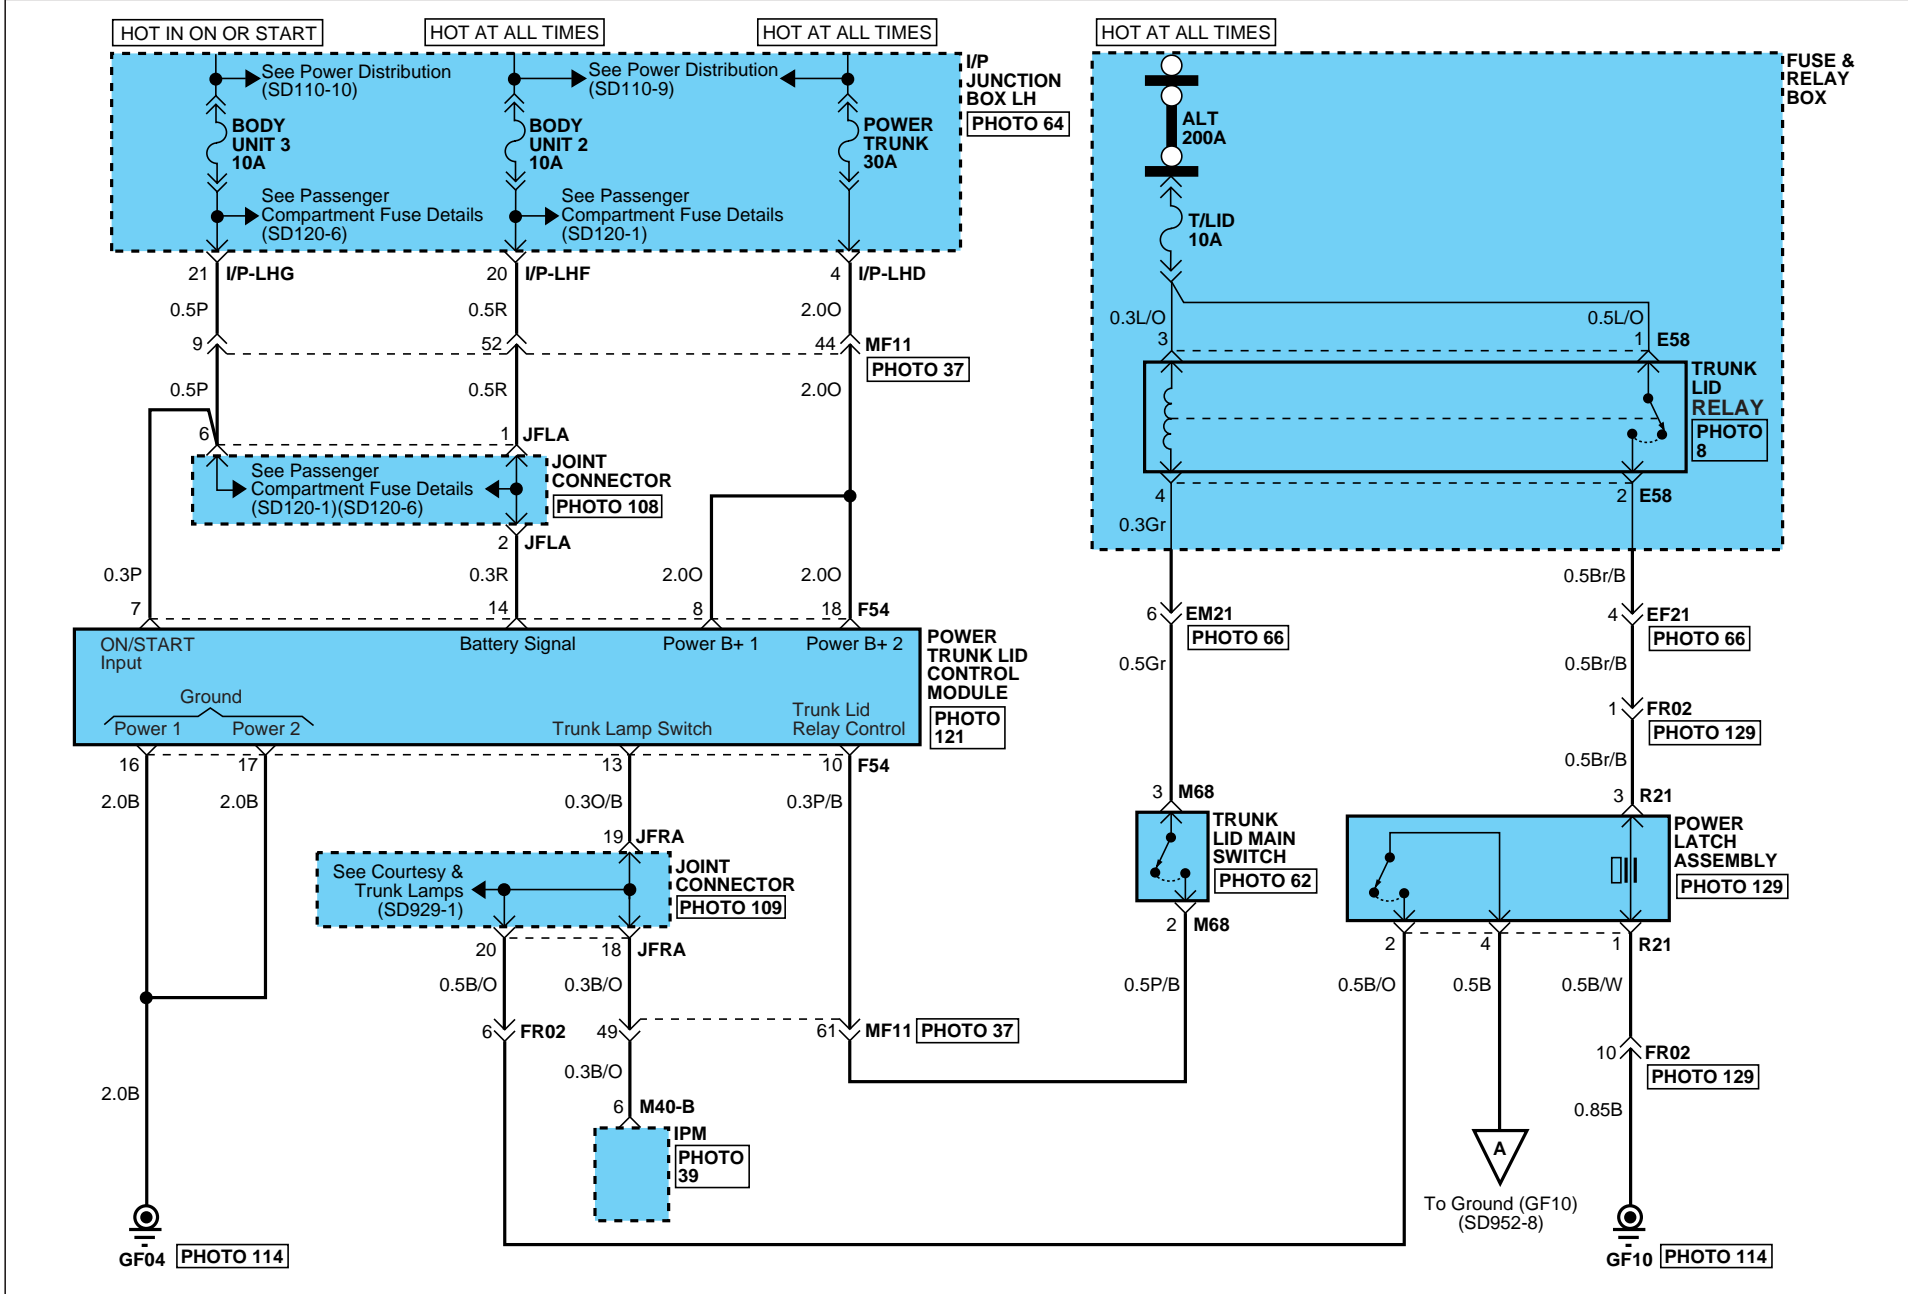

POWER TRUNK MODULE (PTM)

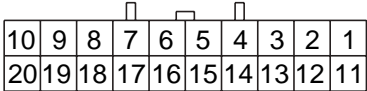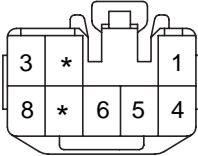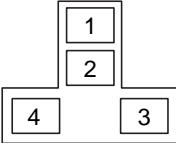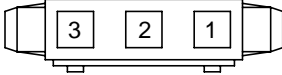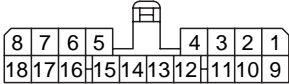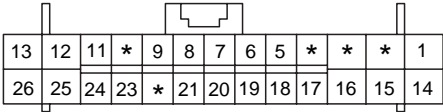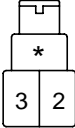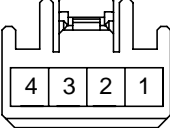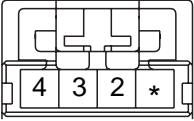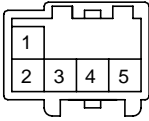Power Trunk Module (PTM) (3)			SD952-9
<p>D01-B</p>  <p>AMP_DLI_20F_B_DL</p>	<p>D55</p>  <p>KET_090II_08F_W</p>	<p>E58</p>  <p>AMP_SPT_03F_B</p>	<p>F53</p>  <p>AMP_SPT_03F_B</p>
<p>F54</p>  <p>AMP_070_18F_W</p>	<p>M40-B</p>  <p>AMP_0407_26F_W_HD</p>	<p>M68</p>  <p>KET_250_03F_W</p>	<p>R21</p>  <p>AMP_090III_04F_W</p>
<p>R22</p>  <p>AMP_MQS_04F_B_040</p>	<p>R25</p>  <p>KUM_CDR_05M_W</p>	<p>BLANK</p>	<p>BLANK</p>

POWER TRUNK MODULE (PTM)


Power Trunk Module (PTM) (4)

SD952-10

MEMO

Power Distribution Module (PDM) (1)

SD952-11

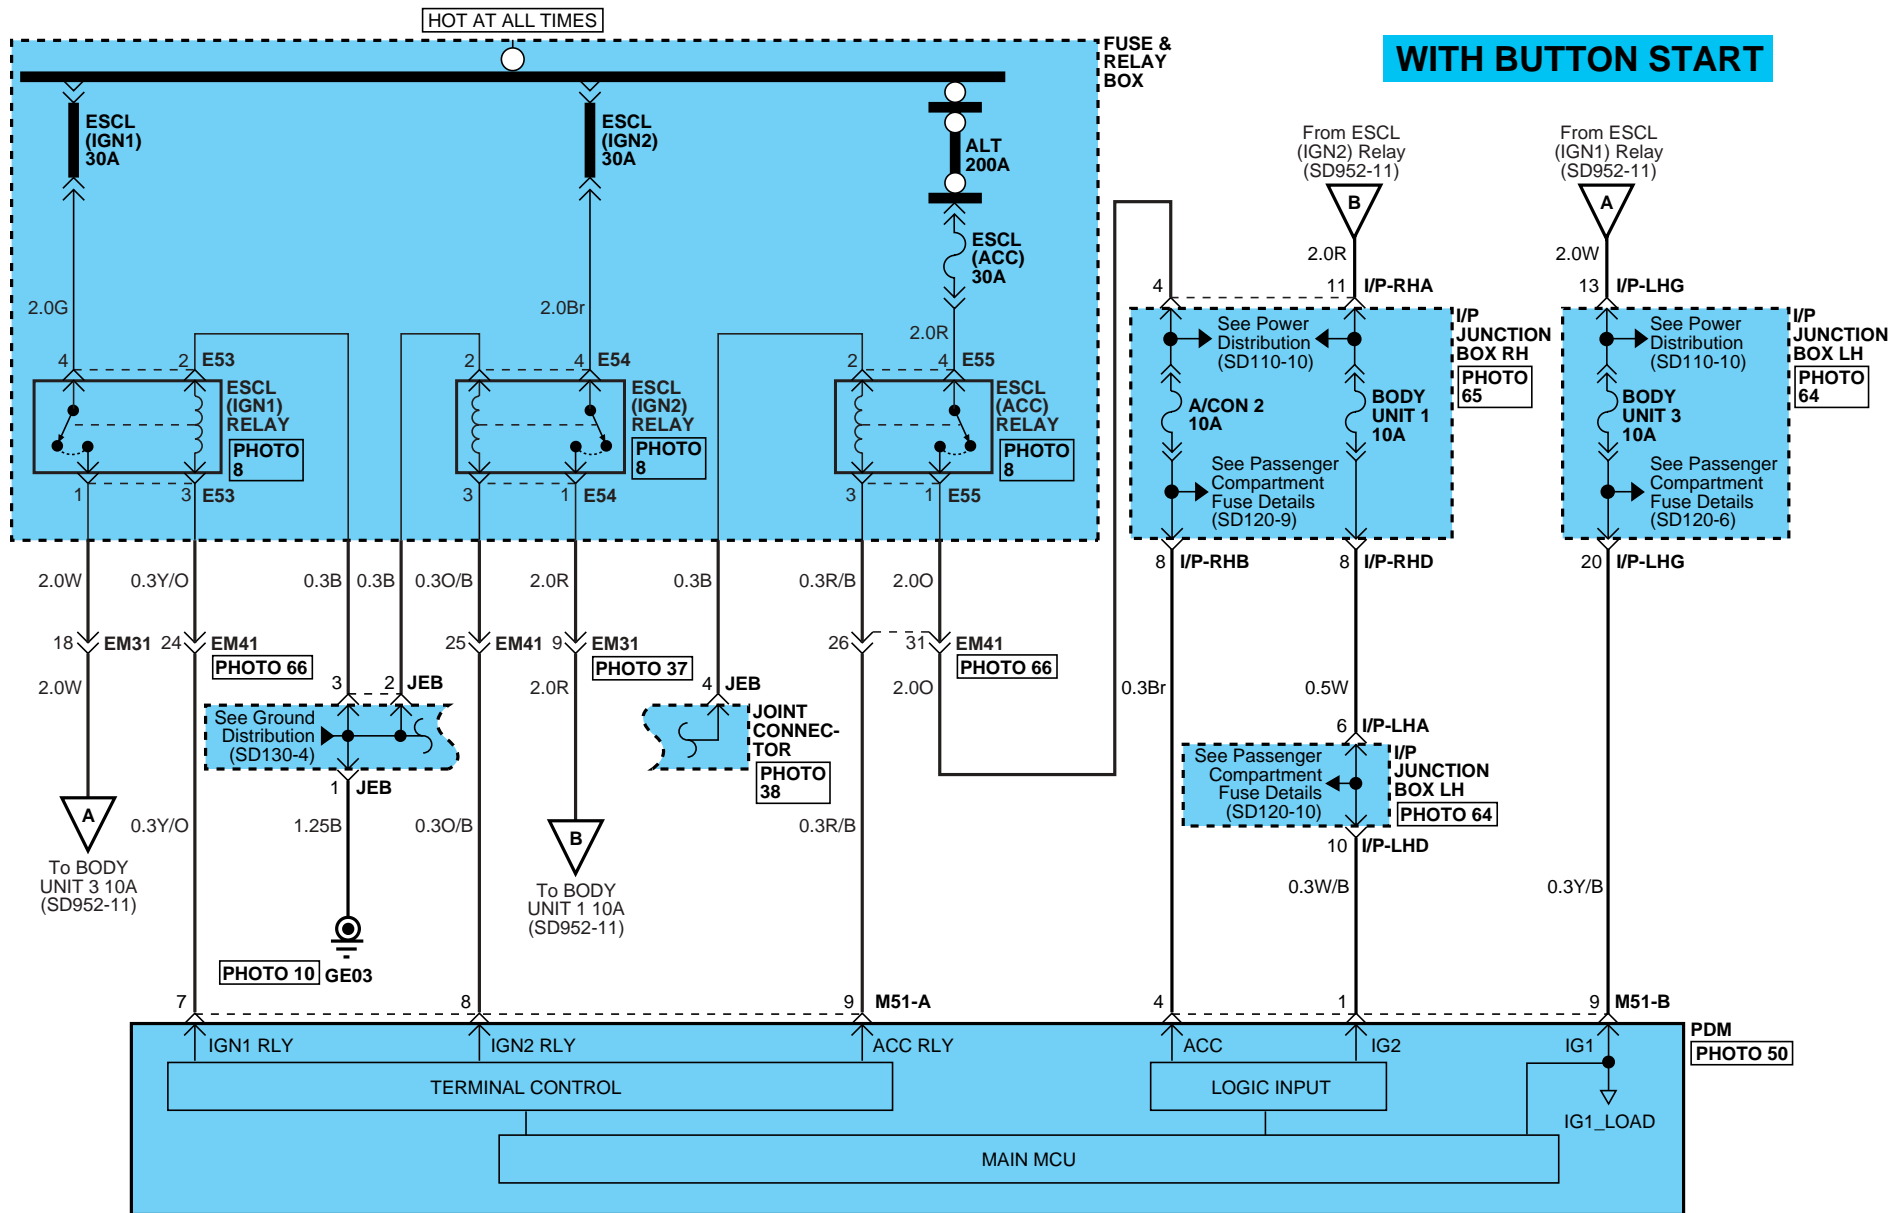


POWER DISTRIBUTION MODULE (PDM)

Power Distribution Module (PDM) (2)

SD952-12

WITH BUTTON START

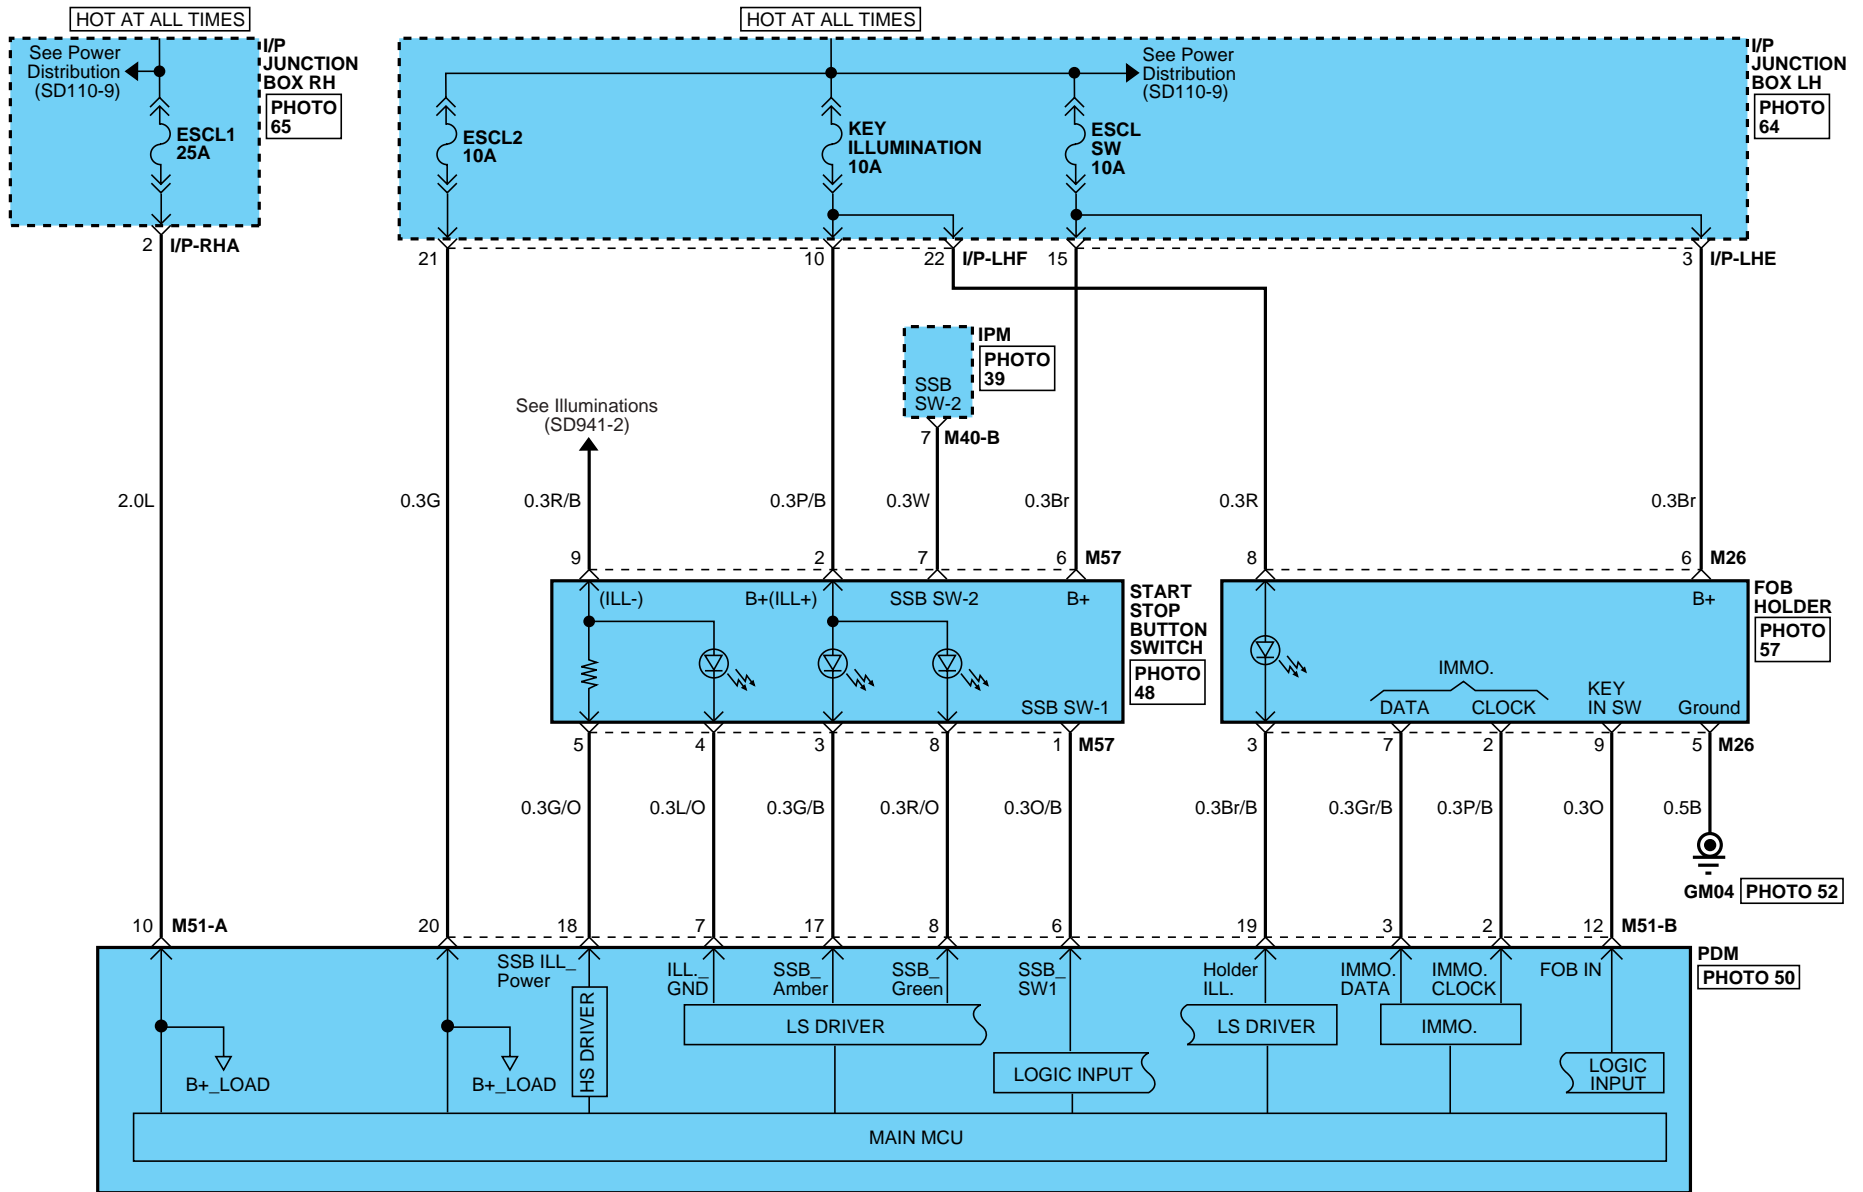


POWER DISTRIBUTION MODULE (PDM)

Power Distribution Module (PDM) (3)

SD952-13

WITH BUTTON START

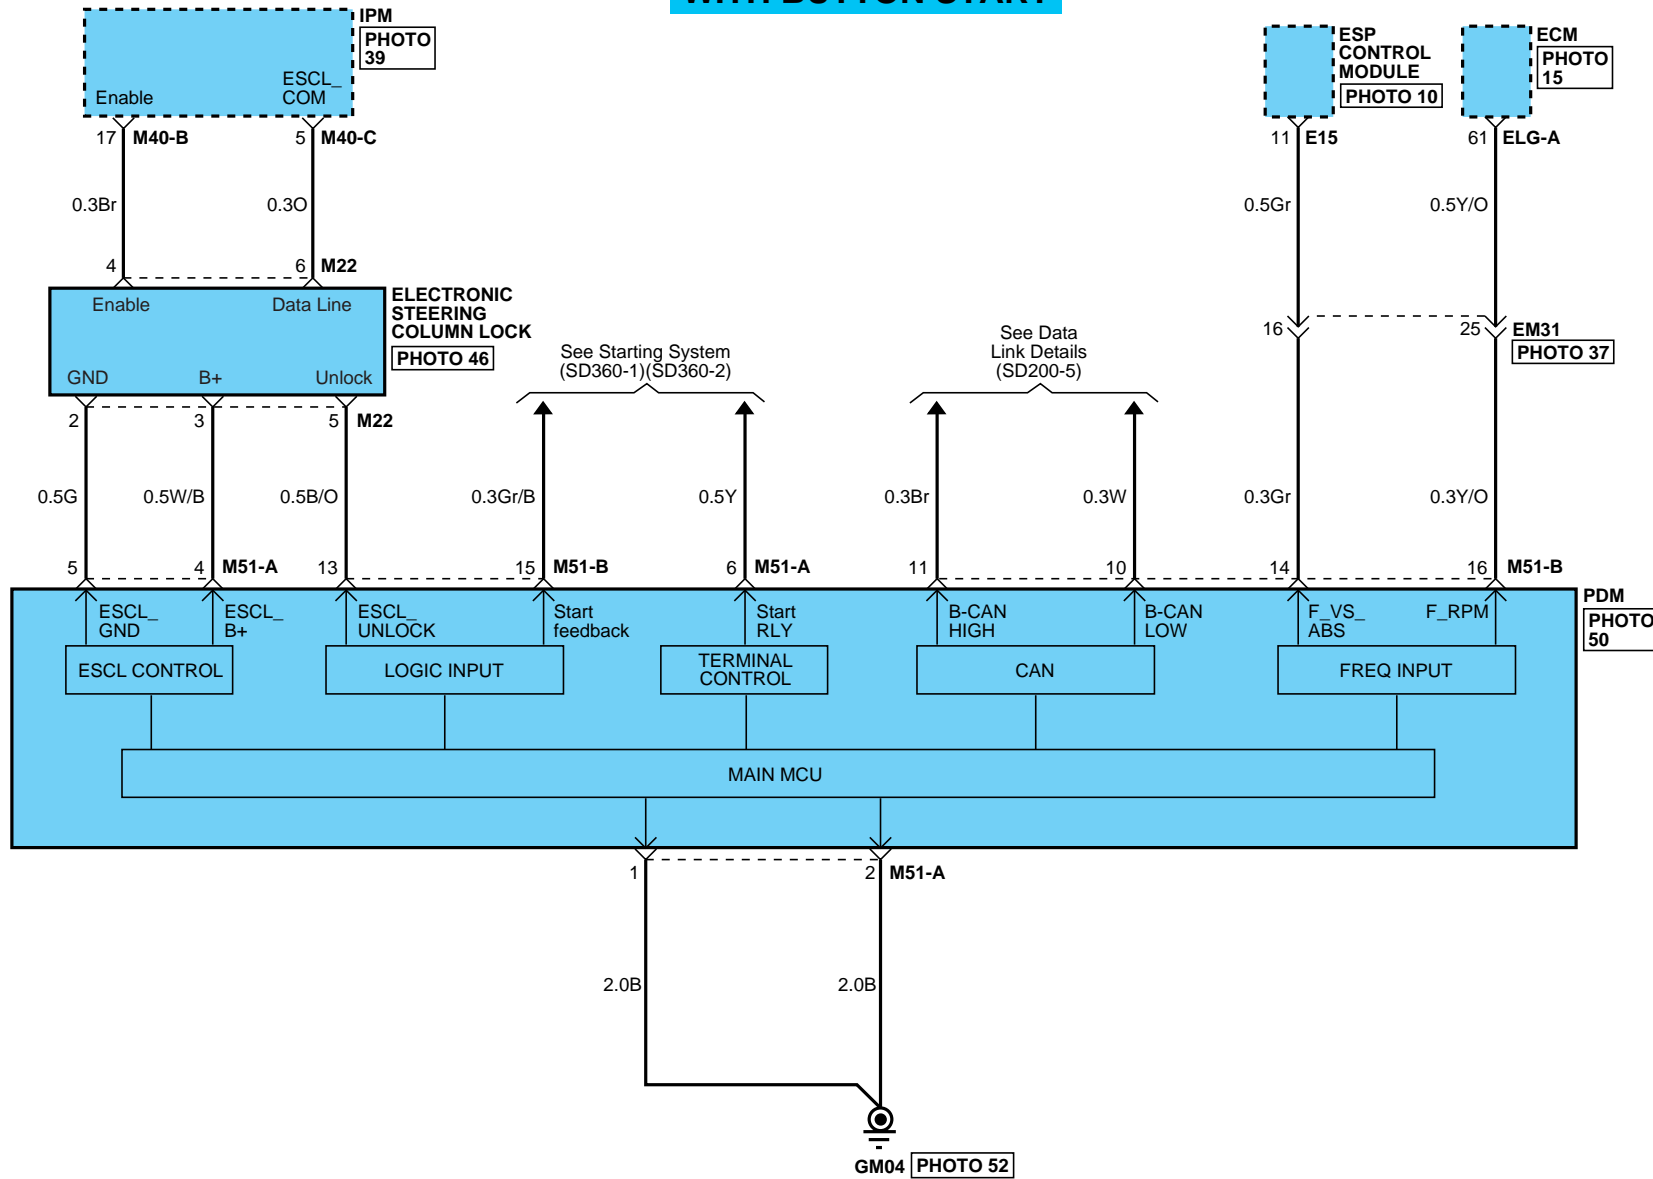


POWER DISTRIBUTION MODULE (PDM)

Power Distribution Module (PDM) (4)


SD952-14

ELG-A

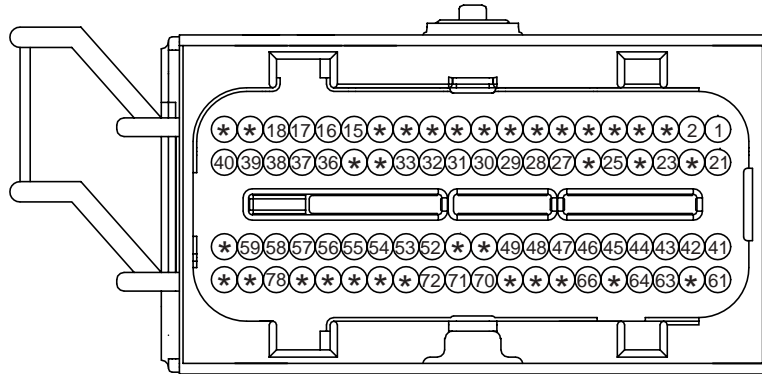


PKD_ECU_80F_Gr_1

E15

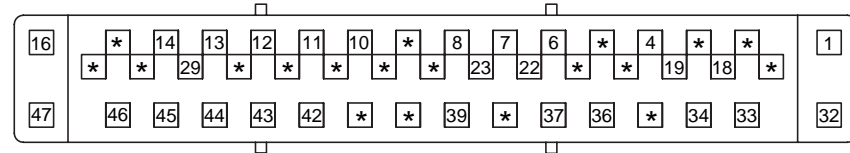


AMP_ESP_47F_L_UNIT

 E53




CR04F040

 E54




CR04F040

 E55




CR04F040

M22

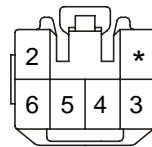


KET_090II_06F_B

M26

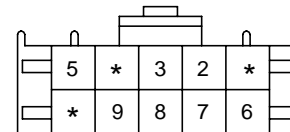


YAZ_SP_10F_W

 M40-B




AMP_0407_26F_W_HD

M40-C

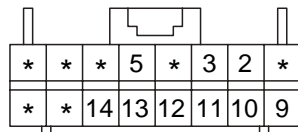


AMP_0407_16F_W_040

M51-A

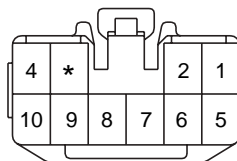


KET_090II_10F_B

M51-B

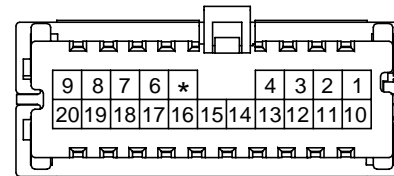

KET_040III_20F_W


M57

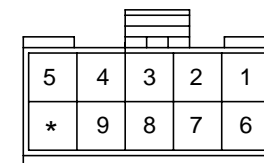

MLX_FIT_10F_B

Immobilizer System (1)

W/O BUTTON START

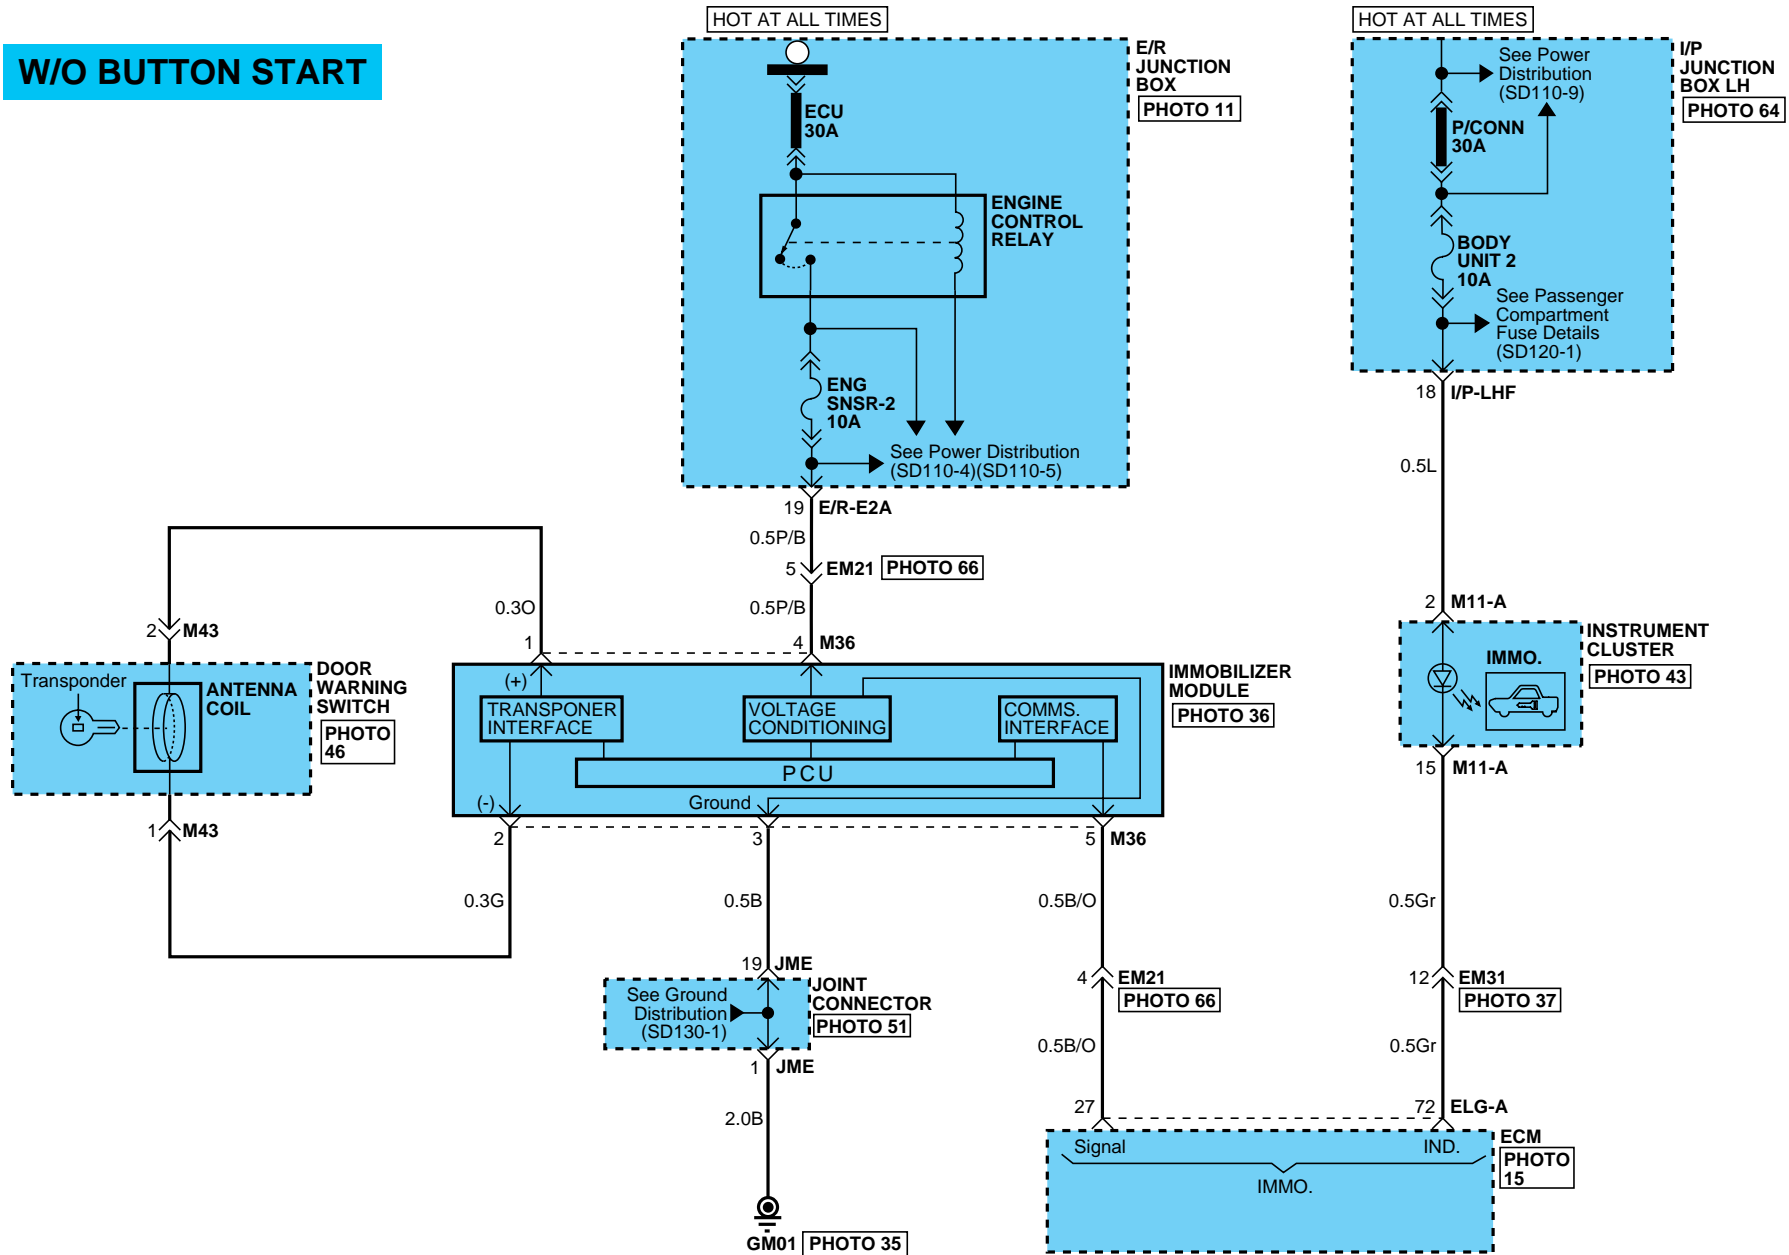


IMMOBILIZER SYSTEM

Immobilizer System (2)


SD954-2

ELG-A

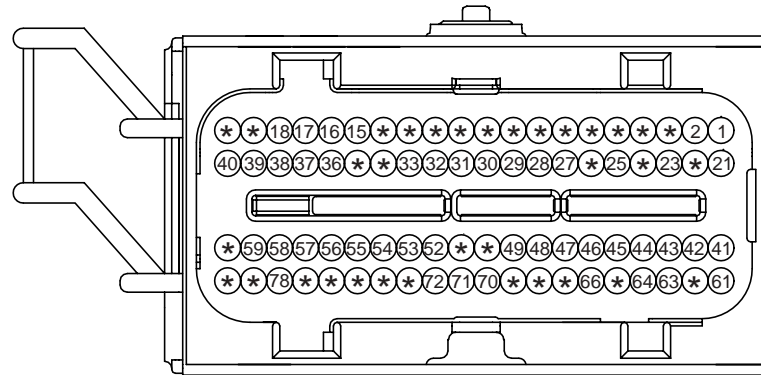


PKD_ECU_80F_Gr_1

M11-A

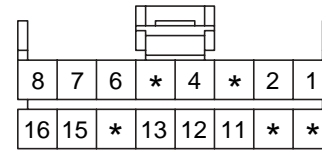


AMP_040M1_16F_B

M36

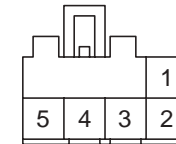

KUM_CDR_05F_W

M43

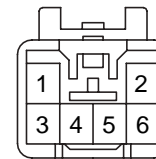


KET_090II_06M_W

BLANK

Forward & Back Parking Assist System (1)


SD957-1

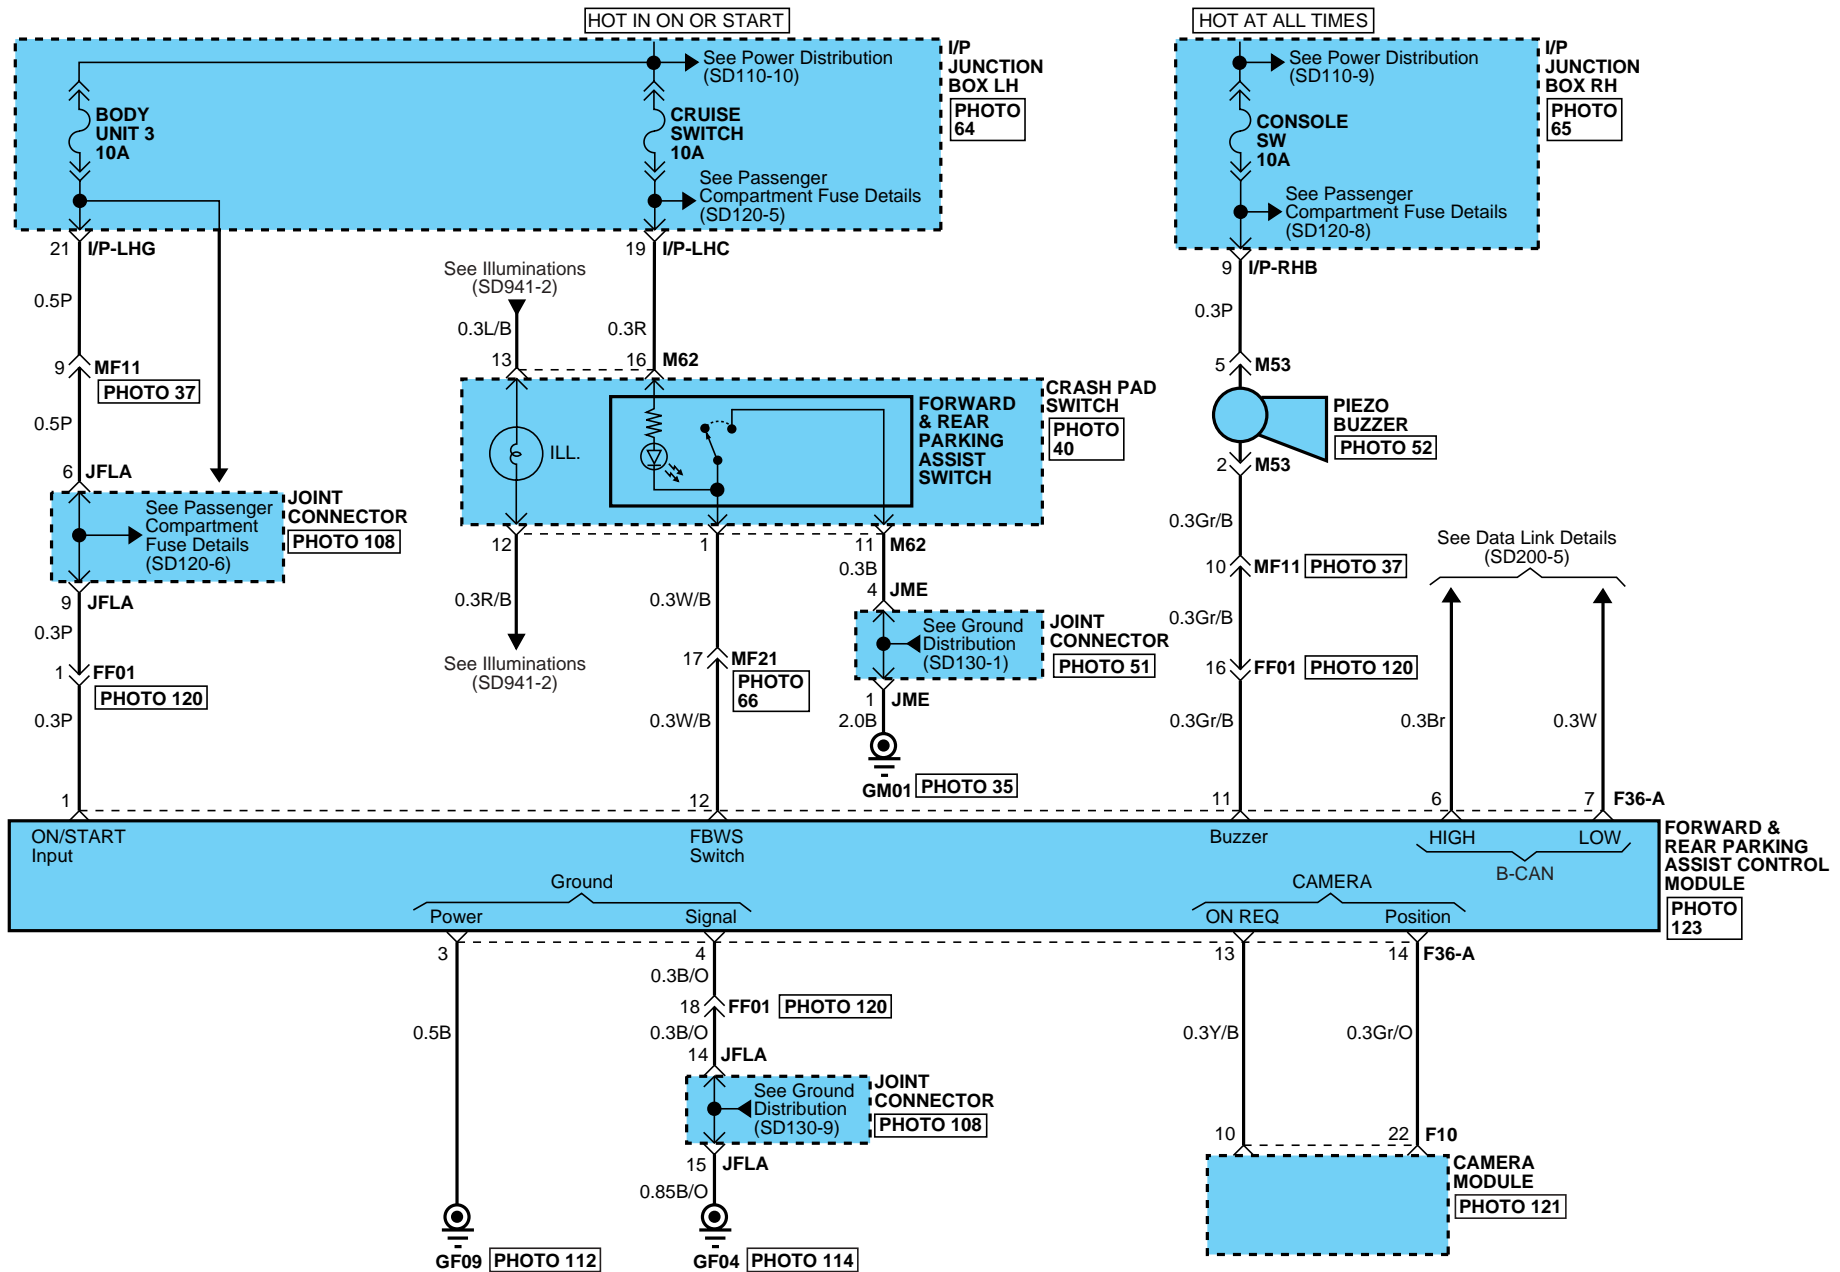

FORWARD & BACK PARKING ASSIST SYSTEM

Forward & Back Parking Assist System (2)

SD957-2

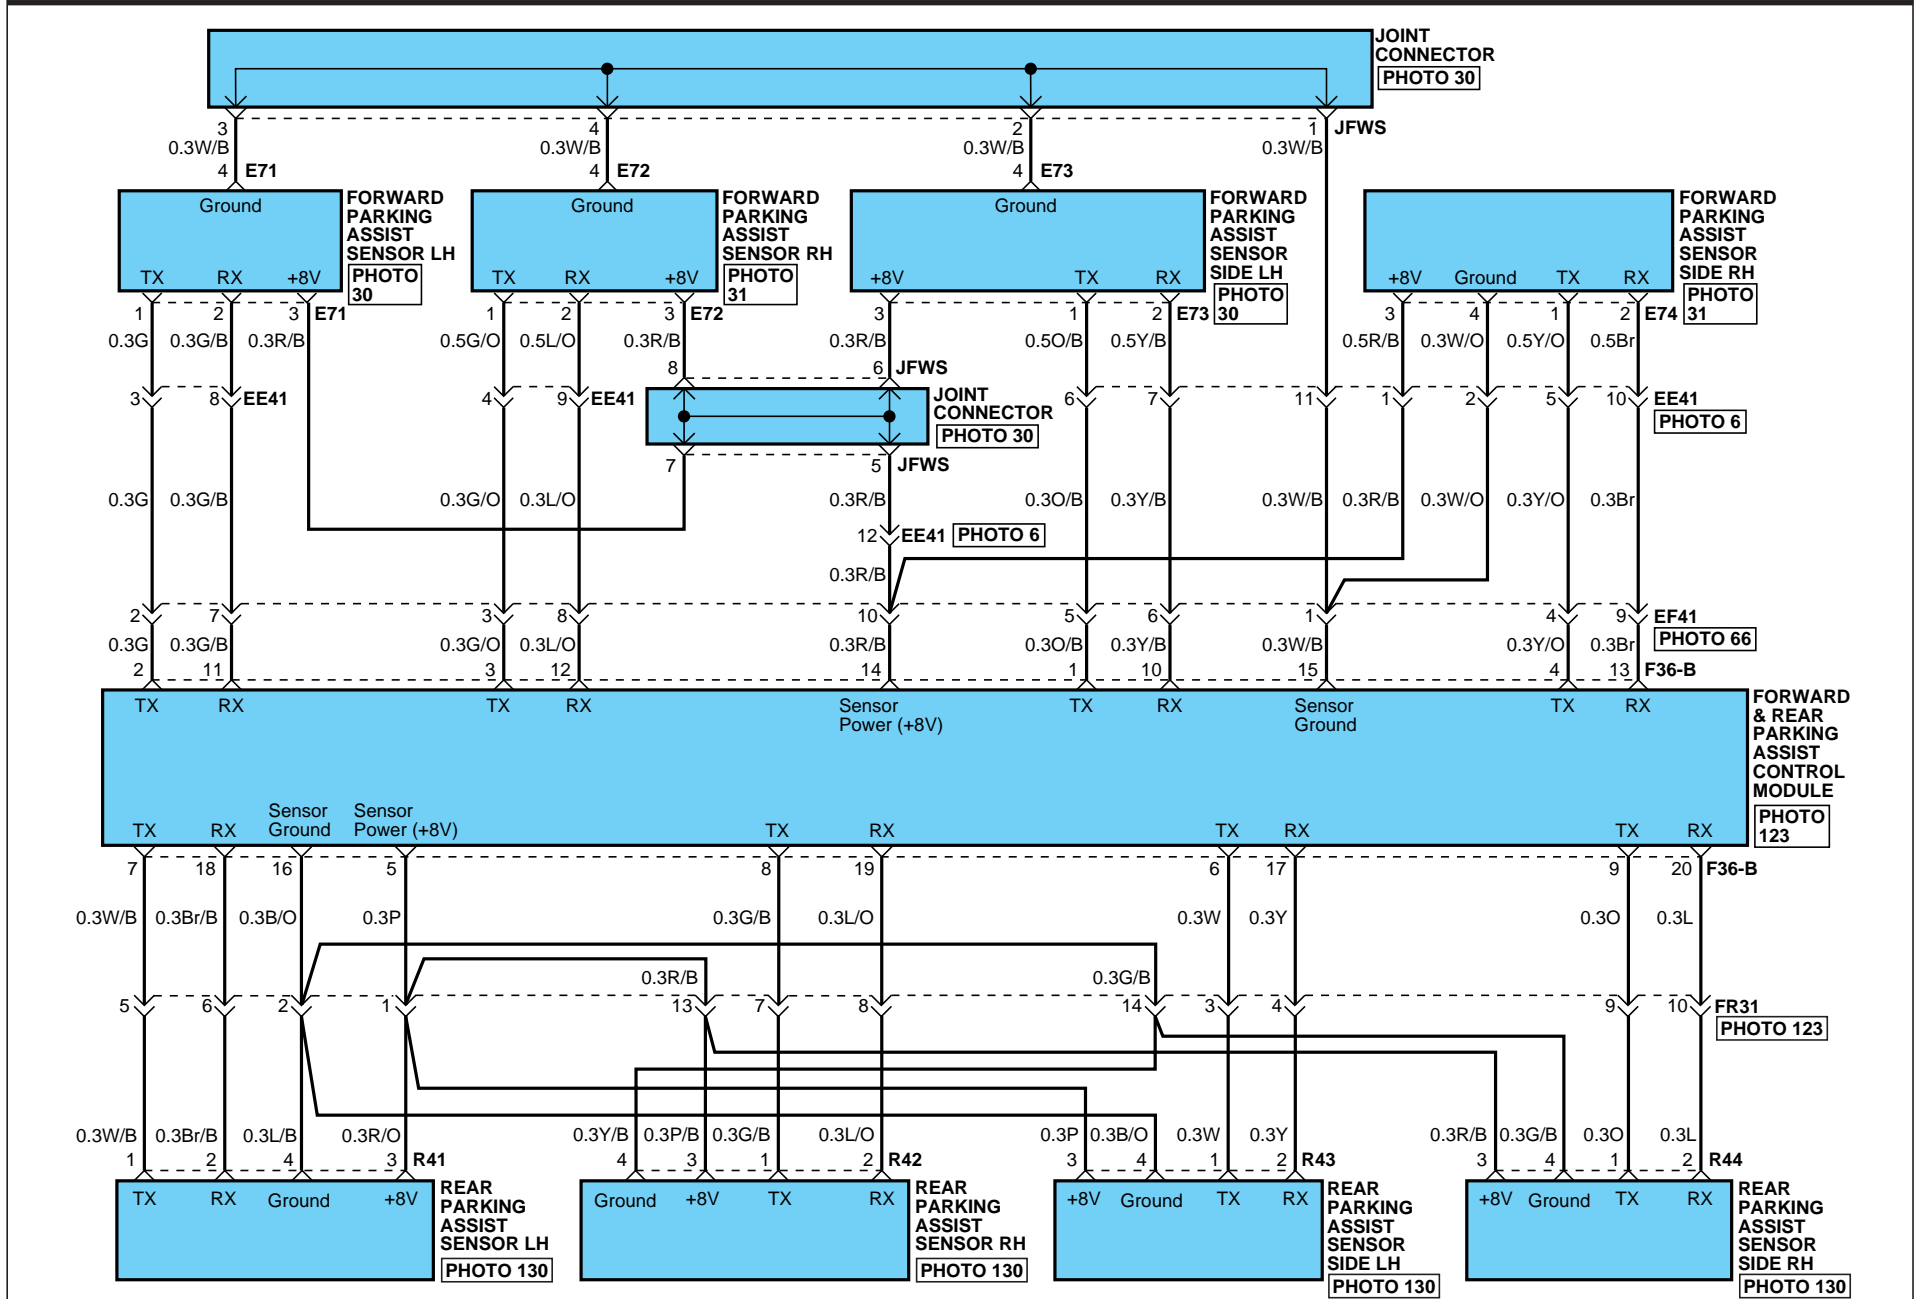

FORWARD & BACK PARKING ASSIST SYSTEM

Forward & Back Parking Assist System (3)


SD957-3

E71/E72




AMP_EJWP_04F_B

E73/E74

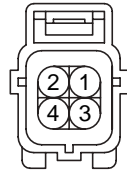


AMP_EJWP_04F_B

 F10




AMP_040II_24F_B

F36-A

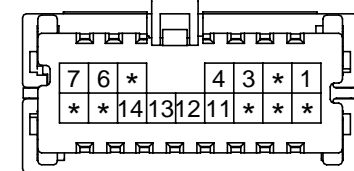


KET_040III_16F_W

F36-B

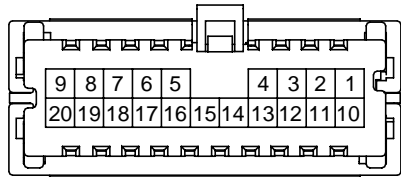


KET_040III_20F_W

M53

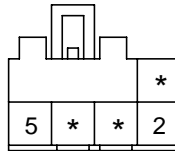

KUM_CDR_05F_W

M62

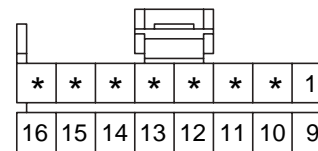


AMP_040M1_16F_B

R41/R42



AMP_EJWP_04F_B

R43/R44

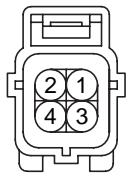

AMP_EJWP_04F_B

BLANK

BLANK

BLANK


FORWARD & BACK PARKING ASSIST SYSTEM

Forward & Back Parking Assist System (4)

SD957-4

MEMO

Back Warning Camera (1)

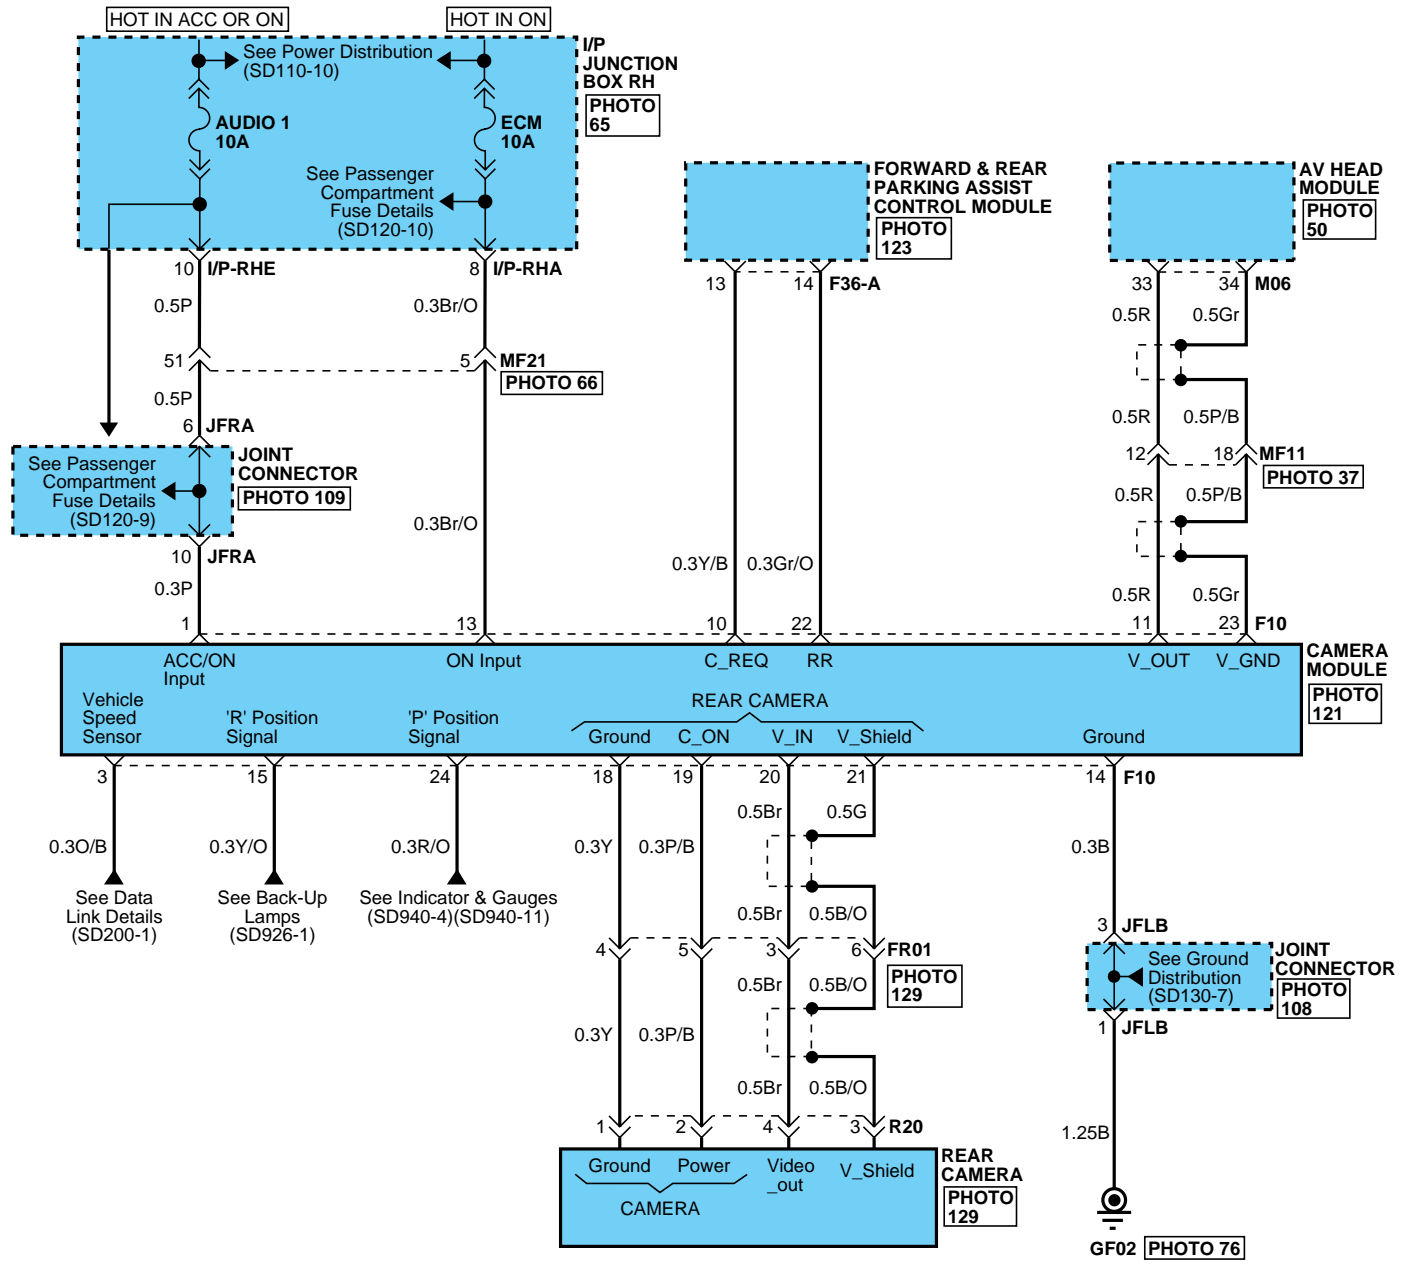


BACK WARNING CAMERA

Back Warning Camera (2)


SD957-6

 F10




AMP_040II_24F_B

F36-A

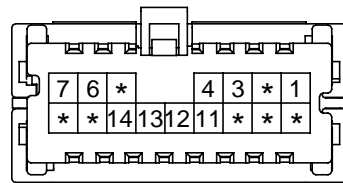


KET_040III_16F_W

M06

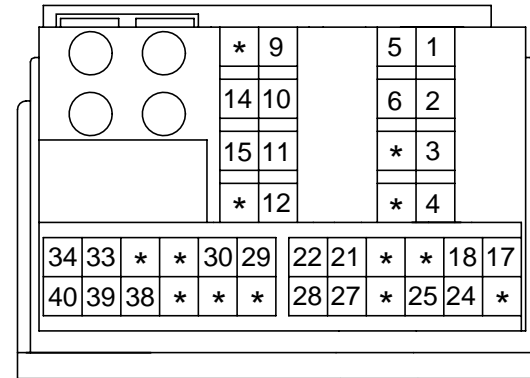

YAZ_OPT_40F_B

R20

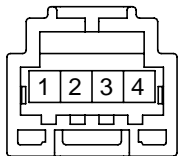


AMP_MQS_04M_B

BLANK

Audio (1)


SD961-1

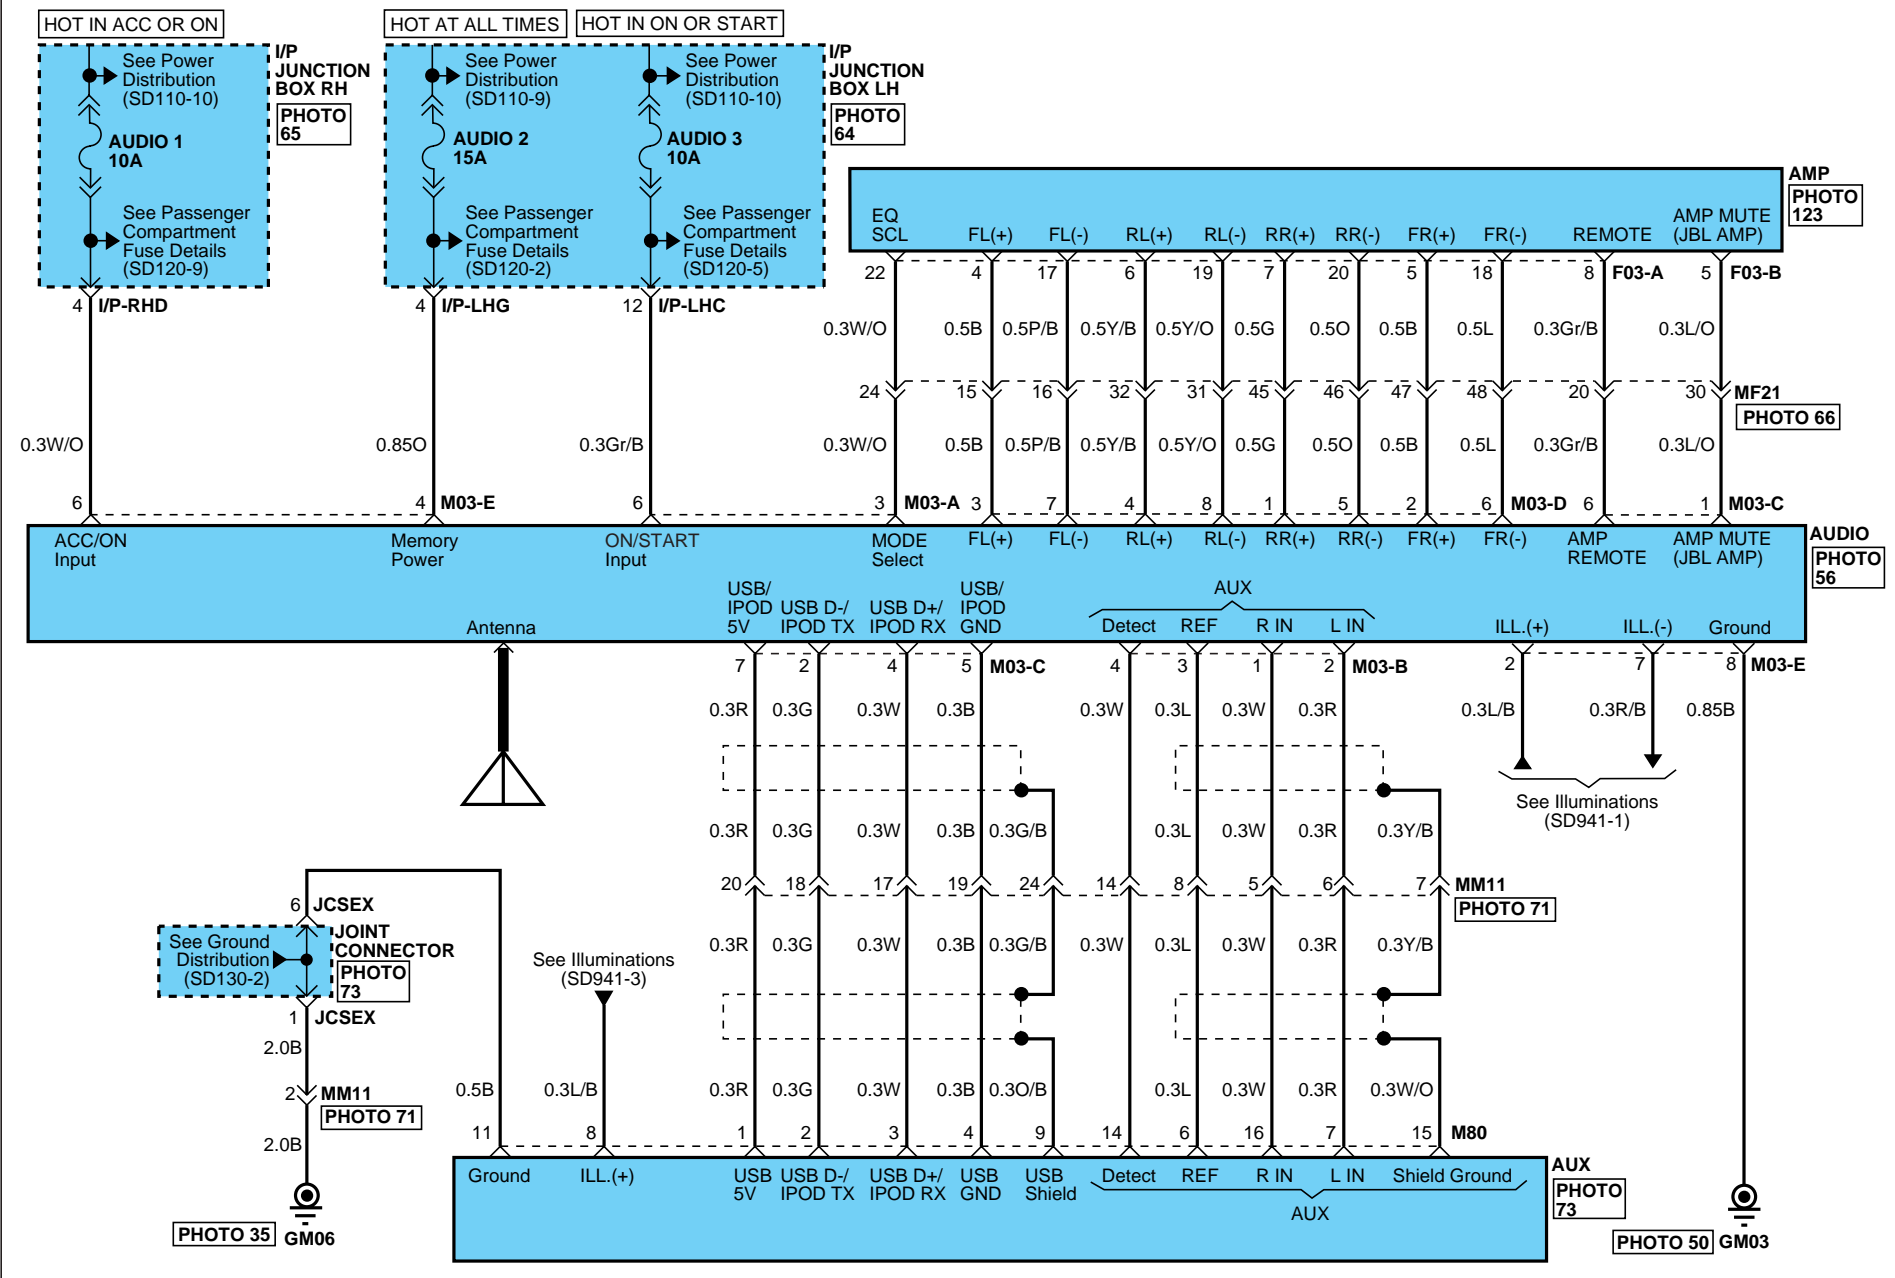

AUDIO

Audio (2)


SD961-2

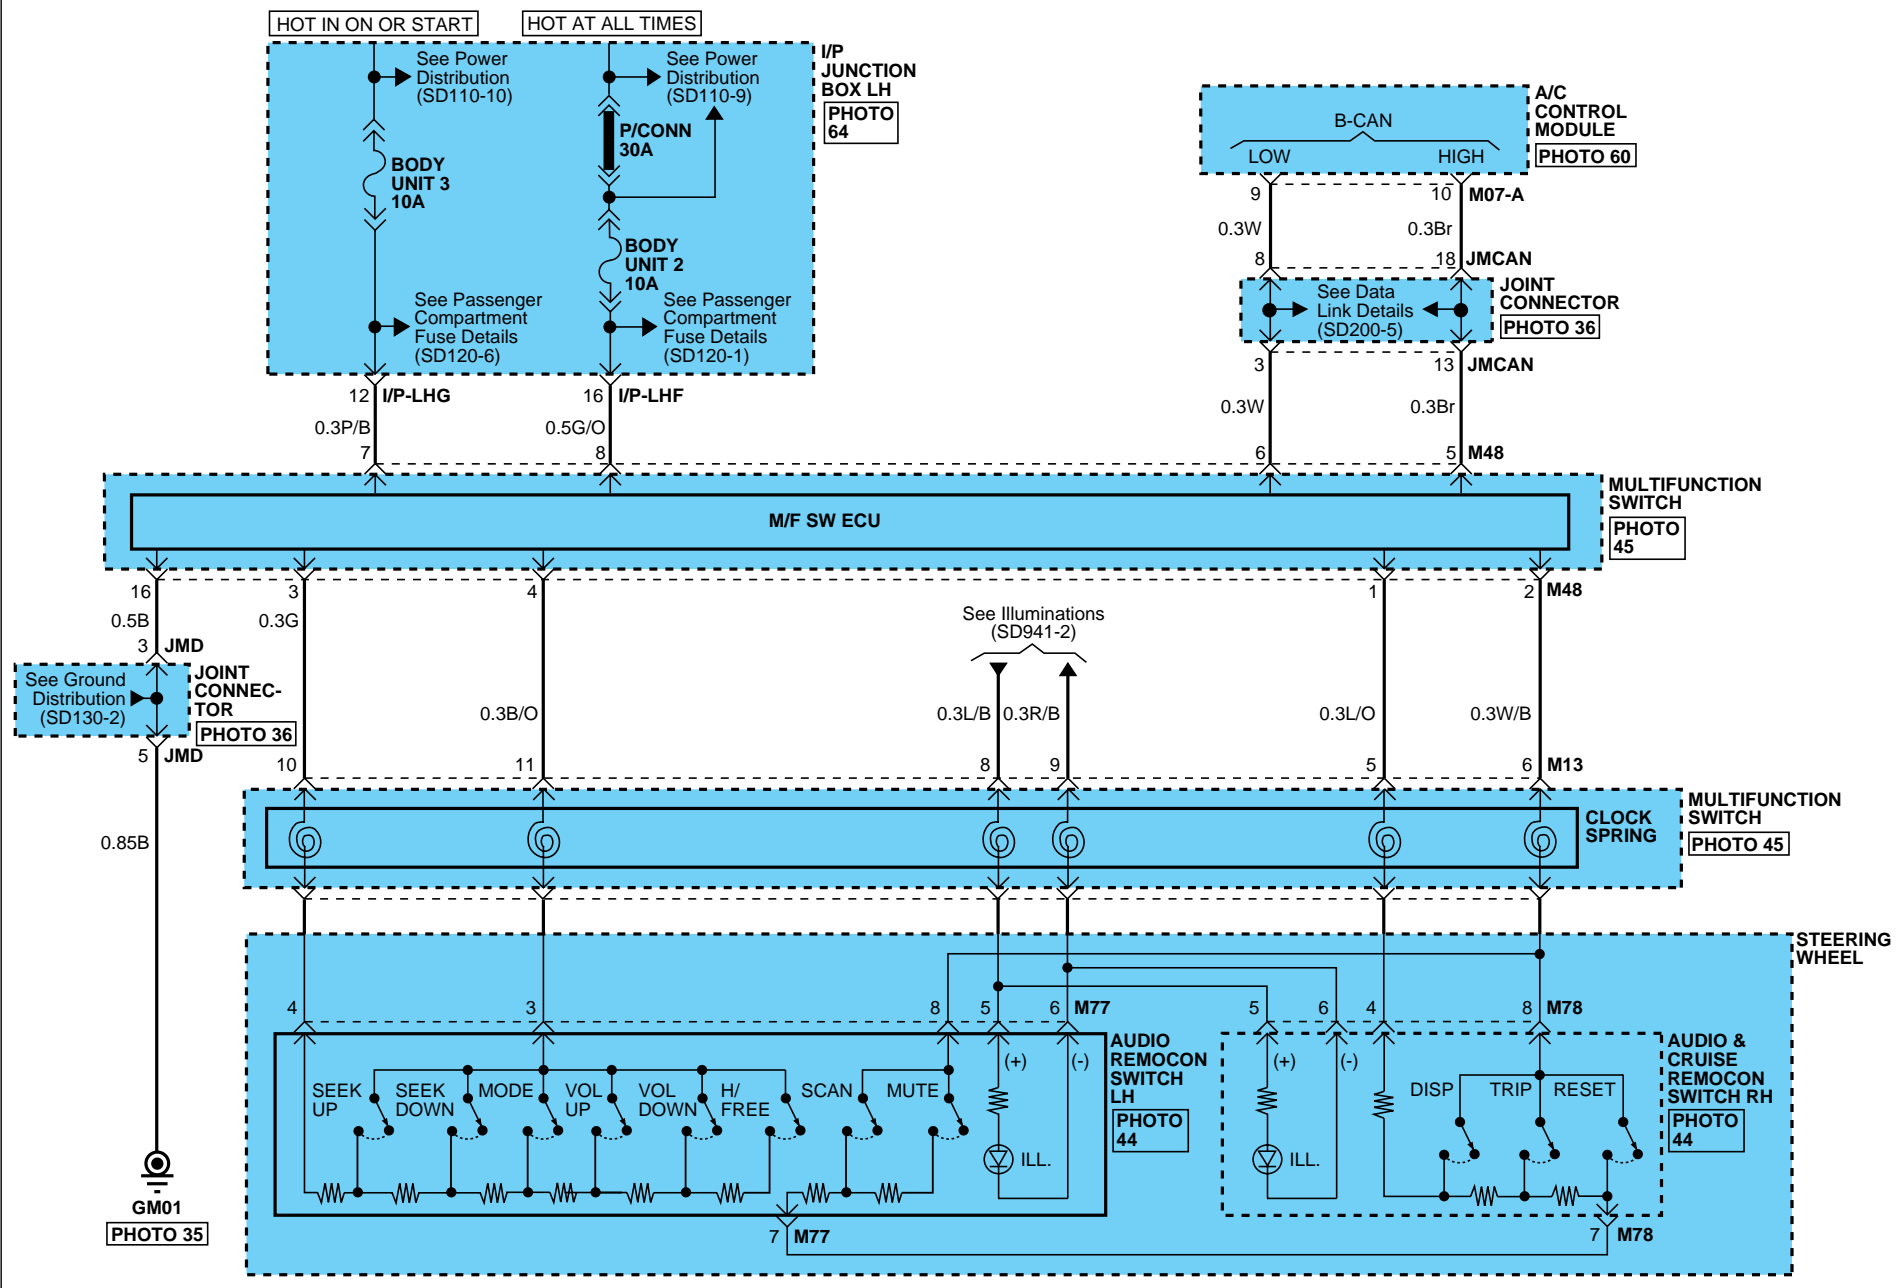

AUDIO

Audio (3)

SD961-3

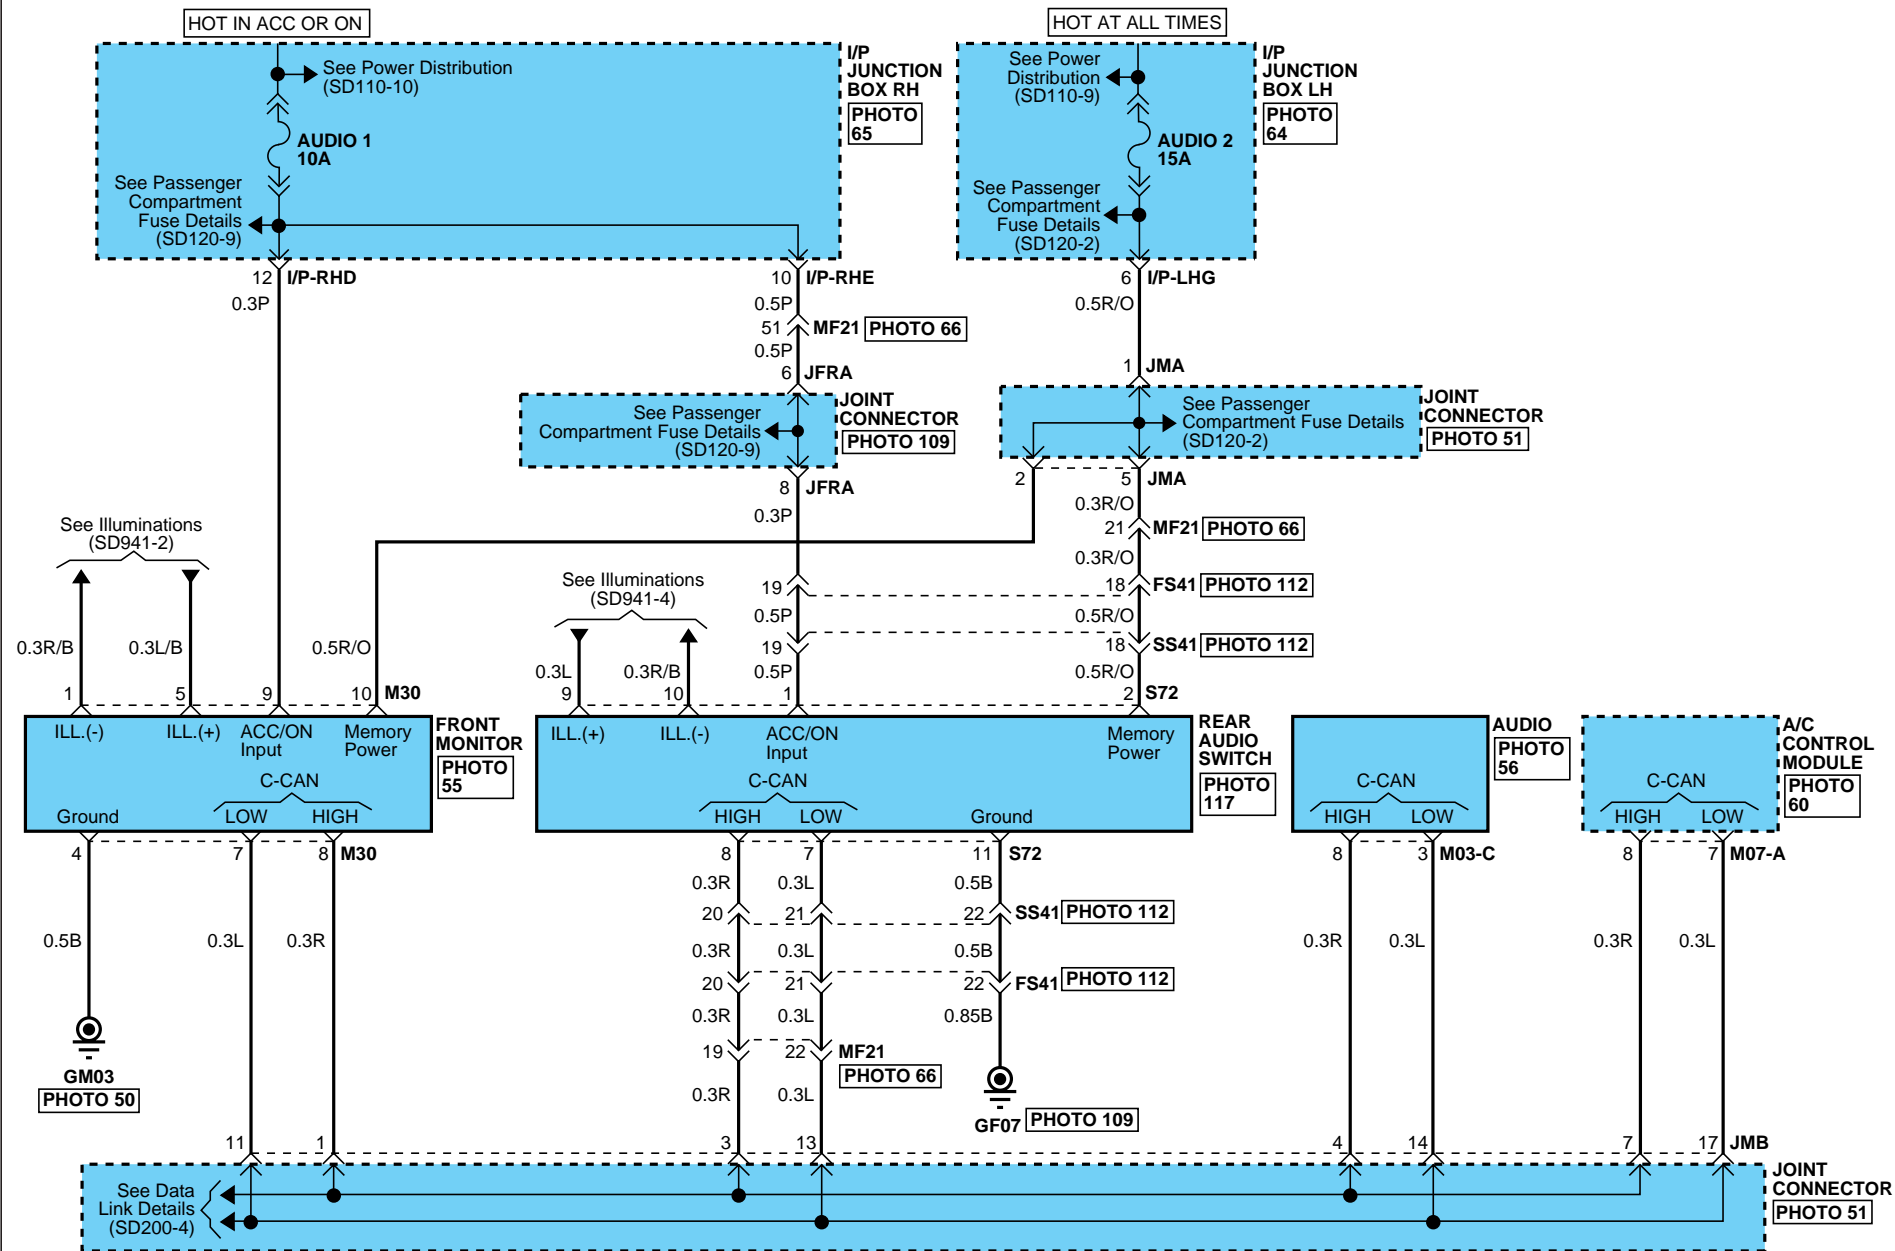


AUDIO

Audio (4)

SD961-4

AUDIO AMP

HOT AT ALL TIMES

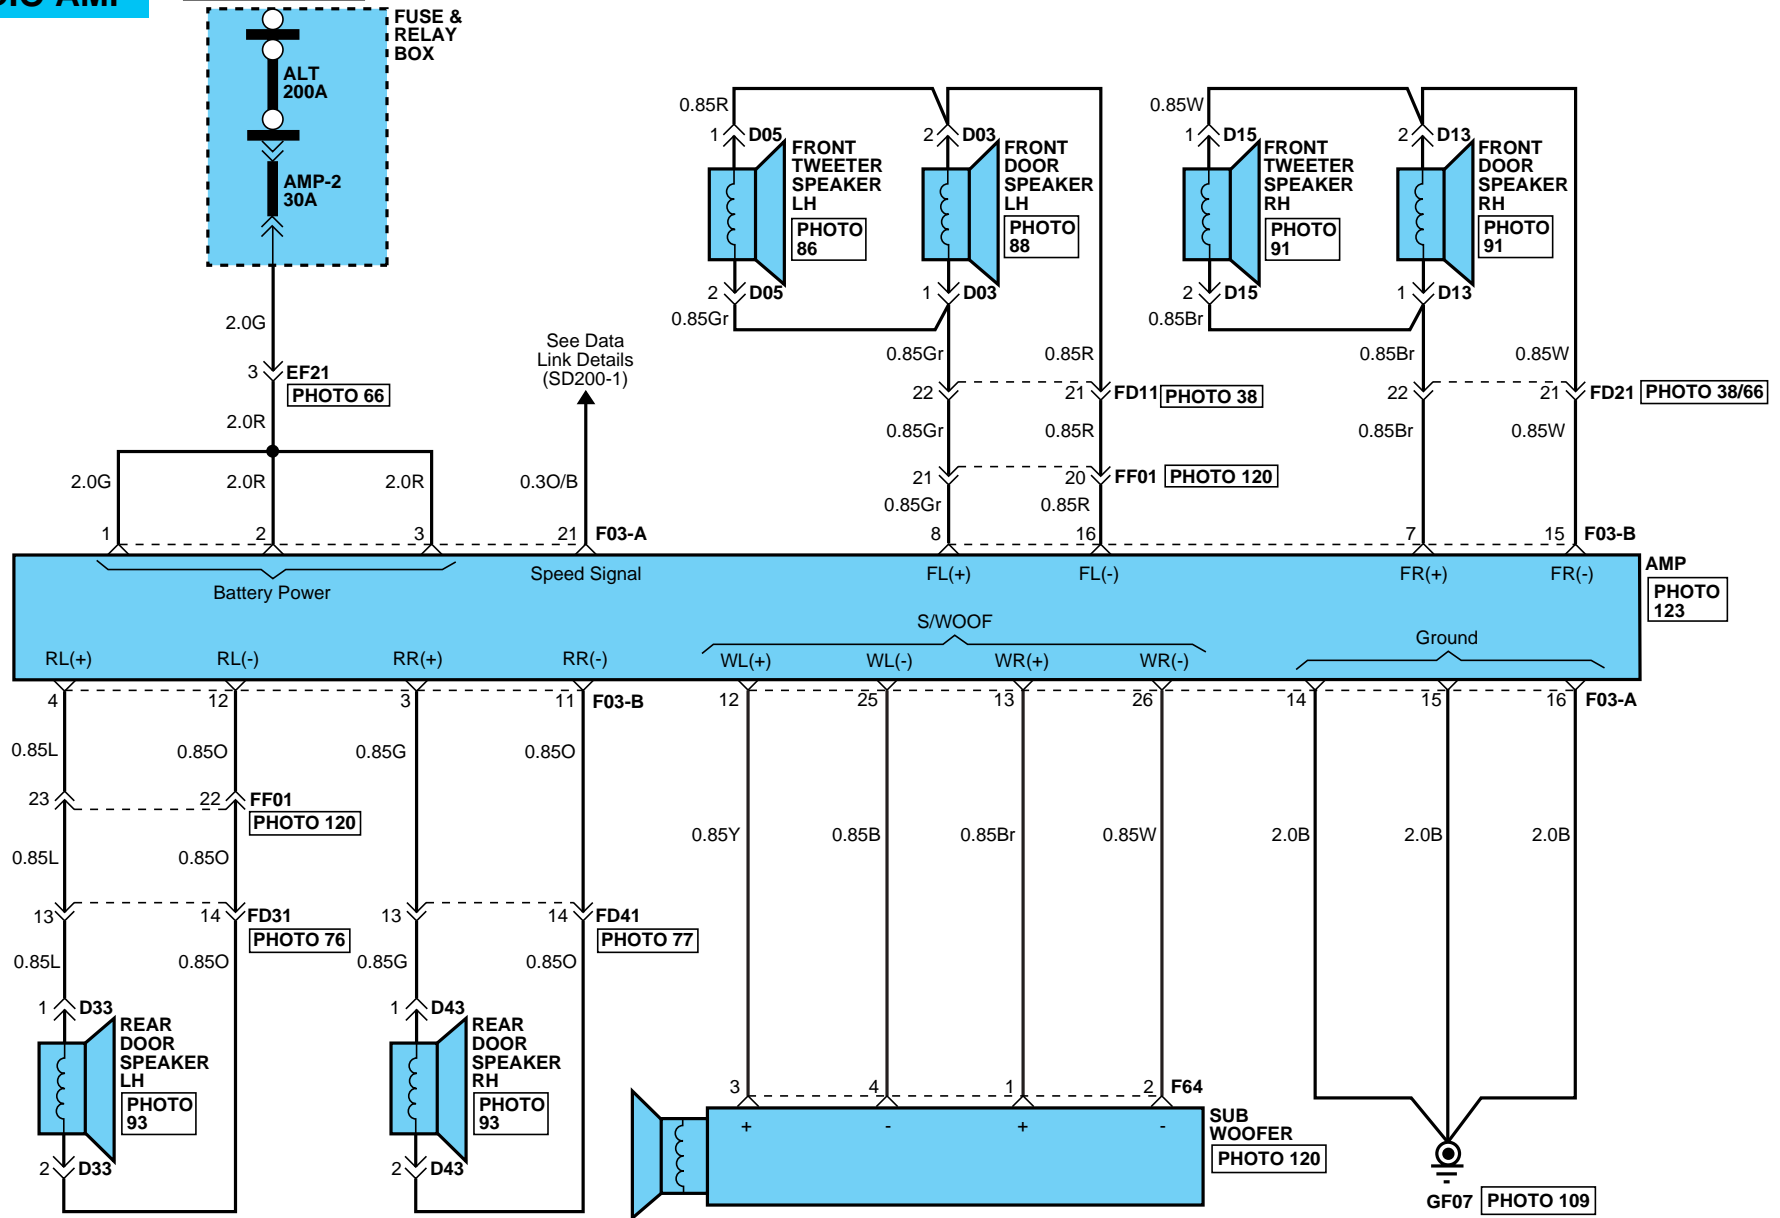


AUDIO

Audio (5)

SD961-5

JBL AMP

HOT AT ALL TIMES

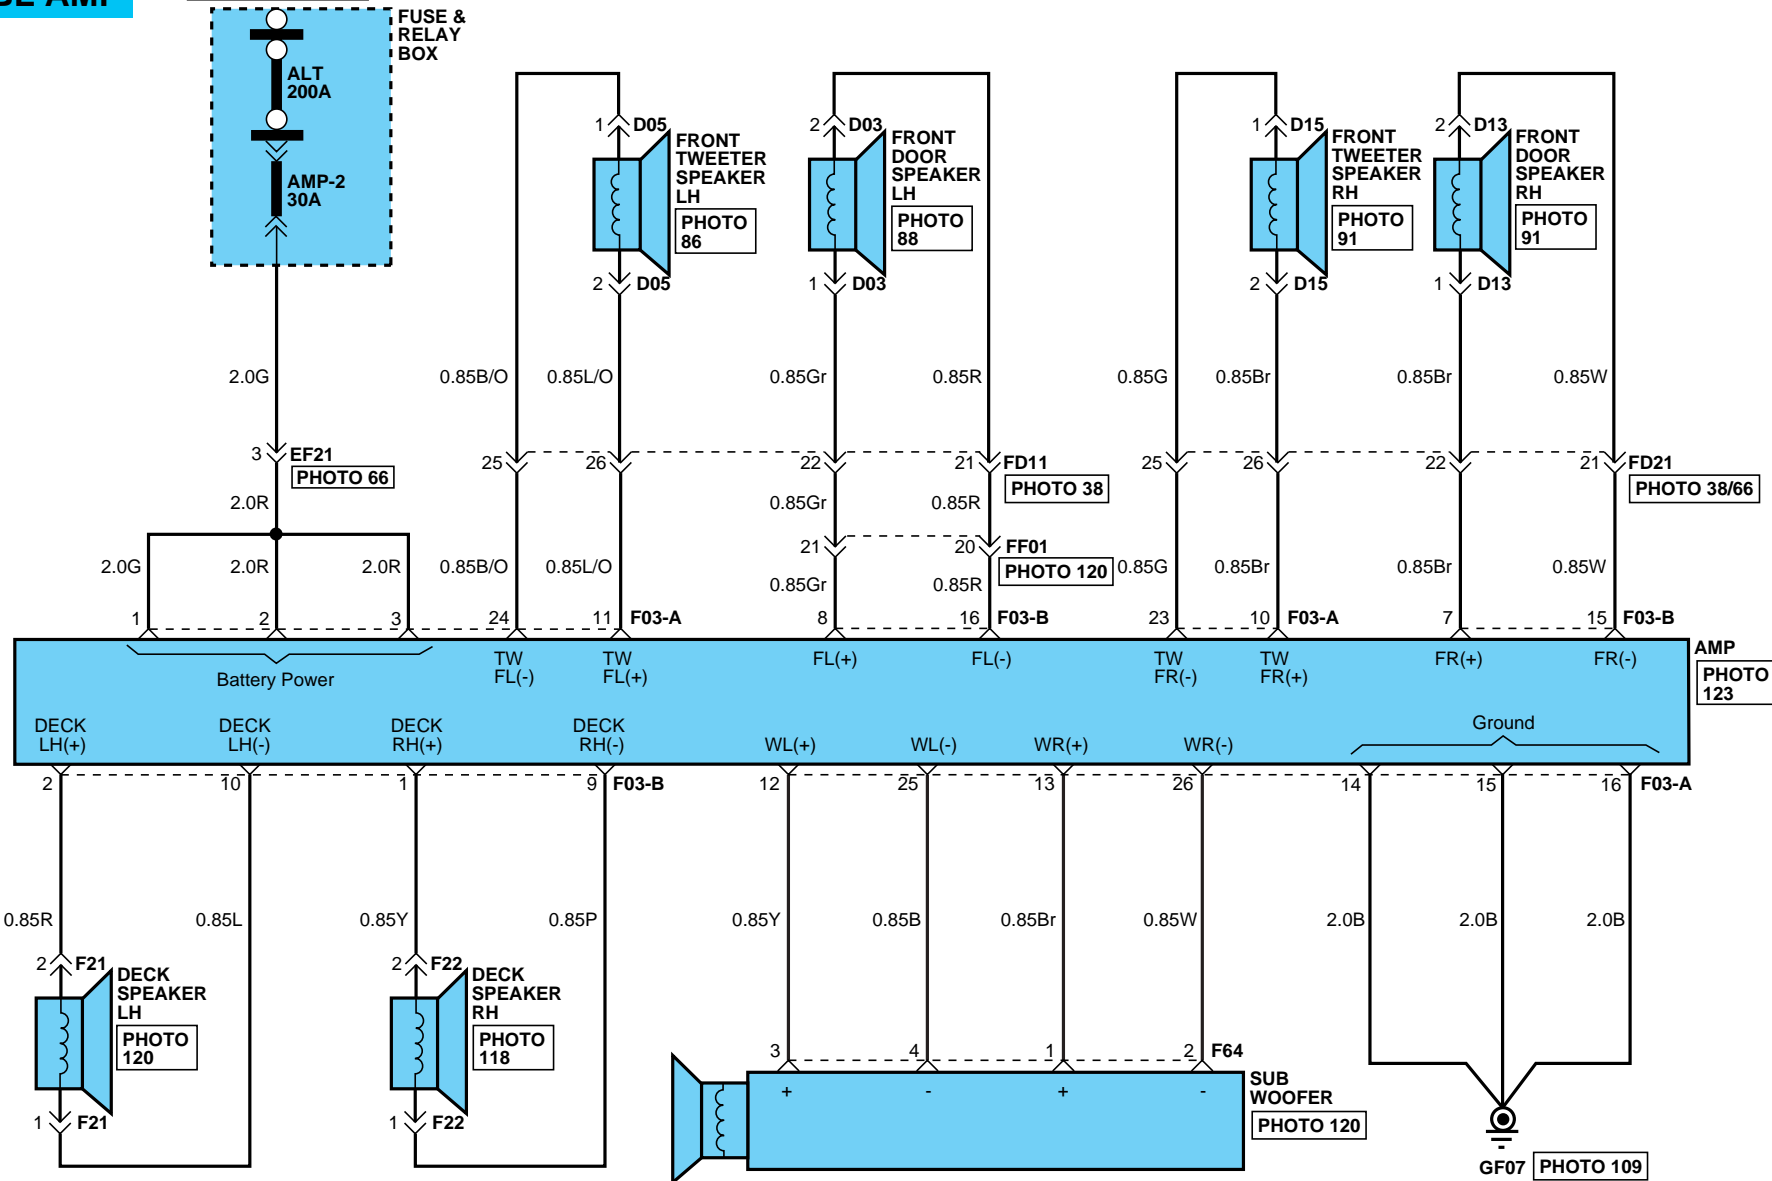


AUDIO

Audio (6)

SD961-6








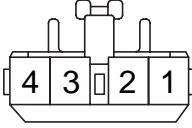
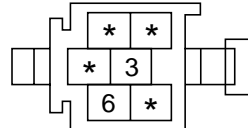
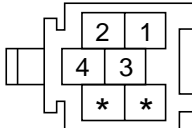
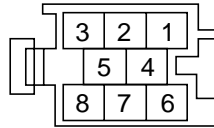
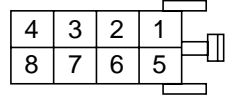
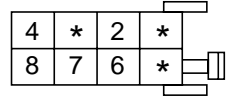
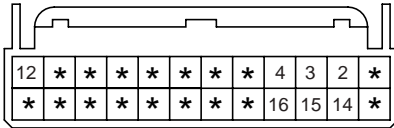
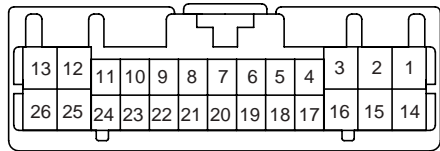
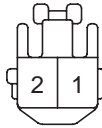
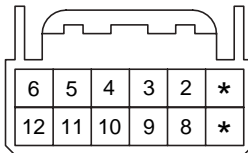
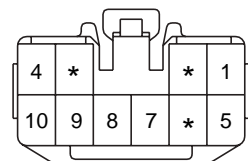
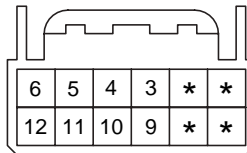
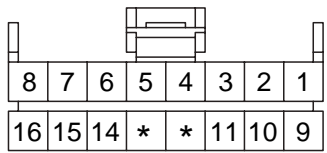
JBL AMP

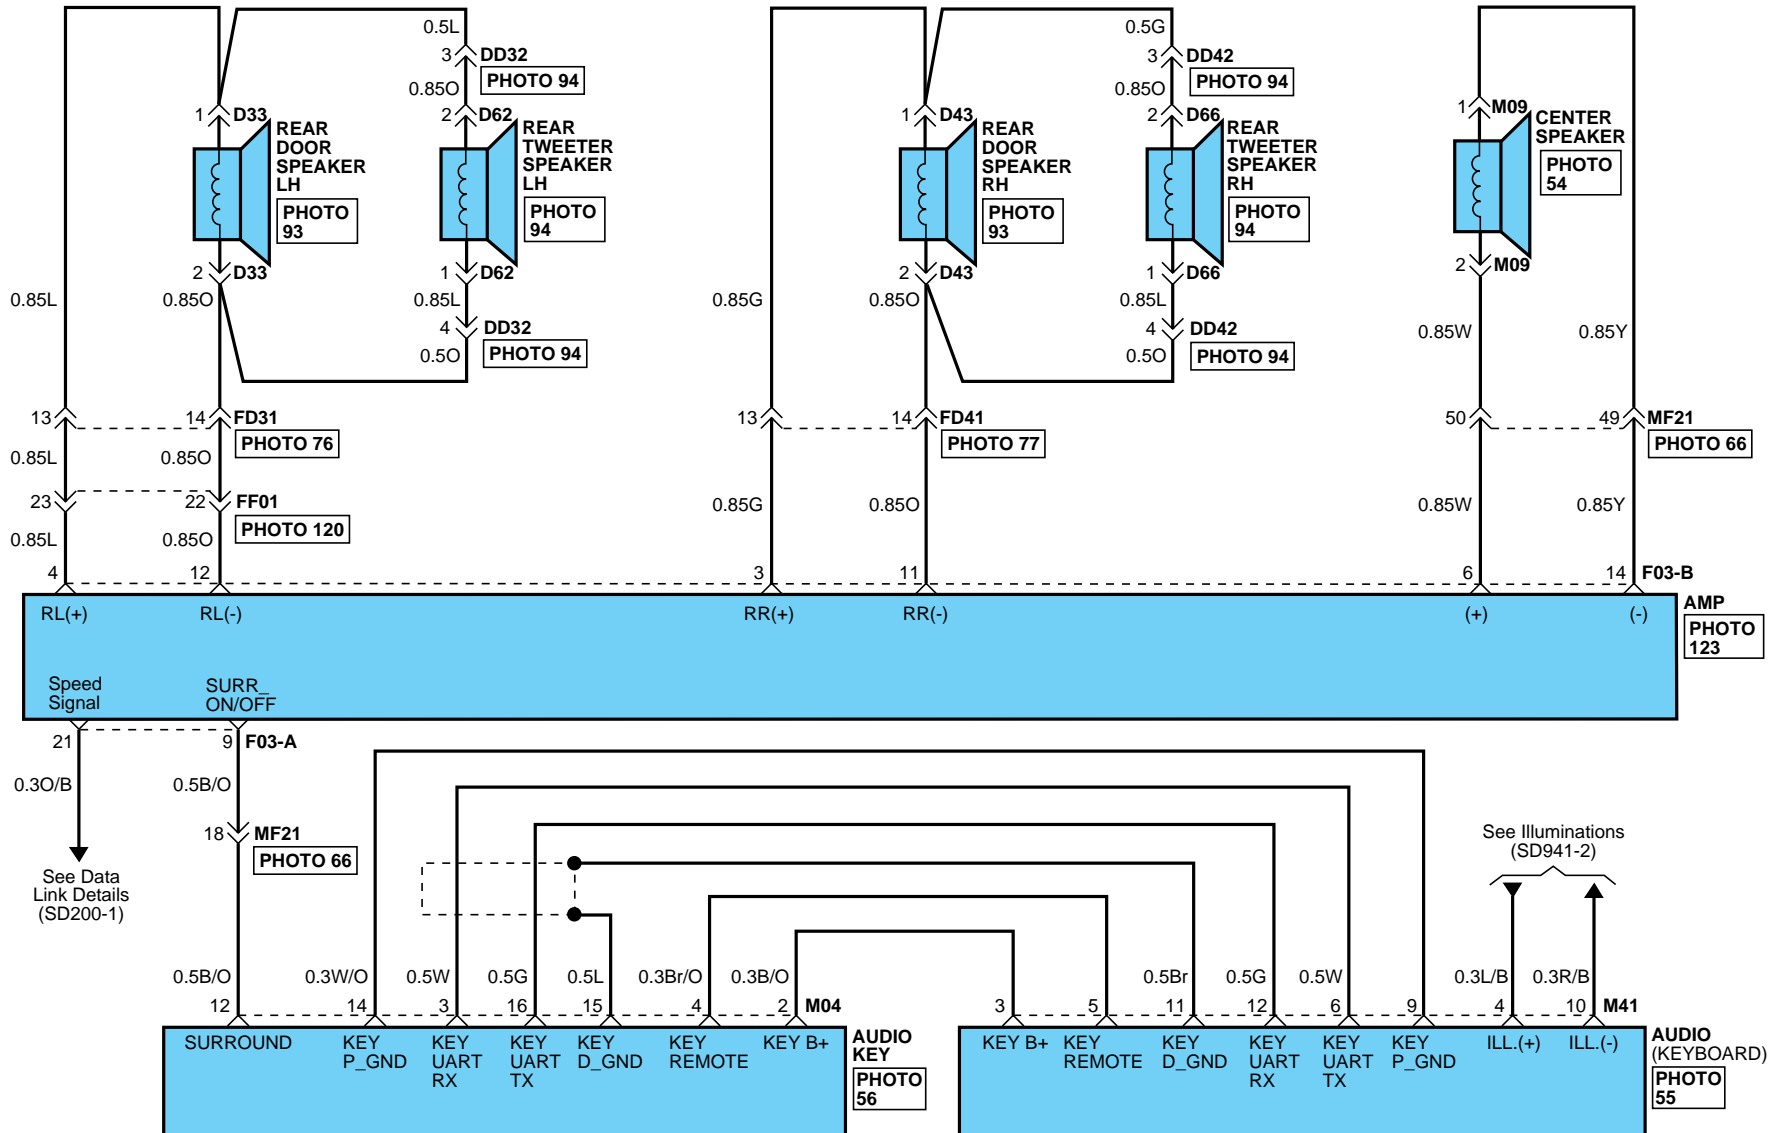

AUDIO

Audio (7)

SD961-7

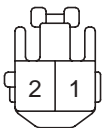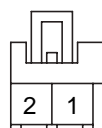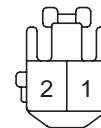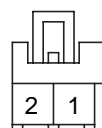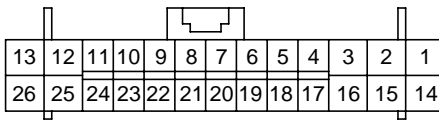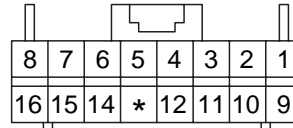
<p>D03/D13</p>  <p>KET_090II_02F_W_L</p>	<p>D05/D15</p>  <p>KUM_CDR_02F_W</p>	<p>D33/D43</p>  <p>KET_090II_02F_W_L</p>	<p>D62/D66</p>  <p>KUM_CDR_02F_W</p>
<p>F03-A</p>  <p>AMP_0407MII_26F_GY</p>	<p>F03-B</p>  <p>AMP_0407MII_16F_GY</p>	<p>F21/F22</p>  <p>KET_090II_02F_W_L</p>	<p>F64</p>  <p>KET_090II_04F_W</p>
<p>M03-A</p>  <p>AMP_MTII_06F_Y_C1</p>	<p>M03-B</p>  <p>AMP_MTII_06F_G_C2</p>	<p>M03-C</p>  <p>AMP_MTII_08F_L_C3</p>	<p>M03-D</p>  <p>AMP_JT_08F_Br_D1</p>
<p>M03-E</p>  <p>AMP_JT_08F_Gr_D2</p>	<p>M04</p>  <p>AMP_025_24F_W</p>	<p>M07-A</p>  <p>KET_0407_26F_W</p>	<p>M09</p>  <p>KET_090II_02F_W_L</p>
<p>M13</p>  <p>AMP_025_12F_W</p>	<p>M30</p>  <p>KET_090II_10F_W</p>	<p>M41</p>  <p>AMP_025_12F_W</p>	<p>M48</p>  <p>AMP_040M1_16F_B</p>

AUDIO

Audio (8)


SD961-8

M77

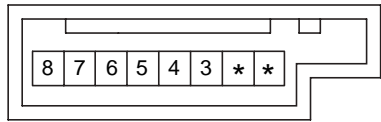


AMP_1743386-2

M78

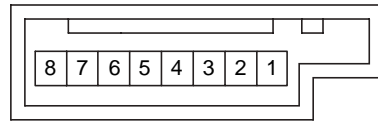


AMP_1743386-1

M80

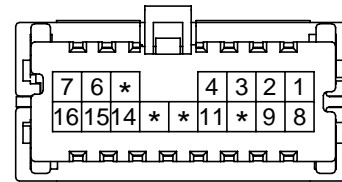


KET_040III_16F_W

S72

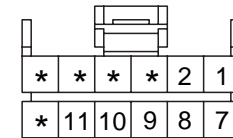

AMP_040MK1_12F_B

Auto Cruise System (1)

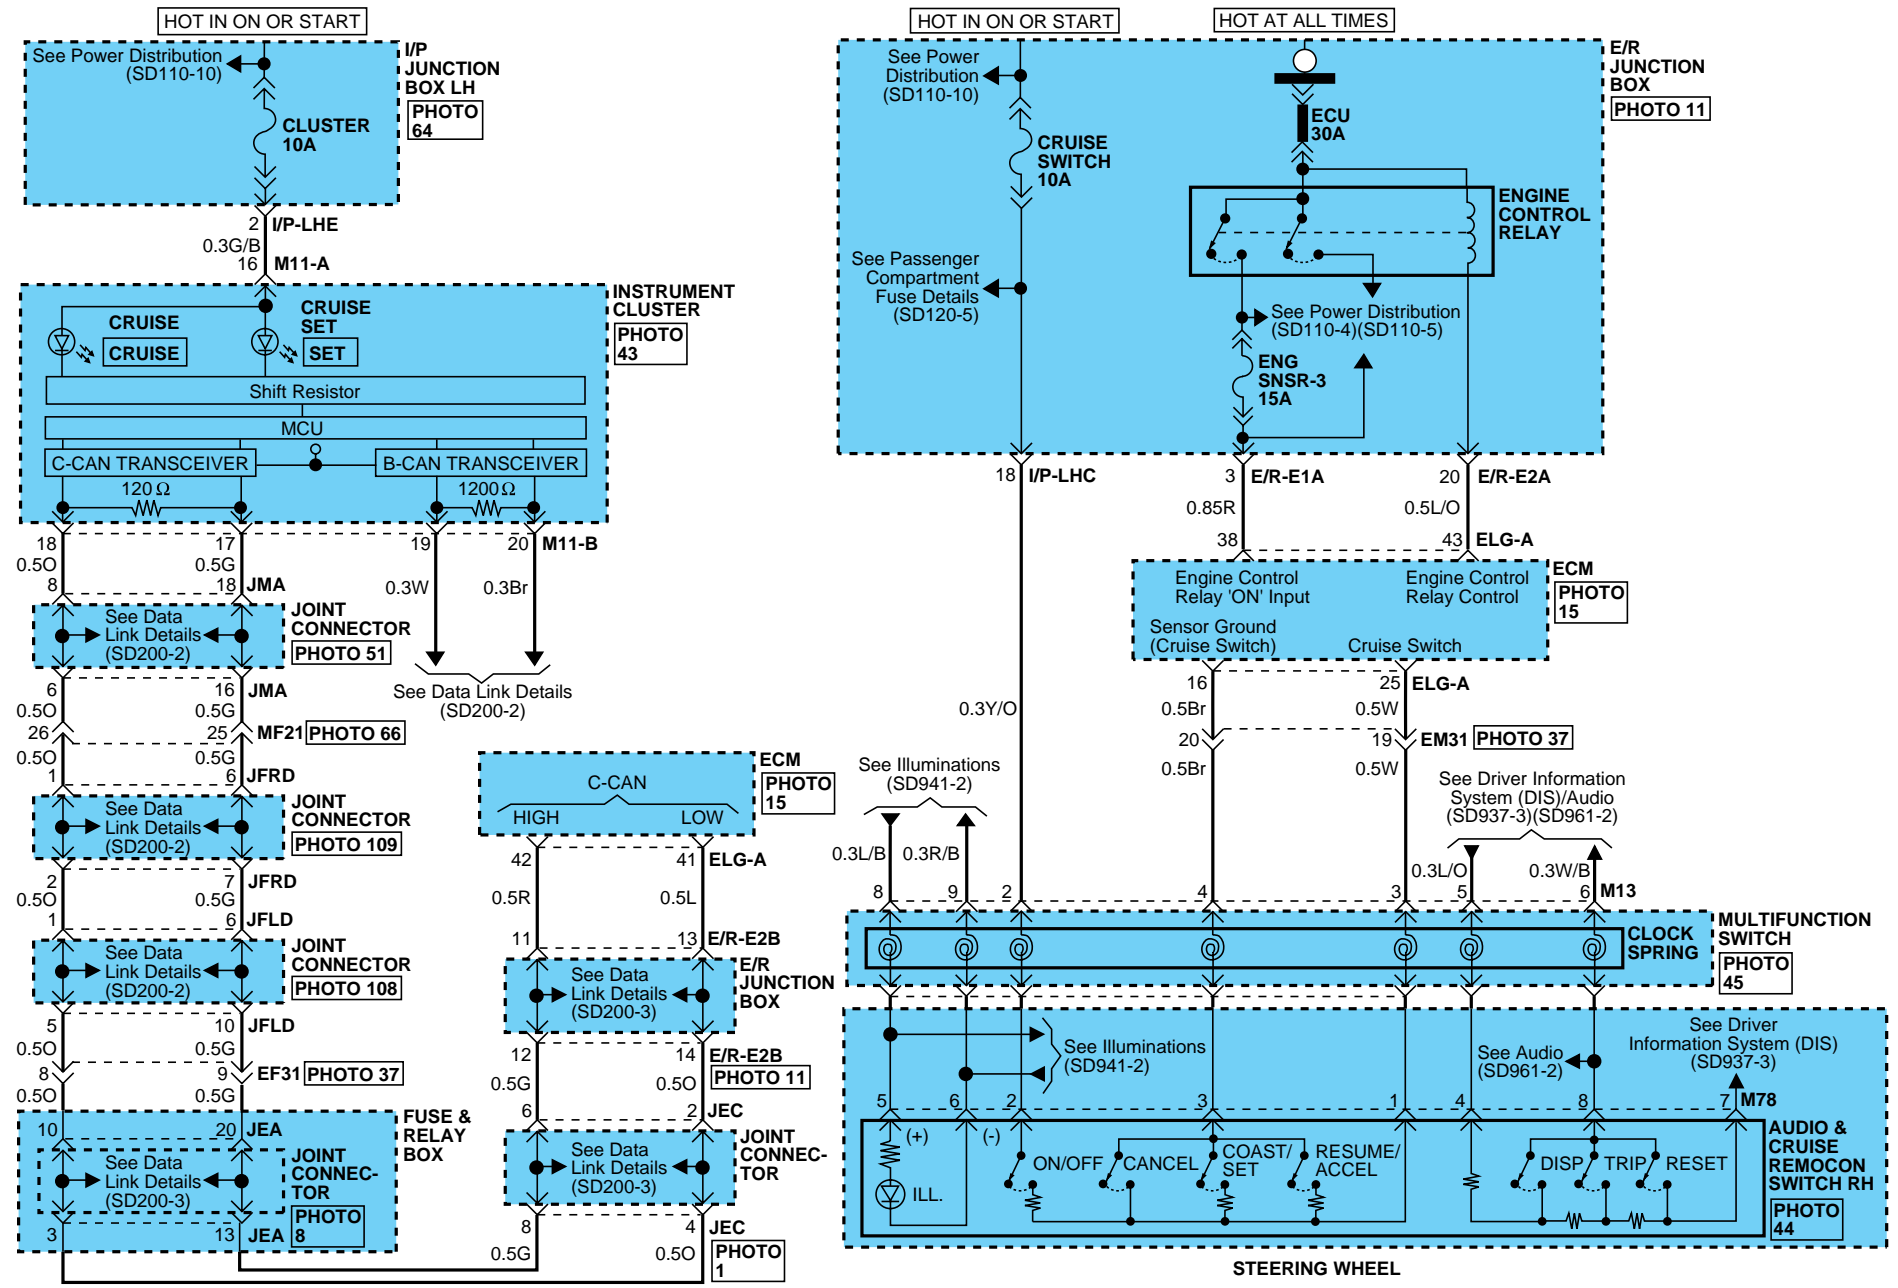


AUTO CRUISE SYSTEM

Auto Cruise System (2)


SD964-2

ELG-A

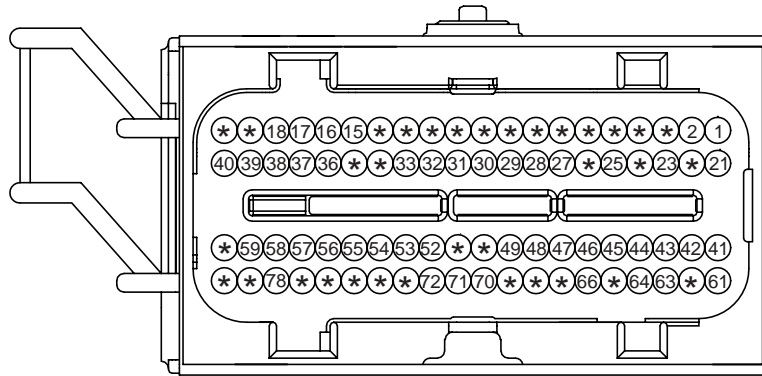


PKD_ECU_80F_Gr_1

M11-A

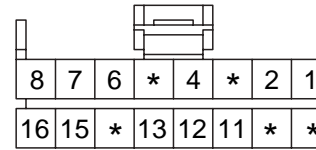


AMP_040M1_16F_B

M11-B

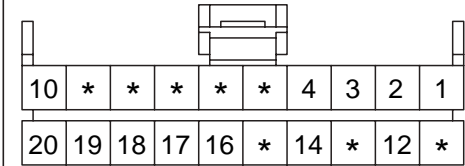


AMP_040M1_20F_B

M13

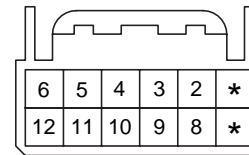


AMP_025_12F_W

M78

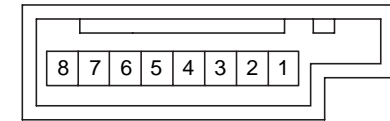

AMP_1743386-1

Horns (1)

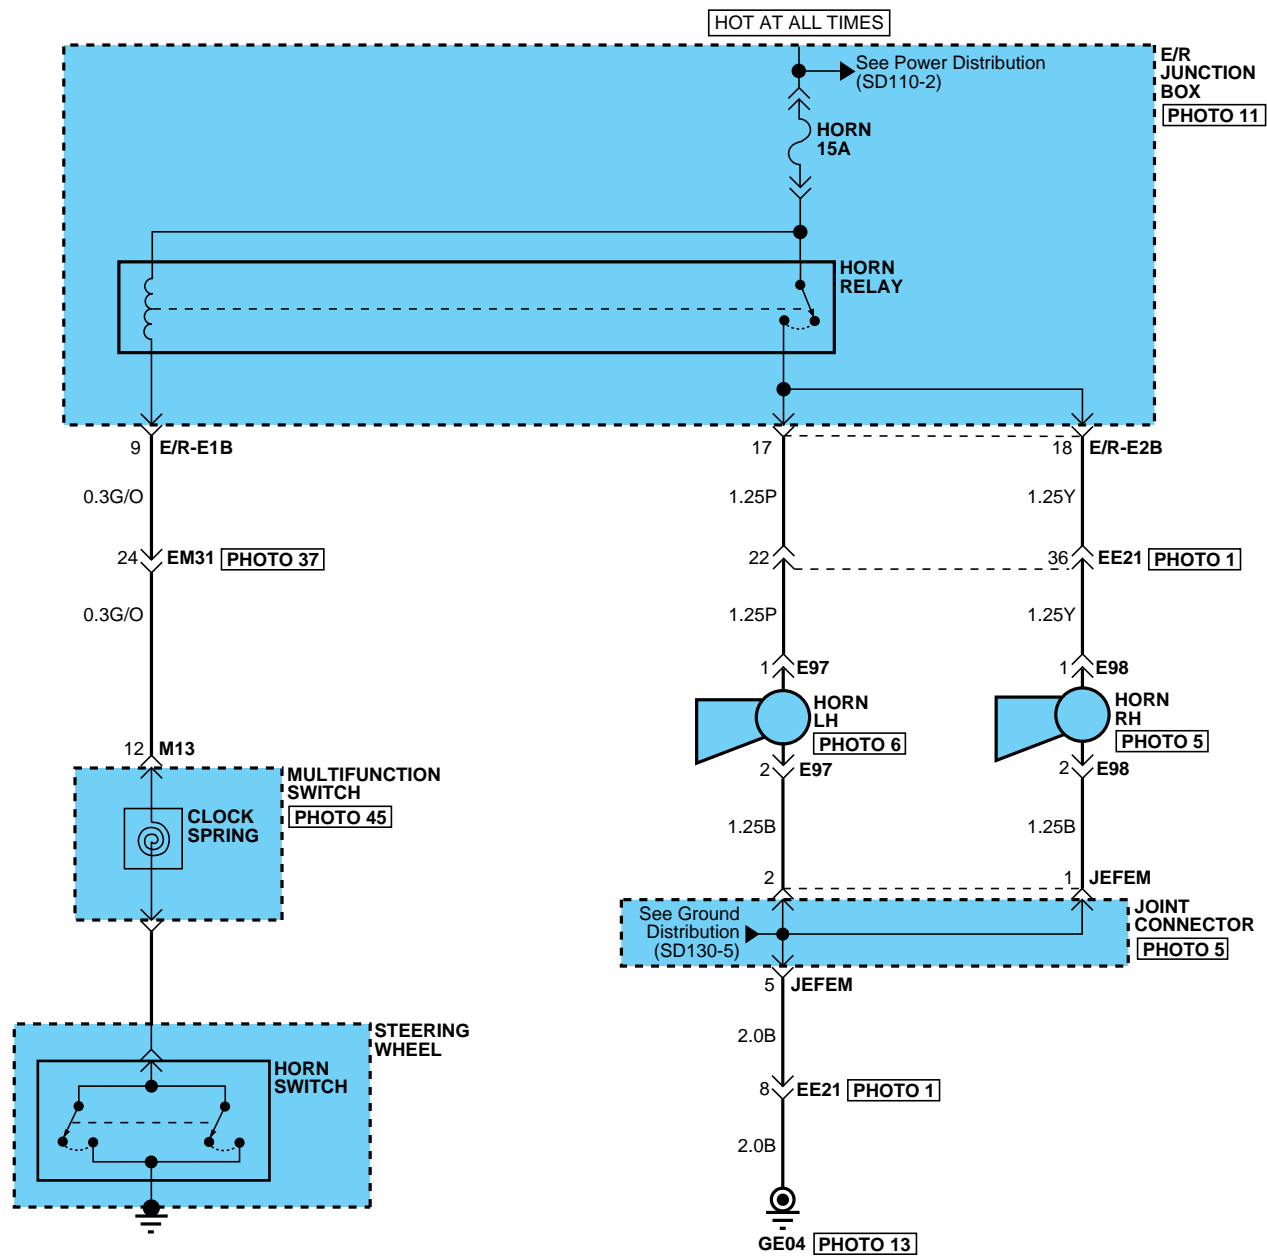


HORNS

Horns (2)


SD968-2

E97

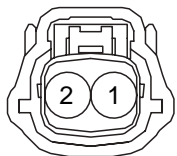


MLX_HORN_02F_B_FILT

E98

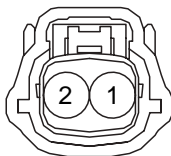

MLX_HORN_02F_B_FILT

M13

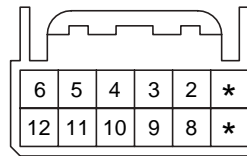


AMP_025_12F_W

BLANK

Blower & A/C Control System (Auto) (1)


SD971-1

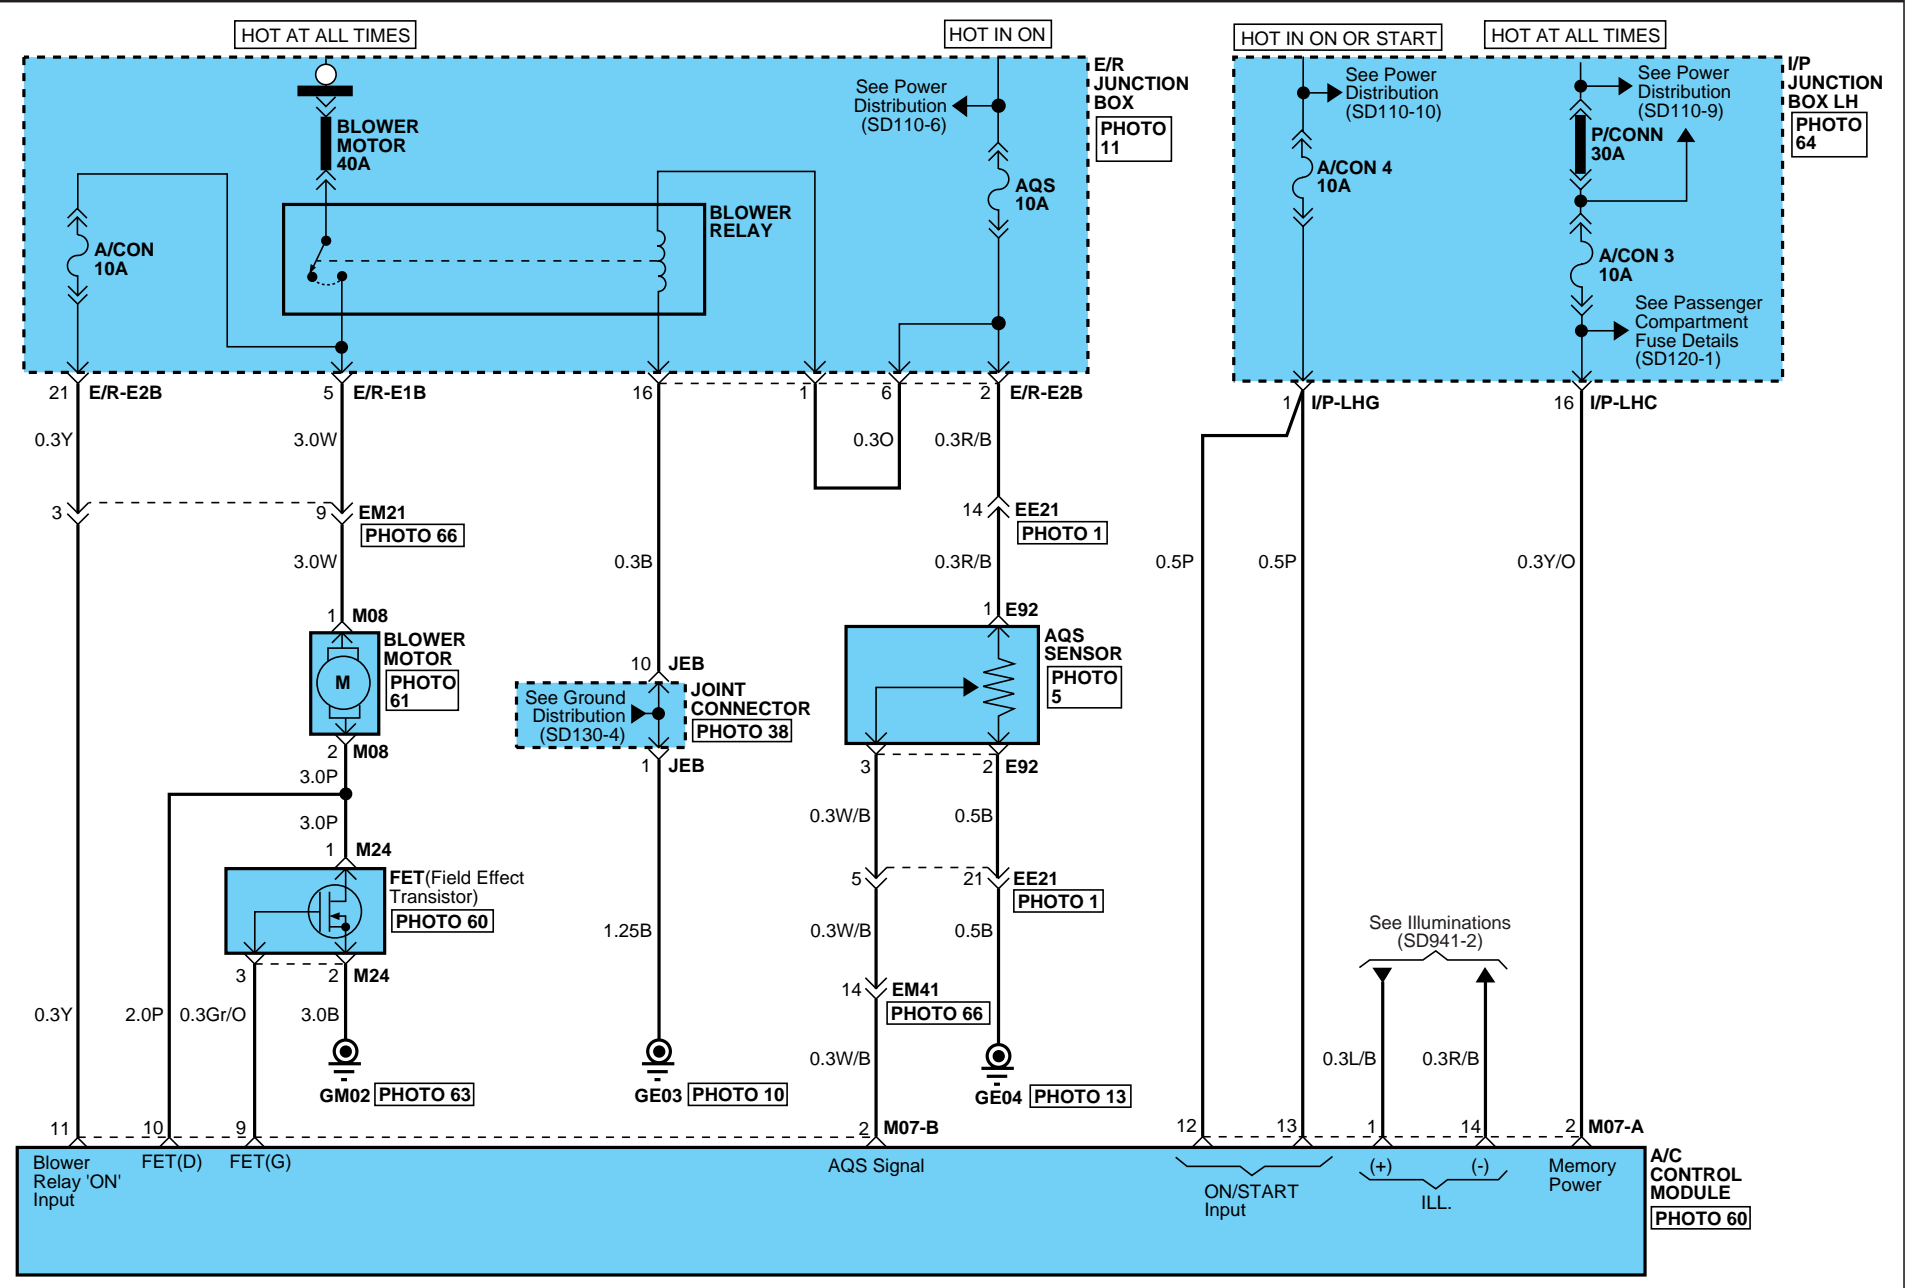

BLOWER & A/C CONTROL SYSTEM

Blower & A/C Control System (Auto) (2)


SD971-2

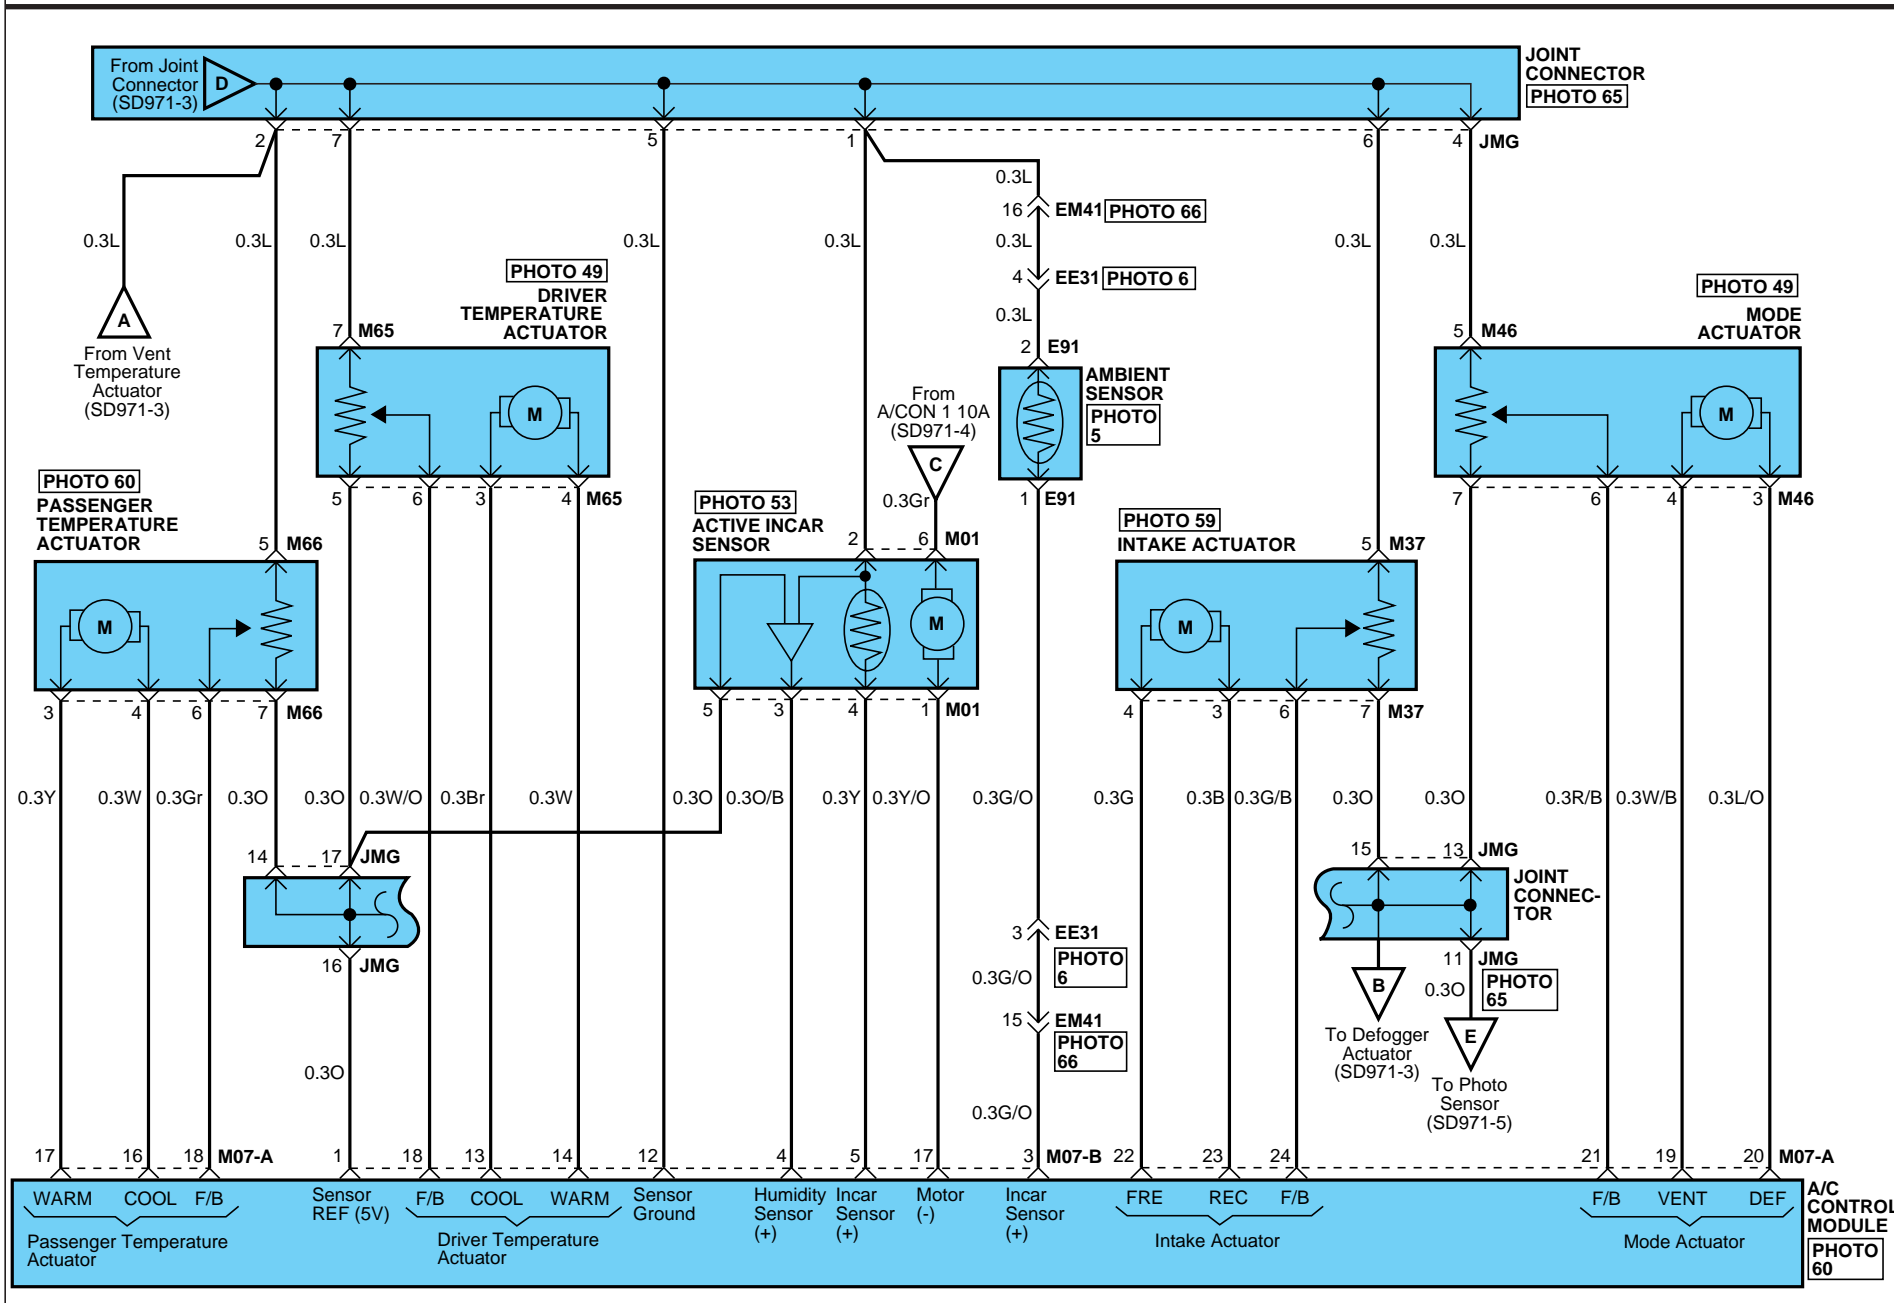

BLOWER & A/C CONTROL SYSTEM

Blower & A/C Control System (Auto) (3)


SD971-3

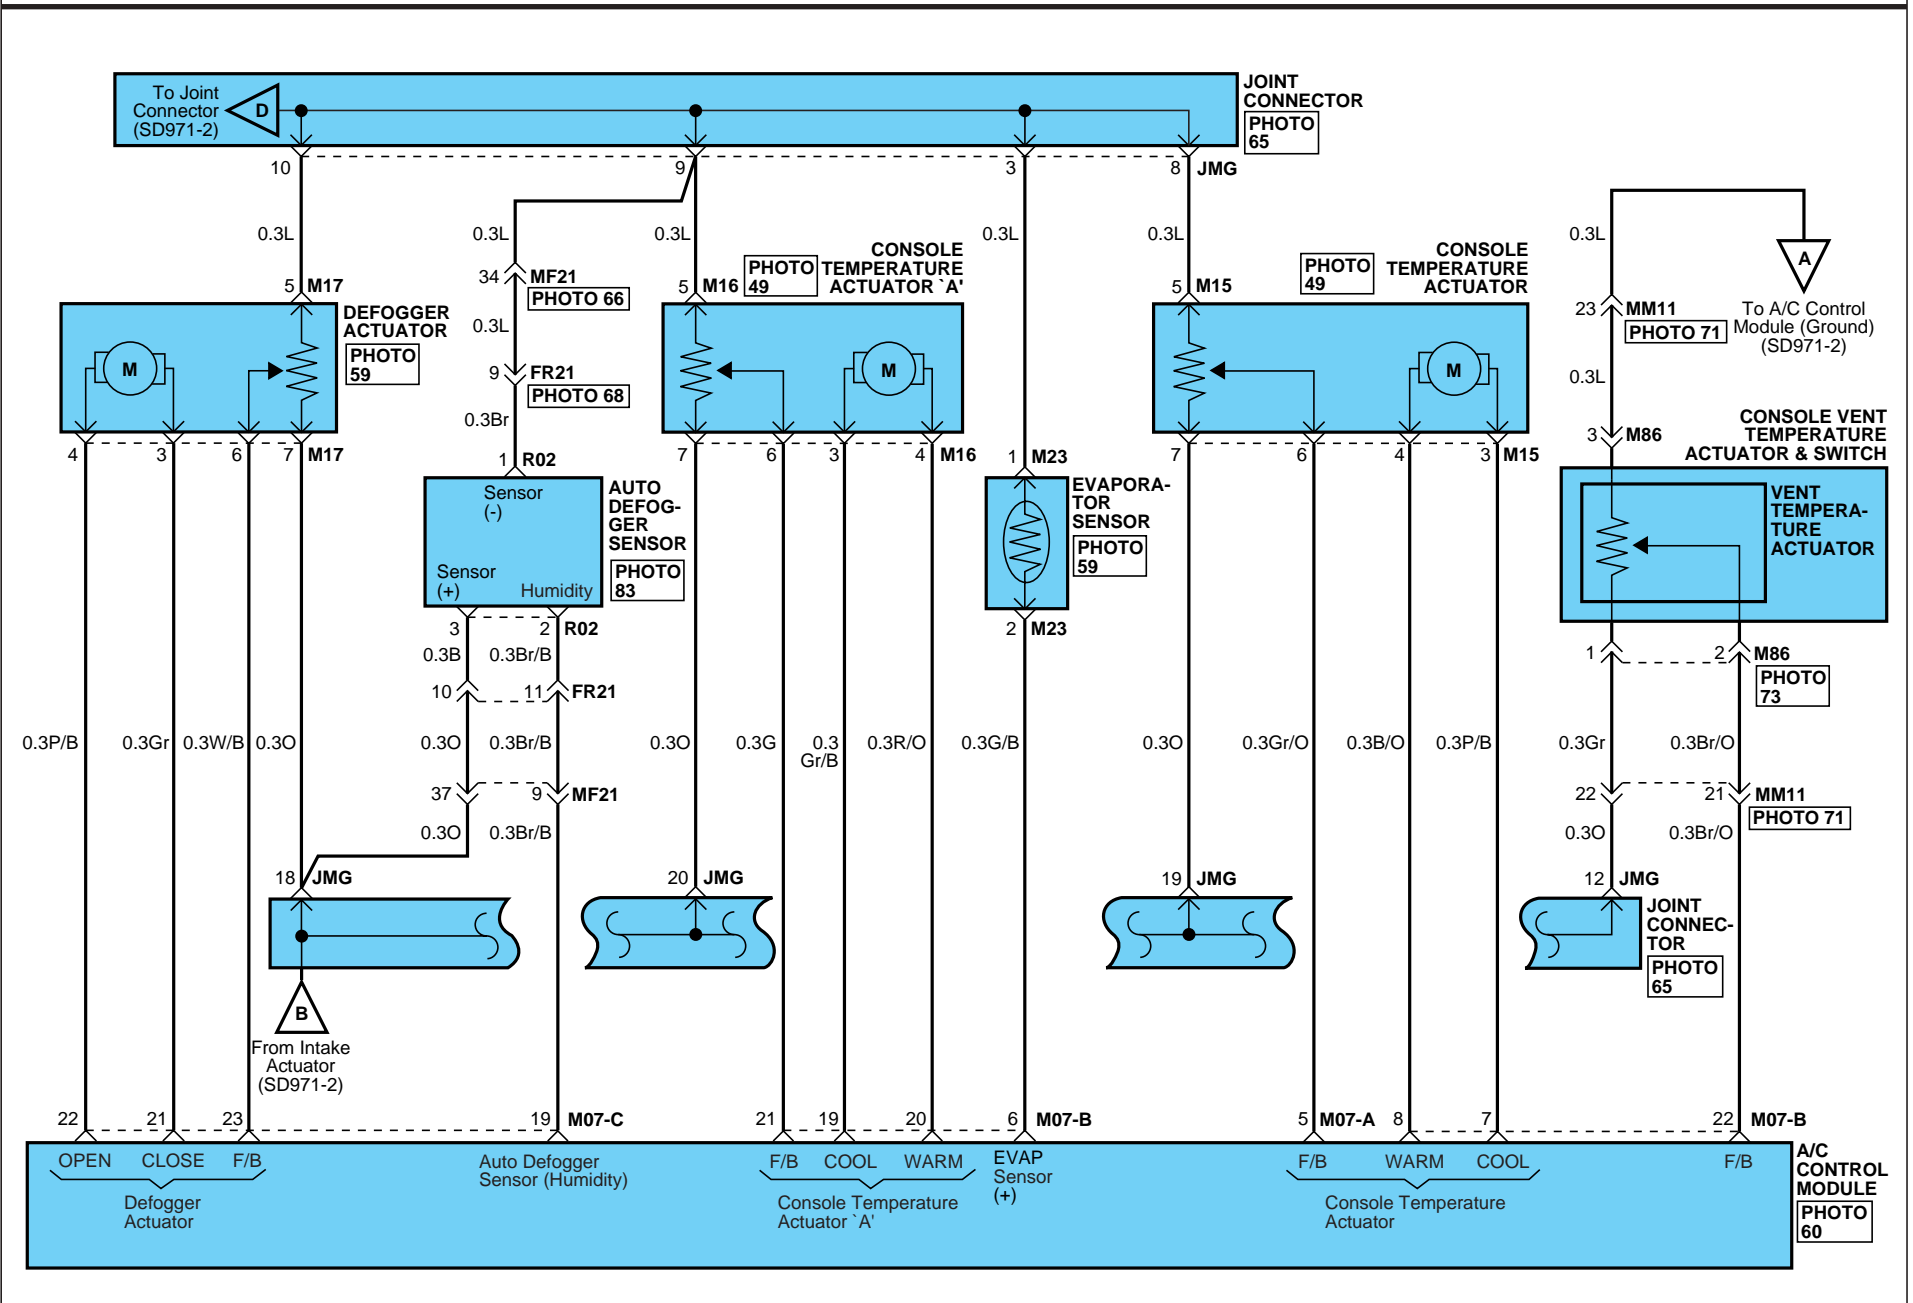

BLOWER & A/C CONTROL SYSTEM

Blower & A/C Control System (Auto) (4)


SD971-4

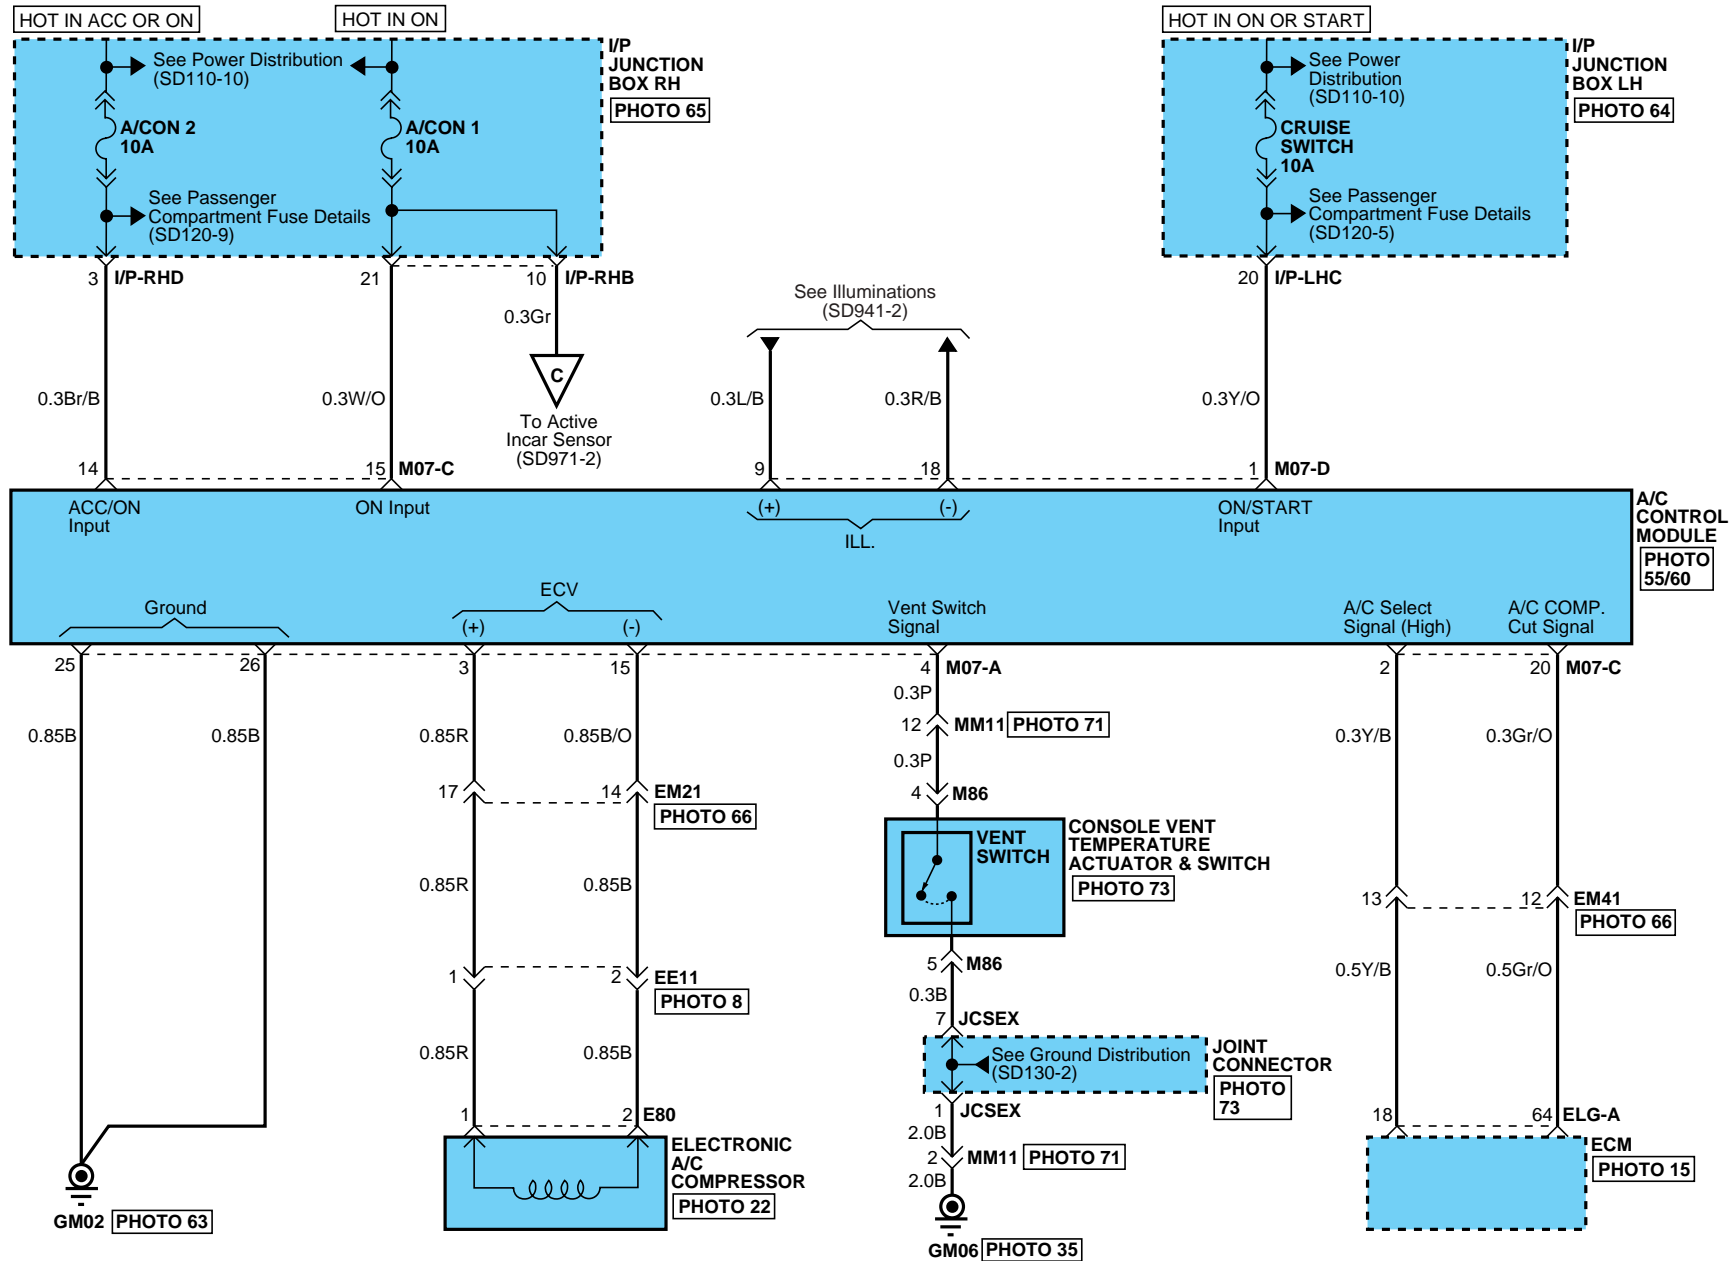

BLOWER & A/C CONTROL SYSTEM

Blower & A/C Control System (Auto) (5)

SD971-5

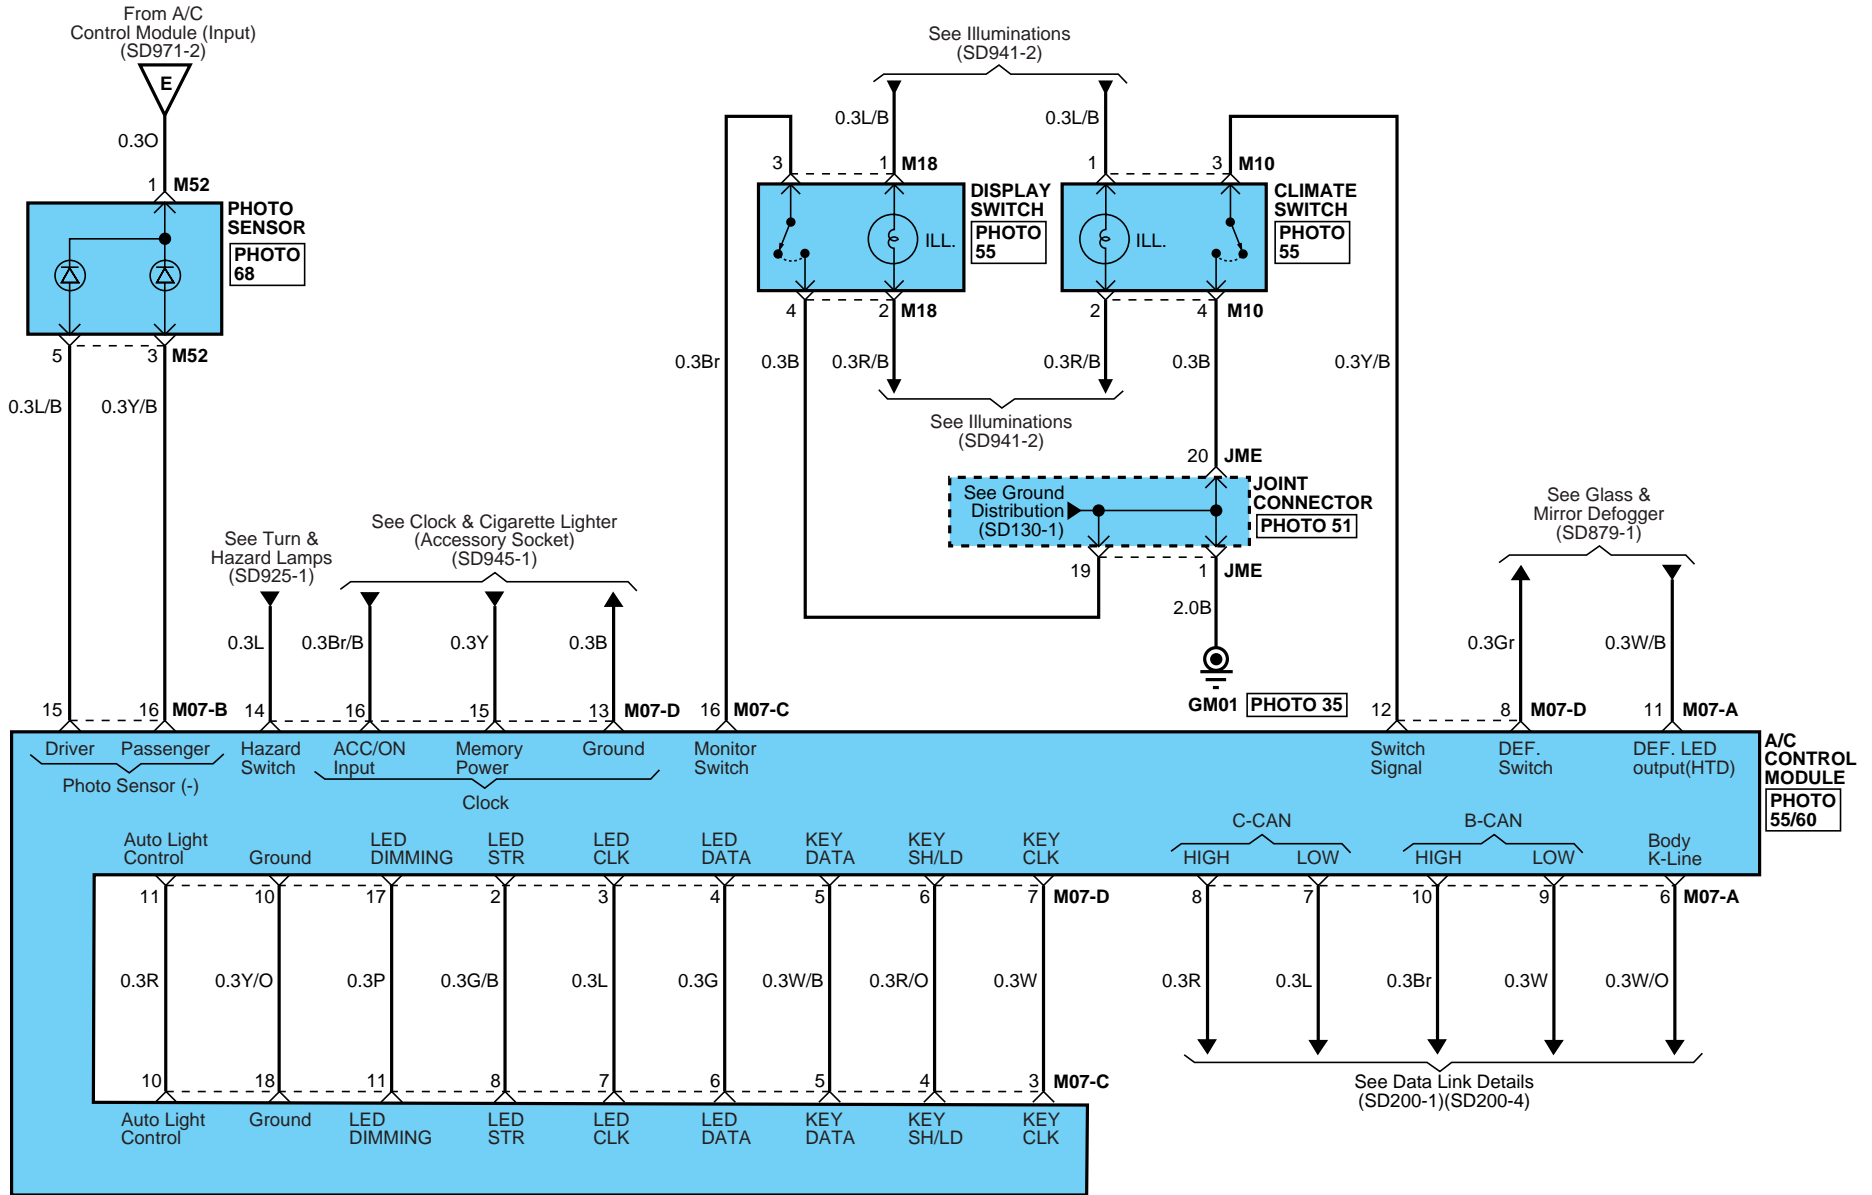


BLOWER & A/C CONTROL SYSTEM

Blower & A/C Control System (Auto) (6)

SD971-6

ELG-A

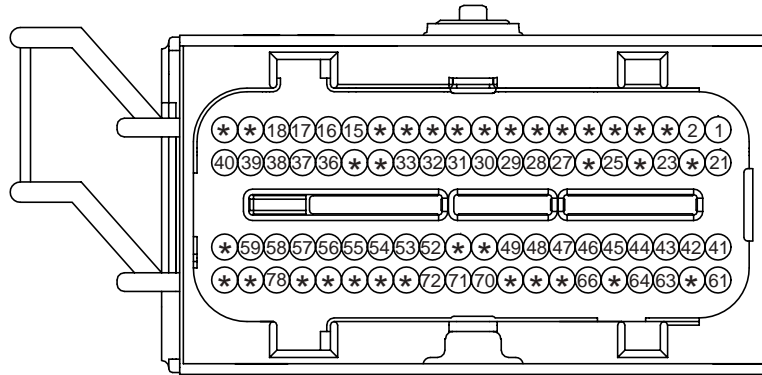


PKD_ECU_80F_Gr_1

E80




KUM_NMWP_02F_B

E91

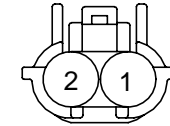

KET_SWP_02F_B

 
E92



KET_SWP_03F_B


BLANK

 M01




KET_91A_06F_W

M07-A

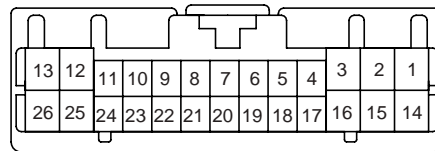


KET_0407_26F_W

M07-B

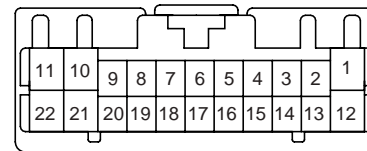


KET_0407_22F_W

M07-C

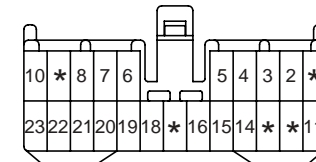

KET_050_23F_W

 M07-D




AMP_MQS_18F_B_3

M08




KUM_DSD_02F_W

M10

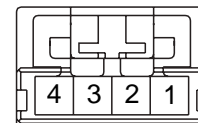


AMP_MQS_04F_B_040

M15

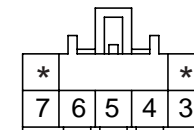


KUM_CDR_07F_W

M16

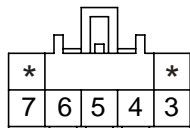


KUM_CDR_07F_Y

M17

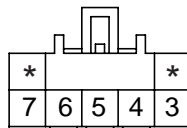


KUM_CDR_07F_L

M18

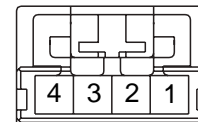

AMP_MQS_04F_B_040

 M23




KET_090II_02F_W_L

BLOWER & A/C CONTROL SYSTEM

Blower & A/C Control System (Auto) (7)


SD971-7

 M24




KUM_DSD_03F_B

M37

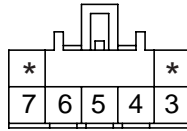


KUM_CDR_07F_B

M46

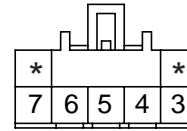


KUM_CDR_07F_L

M52

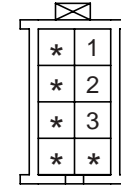


KET_030_08F_BR

M65

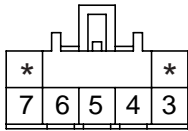


KUM_CDR_07F_B

M66

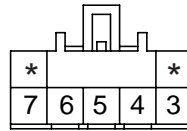


KUM_CDR_07F_W

 M86



KUM_CDR_05M_W

R02

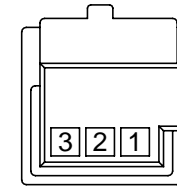

AMP_MQS_03F_B_1

BLOWER & A/C CONTROL SYSTEM


Blower & A/C Control System (Auto) (8)

SD971-8

MEMO

Front Wiper & Washer (1)


SD981-1

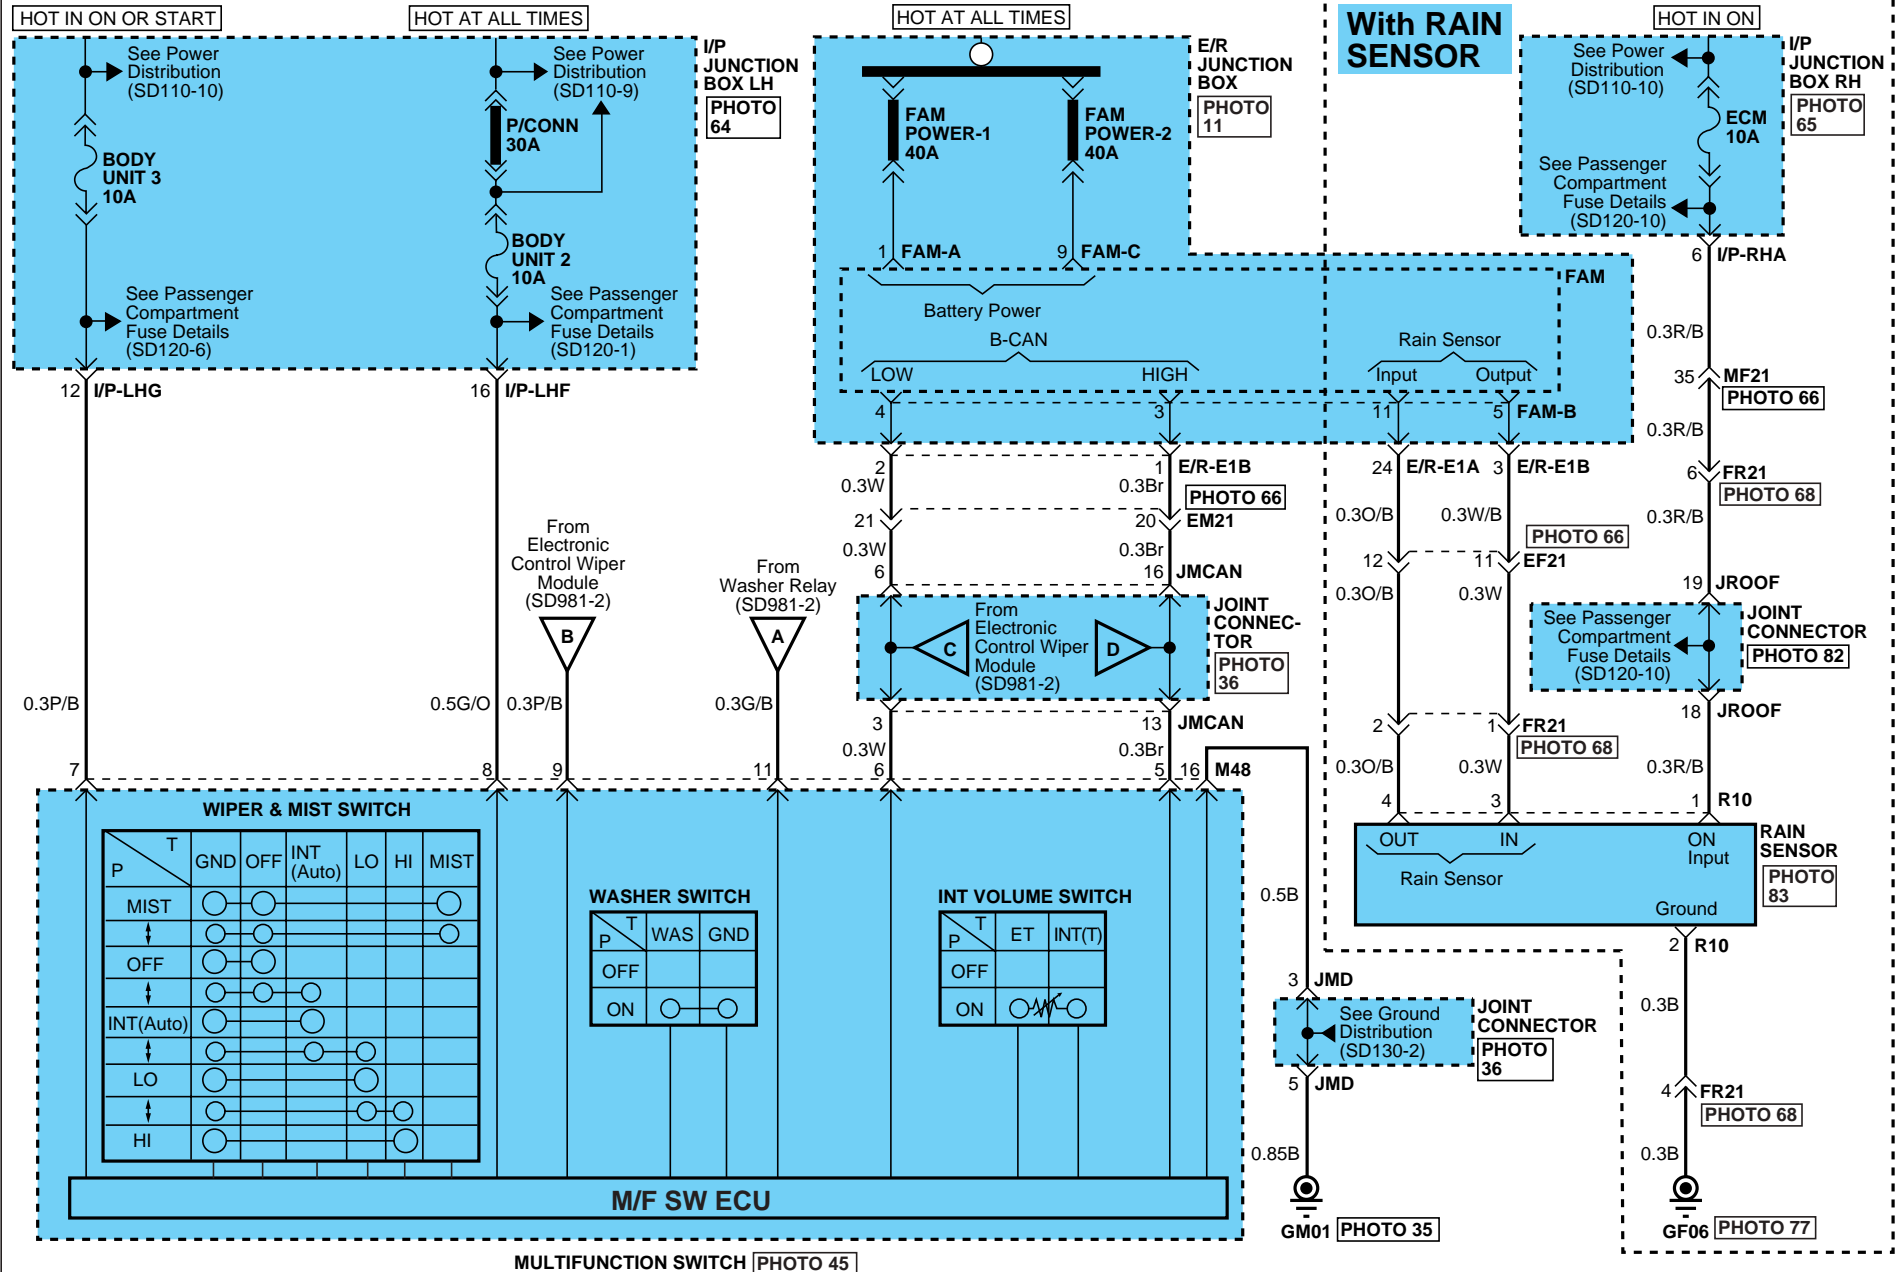

FRONT WIPER & WASHER

Front Wiper & Washer (2)

SD981-2

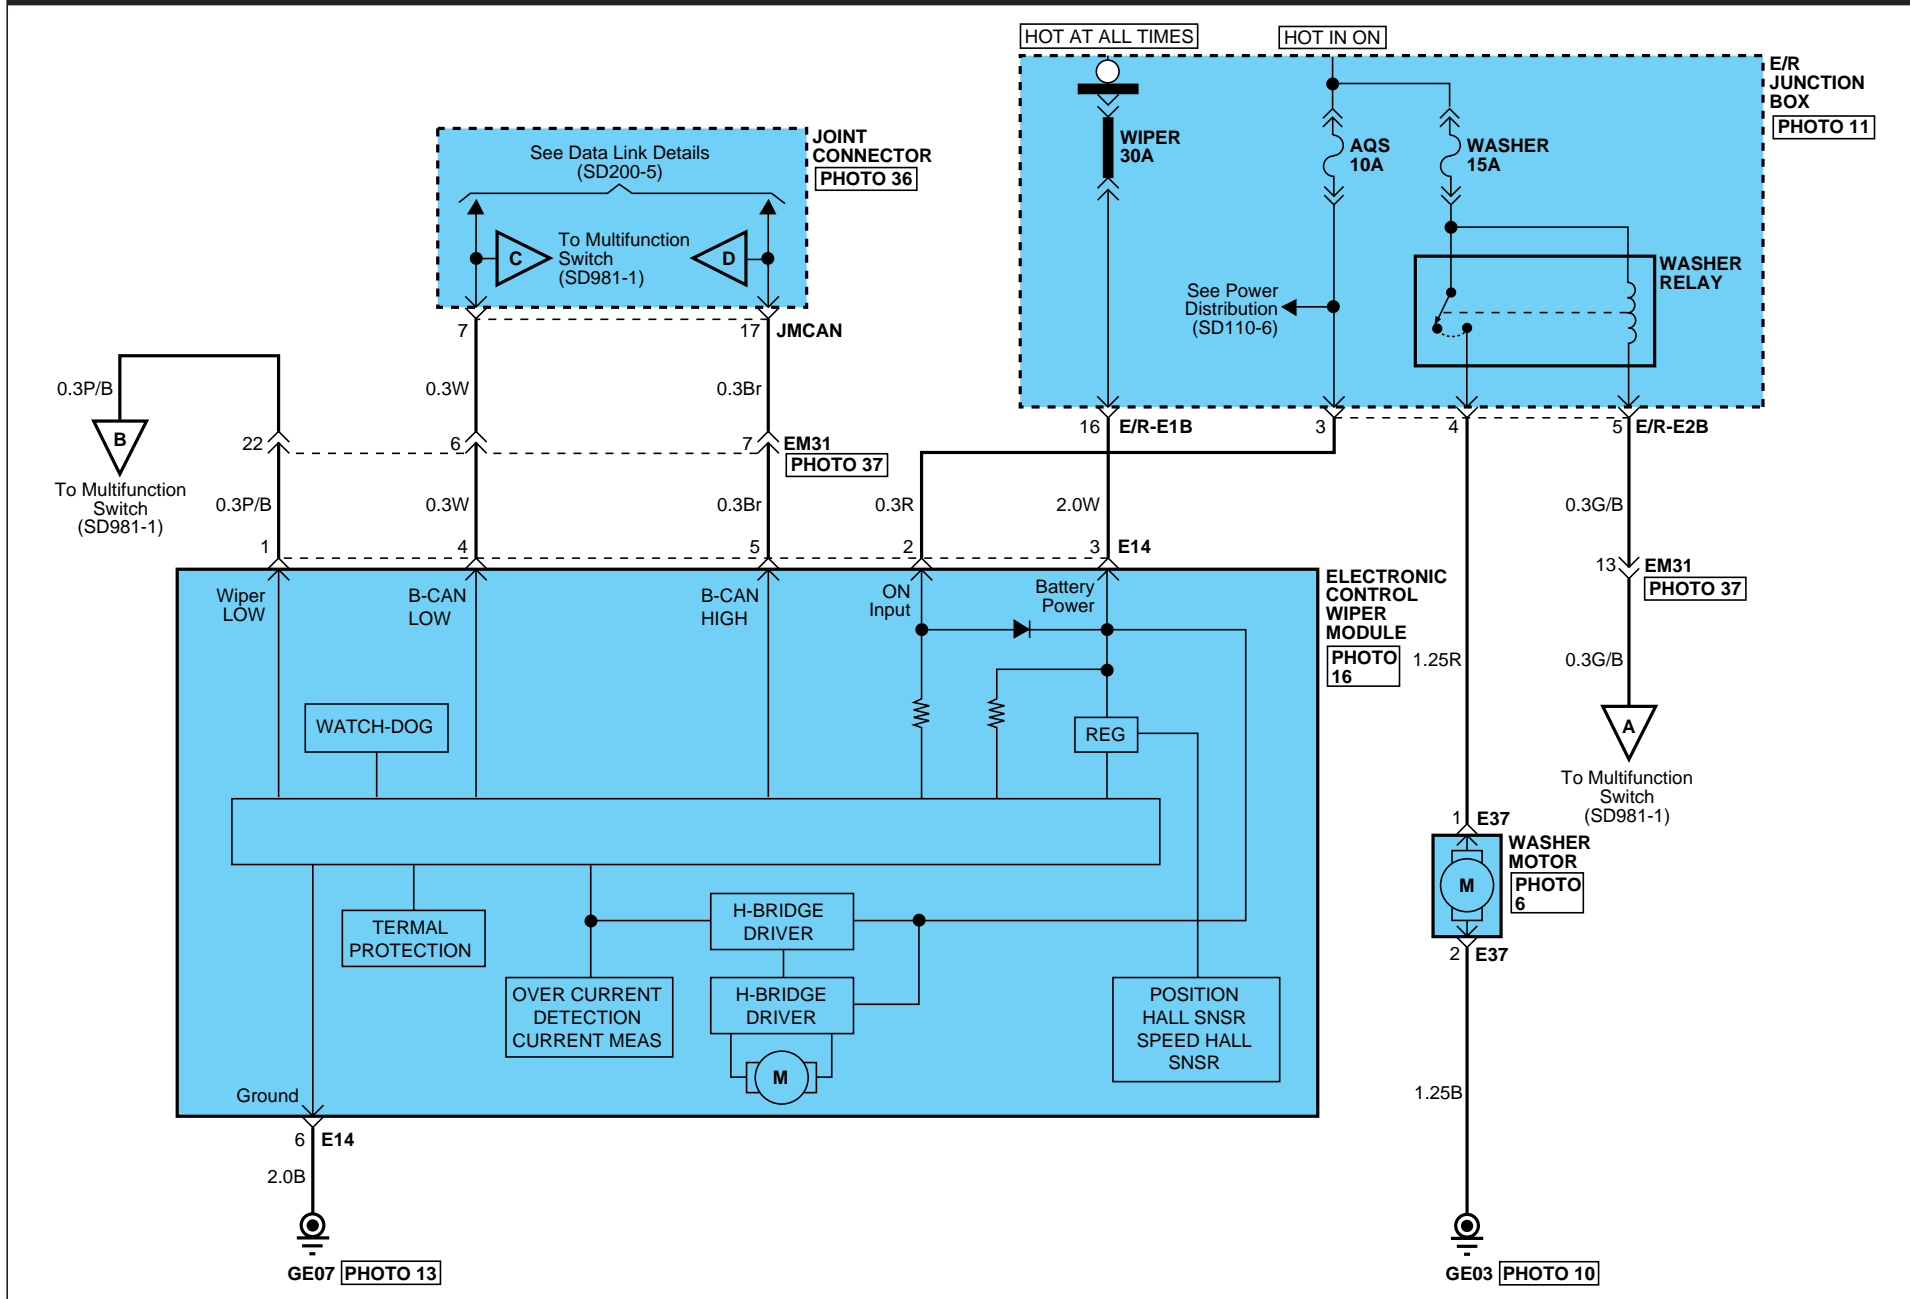

FRONT WIPER & WASHER

Front Wiper & Washer (3)


SD981-3

E14




YAZ_110WP_06F_GR

E37

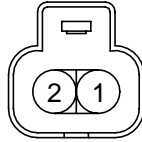


YAZ_090IWP_02F_B_1


FAM-A

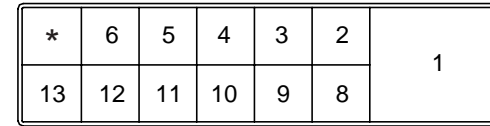


FAM-B

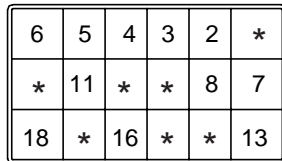

FAM-C

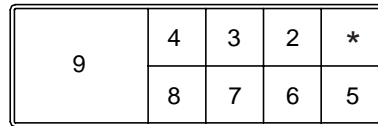


M48

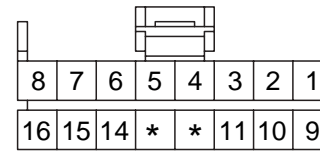

AMP_040M1_16F_B

 R10



MLX_FIT_04F_B

Component Locations(1)

CL-1

PHOTO.1

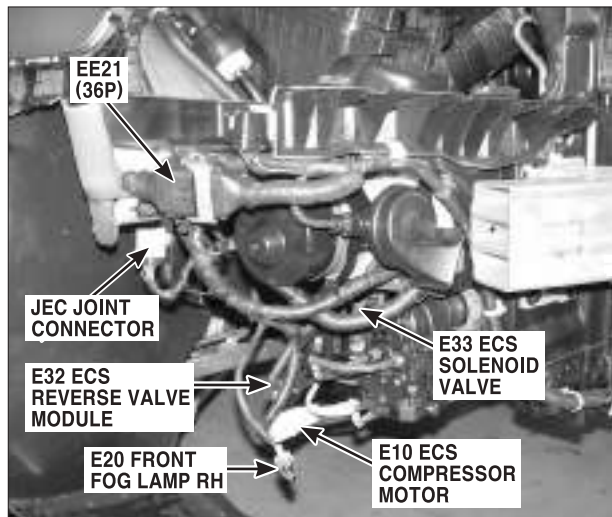


PHOTO.2

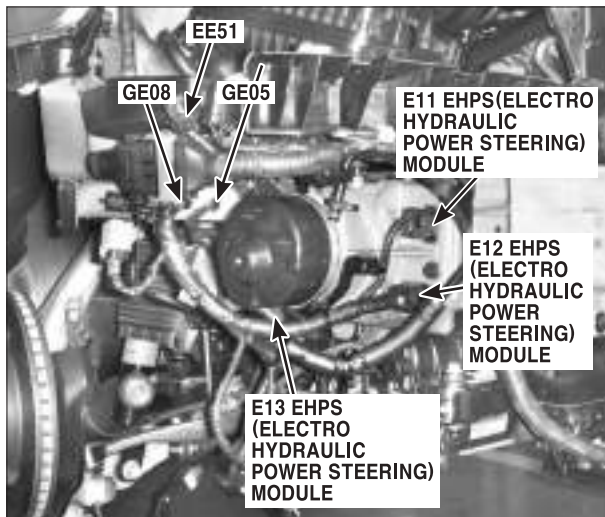


PHOTO.3

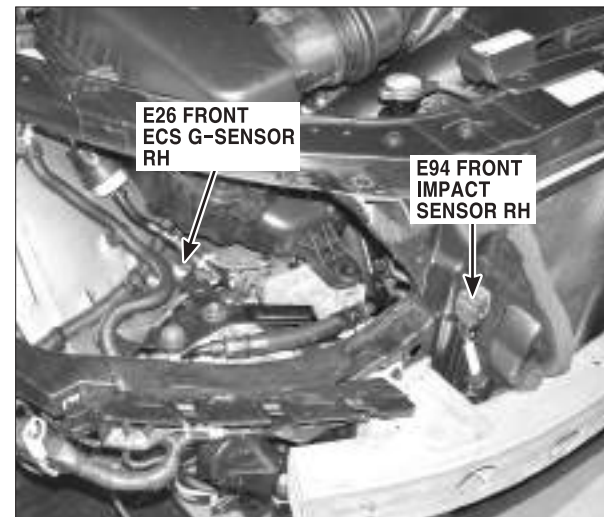


PHOTO.4



PHOTO.5


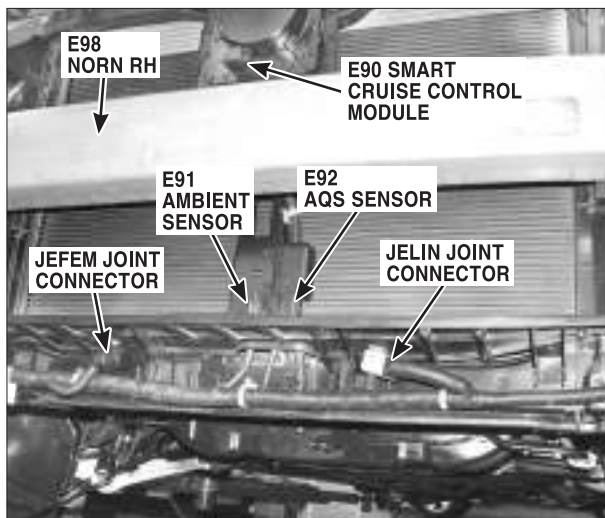


PHOTO.6

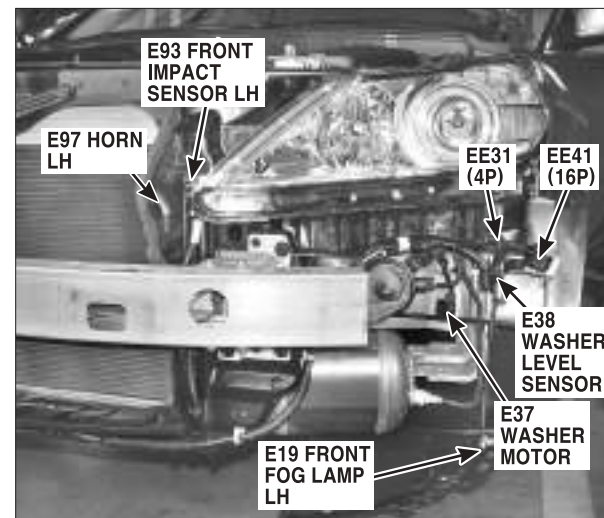

COMPONENT LOCATIONS

Component Locations(2)

CL-2

PHOTO.7

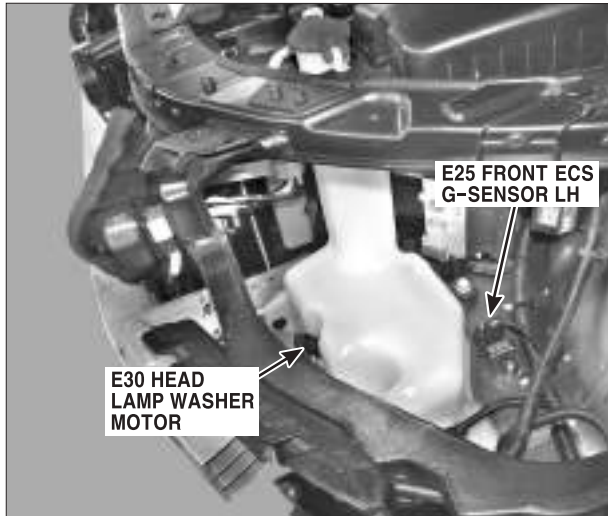


PHOTO.8

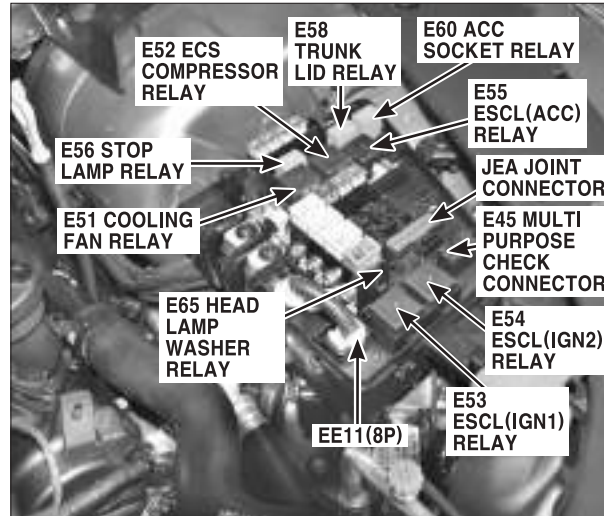


PHOTO.9

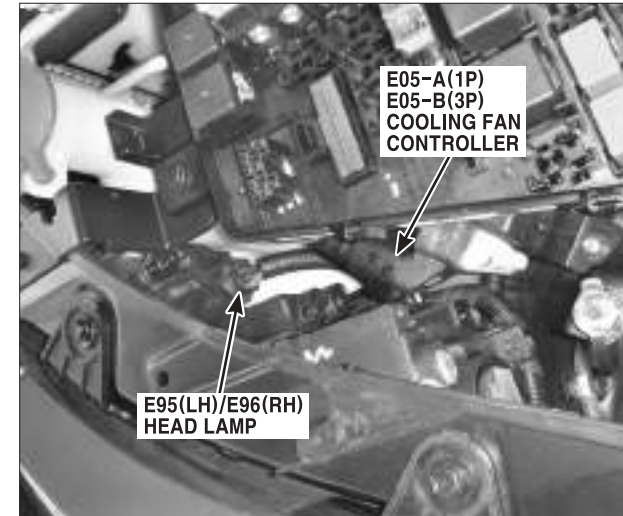


PHOTO.10

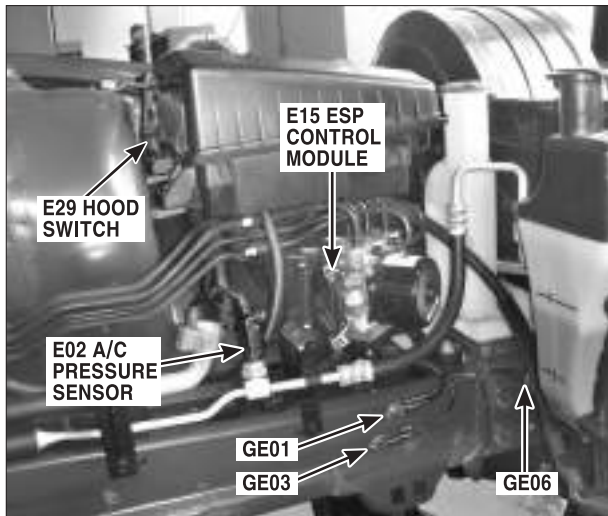


PHOTO.11


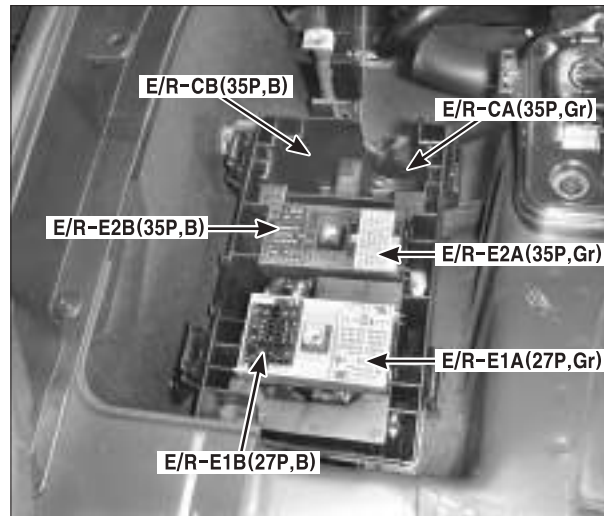


PHOTO.12

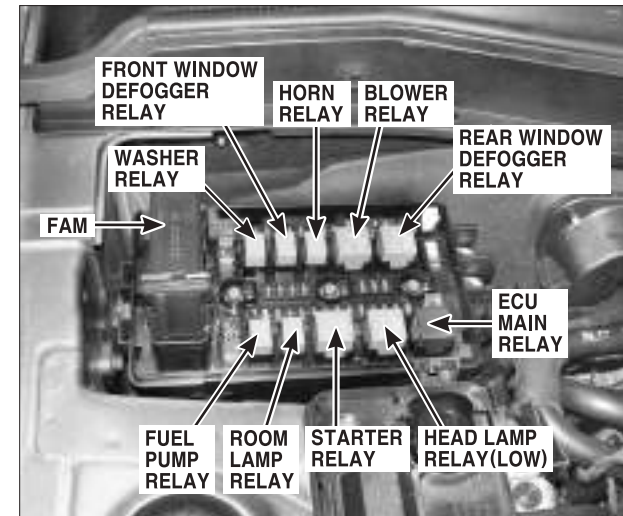

COMPONENT LOCATIONS

Component Locations(3)

CL-3

PHOTO.13

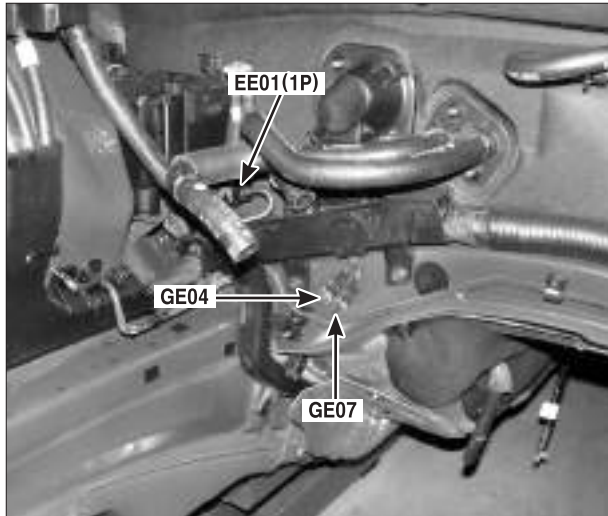


PHOTO.14



PHOTO.15

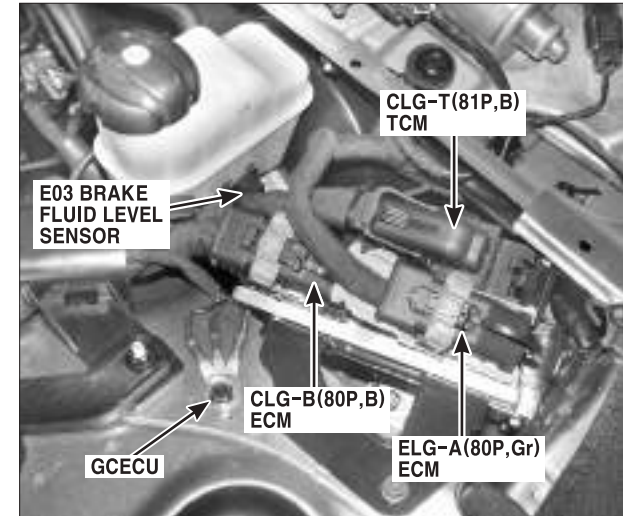


PHOTO.16

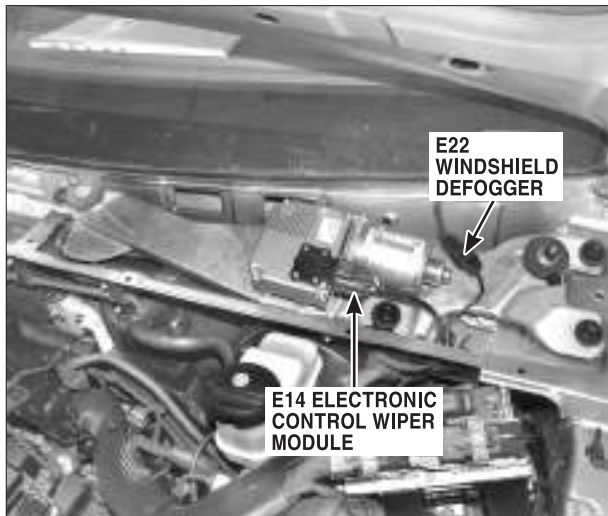


PHOTO.17


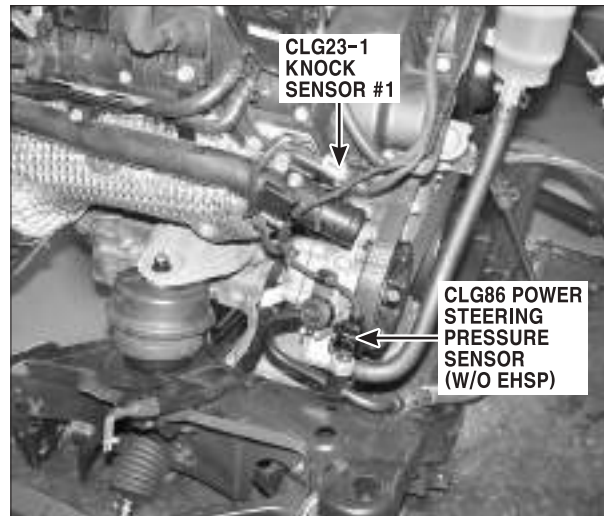


PHOTO.18

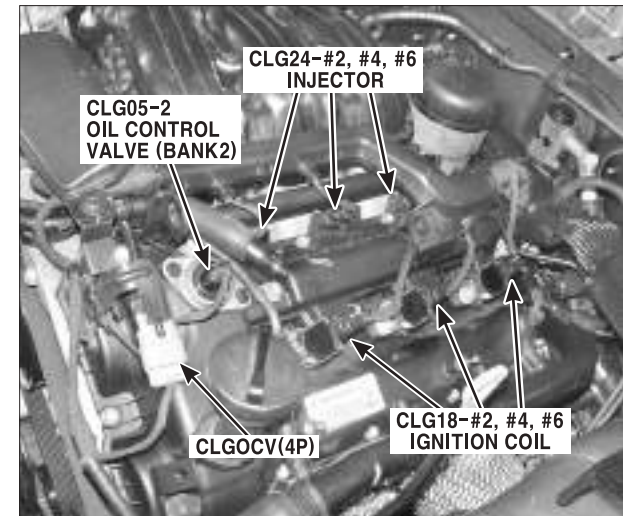

COMPONENT LOCATIONS

Component Locations(4)

CL-4

PHOTO.19

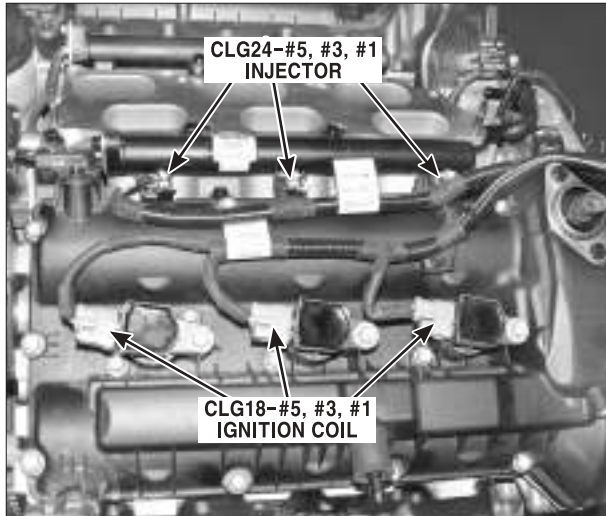


PHOTO.20

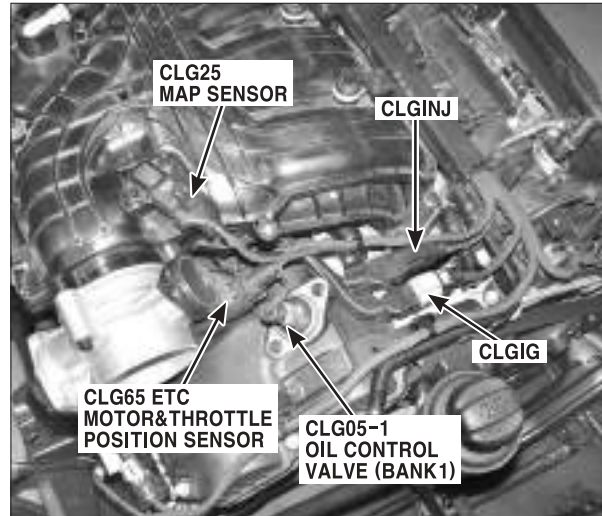


PHOTO.21

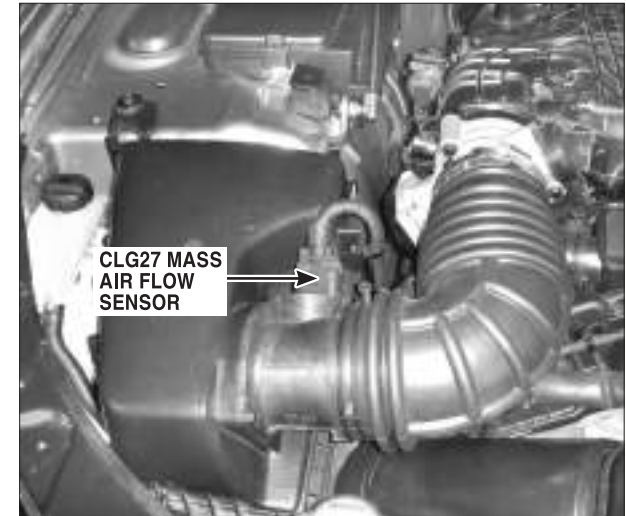


PHOTO.22

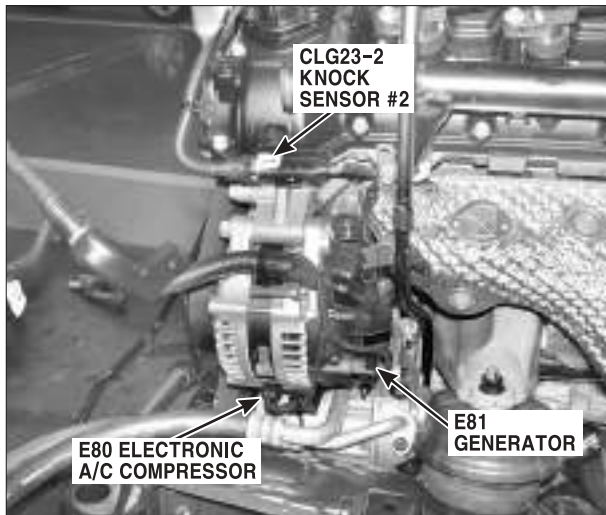


PHOTO.23


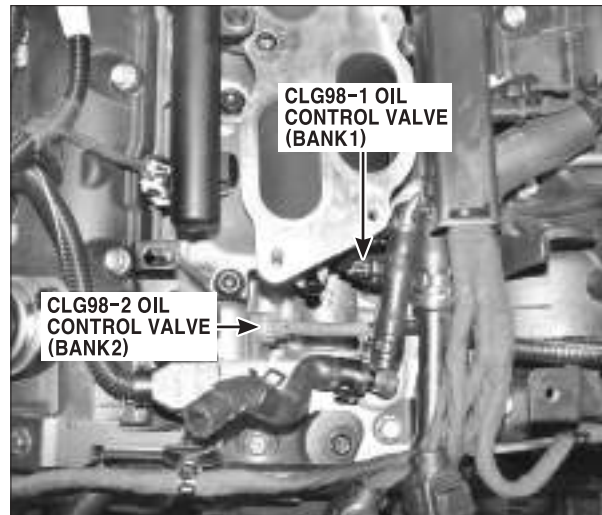


PHOTO.24

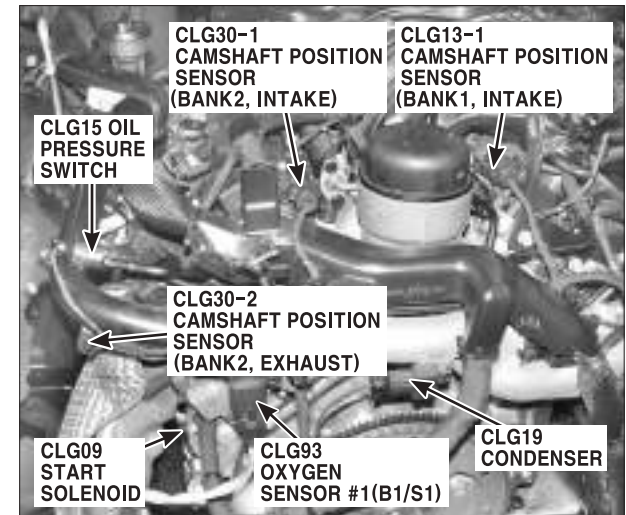

COMPONENT LOCATIONS

Component Locations(5)

CL-5

PHOTO.25

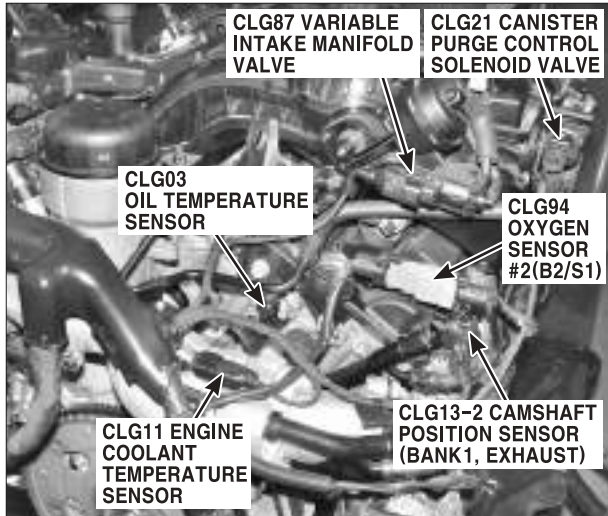


PHOTO.26

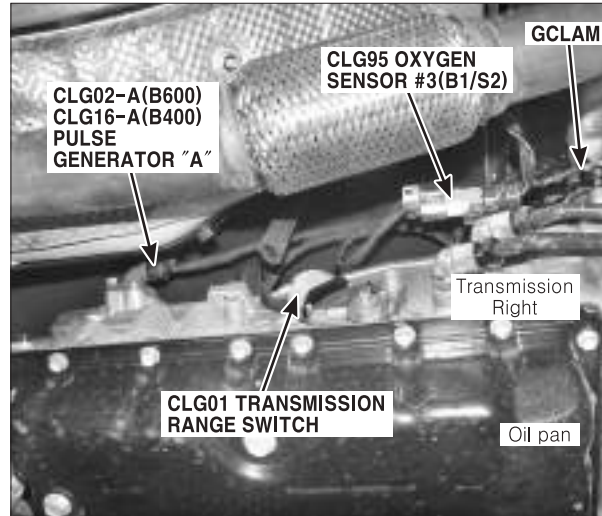


PHOTO.27

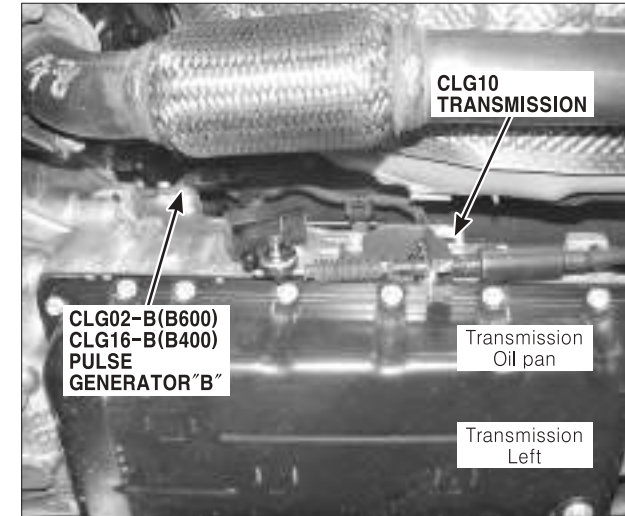


PHOTO.28

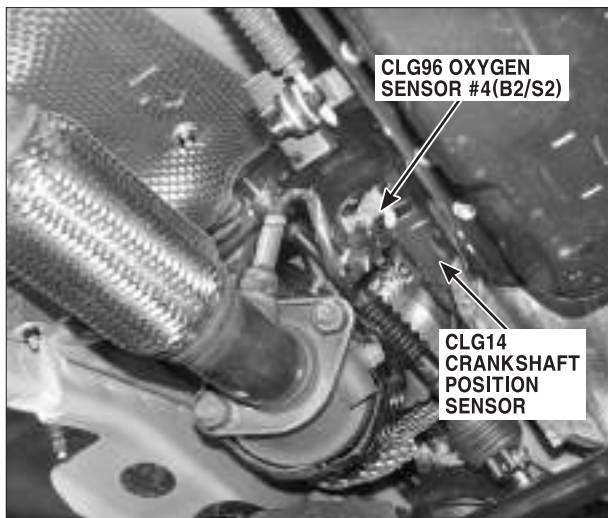


PHOTO.29


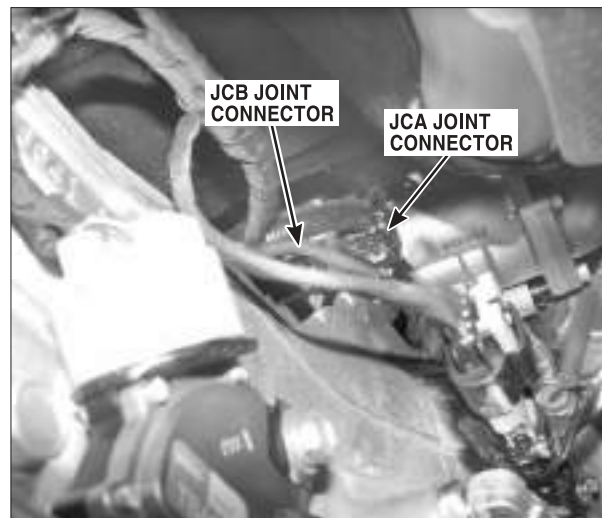


PHOTO.30

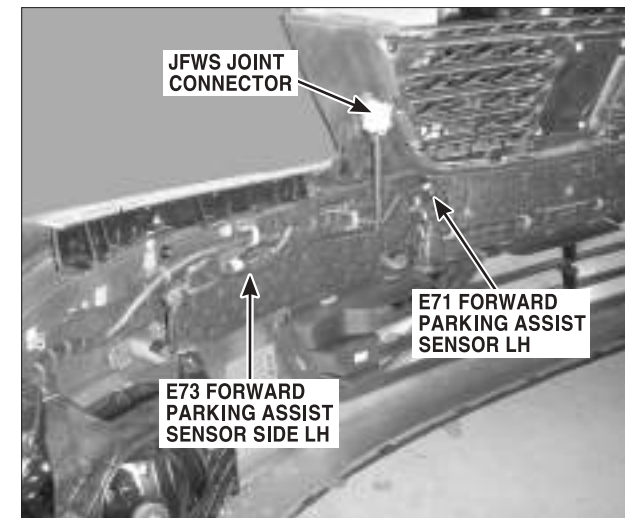

COMPONENT LOCATIONS

Component Locations(6)

CL-6

PHOTO.31

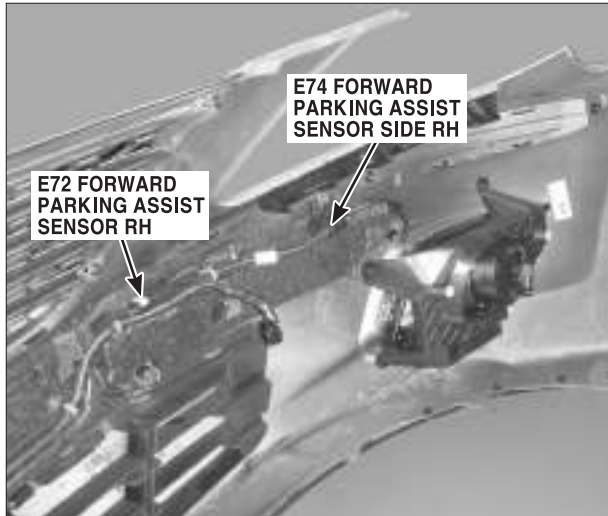


PHOTO.32

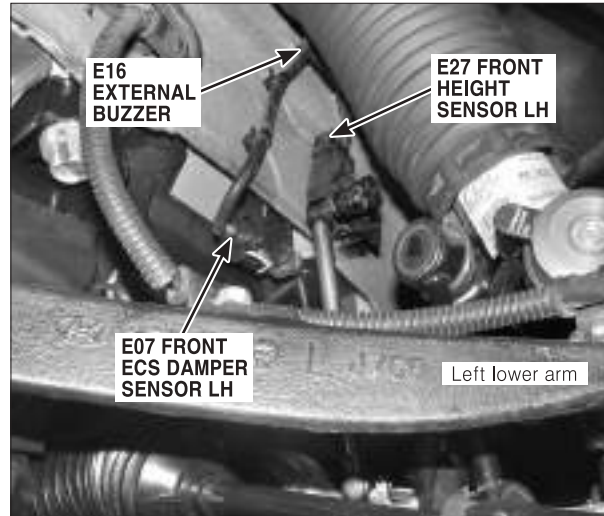


PHOTO.33

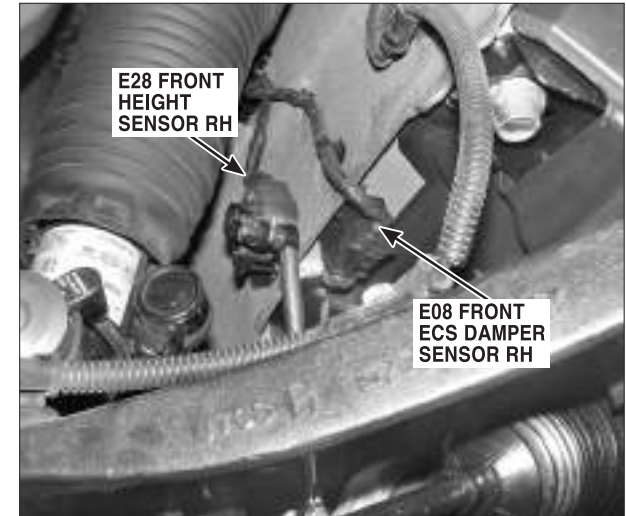


PHOTO.34



PHOTO.35


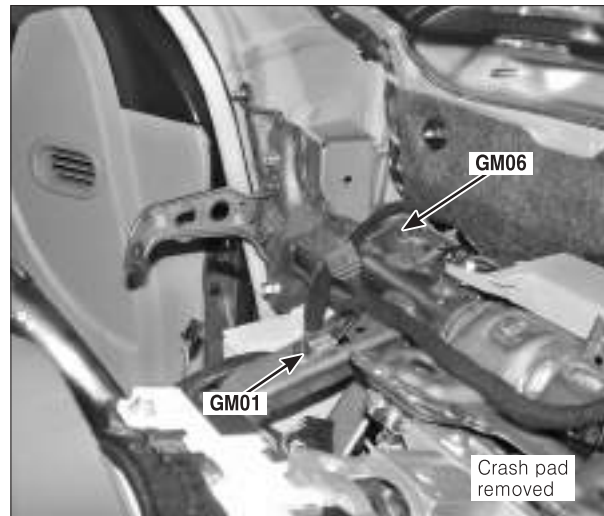


PHOTO.36

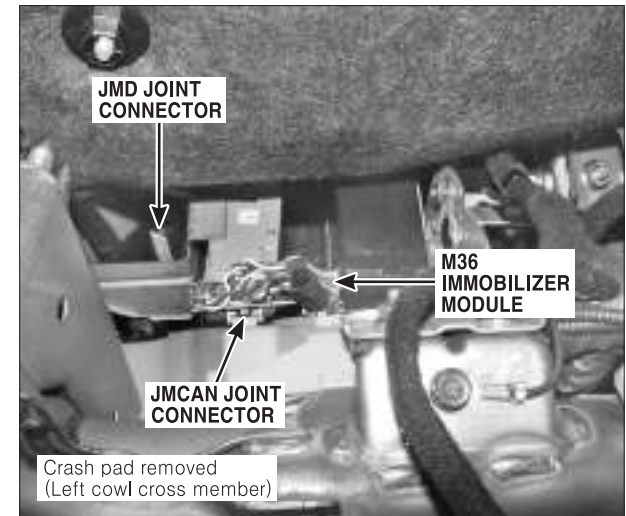

COMPONENT LOCATIONS

Component Locations(7)

CL-7

PHOTO.37

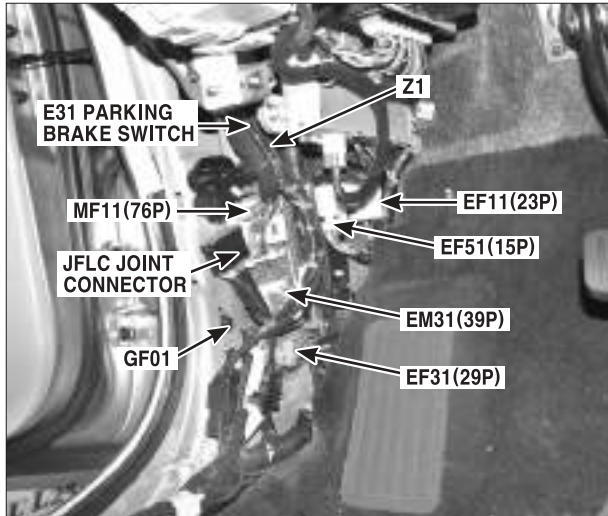


PHOTO.38

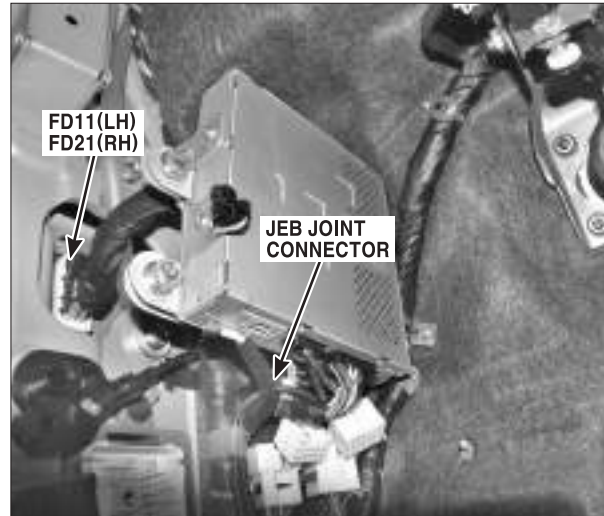


PHOTO.39

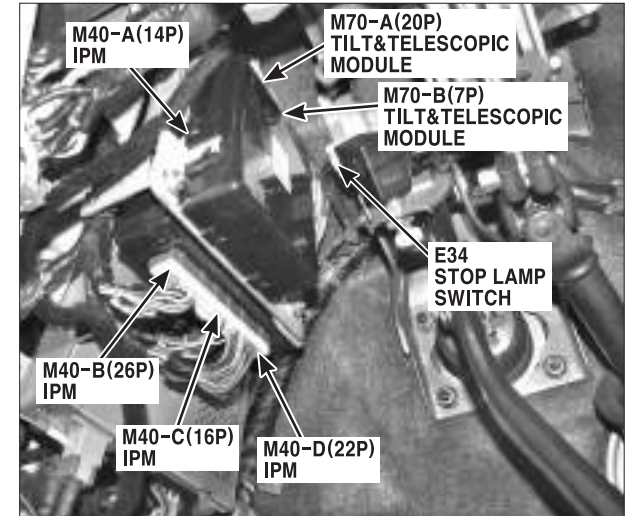


PHOTO.40



PHOTO.41


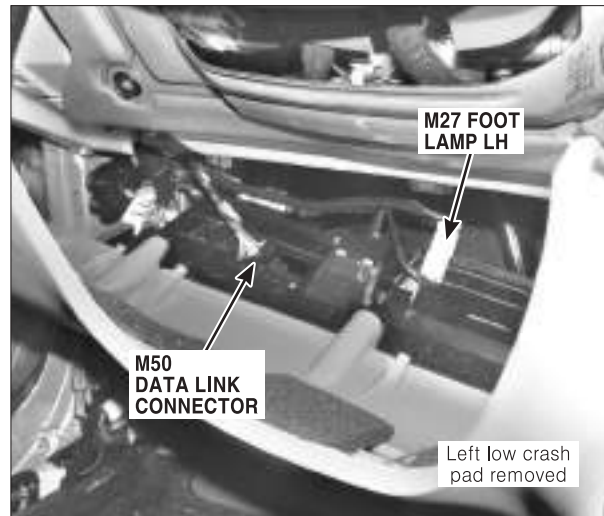


PHOTO.42

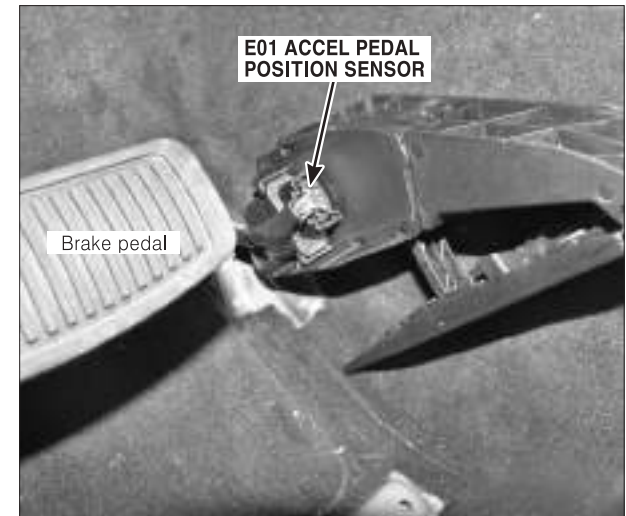

COMPONENT LOCATIONS

Component Locations(8)

CL-8

PHOTO.43

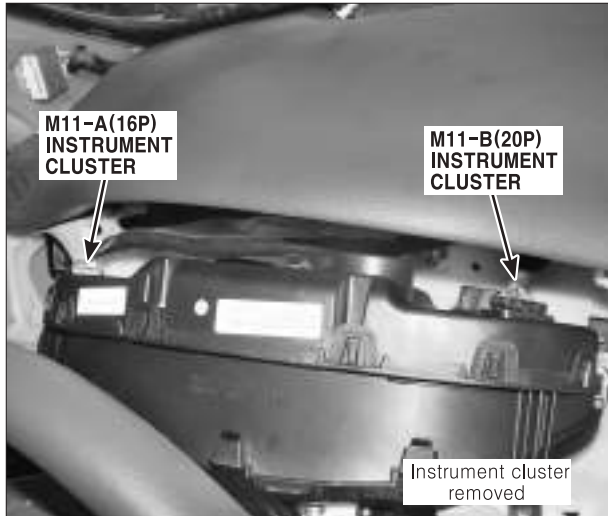


PHOTO.44

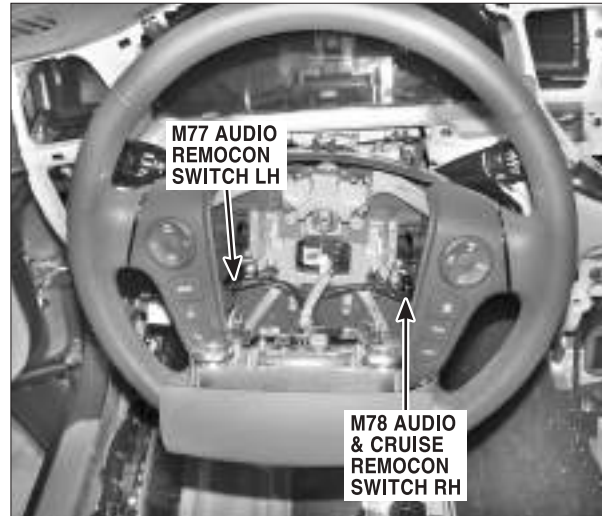


PHOTO.45

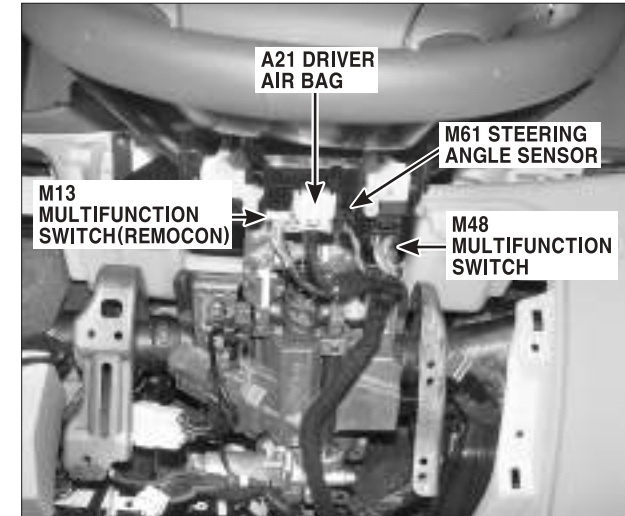


PHOTO.46

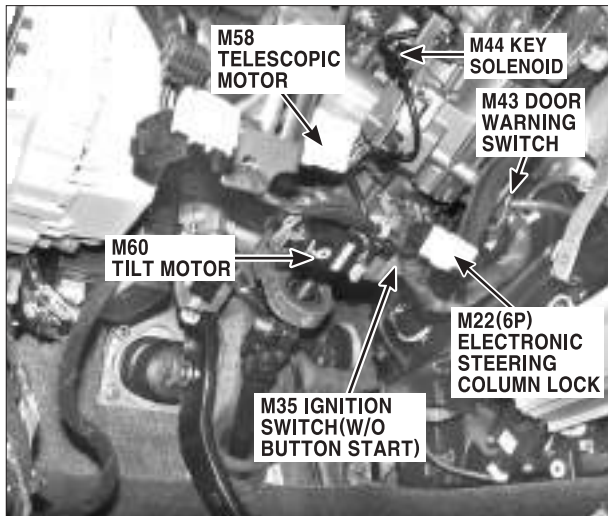


PHOTO.47

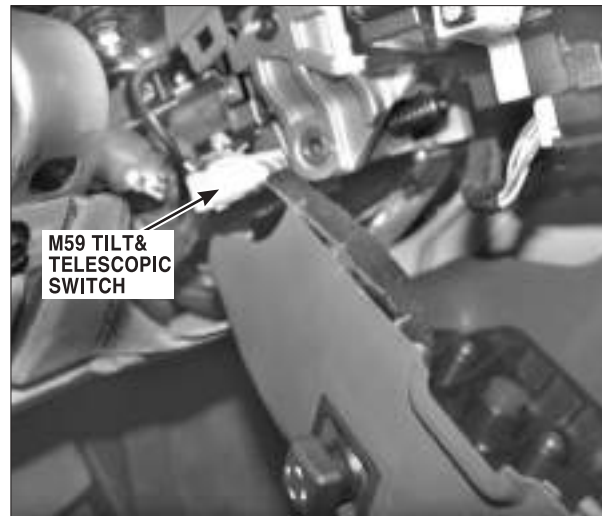


PHOTO.48



COMPONENT LOCATIONS

Component Locations(9)

CL-9

PHOTO.49

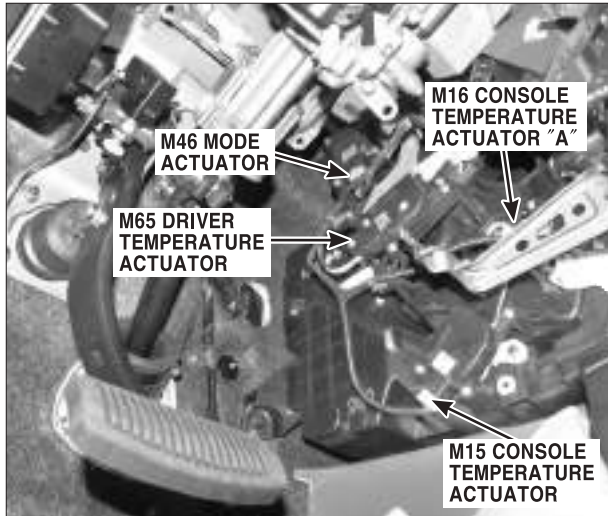


PHOTO.50

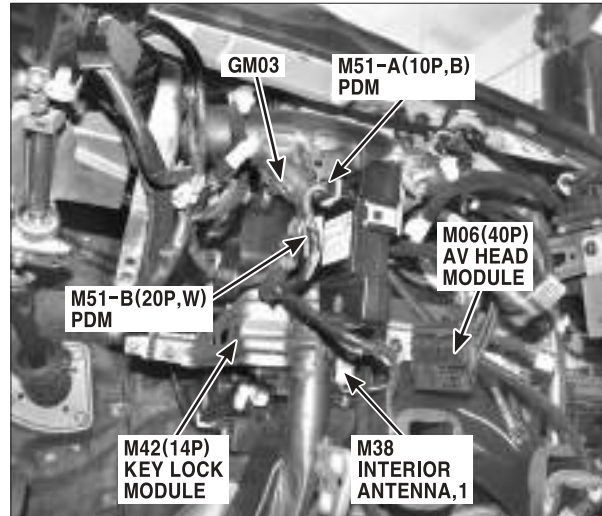


PHOTO.51

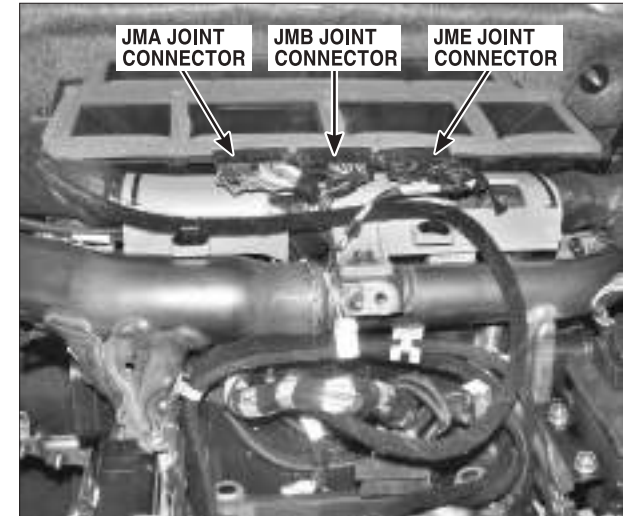


PHOTO.52

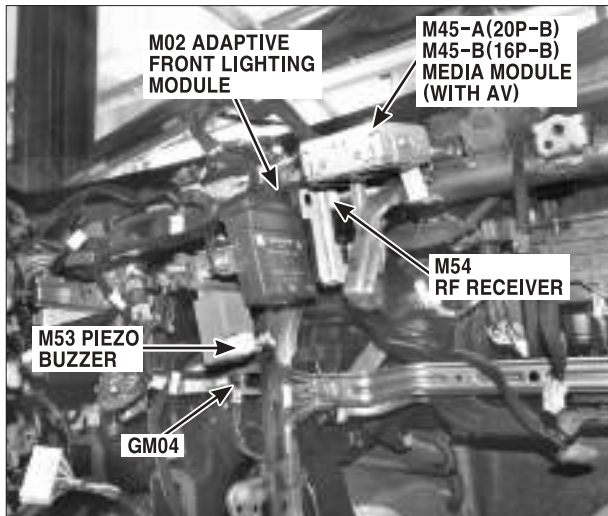


PHOTO.53


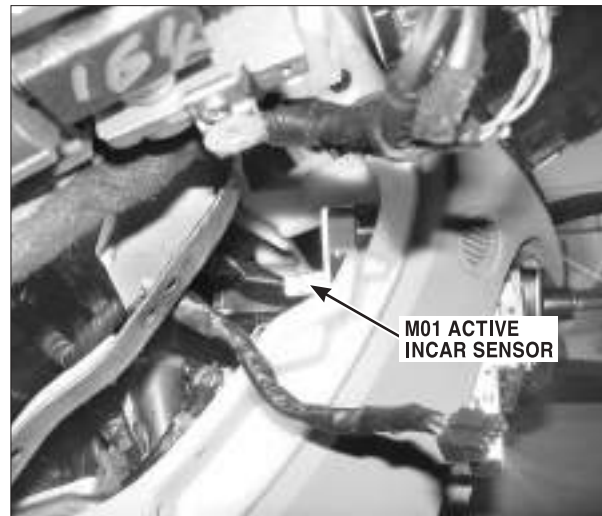


PHOTO.54

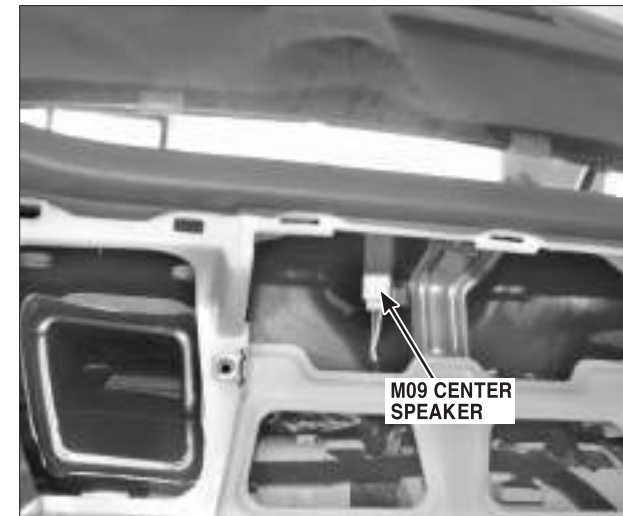

COMPONENT LOCATIONS

Component Locations(10)

CL-10

PHOTO.55

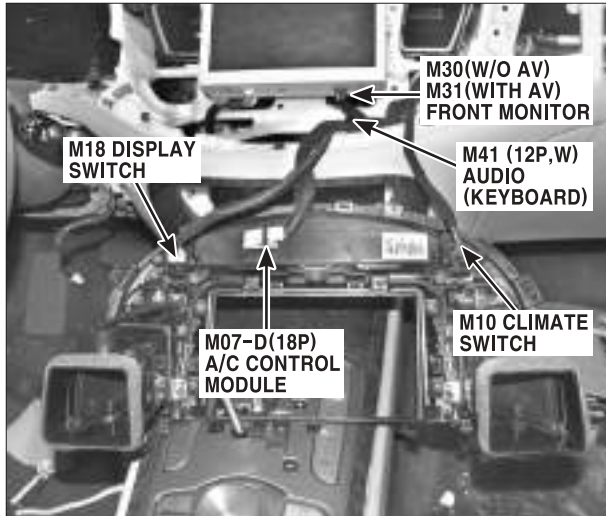


PHOTO.56

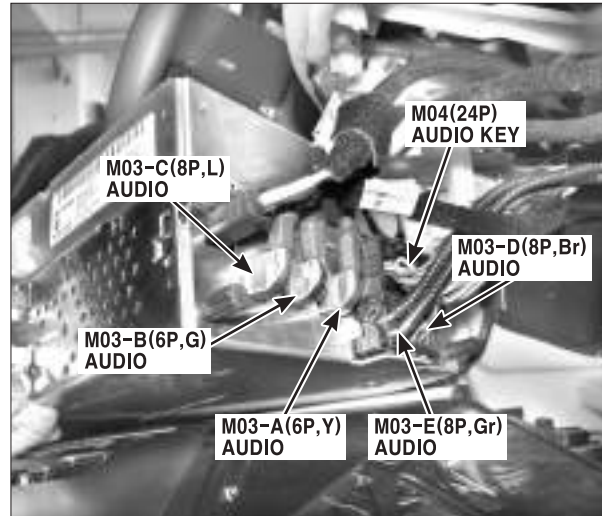


PHOTO.57

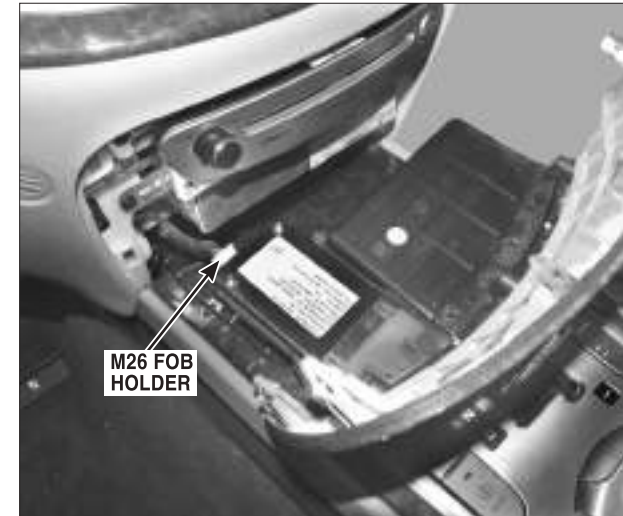


PHOTO.58



PHOTO.59


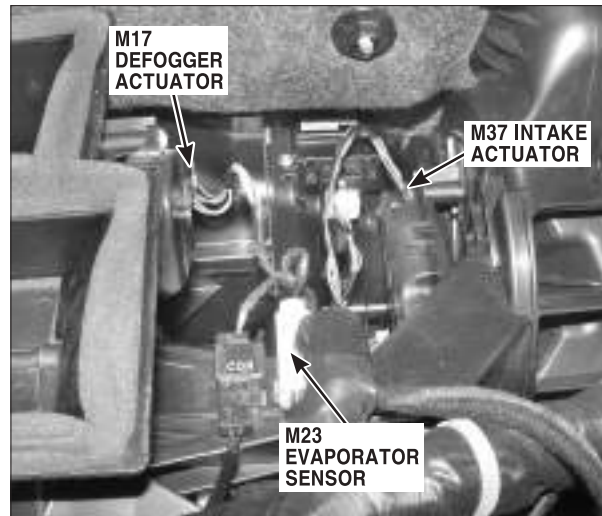


PHOTO.60

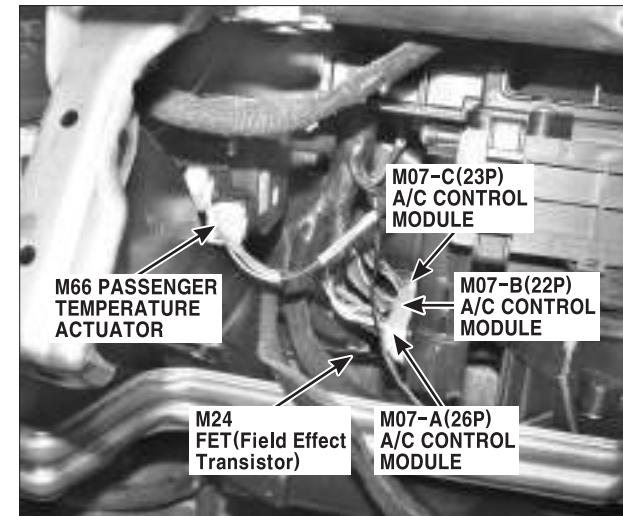

COMPONENT LOCATIONS

Component Locations(11)

CL-11

PHOTO.61

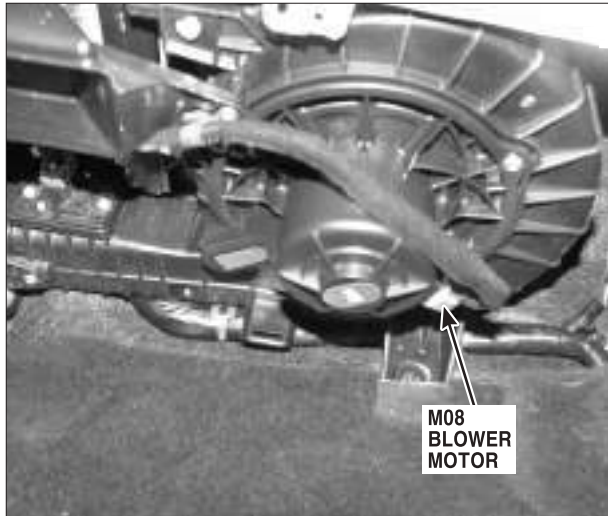


PHOTO.62

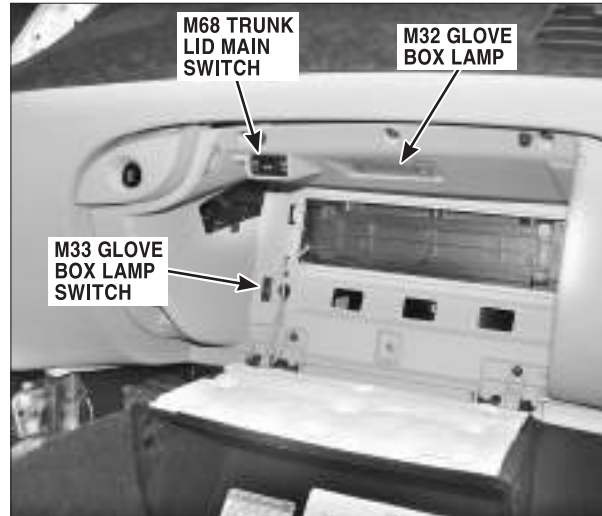


PHOTO.63

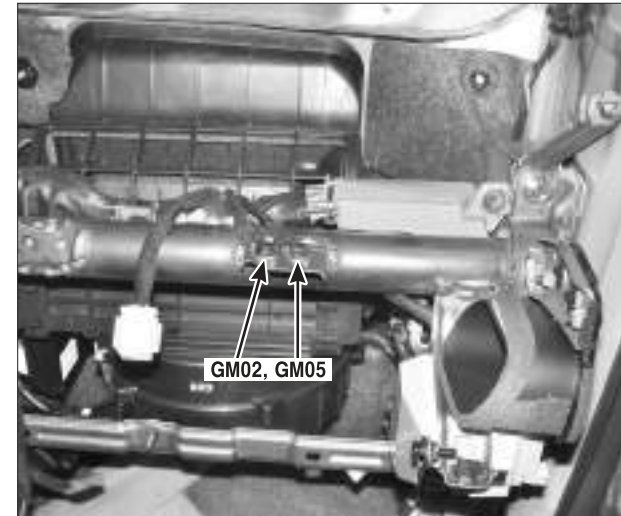


PHOTO.64

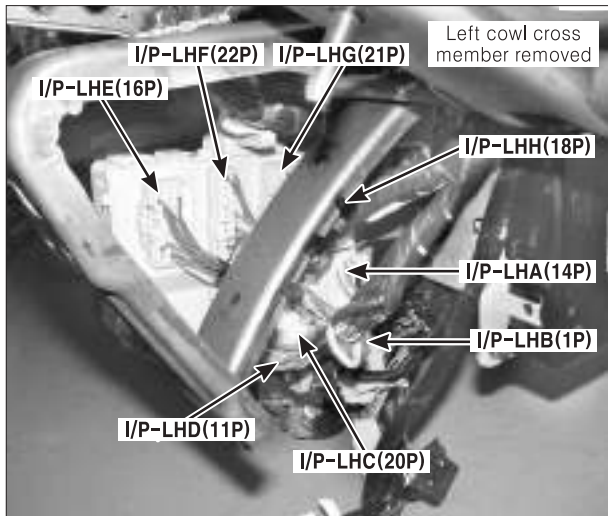


PHOTO.65


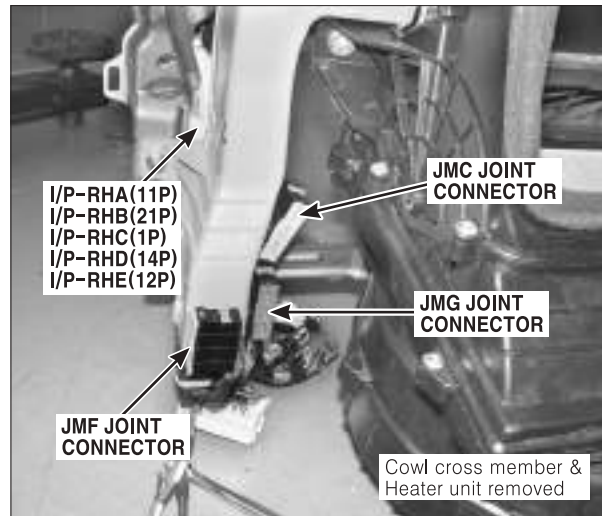


PHOTO.66

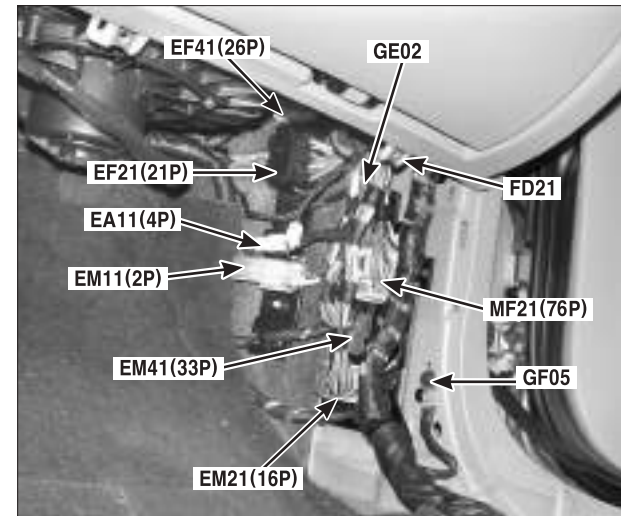

COMPONENT LOCATIONS

Component Locations(12)

CL-12

PHOTO.67



PHOTO.68

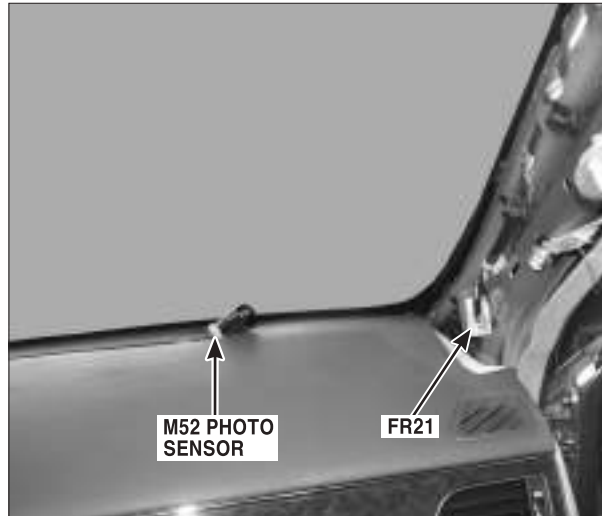


PHOTO.69



PHOTO.70

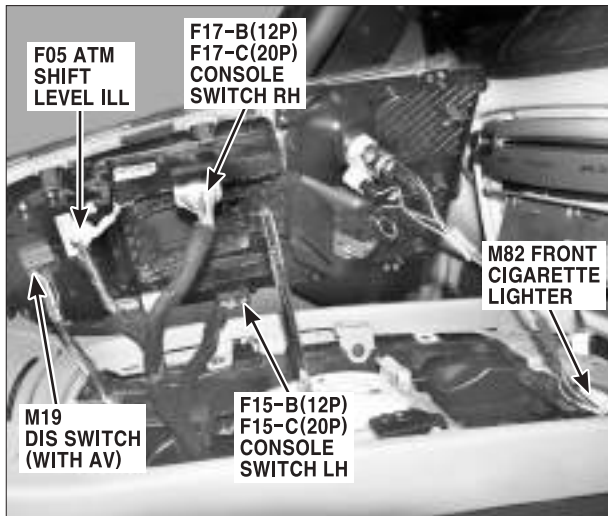


PHOTO.71


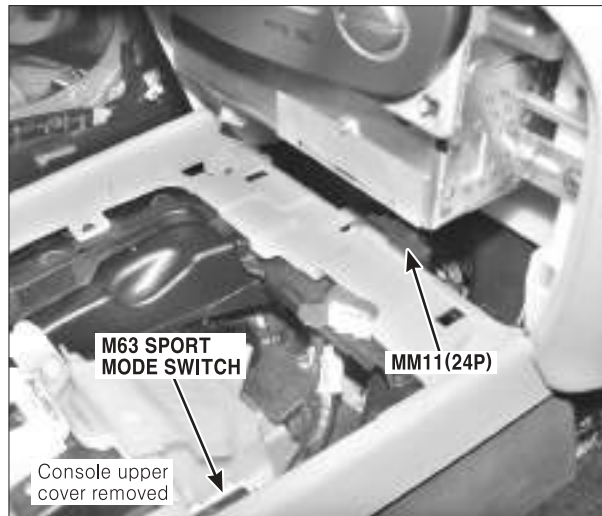


PHOTO.72

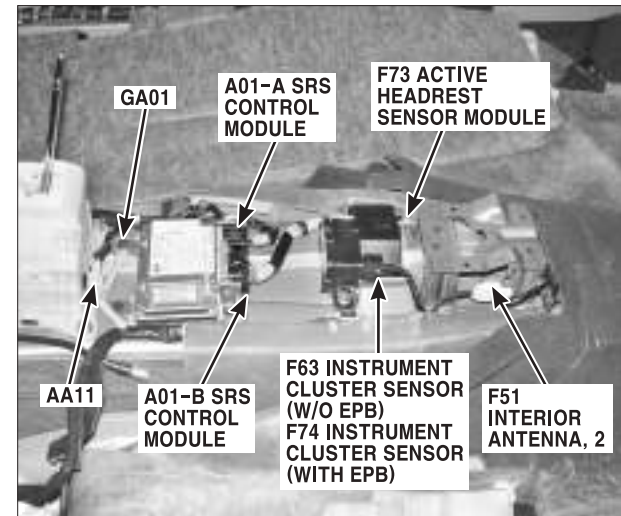

COMPONENT LOCATIONS

Component Locations(13)

CL-13

PHOTO.73

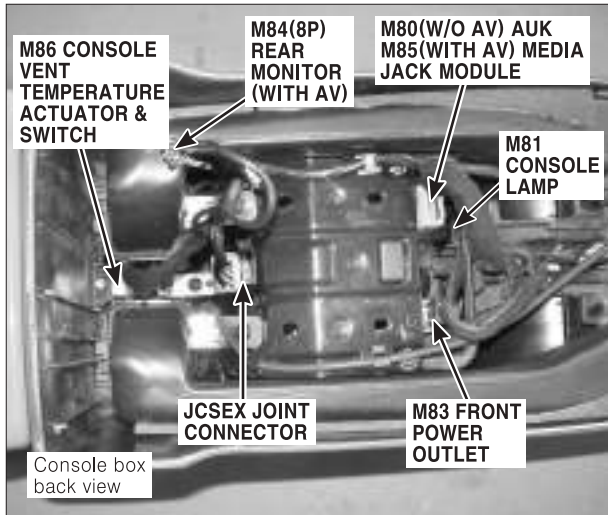


PHOTO.74

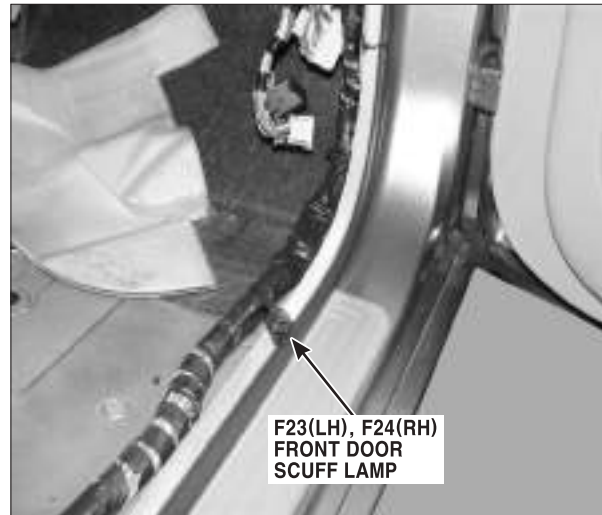


PHOTO.75



PHOTO.76

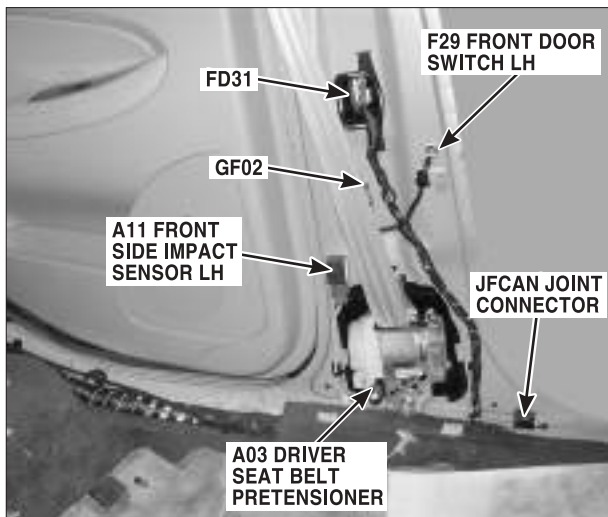


PHOTO.77


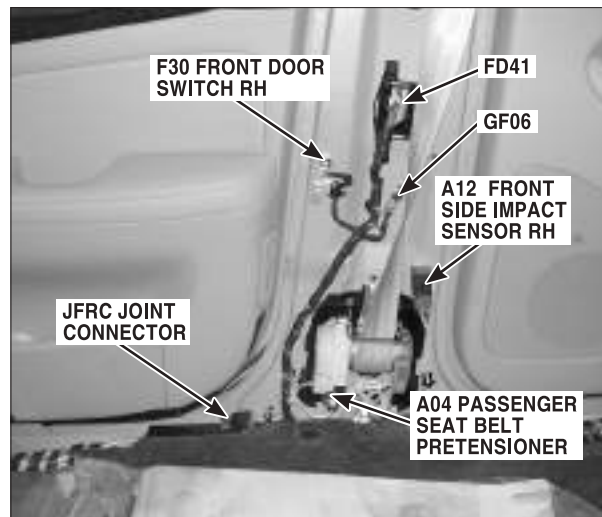


PHOTO.78

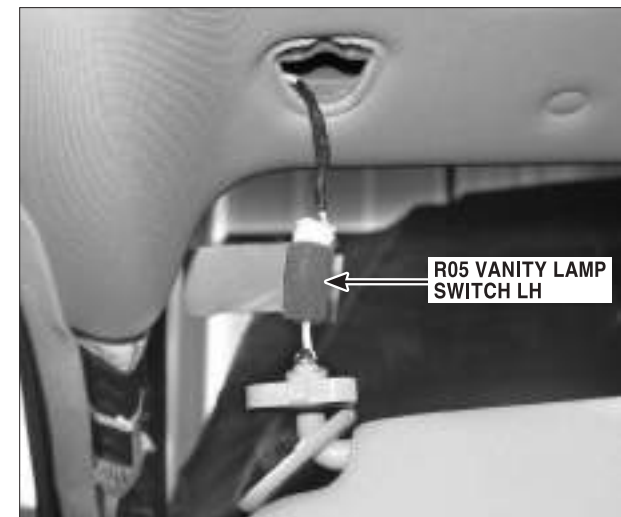

COMPONENT LOCATIONS

Component Locations(14)

CL-14

PHOTO.79



PHOTO.80

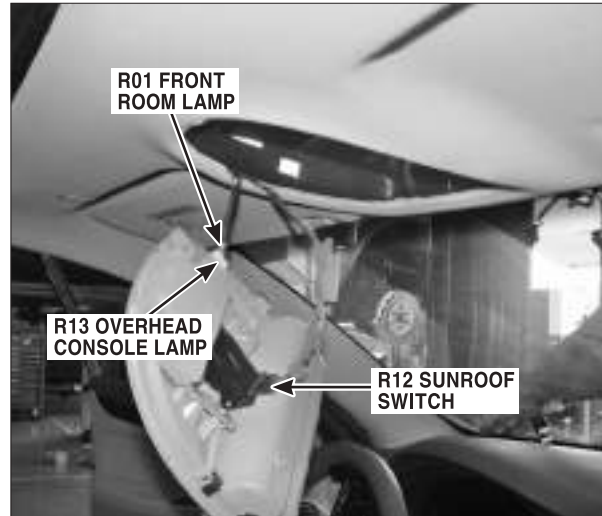


PHOTO.81

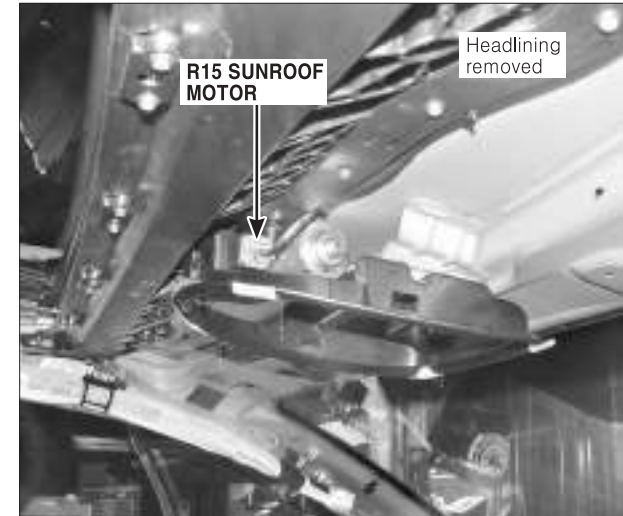


PHOTO.82

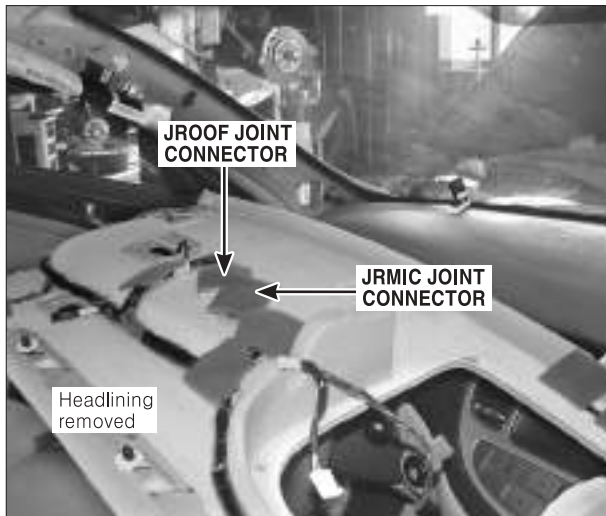


PHOTO.83


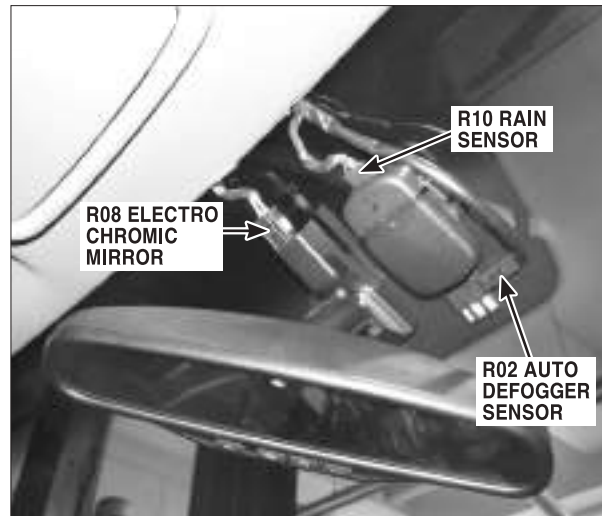


PHOTO.84

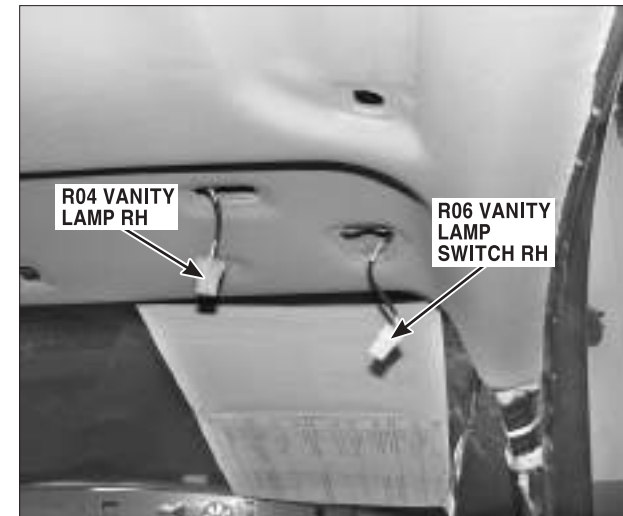

COMPONENT LOCATIONS

Component Locations(15)

CL-15

PHOTO.85



PHOTO.86

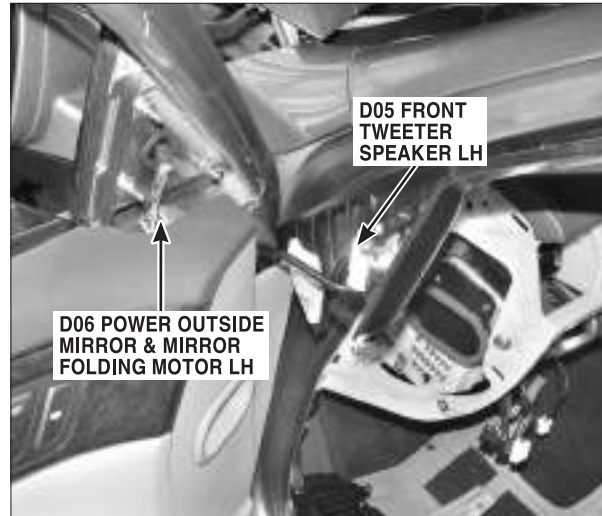


PHOTO.87

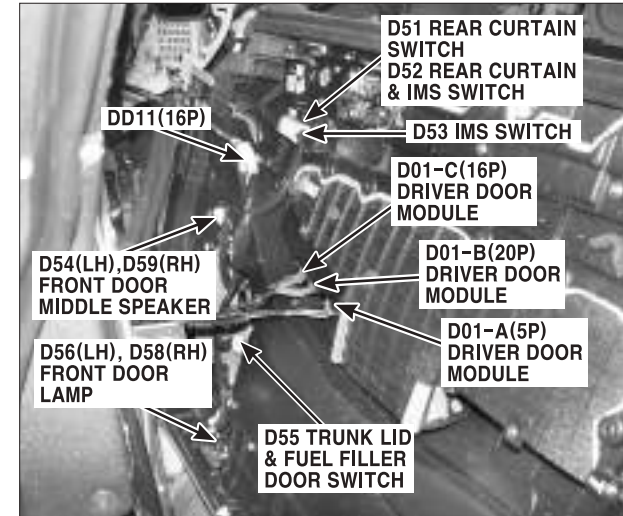


PHOTO.88

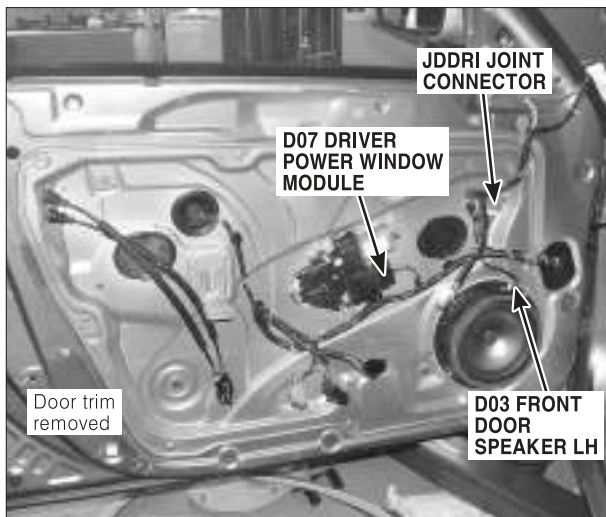


PHOTO.89



PHOTO.90



COMPONENT LOCATIONS

Component Locations(16)

CL-16

PHOTO.91

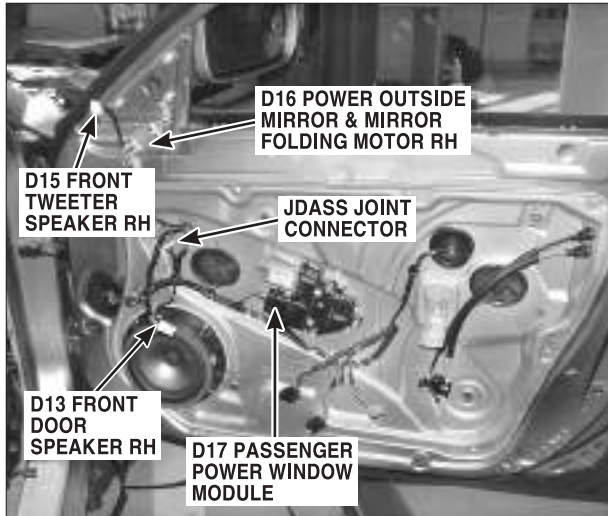


PHOTO.92

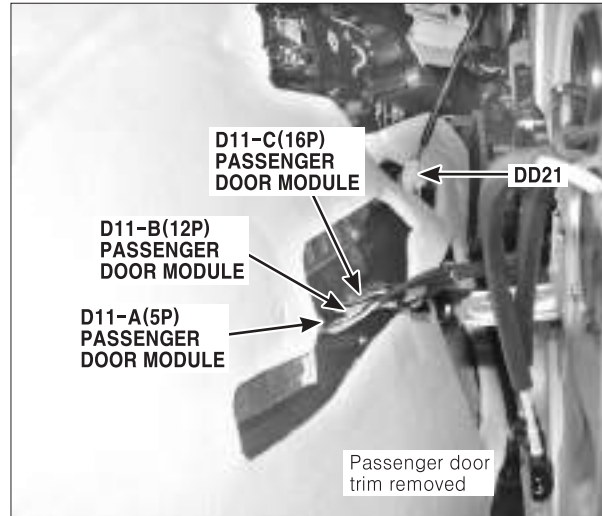


PHOTO.93



PHOTO.94

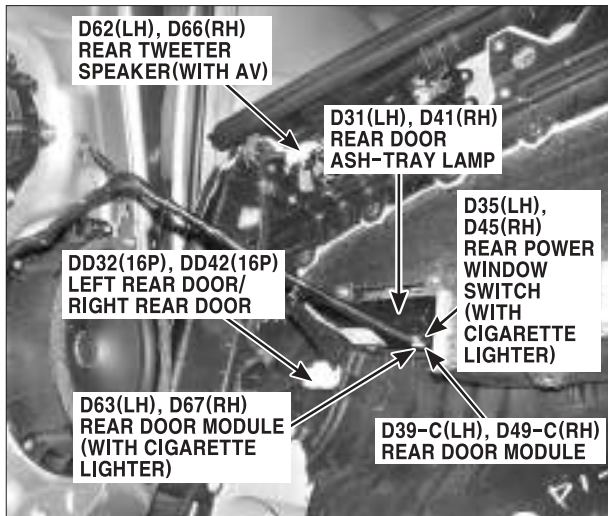


PHOTO.95


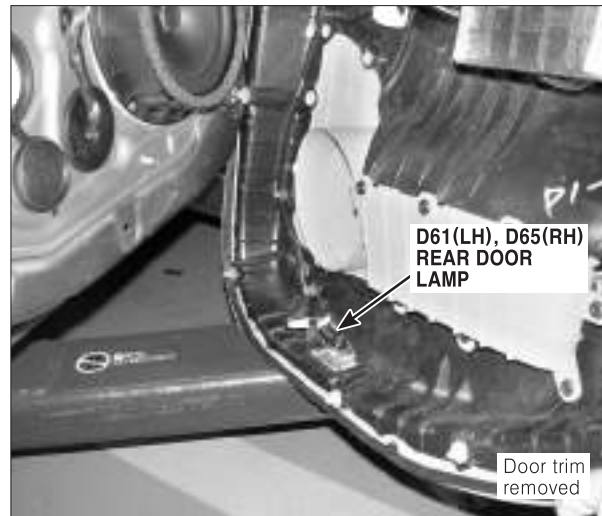


PHOTO.96

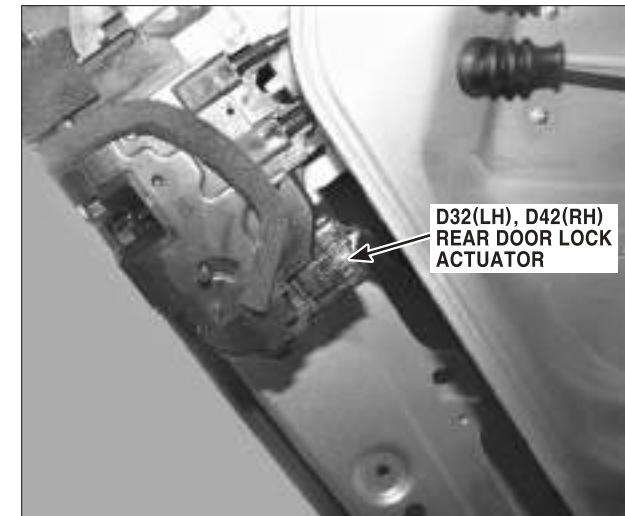

COMPONENT LOCATIONS

Component Locations(17)

CL-17

PHOTO.97

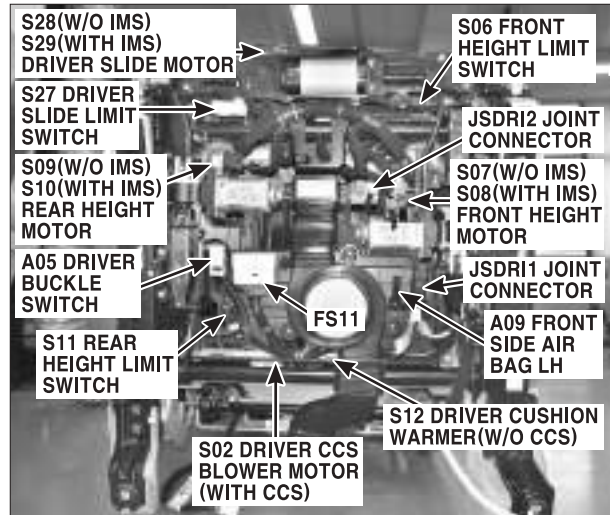


PHOTO.98

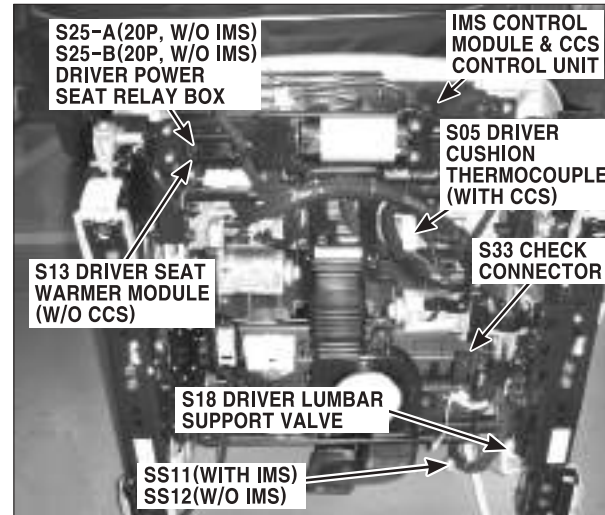


PHOTO.99

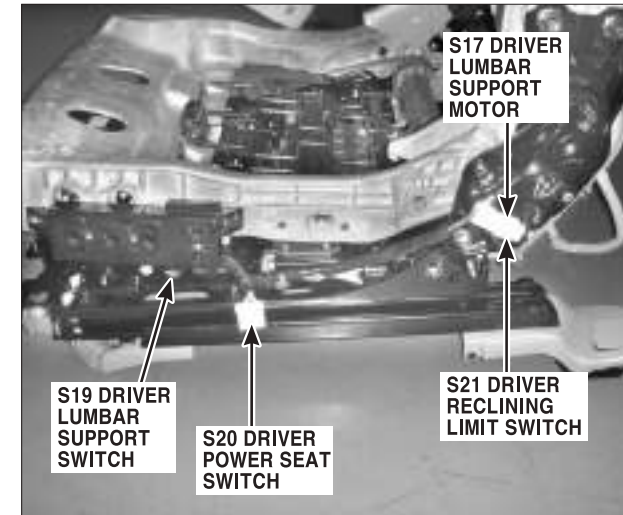


PHOTO.100

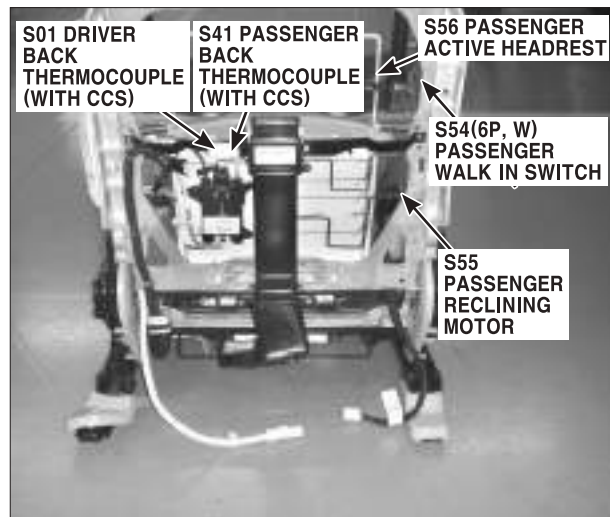


PHOTO.101


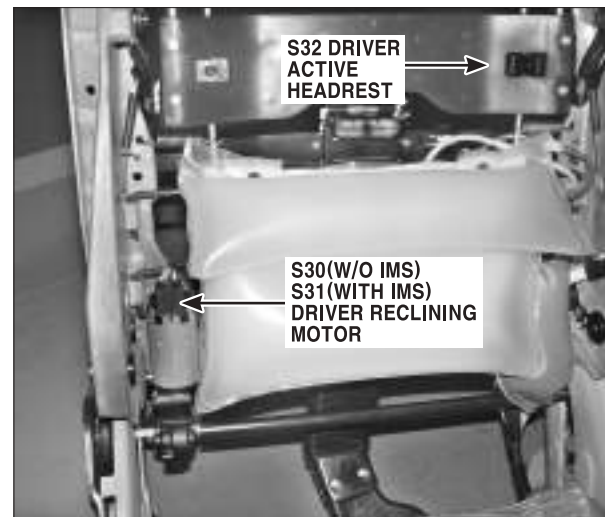


PHOTO.102

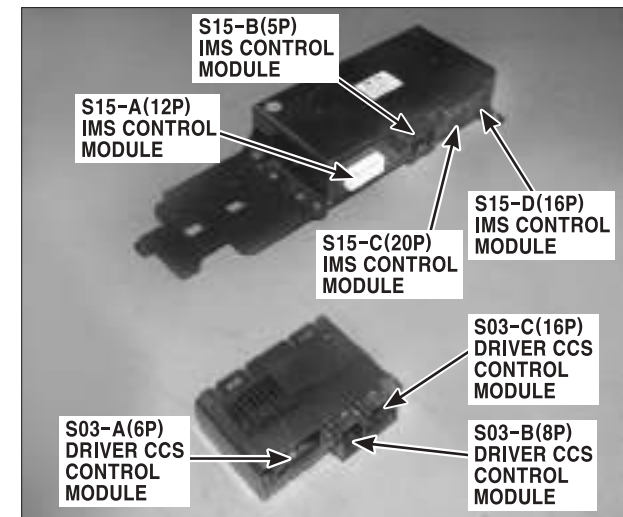

COMPONENT LOCATIONS

Component Locations(18)

CL-18

PHOTO.103

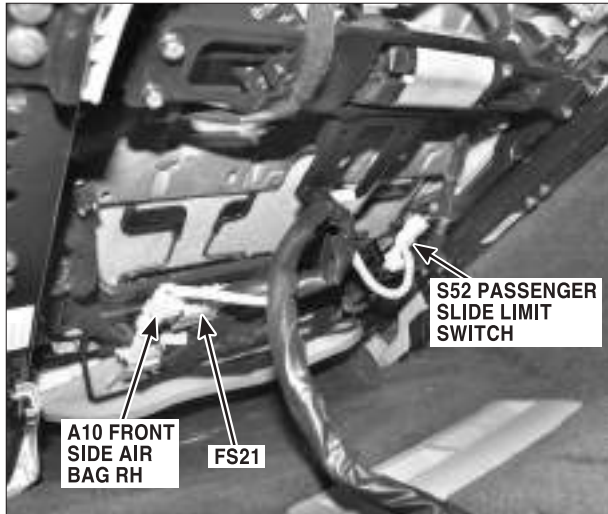


PHOTO.104

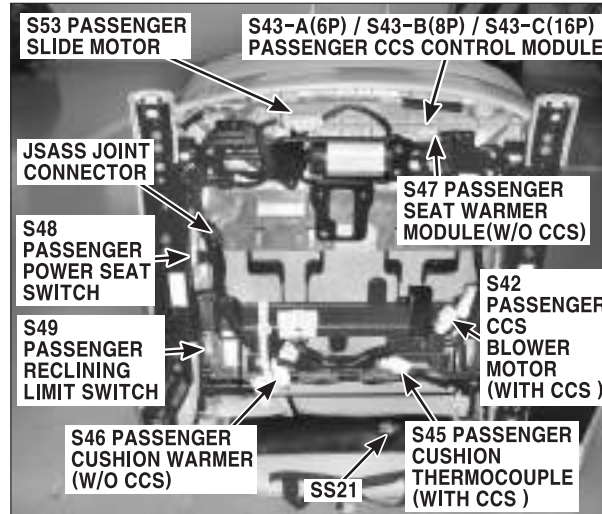


PHOTO.105

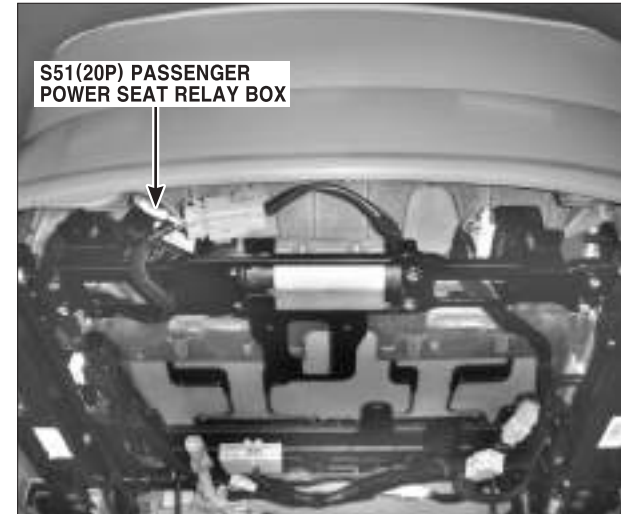


PHOTO.106

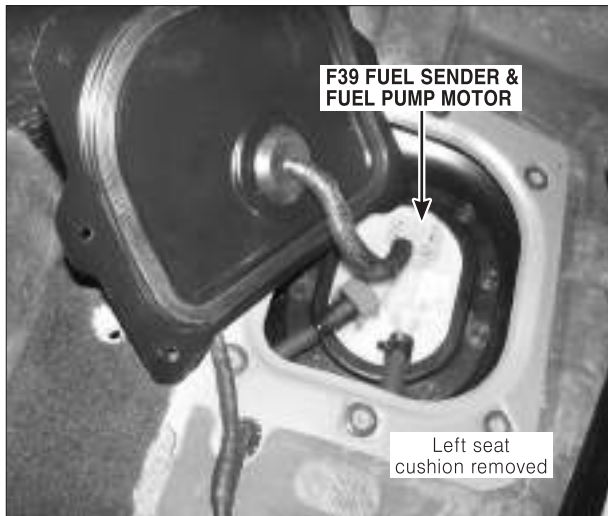


PHOTO.107


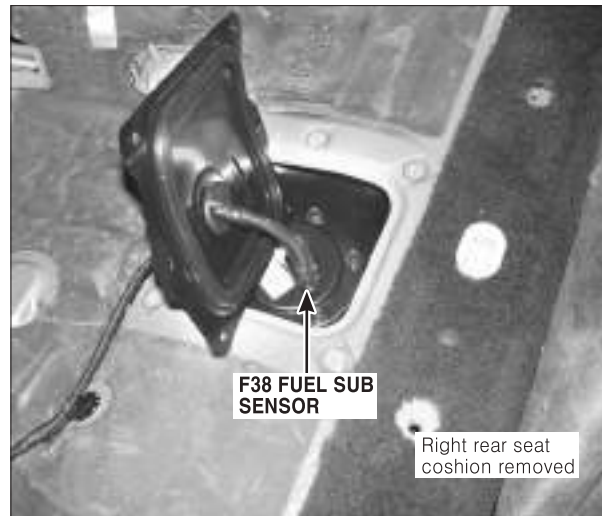


PHOTO.108

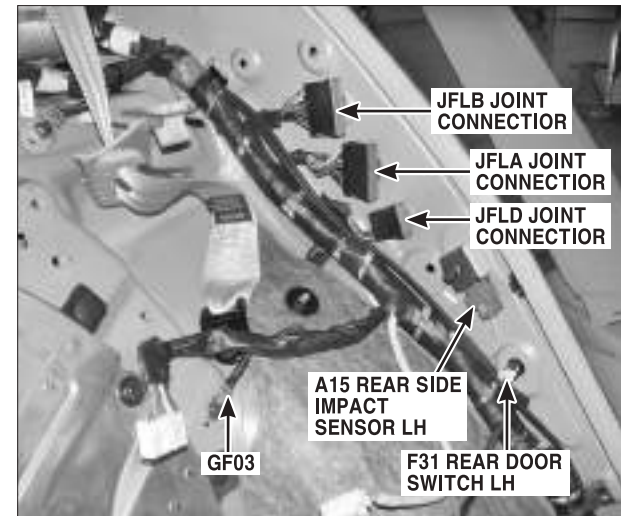

COMPONENT LOCATIONS

Component Locations(19)

CL-19

PHOTO.109

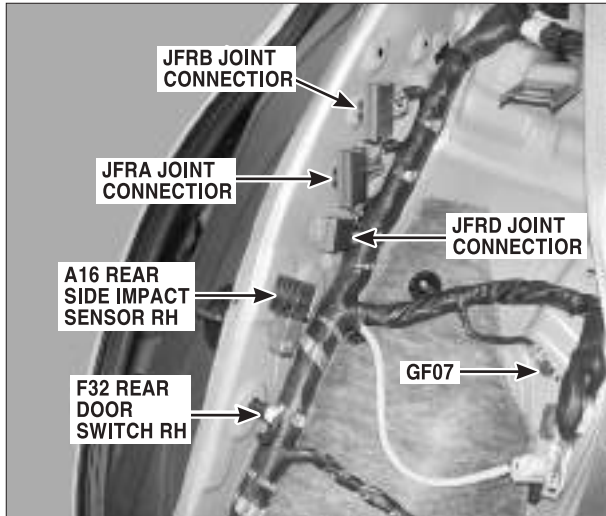


PHOTO.110

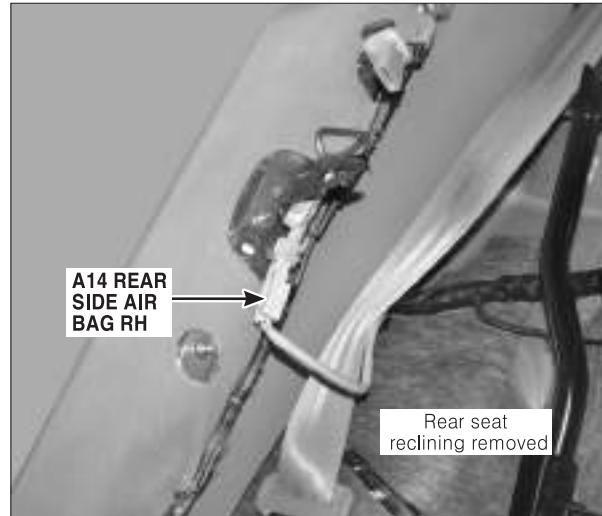


PHOTO.111

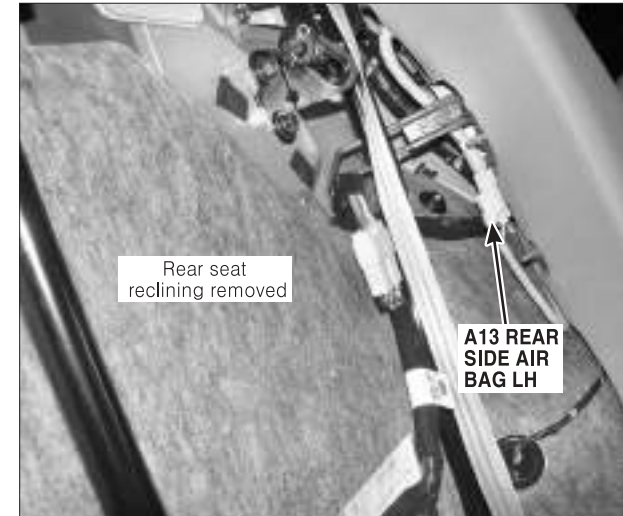


PHOTO.112

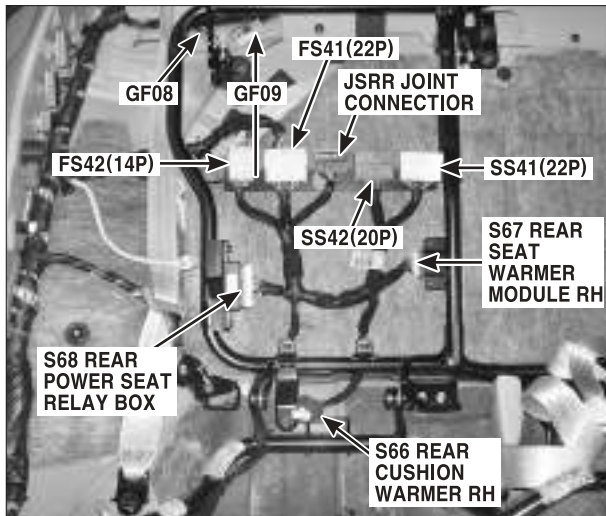


PHOTO.113


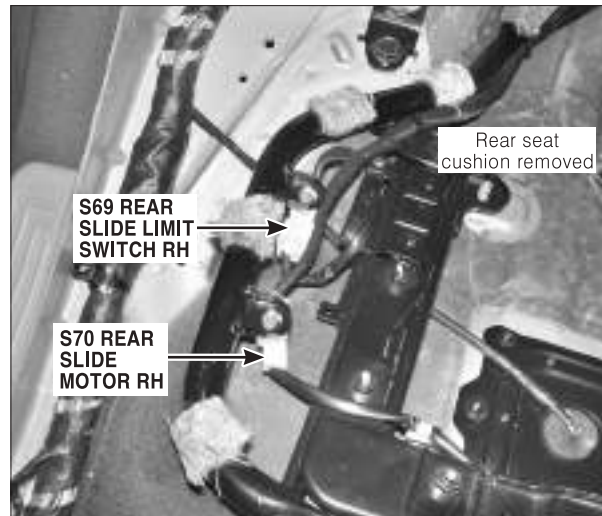


PHOTO.114

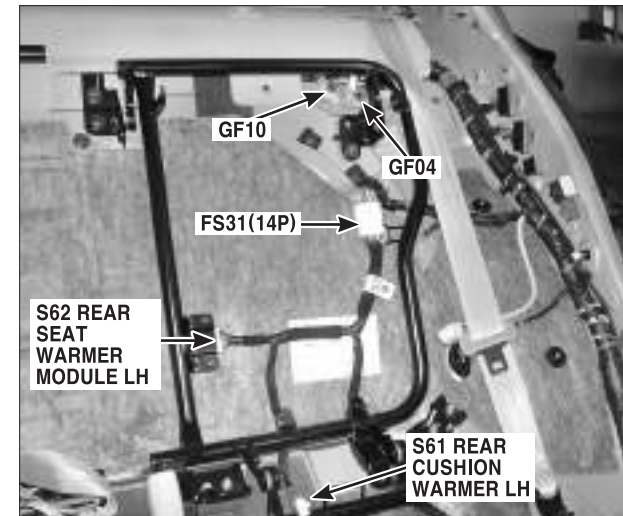

COMPONENT LOCATIONS

Component Locations(20)

CL-20

PHOTO.115

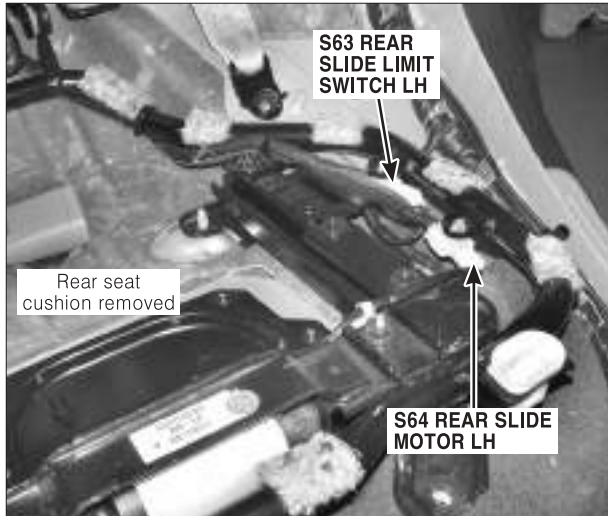


PHOTO.116

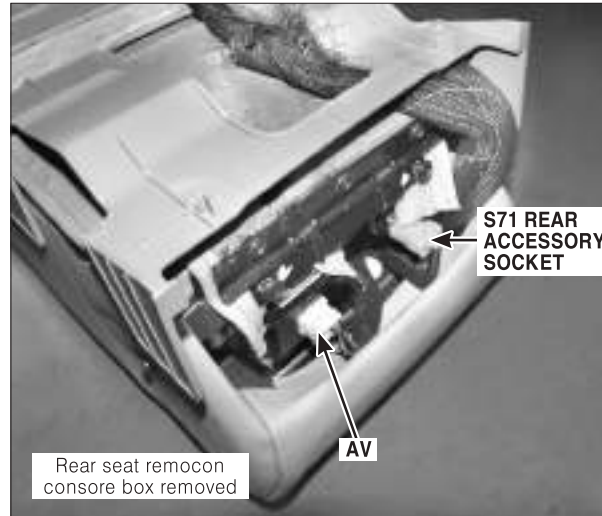


PHOTO.117

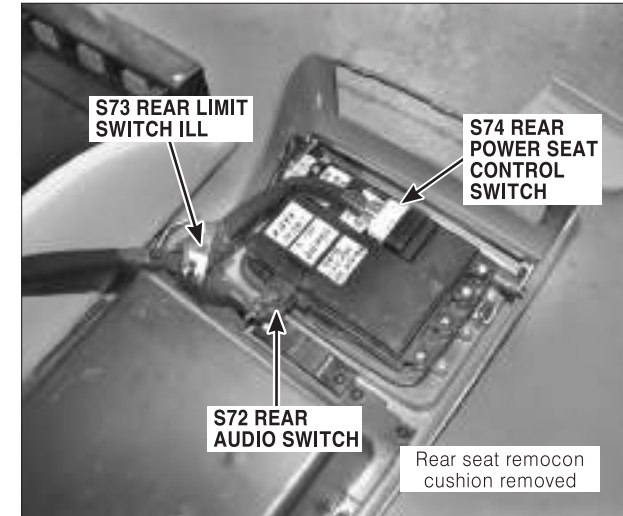


PHOTO.118

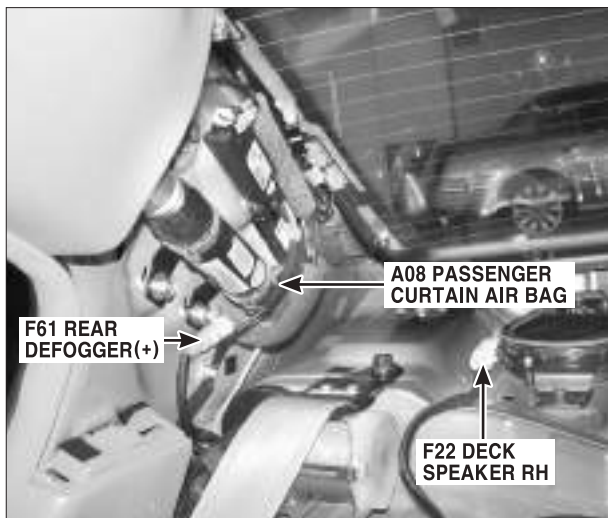


PHOTO.119


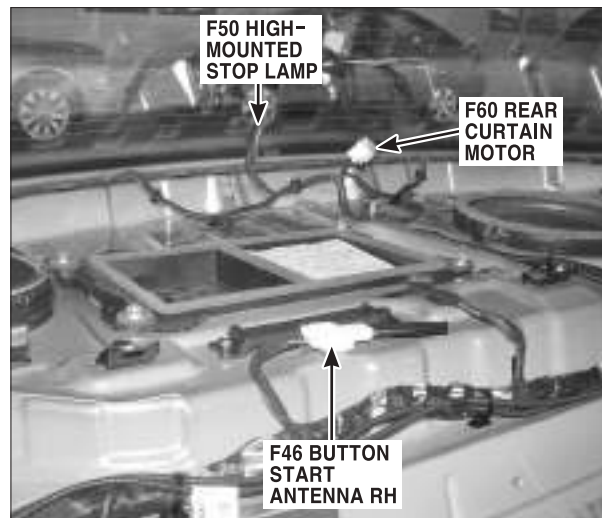


PHOTO.120

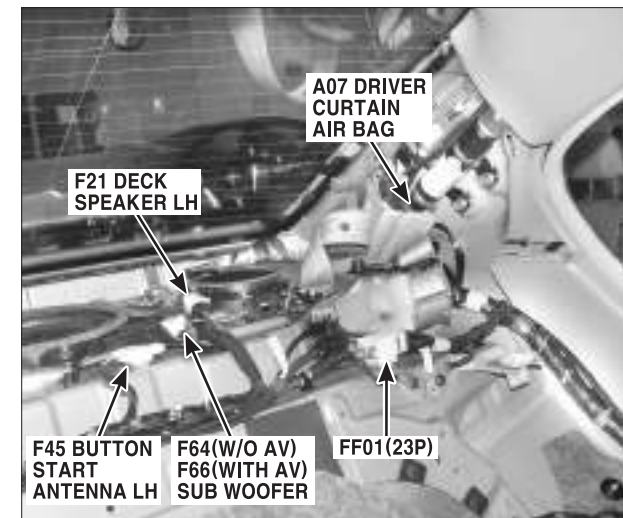

COMPONENT LOCATIONS

Component Locations(21)

CL-21

PHOTO.121

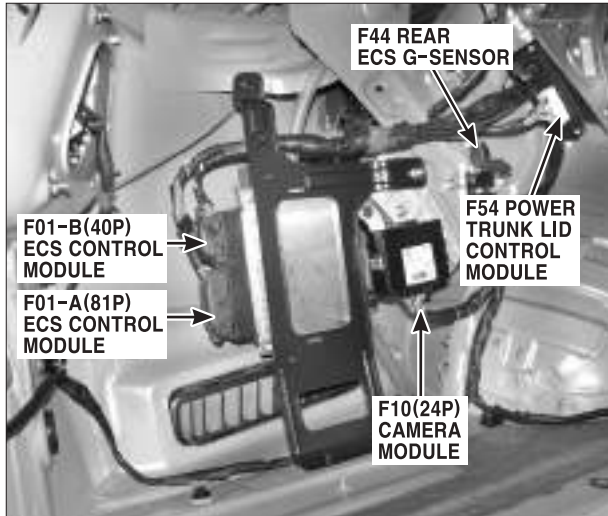


PHOTO.122

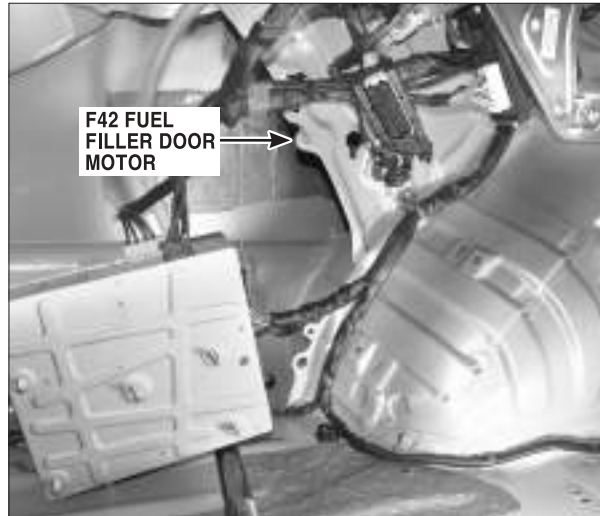


PHOTO.123

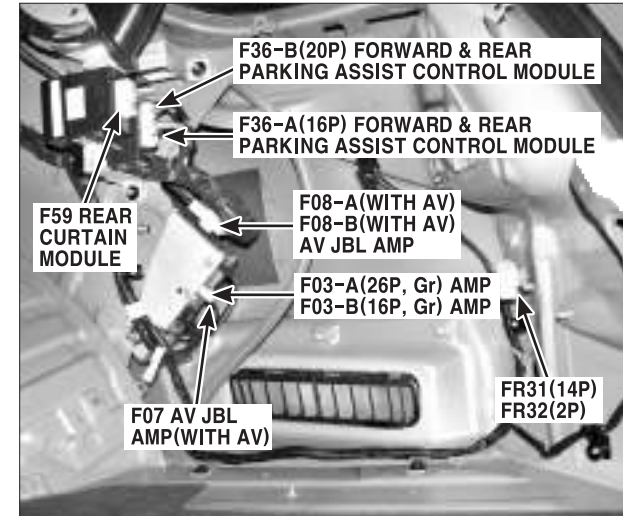


PHOTO.124

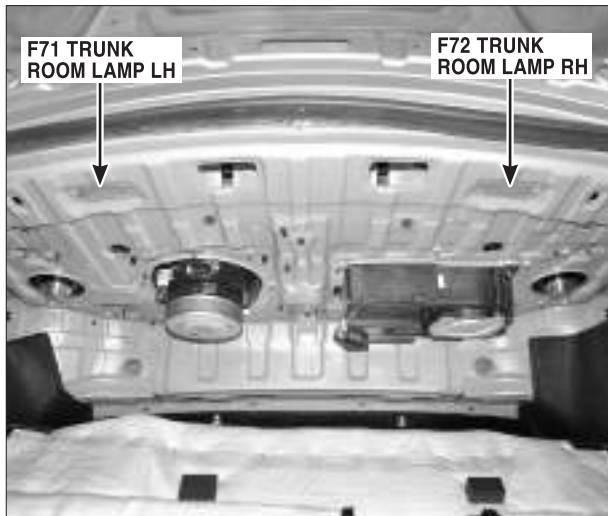


PHOTO.125


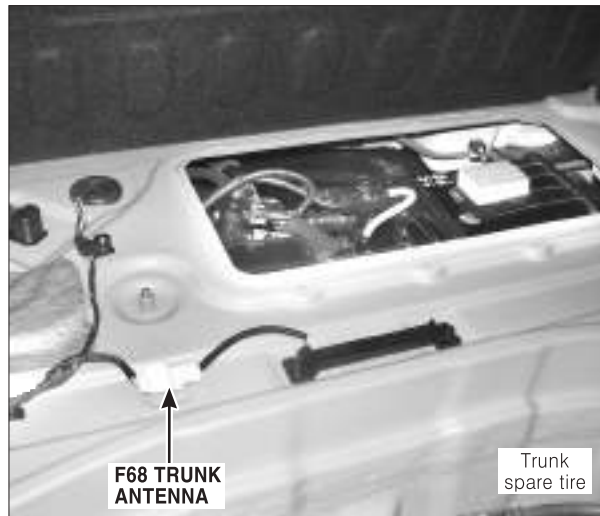


PHOTO.126

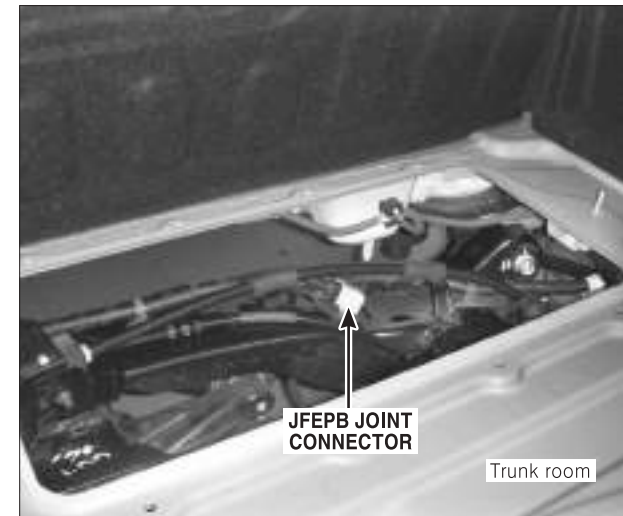

COMPONENT LOCATIONS

Component Locations(22)

CL-22

PHOTO.127



PHOTO.128

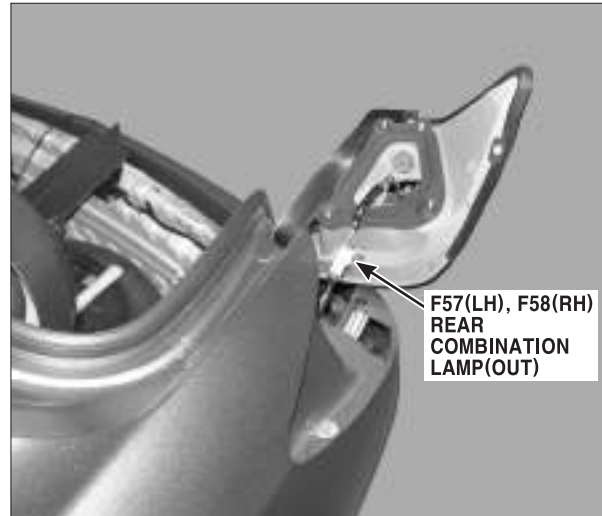


PHOTO.129

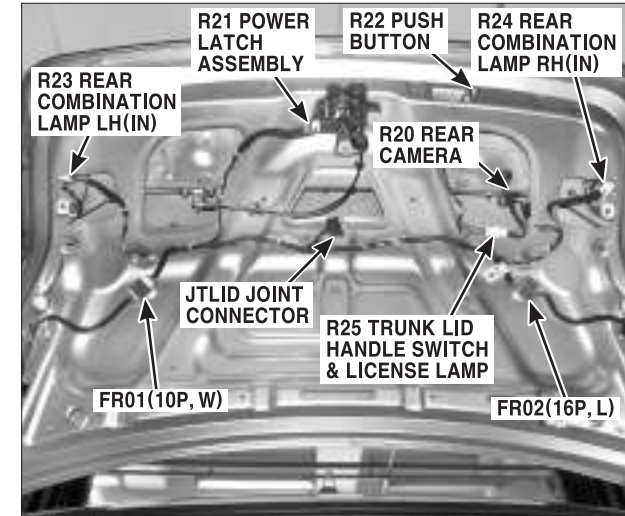


PHOTO.130

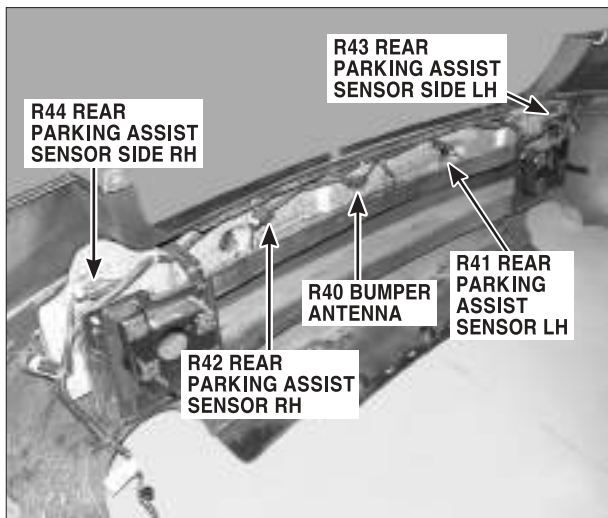


PHOTO.131


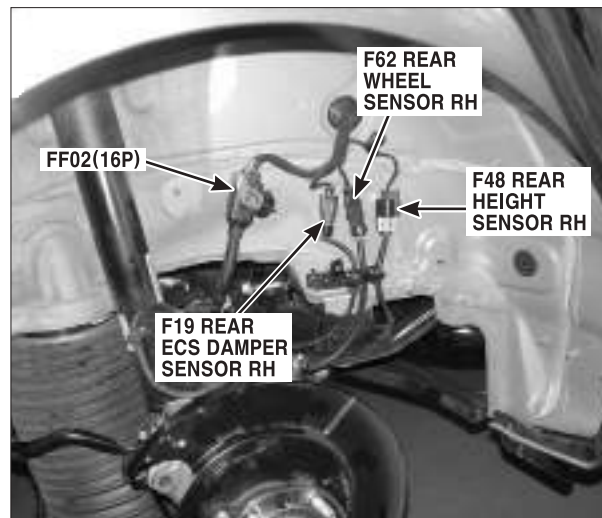


PHOTO.132

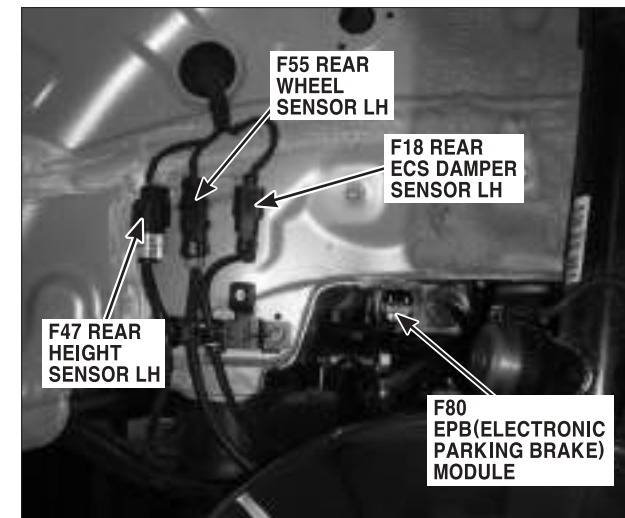

COMPONENT LOCATIONS


Component Locations(23)

CL-23

PHOTO.133



PHOTO.134

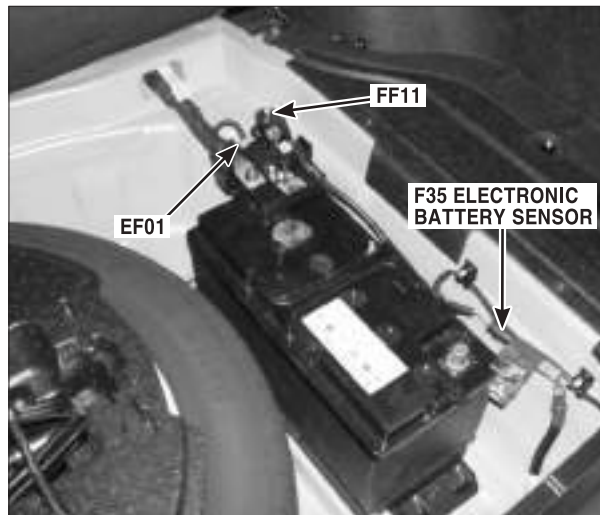


HARNESS CONNECTORS

EAA4B6DF


Harness Connectors (1)

CC-1

 AA11




AMP_MQS_14F_Y

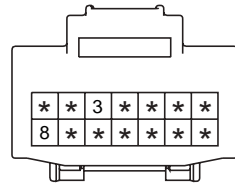


AMP_MQS_14M_Y

CLGIG

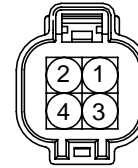


KUM_KNMWP_04F_Gr

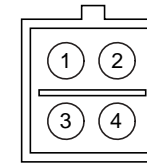


KUM_PB621_04120

CLGINJ

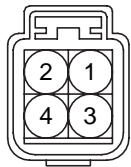


KUM_NMWP_04F_B

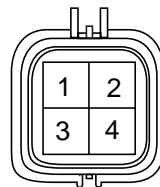


KUM_PB625_04020

CLGOCV

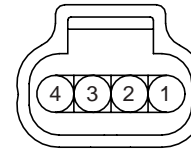


PKD_GT150_04F_Gr

 


CR04M044

DD11

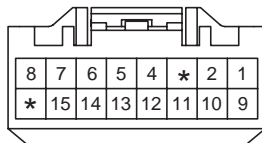


AMP_090III_16F_W

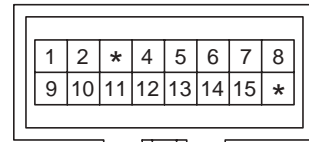


AMP_090III_16M_W

DD21

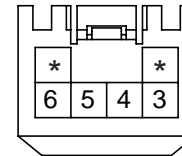


AMP_090III_06F_W_2

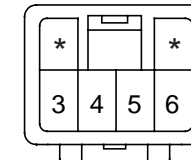


AMP_090III_06M_W

DD32

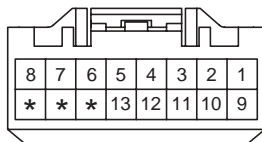


AMP_090III_16F_W

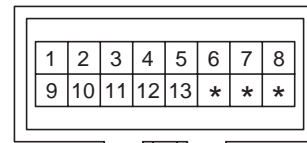


AMP_090III_06M_W

DD42

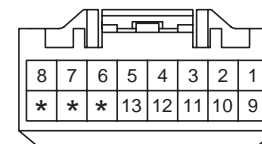


AMP_090III_16F_W

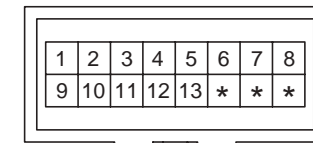


AMP_090III_16M_W

EA11

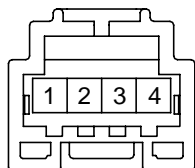

AMP_MQS_04M_Y_040

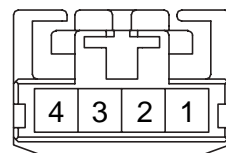

AMP_MQS_04F_Y_040

EE01



KET_312IWP_01M_B




KET_312IWP_01F_B

HARNES CONNECTORS


Harness Connectors (2)

CC-2

EE11

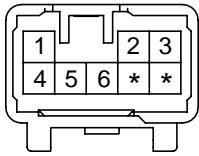


KET_090II_08M_W

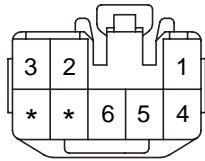


KET_090III_08F_W

EE21

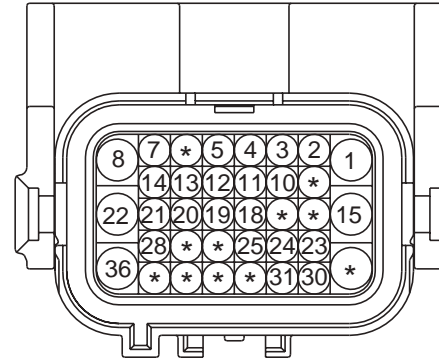


AMP_MTIJPT_36F_B

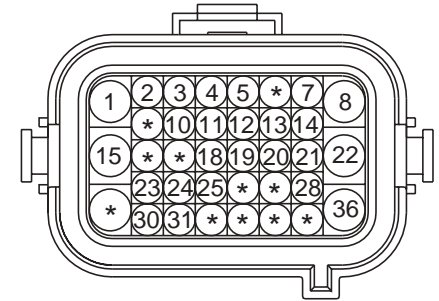


AMP_MTIJPT_36M_B

EE31/EE51

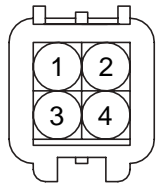


KUM_NMWP_04M_B

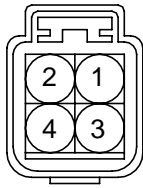


KUM_NMWP_04F_B

EE41

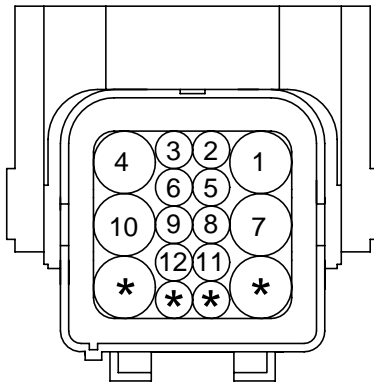


AMP_MTJWP_16F_B

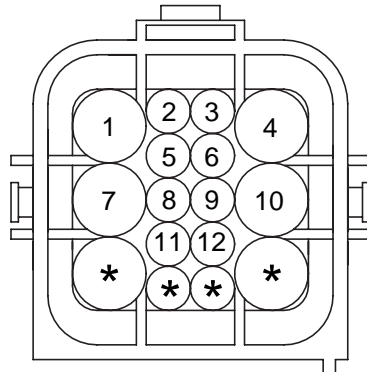


AMP_MTJWP_16M_B

 
EF01




KET_58L_01F_W

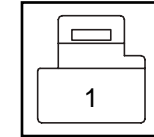

EF11

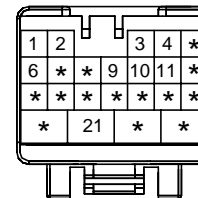


KET_1809_23M_W

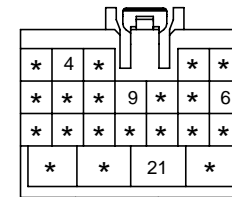


KET_1809_23F_W

EF21

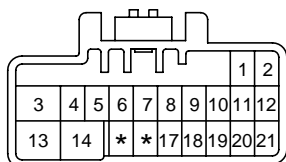

KET_1809_21M_B_B

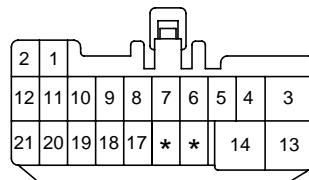

KET_1809_21F_B_B


BLANK

HARNESS CONNECTORS


Harness Connectors (3)

CC-3

EF31

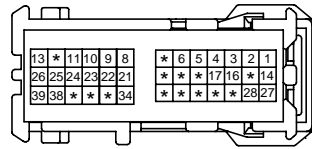


KET_LIF0409_39F_L_CL_IP

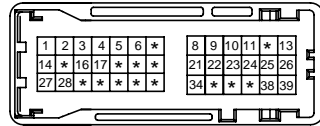


KET_LIF0409_39M_L_CL_IP

 EF41




AMP_090III_26M_W

 


AMP_090III_26F_W

EF51

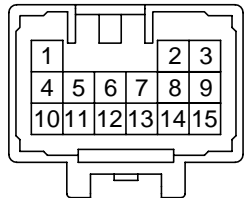


KET_090III_15M_W

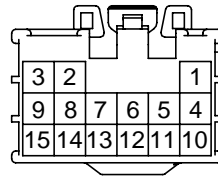

KET_090III_15F_W

 EM11




KET_58L_02M_W




KET_58L_02F_W

EM21

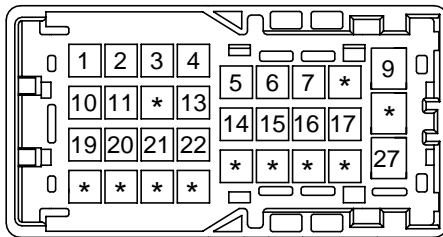


KET_LIF187_31M_W

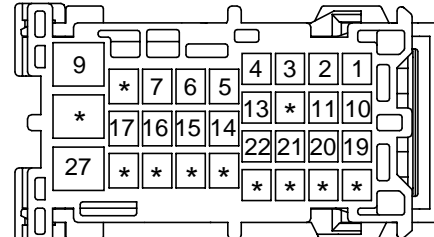


KET_LIF187_31F_W

EM31

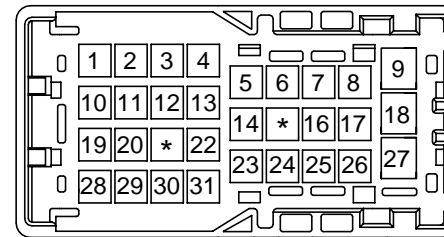


KET_LIF187_31M_W

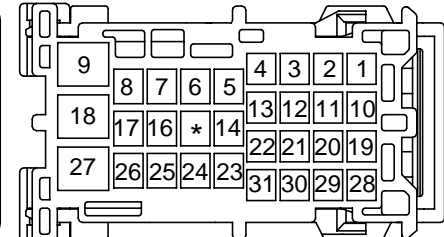


KET_LIF187_31F_W

EM41

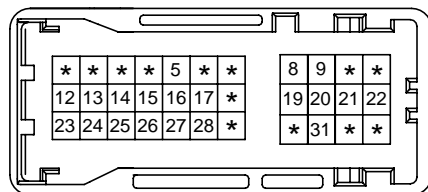

KET_LIP0409_33M_B_A

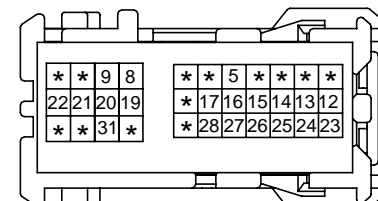


KET_LIP0409_33F_B_A

HARNES CONNECTORS


Harness Connectors (4)

CC-4

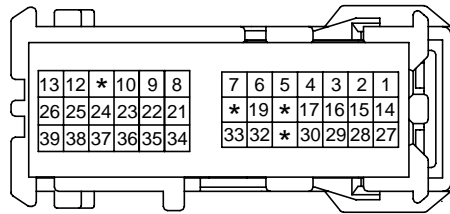


KET_LIF0409_39F_W

FD11

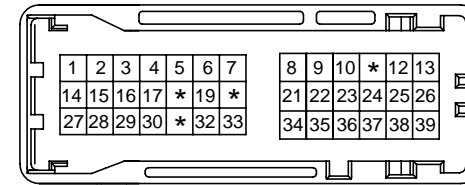


KET_LIF0409_39M_W_DR

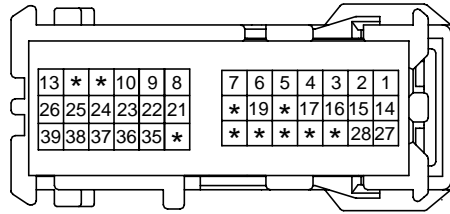


KET_LIF0409_39F_W

FD21

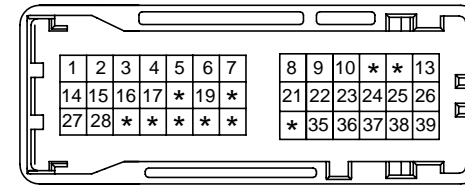


KET_LIF0409_39M_W_DR

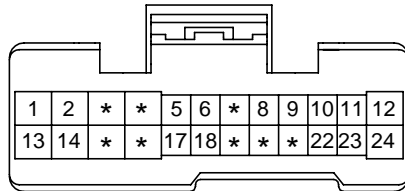


KET_0409_24M_W

FD31

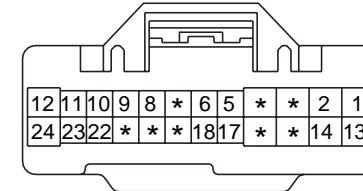


KET_0409_24F_W

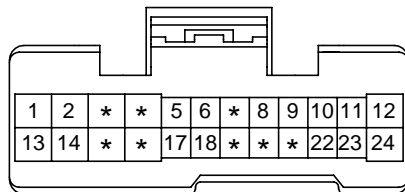


KET_0409_24M_W

FD41

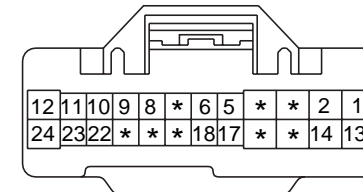


KET_0409_24F_W

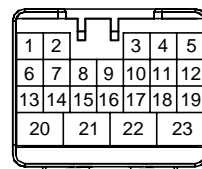

KET_1809_23M_W

FF01

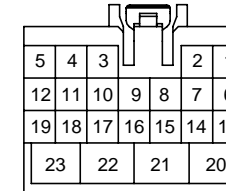


KET_1809_23F_W

HARNES CONNECTORS


Harness Connectors (5)

CC-5

FF02


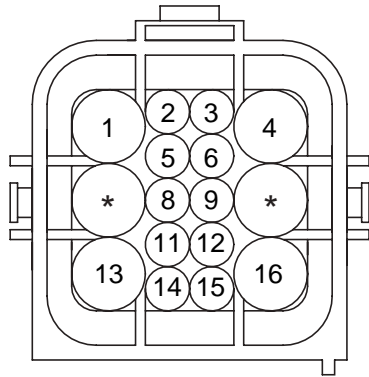


AMP_MTJWP_16M_B

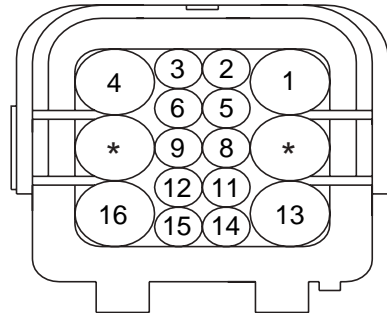


AMP_MTII/JPT_16P

 FF11

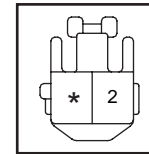


KET_090III_02F_W_L

FR01

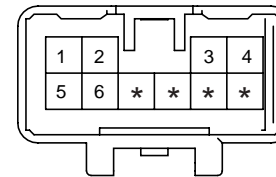


KET_090III_10M_W

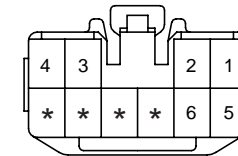


KET_090III_10F_W

FR02

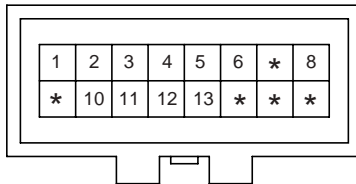


AMP_090III_16M_L

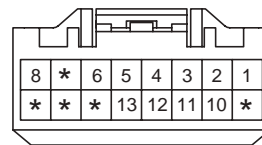


AMP_090III_16F_L

FR11

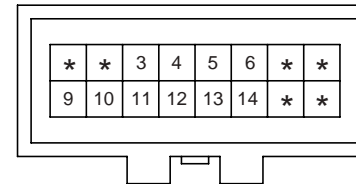


AMP_090III_16M_W

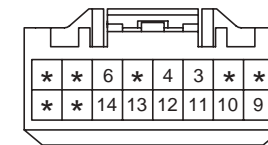


AMP_090III_16F_W

FR21

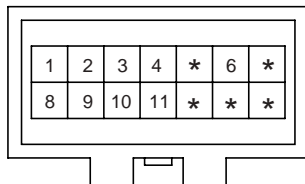


AMP_090III_14M_W

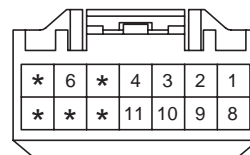


AMP_090III_14F_W

FR31

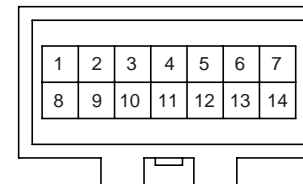


AMP_090III_14M_W

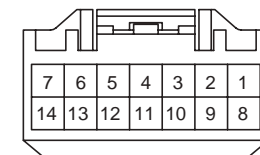


AMP_090III_14F_W

 FR32




AMP_090III_02M_W

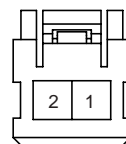


AMP_090III_02F_W

FS11

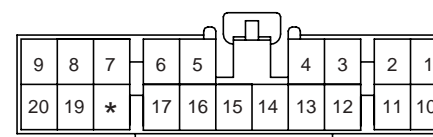

KET_090III_20F_W

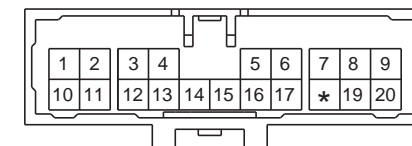


KET_090III_20M_W

HARNES CONNECTORS


Harness Connectors (6)

CC-6

FS21

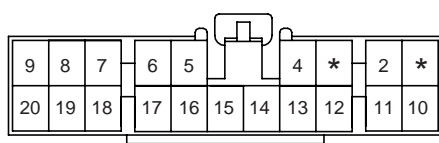


KET_090III_20F_W

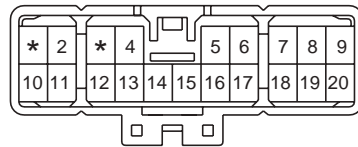


KET_090III_20M_W

FS31

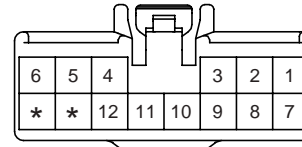


KET_090III_14F_W

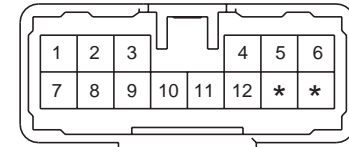


KET_090III_14M_W

FS41

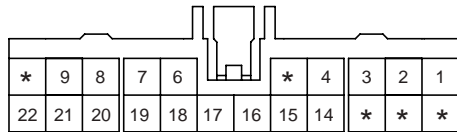


KET_090III_22F_W

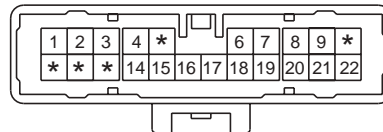


KET_090III_22M_W

FS42

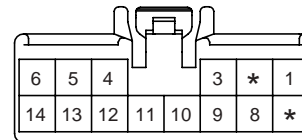


KET_090III_14F_W

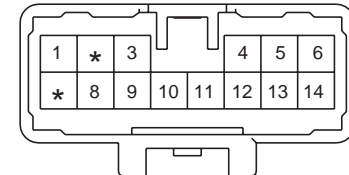


KET_090III_14M_W

MF11

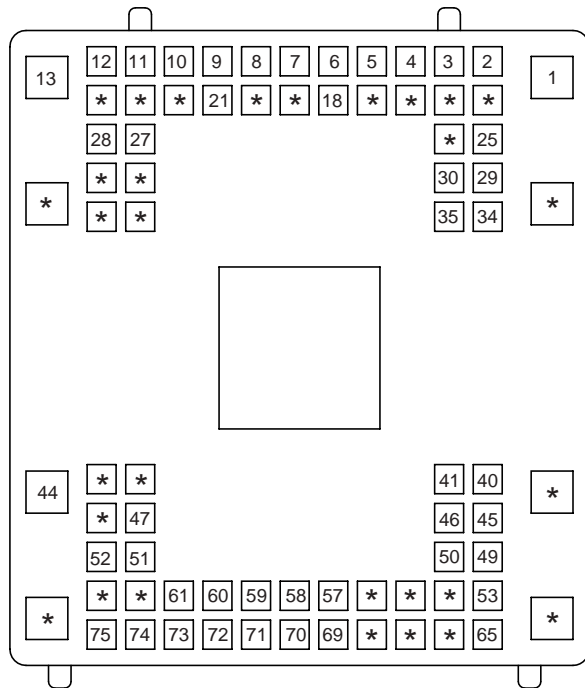

KET_MULTI_76F_W

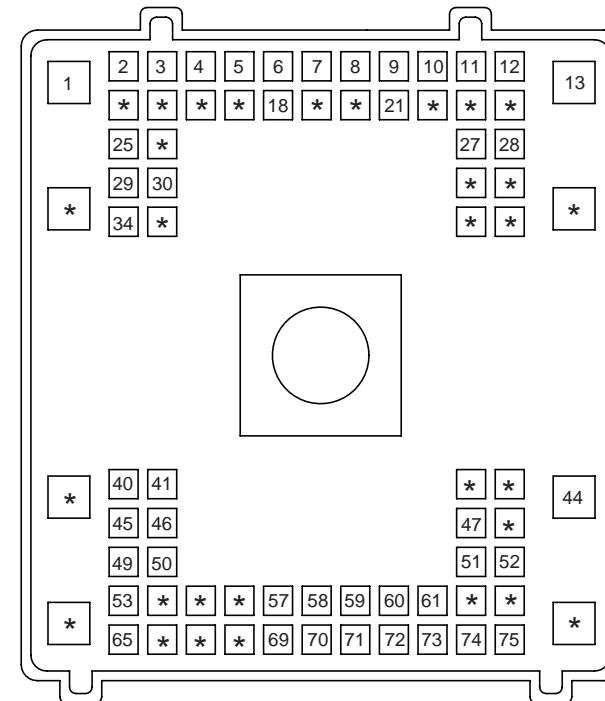


KET_MULTI_76M_W

HARNES CONNECTORS


Harness Connectors (7)

CC-7

MF21

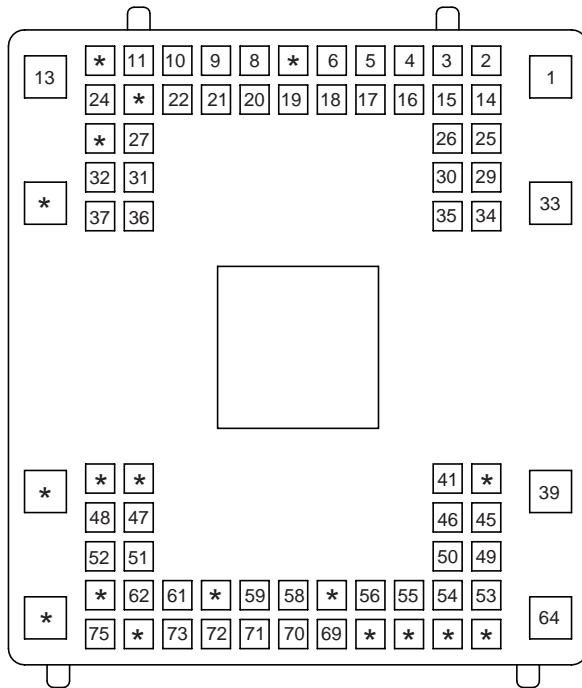


KET_MULTI_76F_W

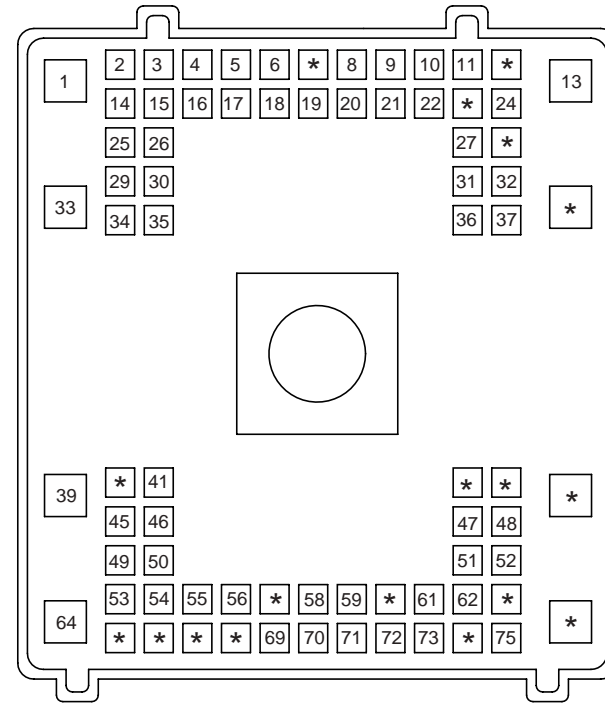


KET_MULTI_76M_W

MM11

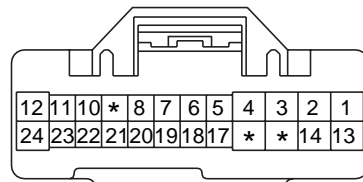


KET_0409_24F_W

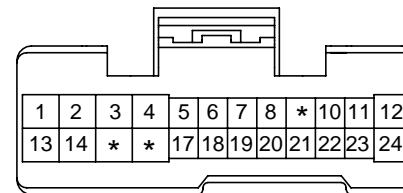


KET_0409_24M_W

SS11

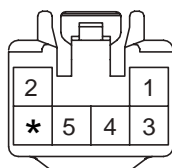

KET_090III_06F_W

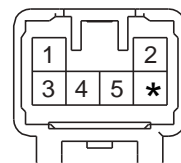

KET_090III_06M_W

SS12



KET_090II_02M_W




KET_090II_02F_W

HARNES CONNECTORS


Harness Connectors (8)

CC-8

 SS21




KET_090II_02F_W

 


KET_090II_02M_W

BLANK

SS41

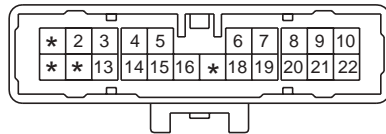


KET_090III_22M_W

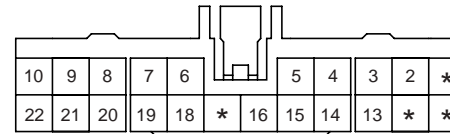


KET_090III_22F_W

SS42

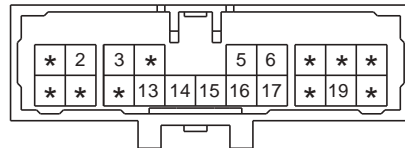

KET_090III_20M_R

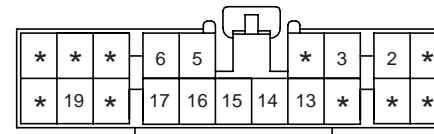


KET_090III_20F_R

E/R Junction Box (1)


CC-9

E/R-CA

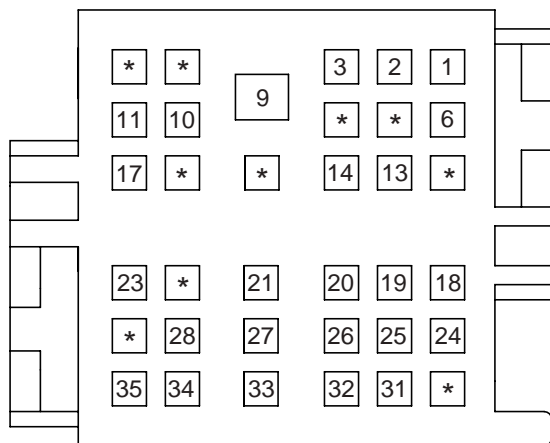


KET_09187_35F_GR

E/R-CB

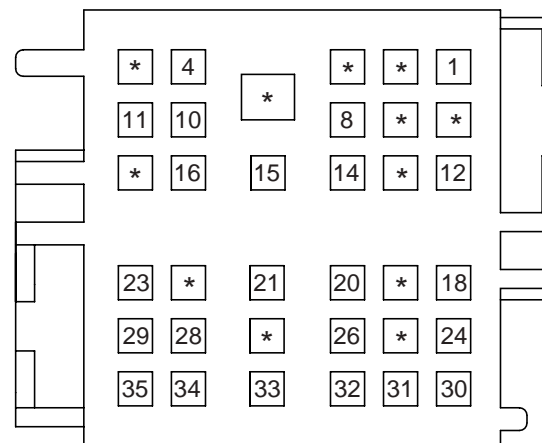


KET_09187_35F_B_1

E/R-E1A

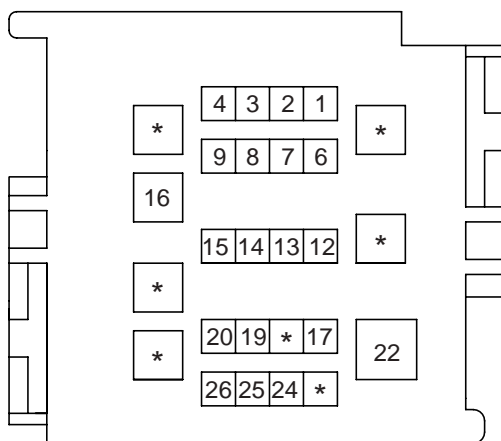

KET_MULTI_27F_GR_1

E/R-E1B

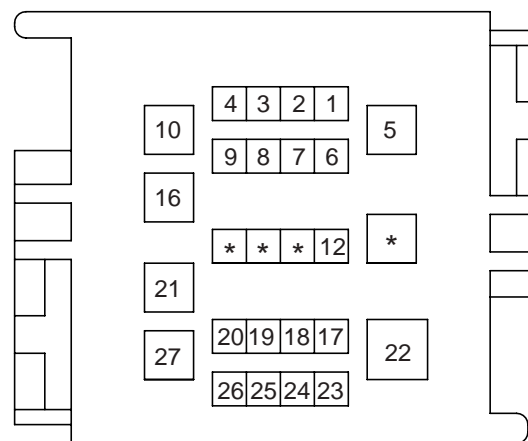


KET_MULTI_27F_B

E/R JUNCTION BOX

E/R Junction Box (2)


CC-10

E/R-E2A

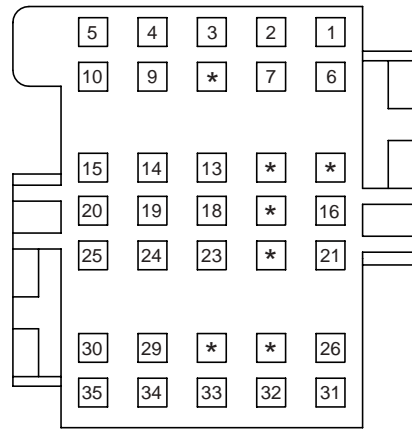

KET_090II_35F_GR

E/R-E2B




















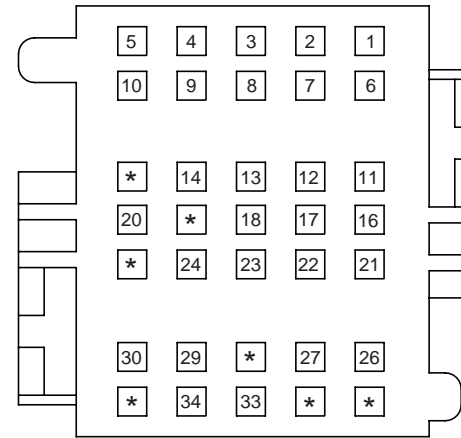


KET_090II_35F_B_1

I/P Junction Box (1)			CC-11
<p>I/P-LHA</p> <p>KET_090II_14F_W</p>	<p>I/P-LHB</p> <p>KET_58L_01F_W</p>	<p>I/P-LHC</p> <p>KET_090II_20F_W</p>	<p>I/P-LHD</p> <p>KET_1809_11F_W</p>
<p>I/P-LHE</p> <p>KET_1809_16F_W</p>	<p>I/P-LHF</p> <p>KET_090II_22F_W</p>	<p>I/P-LHG</p> <p>KET_1809_21F_W_A</p>	<p>I/P-LHH</p> <p>KET_090II_18F_W</p>
<p>I/P-RHA</p> <p>KET_1809_11F_W_OS</p>	<p>I/P-RHB</p> <p>KET_1809_21F_W_A</p>	<p>I/P-RHC</p> <p>KET_58L_01F_W</p>	<p>I/P-RHD</p> <p>KET_090II_14F_W</p>
<p>I/P-RHE</p> <p>KET_090II_12F_W</p>	<p>BLANK</p>	<p>BLANK</p>	<p>BLANK</p>

JOINT CONNECTORS

E7A8B453

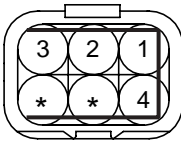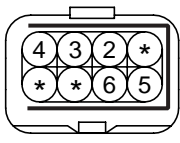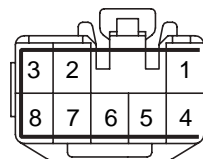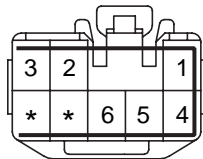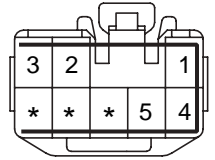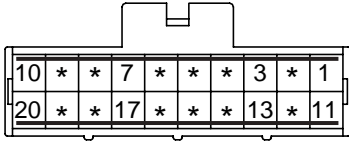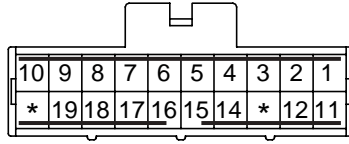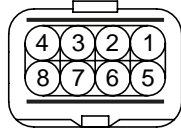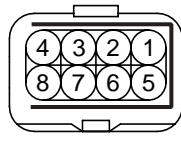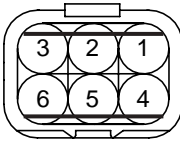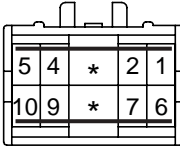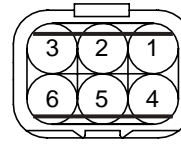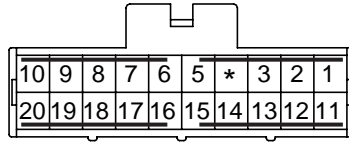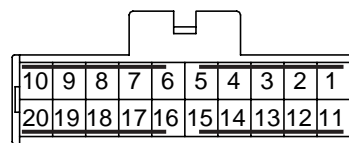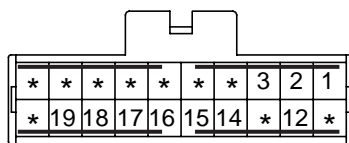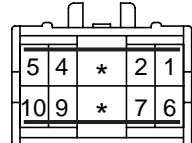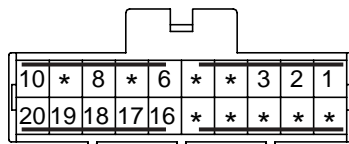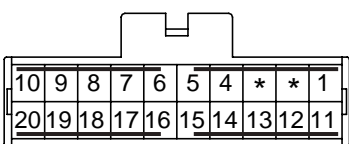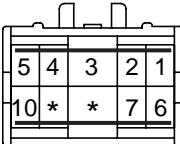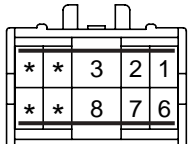
Joint Connectors (1)			CC-12
<p>JCA</p>  <p>KET_090IWP_06F_B_JCH</p>	<p>JCB</p>  <p>KET_090IWP_08F_B_JCH</p>	<p>JCSEX</p>  <p>KET_090II_08F_W</p>	<p>JDDR1</p>  <p>KET_090II_08F_W</p>
<p>JDASS</p>  <p>KET_090II_08F_W</p>	<p>JEA</p>  <p>KET_090II_20F_B_JCH</p>	<p>JEB</p>  <p>KET_090II_20F_B_JCH</p>	<p>JEC</p>  <p>KET_090IWP_08F_B_JCH</p>
<p>JEFEM</p>  <p>KET_090IWP_08F_B_JCH</p>	<p>JELIN</p>  <p>KET_090IWP_06F_B_JCH</p>	<p>JFCAN</p>  <p>KET_1809_10F_B_JCH</p>	<p>JFEPB</p>  <p>KET_090IWP_06F_B_JCH</p>
<p>JFLA</p>  <p>KET_090II_20F_B_JCH</p>	<p>JFLB</p>  <p>KET_090II_20F_B_JCH</p>	<p>JFLC</p>  <p>KET_090II_20F_B_JCH</p>	<p>JFLD</p>  <p>KET_1809_10F_B_JCH</p>
<p>JFRA</p>  <p>KET_090II_20F_B_JCH</p>	<p>JFRB</p>  <p>KET_090II_20F_B_JCH</p>	<p>JFRC</p>  <p>KET_1809_10F_B_JCH</p>	<p>JFRD</p>  <p>KET_1809_10F_B_JCH</p>

JOINT CONNECTORS

Joint Connectors (2)


CC-13

JFWS

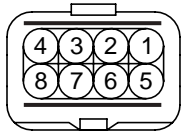


KET_090IWP_08F_B_JCH

JMA

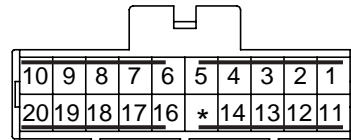


KET_090II_20F_B_JCH

JMB

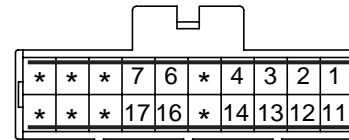


KET_090II_20F_B_JCH

JMC

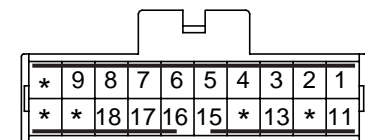


KET_090II_20F_B_JCH

JMCAN

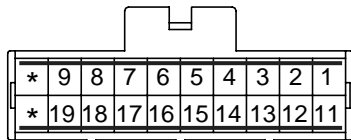


KET_090II_20F_B_JCH

JMD

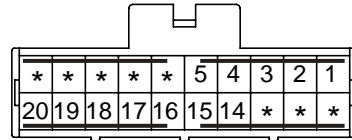


KET_090II_20F_B_JCH

JME

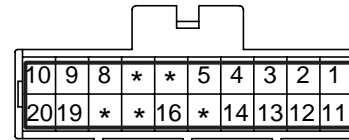


KET_090II_20F_B_JCH

JMF

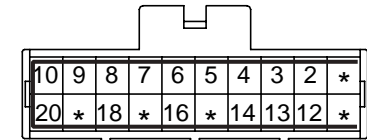


KET_090II_20F_B_JCH

JMG

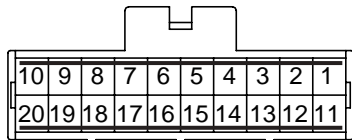


KET_090II_20F_B_JCH

JRMIC

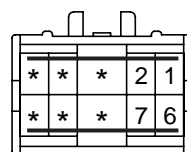


KET_1809_10F_B_JCH

JROOF

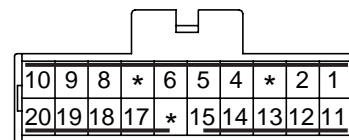


KET_090II_20F_B_JCH

JTLID

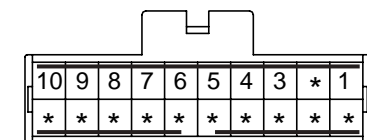


KET_090II_20F_B_JCH

JSDRI1

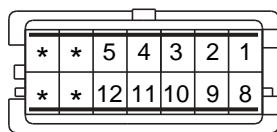


KET_070_14F_JCH_B

JSDRI2

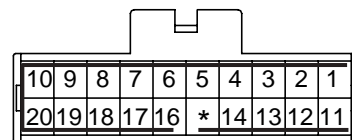


KET_090II_20F_JCH_B

JSASS

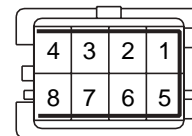

KET_070_08F_JCH_B


JSRR

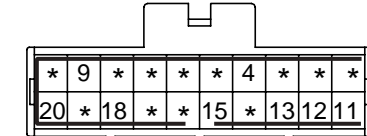

KET_090II_20F_JCH_B

Main Harness (1)

HL-1

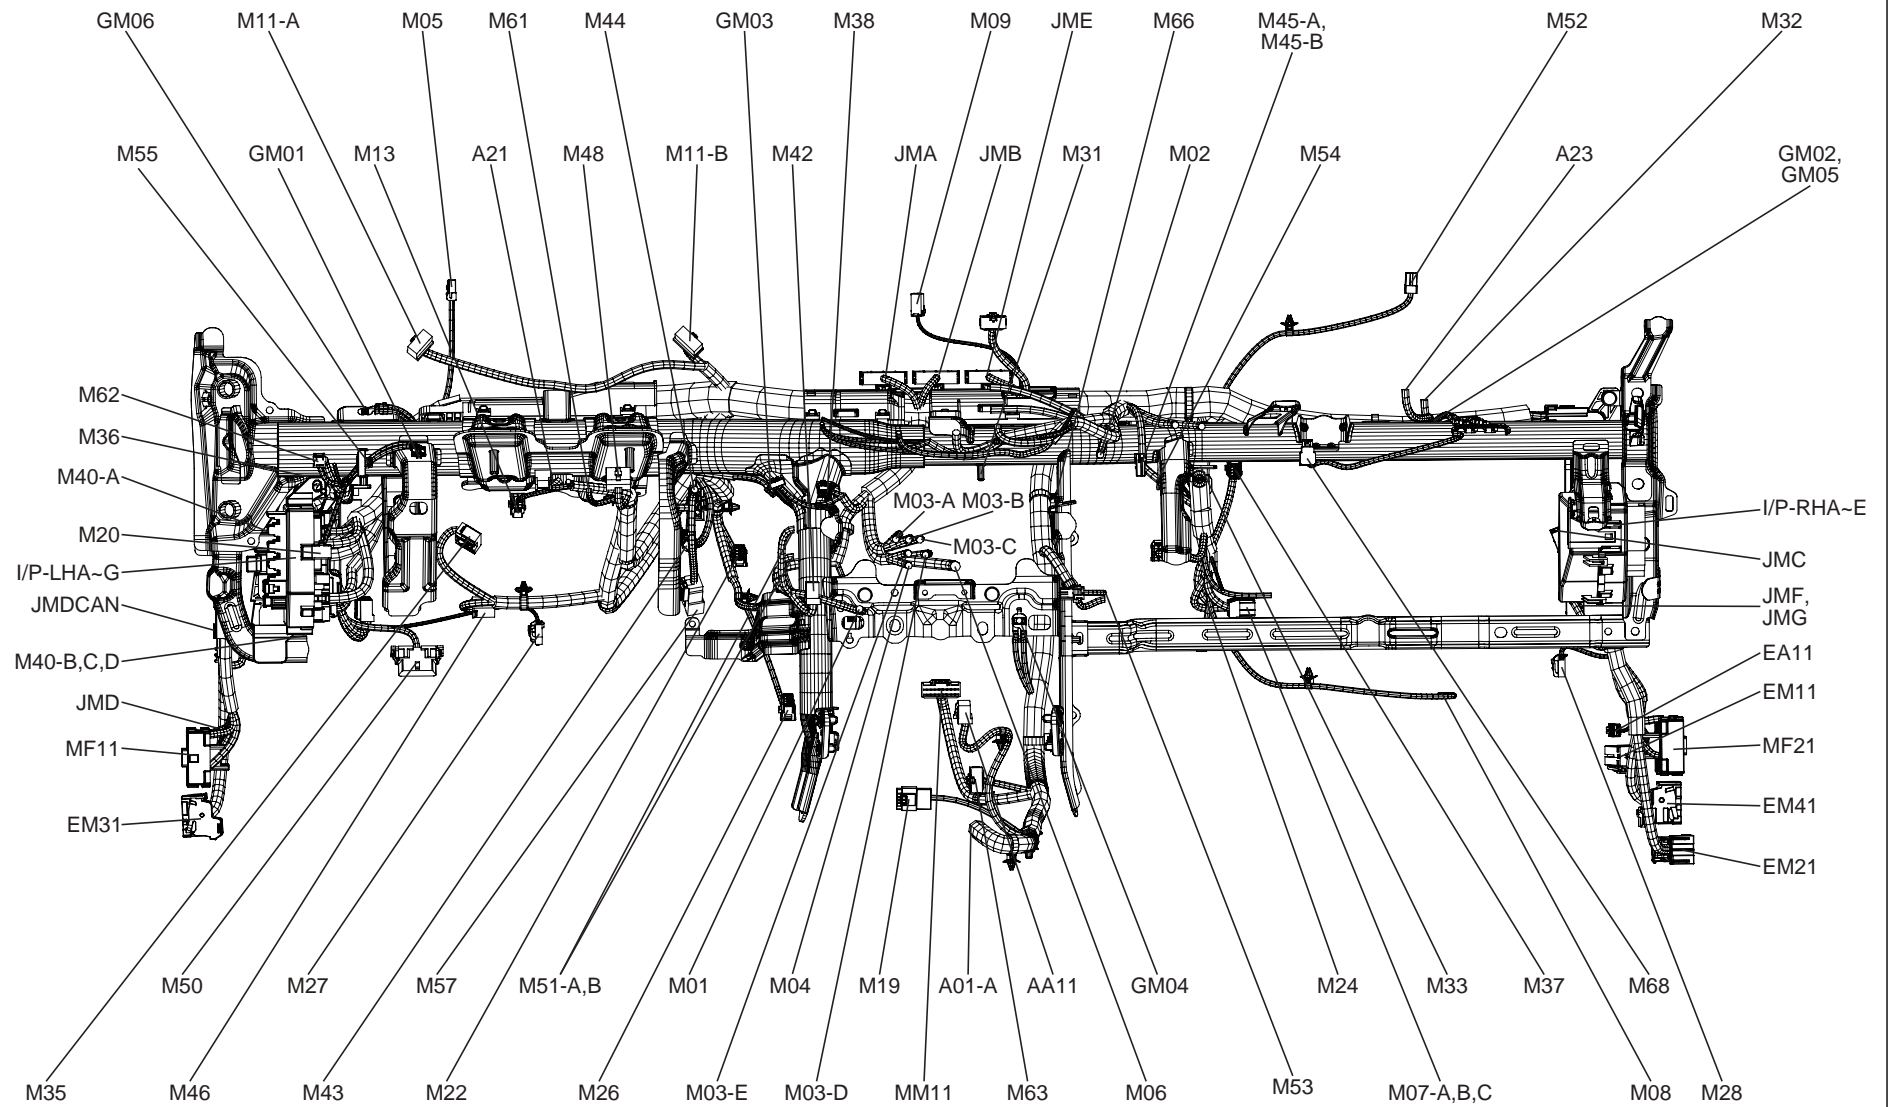

MAIN HARNESS

Main Harness (2)

HL-2

MAIN HARNESS


M01	Active incar sensor	M46	Mode actuator	I/P-RHD	Connection with Passenger compartment junction box RH
M02	Adaptive front lighting module	M48	Multifunction switch	I/P-RHE	Connection with Passenger compartment junction box RH
M03-A	Audio	M50	Data link connector	EM11	Connection with FRONT harness
M03-B	Audio	M51-A	PDM	EM21	Connection with FRONT harness
M03-C	Audio	M51-B	PDM	EM31	Connection with FRONT harness
M03-D	Audio	M52	Photo sensor	EM41	Connection with FRONT harness
M03-E	Audio	M53	Piezo buzzer	MF11	Connection with FLOOR harness
M04	Audio key	M54	RF Receiver	MF21	Connection with FLOOR harness
M05	Auto Light sensor & Security indicator	M55	Rheostat	MM11	Connection with CONSOLE EXT. harness
M06	AV Head module	M57	Start stop button switch	GM01	Ground
M07-A	A/C Control module	M58	Telescopic motor	GM02	Ground
M07-B	A/C Control module	M59	Tilt & Telescopic switch	GM03	Ground
M07-C	A/C Control module	M60	Tilt motor	GM04	Ground
M07-D	A/C Control module	M61	Steering angle sensor	GM05	Ground
M08	Blower motor	M62	Crash pad switch	GM06	Ground
M09	Center speaker	M63	Sport mode switch		
M10	Climate switch	M65	Driver temperature actuator		
M11-A	Instrument cluster	M66	Passenger temperature actuator		
M11-B	Instrument cluster	M68	Trunk lid main switch		
M13	Multifunction switch (Remocon)	M70-A	Tilt & Telescopic module		
M15	Console temperature actuator	M70-B	Tilt & Telescopic module		
M16	Console temperature actuator `A`	JMA	Joint connector	M77	Audio remocon switch LH
M17	Defogger actuator	JMB	Joint connector	M78	Audio & Cruise remocon switch RH
M18	Display switch	JMC	Joint connector		
M19	DIS Switch (With AV)	JMD	Joint connector		
M20	EPB & ESP Switch	JME	Joint connector		
M22	Electronic steering column lock	JMF	Joint connector		
M23	Evaporator sensor	JMG	Joint connector		
M24	FET (Field Effect Transistor)	JMCAN	Joint connector		
M26	FOB Holder	I/P-LHA	Connection with Passenger compartment junction box LH		
M27	Foot lamp LH	I/P-LHB	Connection with Passenger compartment junction box LH		
M28	Foot lamp RH	I/P-LHC	Connection with Passenger compartment junction box LH		
M30	Front monitor (W/O AV)	I/P-LHD	Connection with Passenger compartment junction box LH		
M31	Front monitor (With AV)	I/P-LHE	Connection with Passenger compartment junction box LH		
M32	Glove box lamp	I/P-LHF	Connection with Passenger compartment junction box LH		
M33	Glove box lamp switch	I/P-LHG	Connection with Passenger compartment junction box LH		
M35	Ignition switch (W/O Button start)	I/P-RHA	Connection with Passenger compartment junction box RH		
M36	Immobilizer module	I/P-RHB	Connection with Passenger compartment junction box RH		
M37	Intake actuator	I/P-RHC	Connection with Passenger compartment junction box RH		
M38	Interior antenna.1				
M40-A	IPM				
M40-B	IPM				
M40-C	IPM				
M40-D	IPM				
M41	Audio (Keyboard)				
M42	Key lock module				
M43	Door warning switch				
M44	Key solenoid				
M45-A	Media module (With AV)				
M45-B	Media module (With AV)				

REMOCON SWITCH HARNESS

CONSOLE EXT. HARNESS

AIR BAG EXT. HARNESS

Front Harness (1)

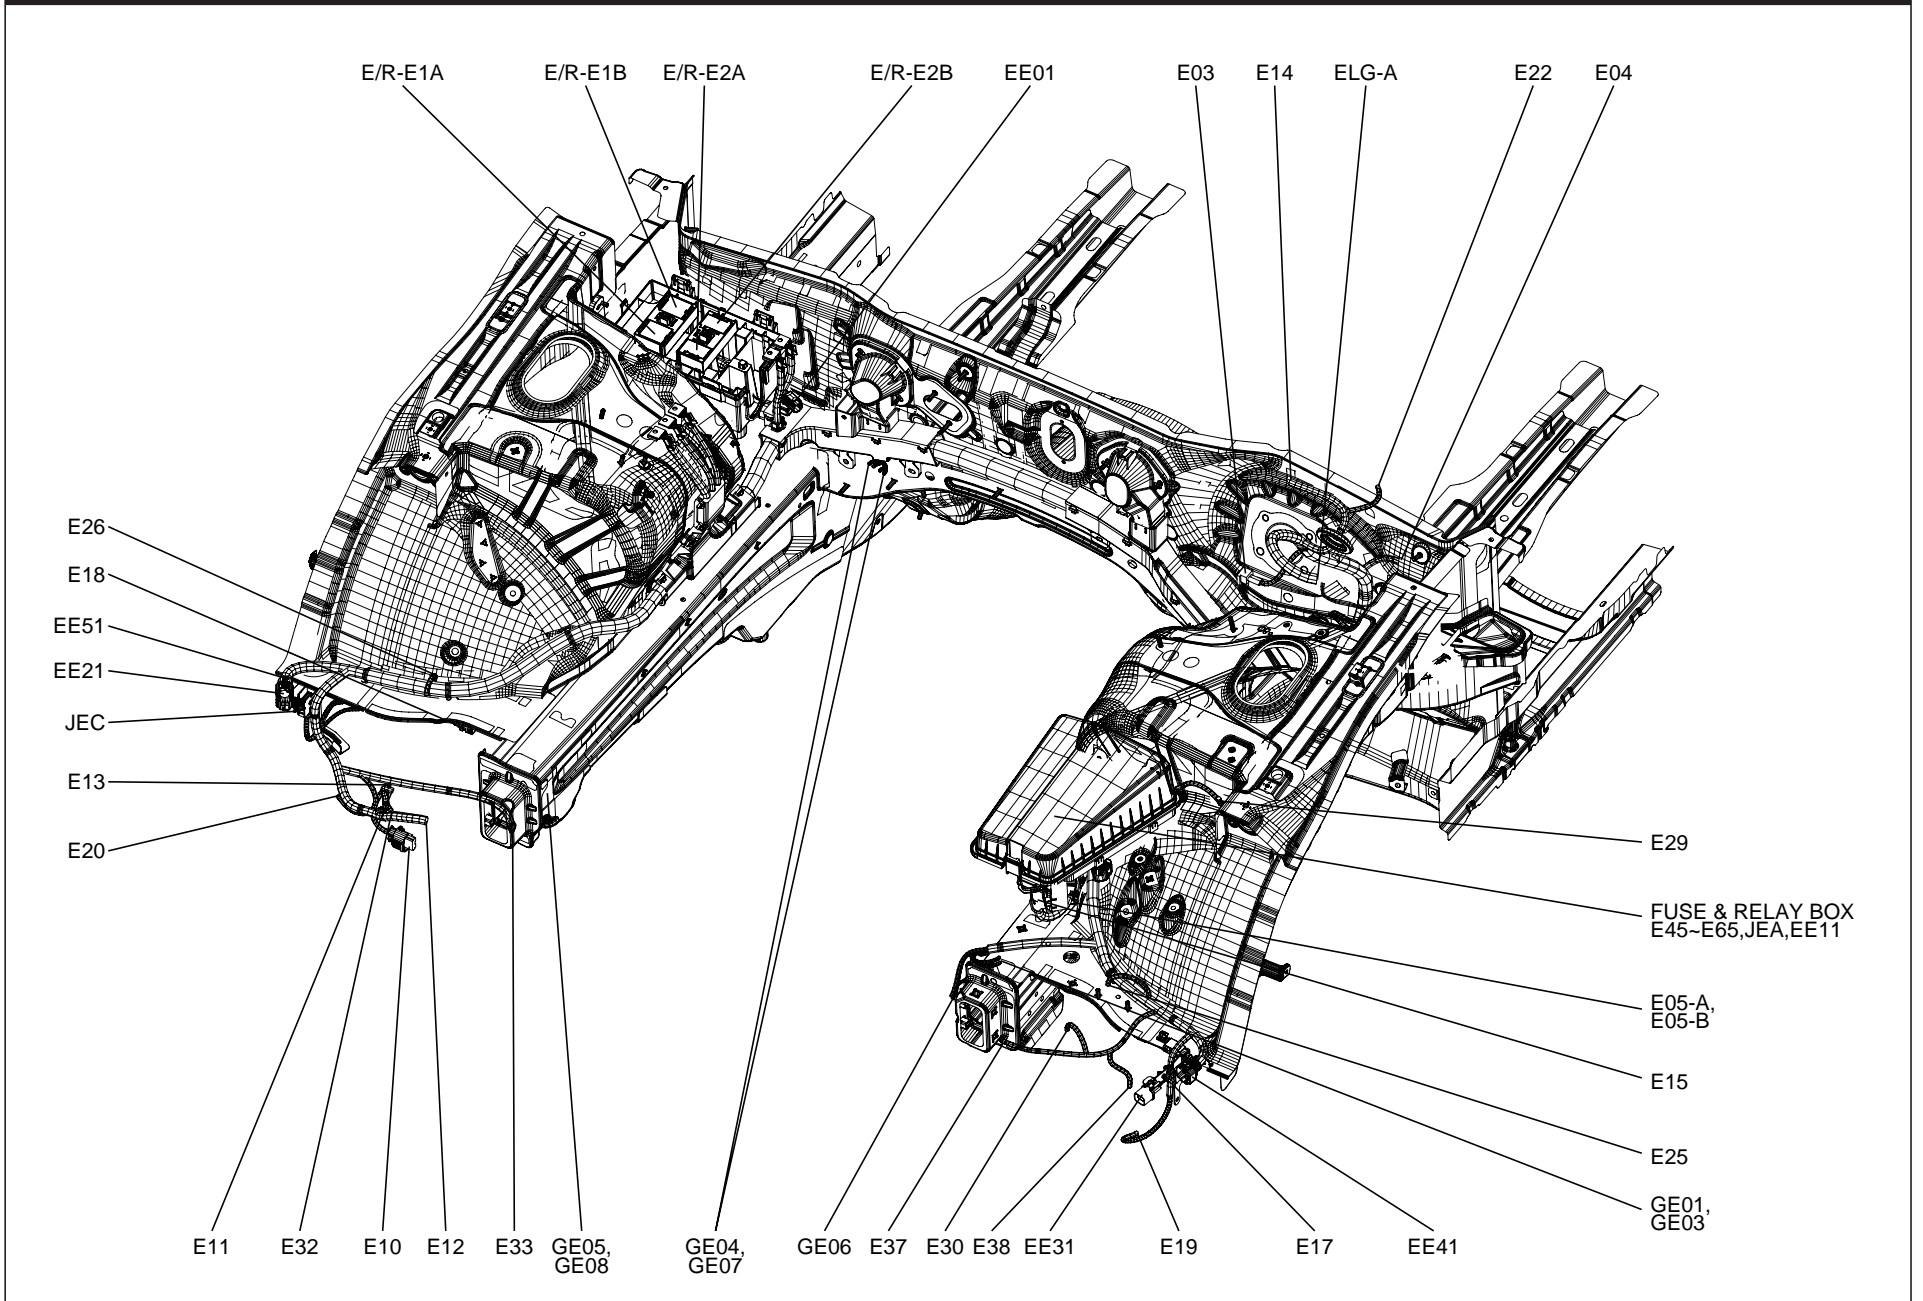

FRONT HARNESS

Front Harness (2)

HL-4

FRONT HARNESS

ELG-A ECM
E01 Accel pedal position sensor
E02 A/C Pressure sensor
E03 Brake fluid level sensor
E04 Burglar alarm horn
E05-A Cooling fan controller
E05-B Cooling fan controller
E07 Front ECS Damper sensor LH
E08 Front ECS Damper sensor RH
E10 ECS Compressor motor
E11 EHPS Module
E12 EHPS Module
E13 EHPS Module
E14 Electronic control wiper module
E15 ESP Control module
E16 External buzzer
E17 Front wheel sensor LH
E18 Front wheel sensor RH
E19 Front fog lamp LH
E20 Front fog lamp RH
E22 Windshield defogger
E25 Front ECS G-Sensor LH
E26 Front ECS G-Sensor RH
E27 Front height sensor LH
E28 Front height sensor RH
E29 Hood switch
E30 Head lamp washer motor
E31 Parking brake switch
E32 ECS Reverse valve module
E33 ECS Solenoid valve
E34 Stop lamp switch
E37 Washer motor
E38 Washer level sensor
E45 Multipurpose check connector
E51 Cooling fan relay
E52 ECS Compressor relay
E53 ESCL (IGN1) relay
E54 ESCL (IGN2) relay
E55 ESCL (ACC) relay
E56 Stop lamp relay
E58 Trunk lid relay
E60 ACC Socket relay
E65 Head lamp washer relay
JEA Joint connector
JEB Joint connector

JEC Joint connector
E/R-E1A Connection with ENGINE COMPARTMENT JUNCTION BLOCK
E/R-E1B Connection with ENGINE COMPARTMENT JUNCTION BLOCK
E/R-E2A Connection with ENGINE COMPARTMENT JUNCTION BLOCK
E/R-E2B Connection with ENGINE COMPARTMENT JUNCTION BLOCK
EA11 Connection with AIR BAG EXT. harness
EE01 Connection with BATTERY CABLE harness
EE11 Connection with GENERATOR EXT. harness
EE21 Connection with FRONT END MODULE harness
EE31 Connection with FRONT END MODULE harness
EE41 Connection with FRONT WARNING EXT. harness
EE51 Connection with FRONT END MODULE harness
EF11 Connection with FLOOR harness
EF21 Connection with FLOOR harness
EF31 Connection with FLOOR harness
EF41 Connection with FLOOR harness
EF51 Connection with FLOOR harness
EM11 Connection with MAIN harness
EM21 Connection with MAIN harness
EM31 Connection with MAIN harness
EM41 Connection with MAIN harness
GE01 Ground
GE02 Ground
GE03 Ground
GE04 Ground
GE05 Ground
GE06 Ground
GE07 Ground
GE08 Ground
Z01 Diode

FRONT WARNING EXT. HARNESS

E71 Forward parking assist sensor LH
E72 Forward parking assist sensor RH
E73 Forward parking assist sensor side LH
E74 Forward parking assist sensor side RH
JFWS Joint connector
EE41 Connection with FRONT harness


GENERATOR EXT. HARNESS

E80 Electronic A/C Compressor
E81 Generator
EE11 Connection with FRONT harness

FRONT HARNESS

Front Harness (3)

HL-5

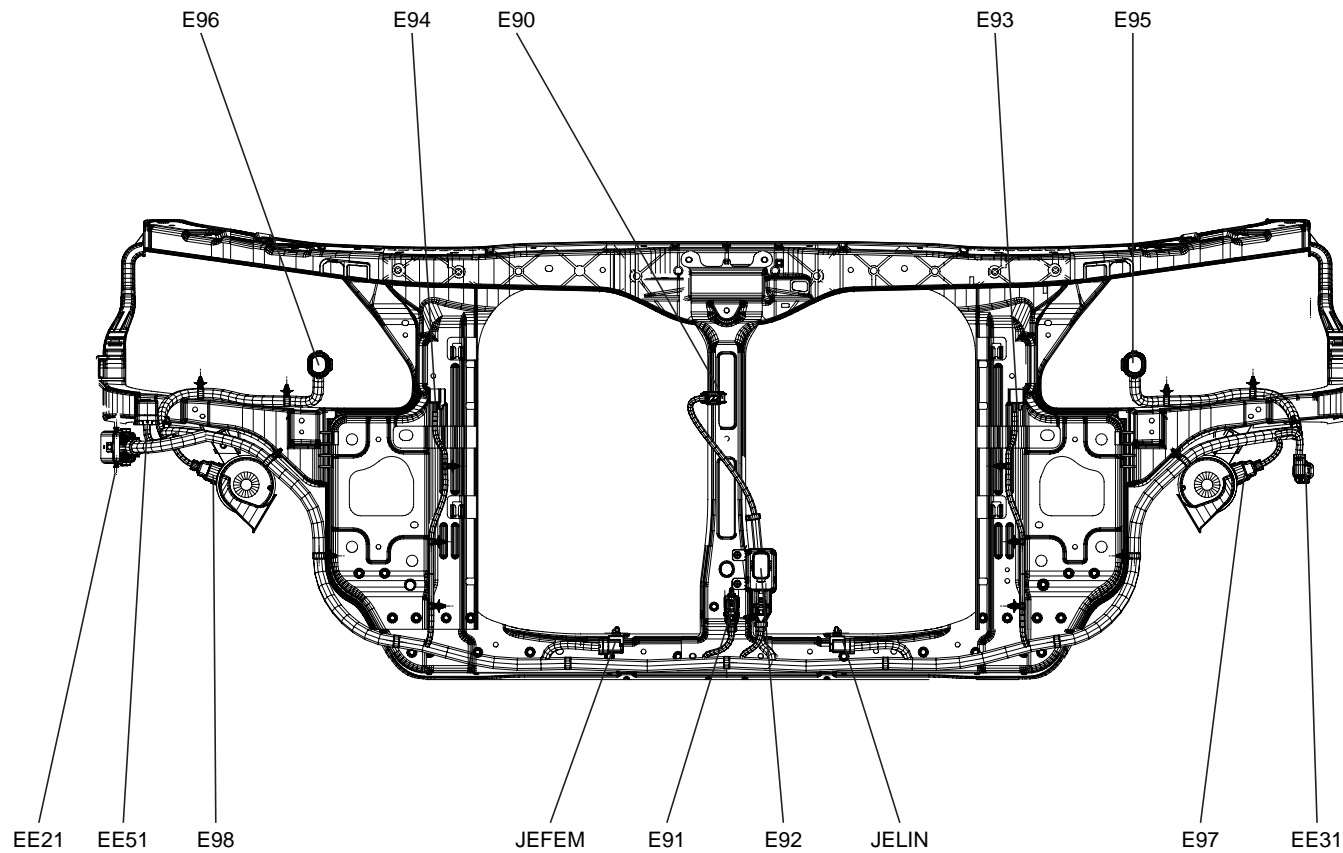


FRONT END MODULE HARNESS

E90 Smart cruise control module
E91 Ambient sensor
E92 AQS Sensor
E93 Front impact sensor LH
E94 Front impact sensor RH
E95 Head lamp LH
E96 Head lamp RH
E97 Horn LH
E98 Horn RH

JELIN Joint connector
JEFEM Joint connector
EE21 Connection with FRONT harness
EE31 Connection with FRONT harness
EE51 Connection with FRONT harness

Air Bag Harness (1)

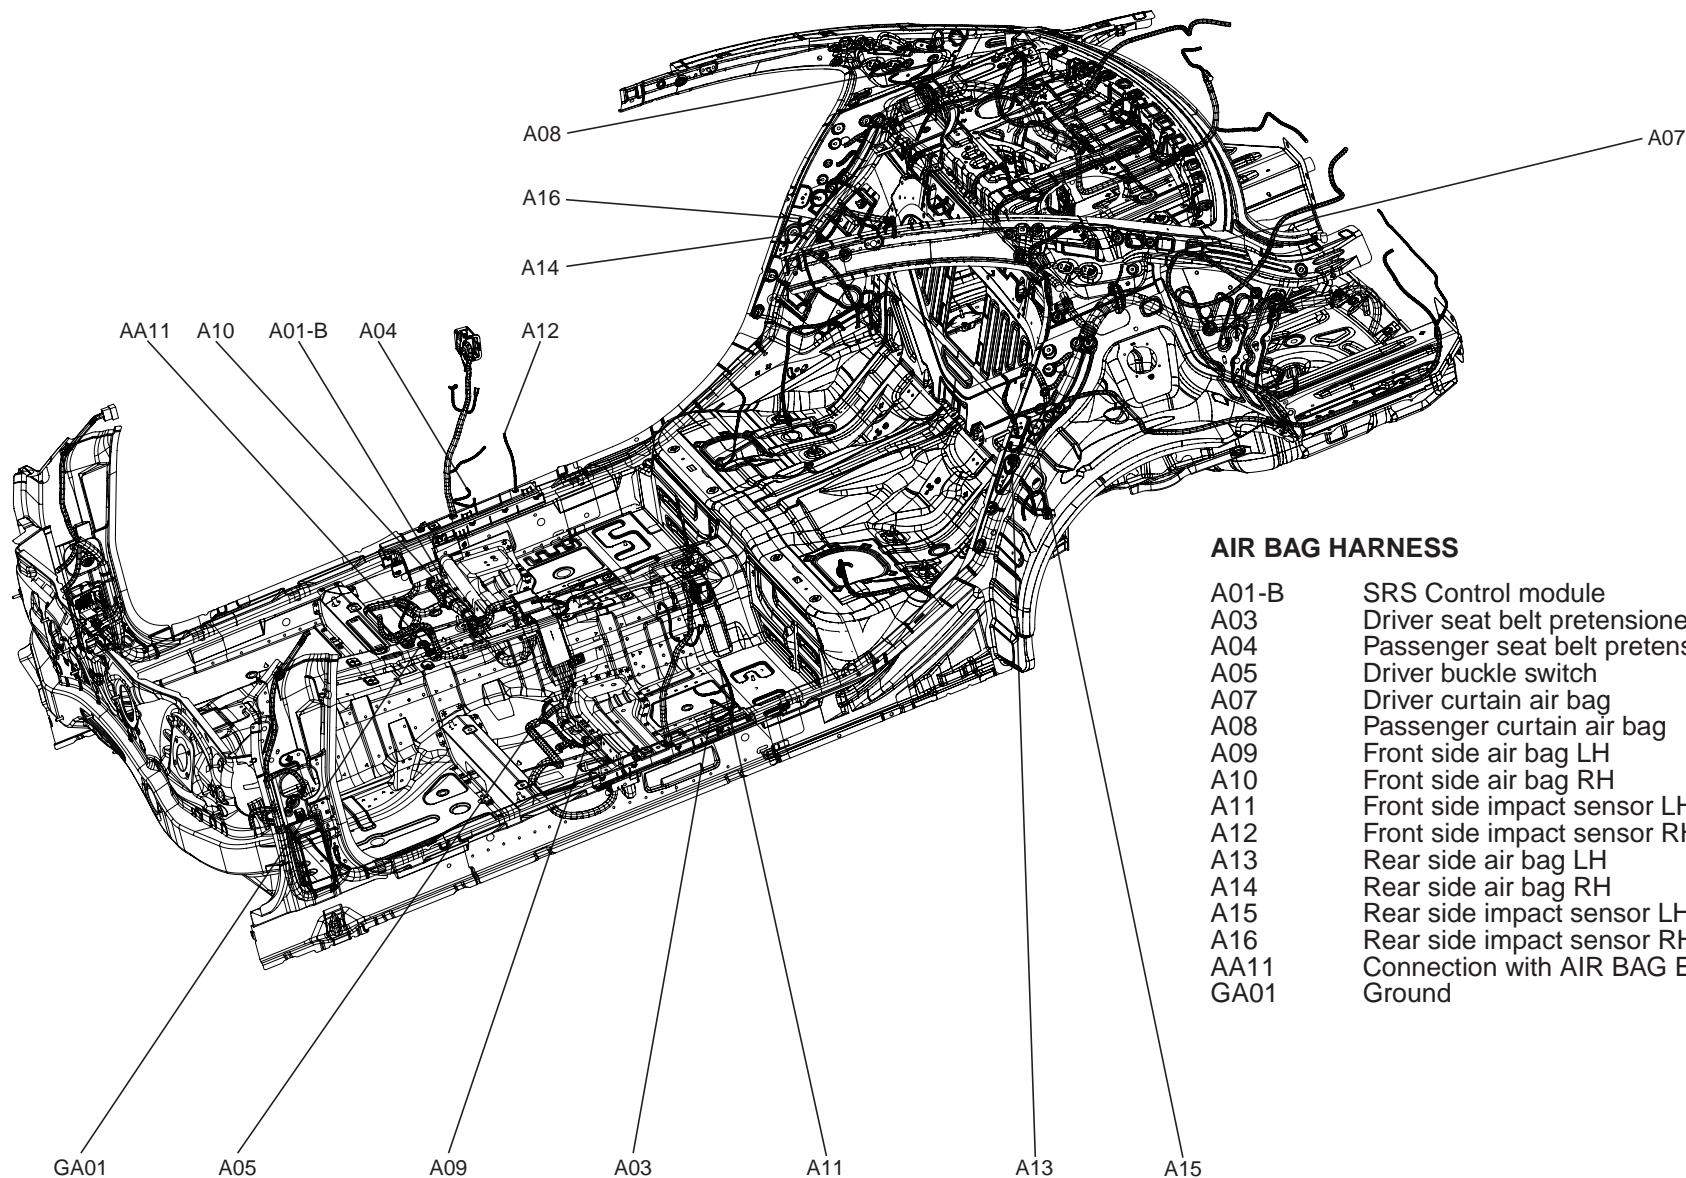

AIR BAG HARNESS

- A01-B SRS Control module
- A03 Driver seat belt pretensioner
- A04 Passenger seat belt pretensioner
- A05 Driver buckle switch
- A07 Driver curtain air bag
- A08 Passenger curtain air bag
- A09 Front side air bag LH
- A10 Front side air bag RH
- A11 Front side impact sensor LH
- A12 Front side impact sensor RH
- A13 Rear side air bag LH
- A14 Rear side air bag RH
- A15 Rear side impact sensor LH
- A16 Rear side impact sensor RH
- AA11 Connection with AIR BAG EXT. harness
- GA01 Ground

FLOOR HARNESS


Floor Harness (2)

HL-8

FLOOR HARNESS

F01-A	ECS Control module	F61	Rear defogger (+)	GF02	Ground
F01-B	ECS Control module	F62	Rear wheel sensor RH	GF03	Ground
F03-A	AMP	F63	Instrument cluster sensor (W/O EPB)	GF04	Ground
F03-B	AMP	F64	Sub woofer (W/O AV)	GF05	Ground
F05	ATM Shift level ill.	F66	Sub woofer (With AV)	GF06	Ground
F06	Auto head lamp leveling device sensor	F68	Trunk antenna	GF07	Ground
F07	AV JBL AMP (With AV)	F71	Trunk room lamp LH	GF08	Ground
F08-A	AV JBL AMP (With AV)	F72	Trunk room lamp RH	GF09	Ground
F08-B	AV JBL AMP (With AV)	F73	Active headrest sensor module	GF10	Ground
F10	Camera module	F74	Instrument cluster sensor (With EPB)		
F15-B	Console switch LH	JFCAN	Joint connector	EPB EXT. HARNESS	
F15-C	Console switch LH	JFLA	Joint connector	F80	EPB Module
F17-B	Console switch RH	JFLB	Joint connector	JFEPB	Joint connector
F17-C	Console switch RH	JFLC	Joint connector	FF02	Connection with FLOOR harness
F18	Rear ECS Damper sensor LH	JFLD	Joint connector		
F19	Rear ECS Damper sensor RH	JFRA	Joint connector		
F21	Deck speaker LH	JFRB	Joint connector		
F22	Deck speaker RH	JFRC	Joint connector		
F23	Front door scuff lamp LH	JFRD	Joint connector		
F24	Front door scuff lamp RH	EF11	Connection with FRONT harness		
F27	Rear door scuff lamp LH	EF21	Connection with FRONT harness		
F28	Rear door scuff lamp RH	EF31	Connection with FRONT harness		
F29	Front door switch LH	EF41	Connection with FRONT harness		
F30	Front door switch RH	EF51	Connection with FRONT harness		
F31	Rear door switch LH	FD11	Connection with DRIVER DOOR harness		
F32	Rear door switch RH	FD21	Connection with PASSENGER DOOR harness		
F36-A	Forward & Rear parking assist control module	FD31	Connection with REAR DOOR LH harness		
F36-B	Forward & Rear parking assist control module	FD41	Connection with REAR DOOR RH harness		
F38	Fuel sub sensor	FF01	Connection with FLOOR harness		
F39	Fuel sender & Fuel pump motor	FF01	Connection with FLOOR harness		
F42	Fuel filler door motor	FF02	Connection with EPB EXT. harness		
F44	Rear ECS G-Sensor	FR01	Connection with TRUNK LID harness		
F45	Button start antenna LH	FR02	Connection with TRUNK LID harness		
F46	Button start antenna RH	FR11	Connection with ROOF harness		
F47	Rear height sensor LH	FR21	Connection with ROOF harness		
F48	Rear height sensor RH	FR31	Connection with BACK WARNING EXT. harness		
F50	High-mounted stop lamp	FR32	Connection with BACK WARNING EXT. harness		
F51	Interior antenna.2	FS11	Connection with DRIVER SEAT harness		
F53	Power striker	FS21	Connection with PASSENGER SEAT harness		
F54	Power trunk lid control module	FS31	Connection with REAR SEAT LH harness		
F55	Rear wheel sensor LH	FS41	Connection with REAR SEAT RH harness		
F57	Rear combination lamp LH (OUT)	FS42	Connection with REAR SEAT RH harness		
F58	Rear combination lamp RH (OUT)	MF11	Connection with MAIN harness		
F59	Rear curtain module	MF21	Connection with MAIN harness		
F60	Rear curtain motor	GF01	Ground		

Control Harness (1)

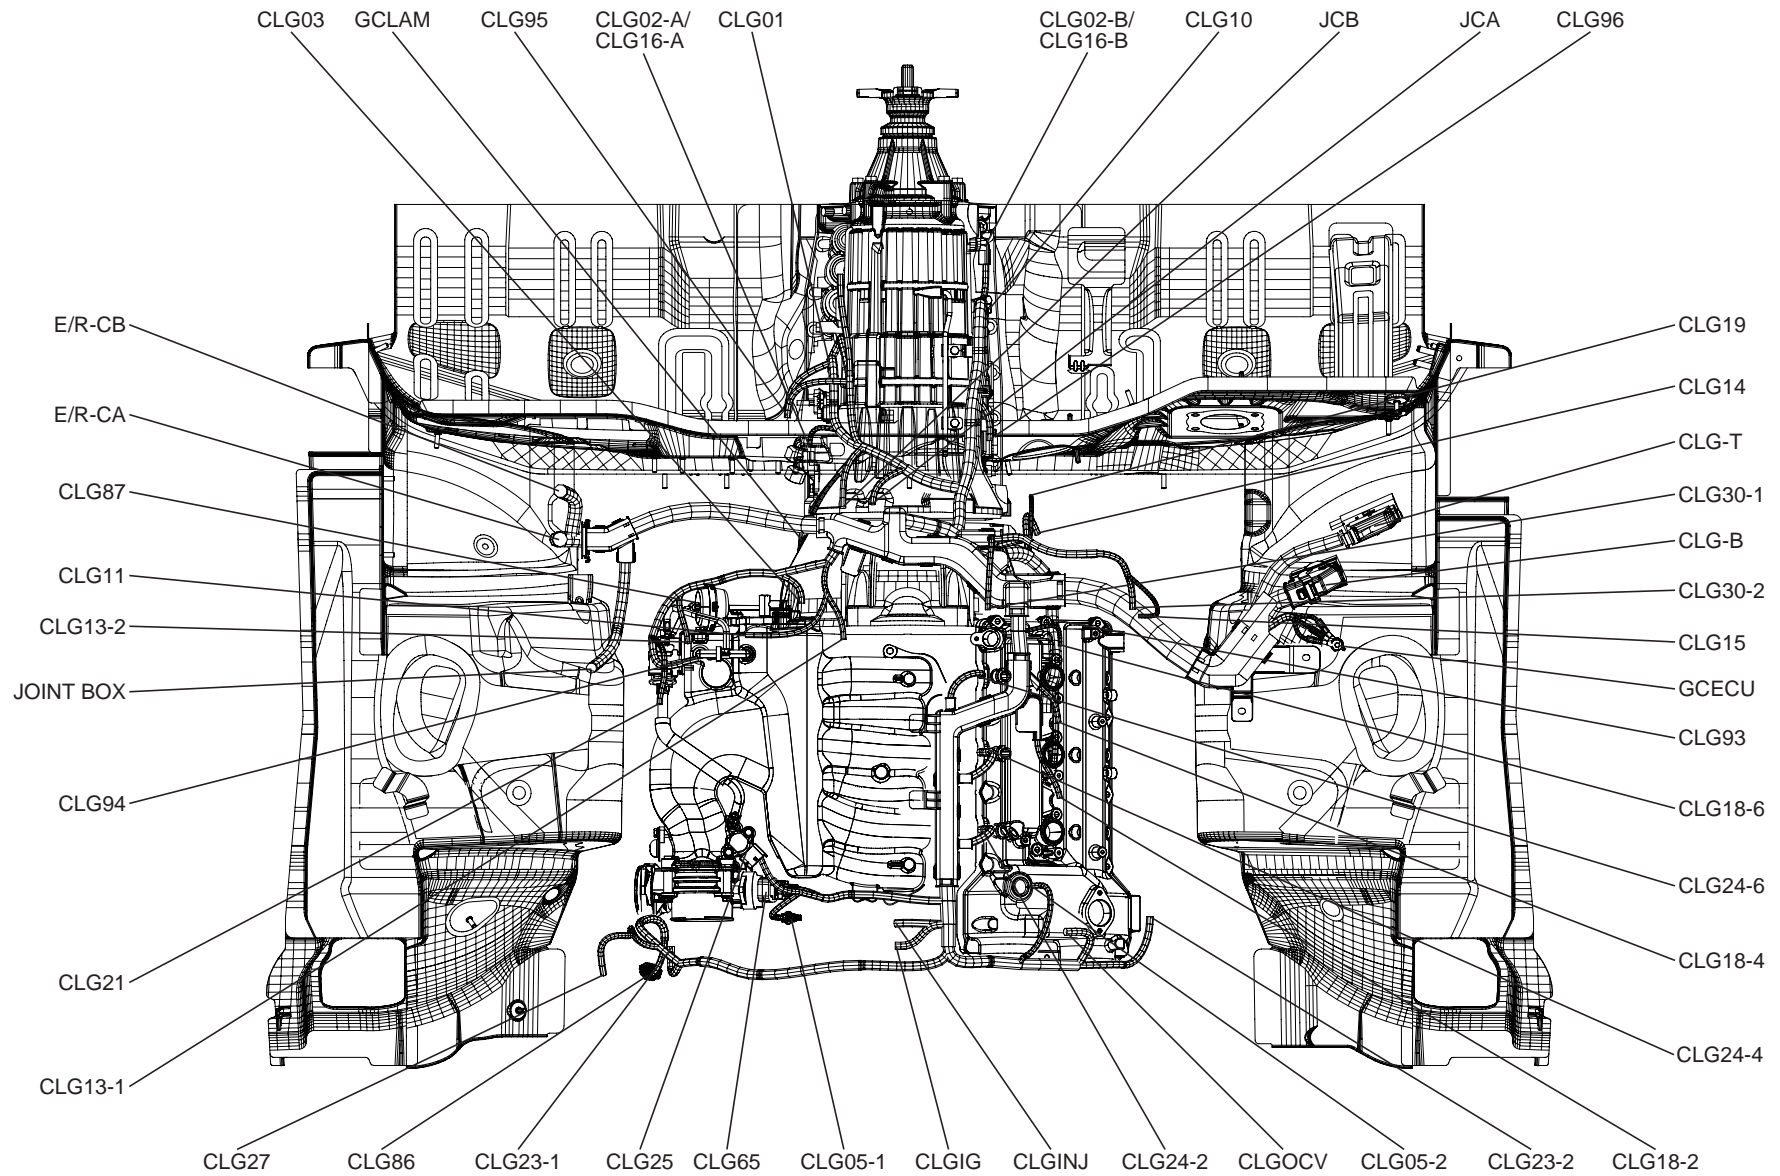

CONTROL HARNESS

Control Harness (2)

HL-10

CONTROL HARNESS

CLG01 Transmission range switch
CLG02-A Pulse generator 'A'
CLG02-B Pulse generator 'B'
CLG03 Oil temperature sensor
CLG05-1 Oil control valve(BANK1)
CLG05-2 Oil control valve(BANK2)
CLG09 Start solenoid
CLG10 Transmission
CLG11 Engine coolant temperature sensor
CLG13-1 Camshaft position sensor(BANK1)(INTAKE)
CLG13-2 Camshaft position sensor(BANK1)(EXHAUST)
CLG14 Crankshaft position sensor
CLG15 Oil pressure switch
CLG16-A Pulse generator 'A'
CLG16-B Pulse generator 'B'
CLG18-2 Ignition coil #2
CLG18-4 Ignition coil #4
CLG18-6 Ignition coil #6
CLG19 Condenser
CLG21 Canister purge control solenoid valve
CLG23-1 Knock sensor #1
CLG23-2 Knock sensor #2
CLG24-2 Injector #2
CLG24-4 Injector #4
CLG24-6 Injector #6
CLG25 MAP Sensor
CLG27 Mass air flow sensor
CLG30-1 Camshaft position sensor(BANK2)(INTAKE)
CLG30-2 Camshaft position sensor(BANK2)(EXHAUST)
CLG65 ETC Motor & Throttle position sensor
CLG86 Power steering pressure sensor (W/O EHSP)
CLG87 Variable intake manifold valve
CLG93 Oxygen sensor #1 (B1/S1)
CLG94 Oxygen sensor #2 (B2/S1)
CLG95 Oxygen sensor #3 (B1/S2)
CLG96 Oxygen sensor #4 (B2/S2)
CLG-B ECM
CLG-T TCM
JCA Joint connector
JCB Joint connector
CLGIG Connection with IGNITION COIL harness
CLGINJ Connection with INJECTOR harness
CLGOCV Connection with OIL CONTROL VALVE harness
E/R-CA Connection with ENGINE COMPARTMENT JUNCTION BLOCK
E/R-CB Connection with ENGINE COMPARTMENT JUNCTION BLOCK

GCECU Ground
GCLAM Ground

IGNITION COIL HARNESS

CLG18-1 Ignition coil #1
CLG18-3 Ignition coil #3
CLG18-5 Ignition coil #5
CLGIG Connection with CONTROL harness


INJECTOR HARNESS

CLG24-1 Injector #1
CLG24-3 Injector #3
CLG24-5 Injector #5
CLGINJ Connection with CONTROL harness

OIL CONTROL VALVE HARNESS

CLG98-1 Oil control valve(BANK1)
CLG98-2 Oil control valve(BANK2)
CLGOCV Connection with CONTROL harness

Door Harness (1)

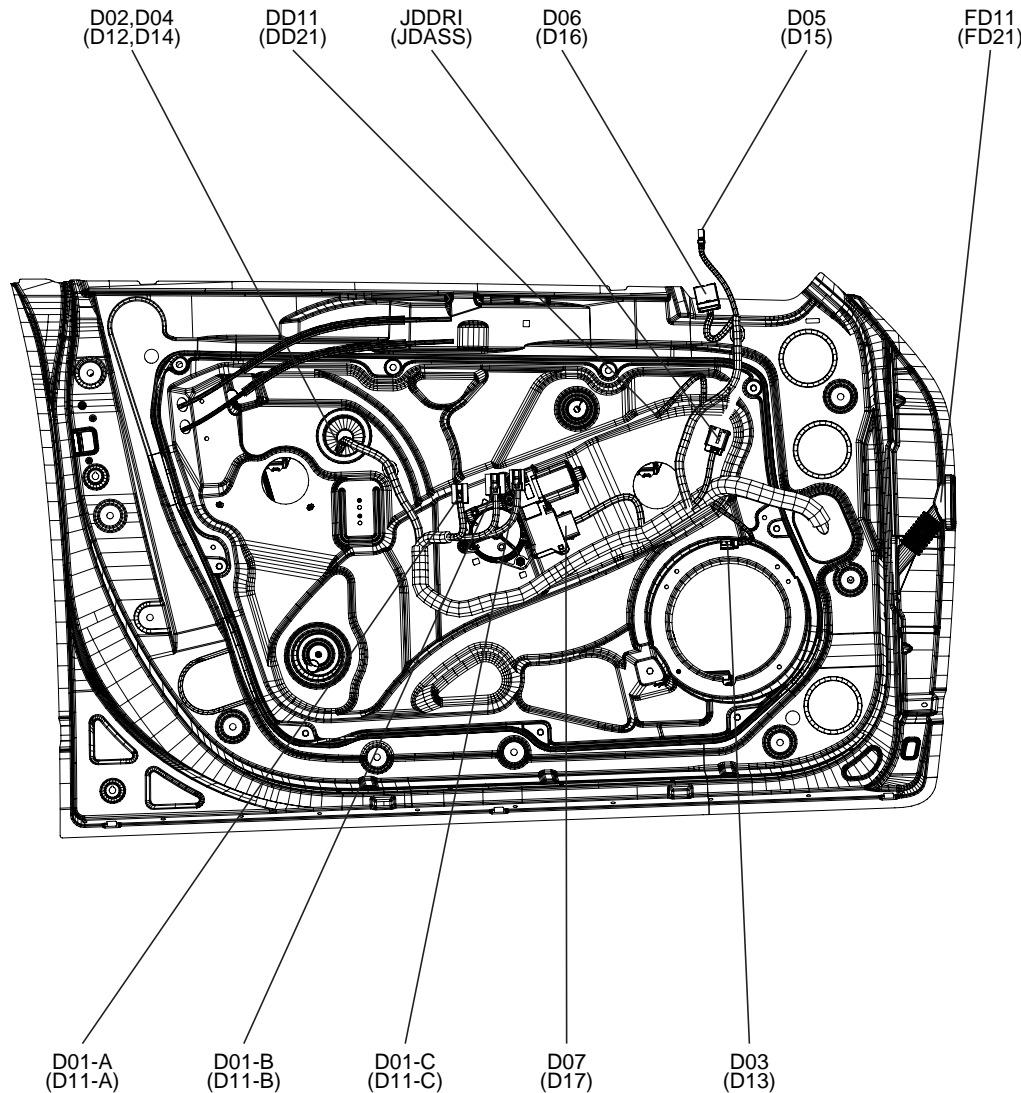

DRIVER DOOR HARNESS

- D01-A Driver door module
- D01-B Driver door module
- D01-C Driver door module
- D02 Driver door lock actuator
- D03 Front door speaker LH
- D04 Front smart outside handle LH
- D05 Front tweeter speaker LH
- D06 Power outside mirror & Mirror folding motor LH
- D07 Driver power window module
- JDDRI Joint connector
- DD11 Connection with DRIVER DOOR EXT. harness
- FD11 Connection with FLOOR harness

DRIVER DOOR EXT. HARNESS

- D51 Rear curtain switch
- D52 Rear curtain & IMS Switch
- D53 IMS Switch
- D54 Front door middle speaker LH
- D55 Trunk lid & Fuel filler door switch
- D56 Front door lamp LH
- DD11 Connection with DRIVER DOOR harness

PASSENGER DOOR HARNESS

- D11-A Passenger door module
- D11-B Passenger door module
- D11-C Passenger door module
- D12 Passenger door lock actuator
- D13 Front door speaker RH
- D14 Front smart outside handle RH
- D15 Front tweeter speaker RH
- D16 Power outside mirror & Mirror folding motor RH
- D17 Passenger power window module
- JDASS Joint connector
- DD21 Connection with PASSENGER DOOR EXT. harness
- FD21 Connection with FLOOR harness

PASSENGER DOOR EXT. HARNESS


- D58 Front door lamp RH
- D59 Front door middle speaker RH
- DD21 Connection with PASSENGER DOOR harness

* () PASSENGER

DOOR HARNESS

Door Harness (2)

HL-12

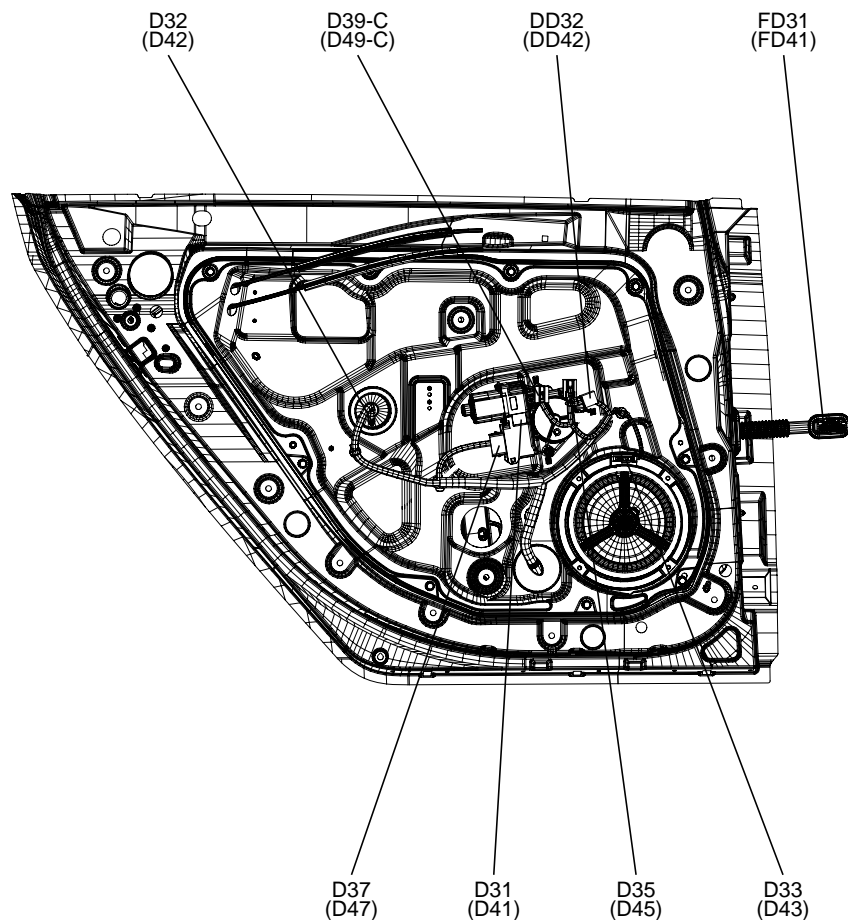

REAR DOOR LH HARNESS

- D31 Rear door ash-tray lamp LH
- D32 Rear door lock actuator LH
- D33 Rear door speaker LH
- D35 Rear power window switch LH
- D37 Rear power window module LH
- D39-C Rear door module LH
- DD32 Connection with REAR DOOR LH EXT. harness
- FD31 Connection with FLOOR harness

REAR DOOR LH EXT. HARNESS

- D61 Rear door lamp LH
- D62 Rear tweeter speaker LH
- D63 Rear door module LH
- DD32 Connection with REAR DOOR LH harness

REAR DOOR RH HARNESS


- D41 Rear door ash-tray lamp RH
- D42 Rear door lock actuator RH
- D43 Rear door speaker RH
- D45 Rear power window switch RH
- D47 Rear power window module RH
- D49-C Rear door module RH
- DD42 Connection with REAR DOOR RH EXT. harness
- FD41 Connection with FLOOR harness

REAR DOOR RH EXT. HARNESS

- D65 Rear door lamp RH
- D66 Rear tweeter speaker RH
- D67 Rear door module RH
- DD42 Connection with REAR DOOR RH harness

* () RIGHT

Roof Harness (1)

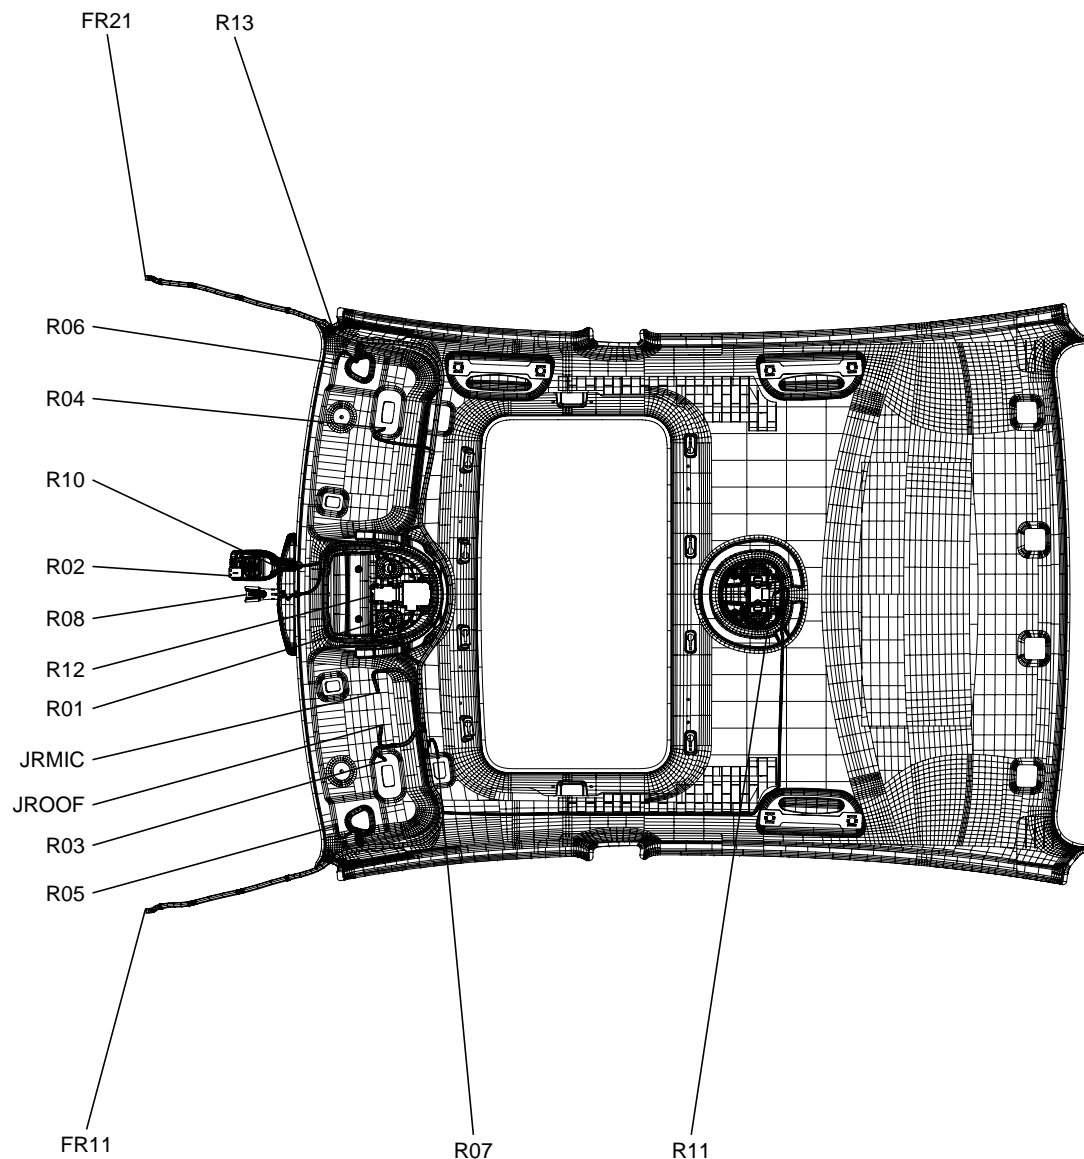


ROOF HARNESS

- R01 Front room lamp
- R02 Auto defogger sensor
- R03 Vanity lamp LH
- R04 Vanity lamp RH
- R05 Vanity lamp switch LH
- R06 Vanity lamp switch RH
- R07 Handsfree MIC (With AV)
- R08 Electro chromic mirror
- R10 Rain sensor
- R11 Rear room lamp
- R12 Sunroof switch
- R13 Overhead console lamp
- R15 Sunroof motor
- JROOF Joint connector
- JRMIC Joint connector
- FR11 Connection with FLOOR harness
- FR21 Connection with FLOOR harness


Trunk Lid & Back Warning EXT. Harness (1)

HL-14

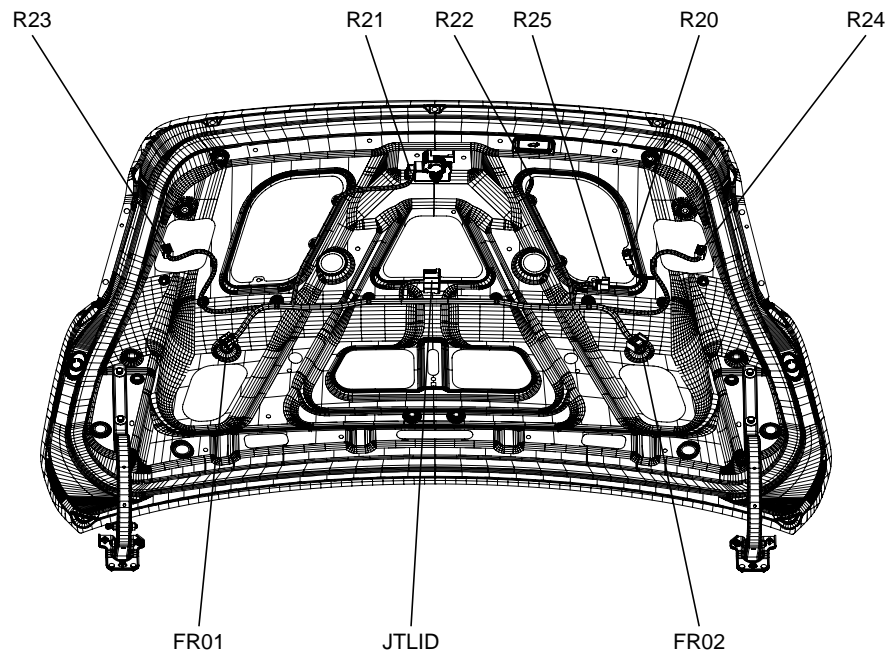

TRUNK LID HARNESS

- R20 Rear camera
- R21 Power latch assembly
- R22 Push button
- R23 Rear combination lamp LH (IN)
- R24 Rear combination lamp RH (IN)
- R25 Trunk lid handle switch & License lamp
- JTLID Joint connector
- FR01 Connection with FLOOR harness
- FR02 Connection with FLOOR harness

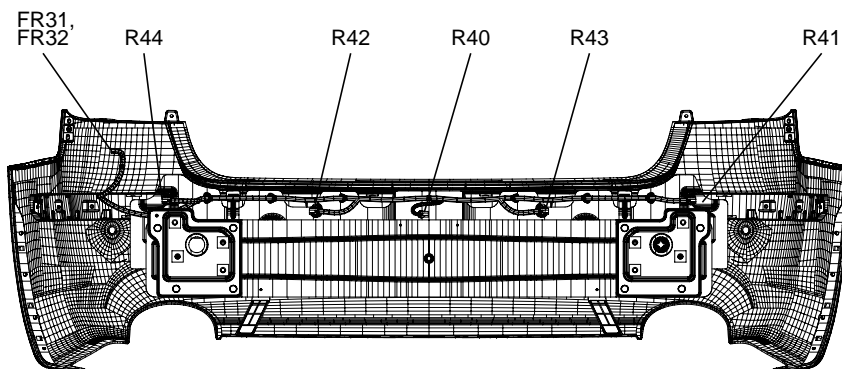


BACK WARNING EXT. HARNESS


- R40 Bumper antenna
- R41 Rear parking assist sensor LH
- R42 Rear parking assist sensor RH
- R43 Rear parking assist sensor side LH
- R44 Rear parking assist sensor side RH
- FR31 Connection with FLOOR harness
- FR32 Connection with FLOOR harness

Seat Harness (1)

DRIVER SEAT HARNESS

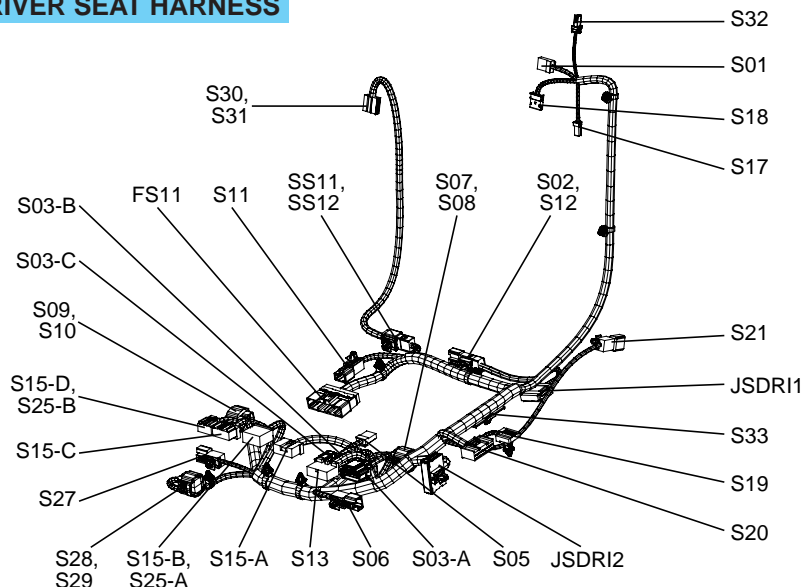

PASSENGER SEAT HARNESS

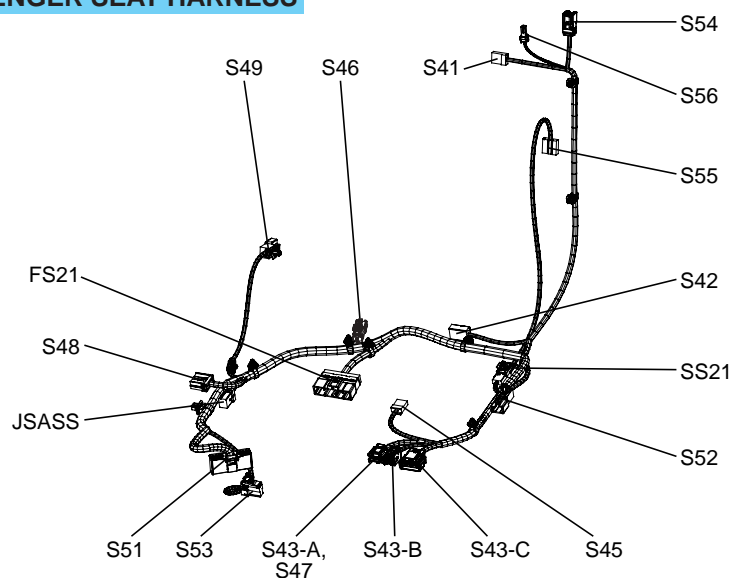

DRIVER SEAT HARNESS

- | | | | |
|-------|---------------------------------------|--------|--|
| S01 | Driver back thermocouple(With CCS) | S21 | Driver reclining limit switch |
| S02 | Driver CCS Blower motor(With CCS) | S25-A | Driver power seat relay box(W/O IMS) |
| S03-A | Driver CCS Control module | S25-B | Driver power seat relay box(W/O IMS) |
| S03-B | Driver CCS Control module | S27 | Driver slide limit switch |
| S03-C | Driver CCS Control module | S28 | Driver slide motor(W/O IMS) |
| S05 | Driver cushion thermocouple(With CCS) | S29 | Driver slide motor(With IMS) |
| S06 | Front height limit switch | S30 | Driver reclining motor(W/O IMS) |
| S07 | Front height motor(W/O IMS) | S31 | Driver reclining motor(With IMS) |
| S08 | Front height motor(With IMS) | S32 | Driver active headrest |
| S09 | Rear height motor(W/O IMS) | S33 | Check connector |
| S10 | Rear height motor(With IMS) | JSDR11 | Joint connector |
| S11 | Rear height limit switch | JSDR12 | Joint connector |
| S12 | Driver cushion warmer(W/O CCS) | FS11 | Connection with FLOOR harness |
| S13 | Driver seat warmer module(W/O CCS) | SS11 | Connection with DRIVER RECLINING MOTOR EXT. harness (With IMS) |
| S15-A | IMS Control module | SS12 | Connection with DRIVER RECLINING MOTOR EXT. harness (W/O IMS) |
| S15-B | IMS Control module | | |
| S15-C | IMS Control module | | |
| S15-D | IMS Control module | | |
| S17 | Driver lumbar support motor | | |
| S18 | Driver lumbar support valve | | |
| S19 | Driver lumbar support switch | | |
| S20 | Driver power seat switch | | |

PASSENGER SEAT HARNESS


- | | |
|-------|---|
| S41 | Passenger back thermocouple (With CCS) |
| S42 | Passenger CCS Blower motor (With CCS) |
| S43-A | Passenger CCS Control module |
| S43-B | Passenger CCS Control module |
| S43-C | Passenger CCS Control module |
| S45 | Passenger cushion thermocouple (With CCS) |
| S46 | Passenger cushion warmer (W/O CCS) |
| S47 | Passenger seat warmer module (W/O CCS) |
| S48 | Passenger power seat switch |
| S49 | Passenger reclining limit switch |
| S51 | Passenger power seat relay box |
| S52 | Passenger slide limit switch |
| S53 | Passenger slide motor |
| S54 | Passenger walk in switch |
| S55 | Passenger reclining motor |
| S56 | Passenger active headrest |
| JSASS | Joint connector |
| FS21 | Connection with FLOOR harness |
| SS21 | Connection with PASSENGER RECLINING MOTOR EXT.harness |

SEAT HARNESS

Seat Harness (2)

HL-16


REAR SEAT LH HARNESS

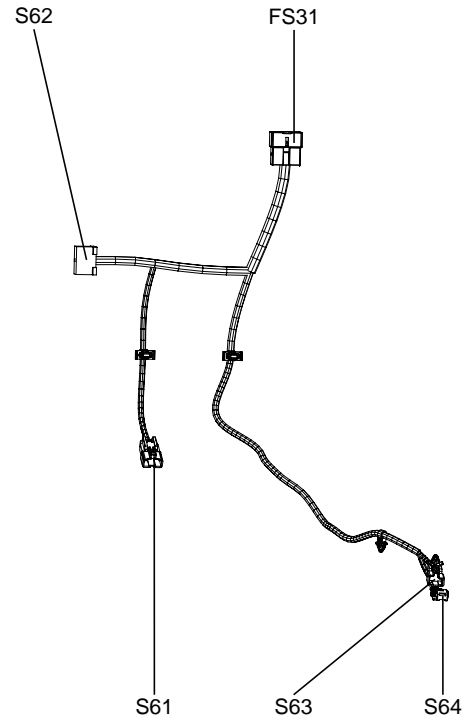

REAR SEAT LH HARNESS

- S61 Rear cushion warmer LH
- S62 Rear seat warmer module LH
- S63 Rear slide limit switch LH
- S64 Rear slide motor LH
- FS31 Connection with FLOOR harness


REAR SEAT RH HARNESS

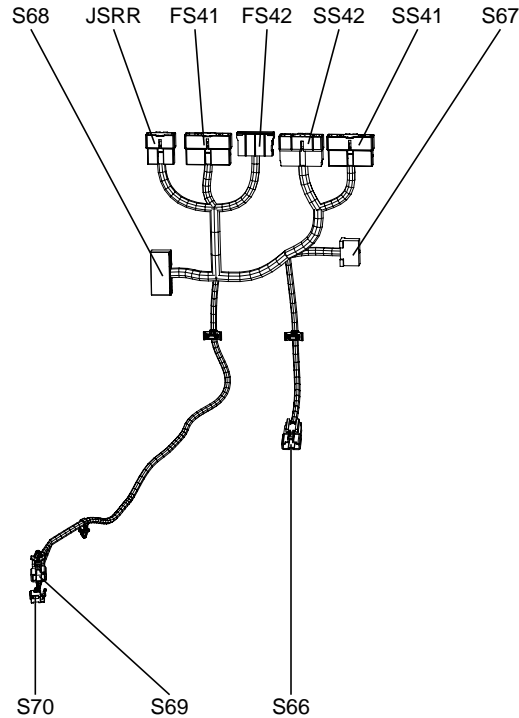

REAR SEAT RH HARNESS

- S66 Rear cushion warmer RH
- S67 Rear seat warmer module RH
- S68 Rear power seat relay box
- S69 Rear slide limit switch RH
- S70 Rear slide motor RH
- JSRR Joint connector
- FS41 Connection with FLOOR harness
- FS42 Connection with FLOOR harness
- SS41 Connection with REAR POWER REMOCON harness
- SS42 Connection with REAR POWER REMOCON harness


REAR POWER REMOCON HARNESS

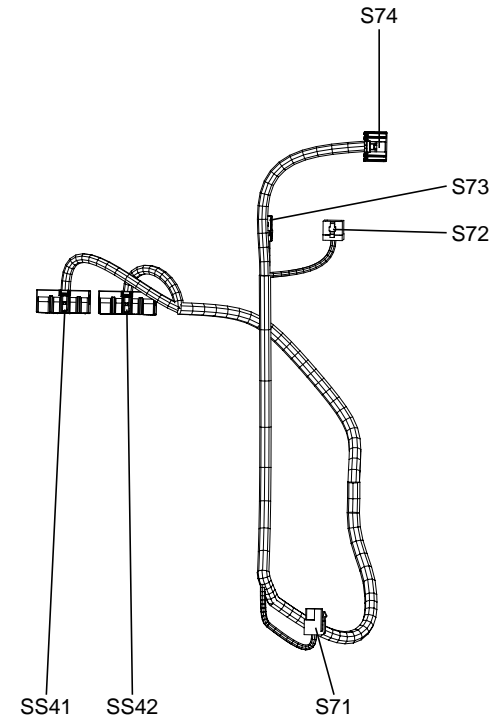

REAR POWER REMOCON HARNESS

- S71 Rear Accessory socket
- S72 Rear audio switch
- S73 Rear limit switch ill.
- S74 Rear power seat control switch
- SS41 Connection with REAR SEAT RH harness
- SS42 Connection with REAR SEAT RH harness

Battery Harness (1)

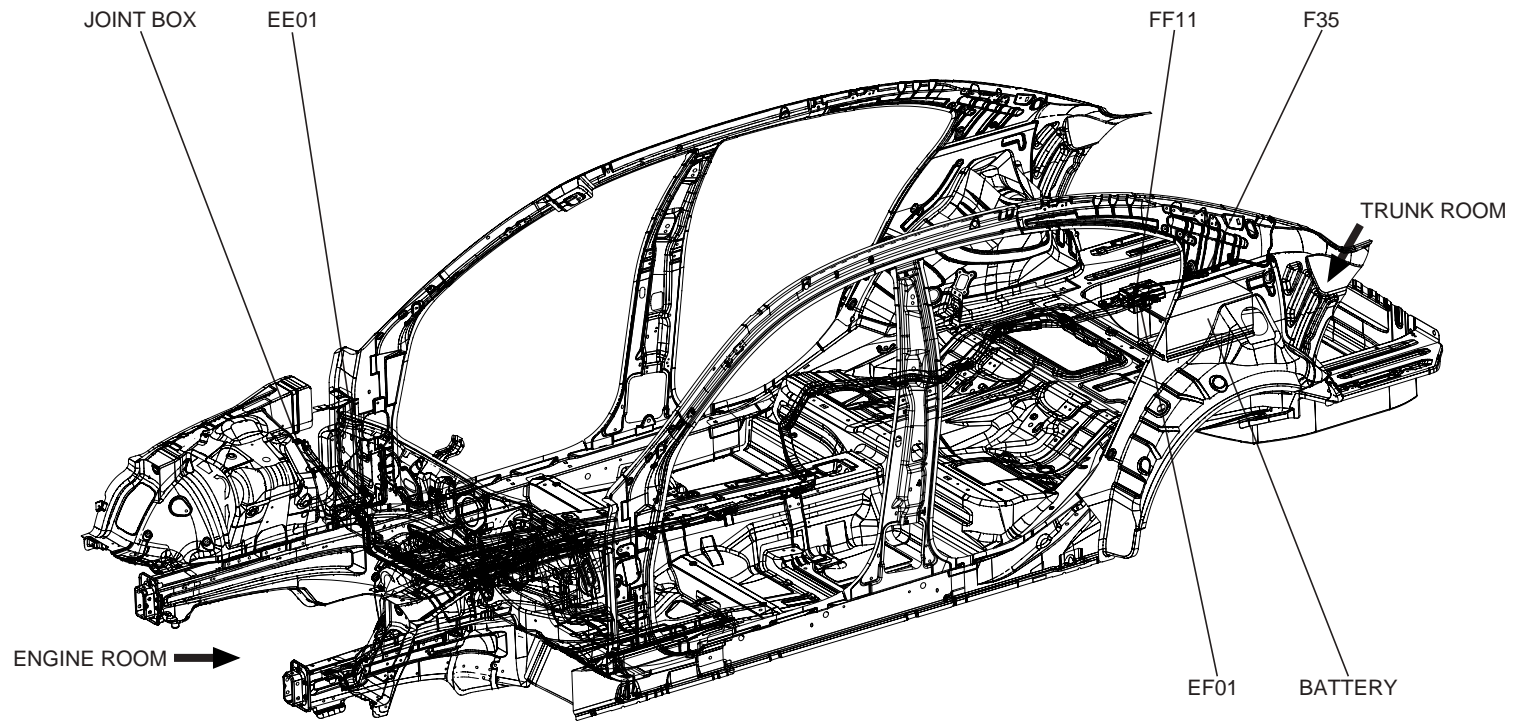

BATTERY CABLE HARNESS

- EF01 Connection with BATTERY FUSE BOX harness
- EE01 Connection with FRONT harness

FLOOR HARNESS

- F35 Electronic battery sensor
- FF11 Connection with BATTERY FUSE BOX harness